Escorregador Master Laranja

ref. 0953.2

ASSEMBLY INSTRUCTIONS



Product size: **1.99 × 0.80 × 1.23 m**
Slide with a 4-step non-slip ladder and a wide base; easy to assemble, store and carry
Maximum weight: 70 kg
Age: 3 years and up
To be assembled by an adult, with no tools.
4 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Assemble in this order: the **slide** on the ladder, the **long axle (A)**, the **braces** on the ladder with the **medium axle (B)** and last the braces on the slide with the **short axle (C)**.
- The axles have different lengths: the long one (A, 570 mm) goes at the top of the ladder, the medium one (B, 470 mm) on the ladder and the short one (C, 415 mm) on the slide.
- Each axle goes in with **one knob already screwed on** and takes the other one on the opposite end; tighten by hand until firm.
- Assemble on level ground.

Tools

- No tools needed: the 6 knobs are tightened by hand

This slide has no screws.

PARTS LIST


Escorregador Master Laranja parts



LADDER 1×
No. 1 · ref. 953202



SLIDE 1×
No. 2 · ref. 953201



BRACE 2×
No. 3 · ref. 953203




LONG AXLE (A) – 570 mm 1×
No. 4 · ref. 953207



MEDIUM AXLE (B) – 470 mm 1×
No. 5 · ref. 953206



SHORT AXLE (C) – 415 mm 1×
No. 6 · ref. 953205



KNOB 6×
No. 7 · ref. 2090296

PRODUCT ASSEMBLY


Step by step

In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1

STEP 1 OF 4

Slide on the ladder

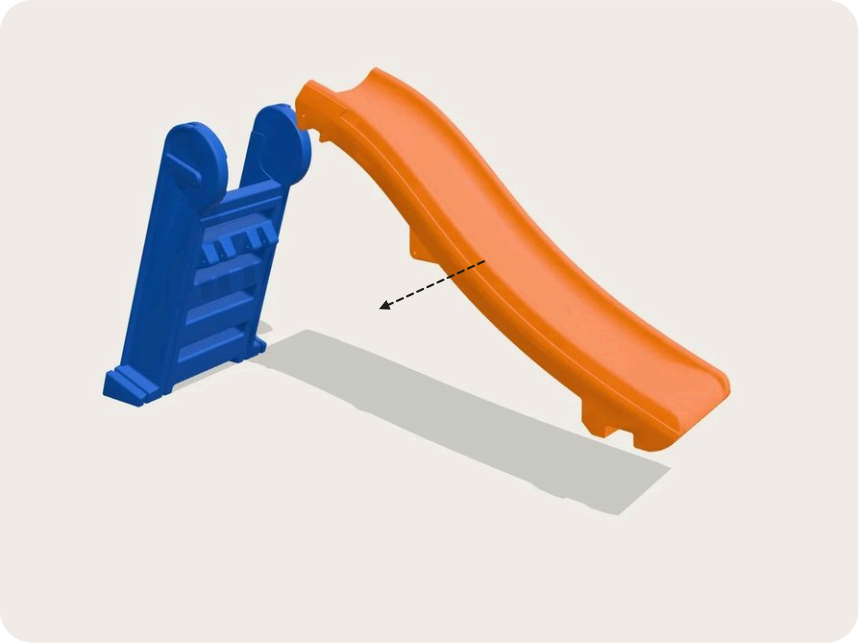

Stand the **ladder** up on level ground.

Fit the top end of the **slide** between the two sides at the top of the ladder, lining up the holes of the slide with the holes of the ladder.

CAUTION
Assemble it on the ground, with no child on it.

PARTS FOR THIS STEP



1× Slide
ref. 953201




1× Ladder
ref. 953202




How it looks at the end of step 1

STEP 2 OF 4

2 Long axle (A)

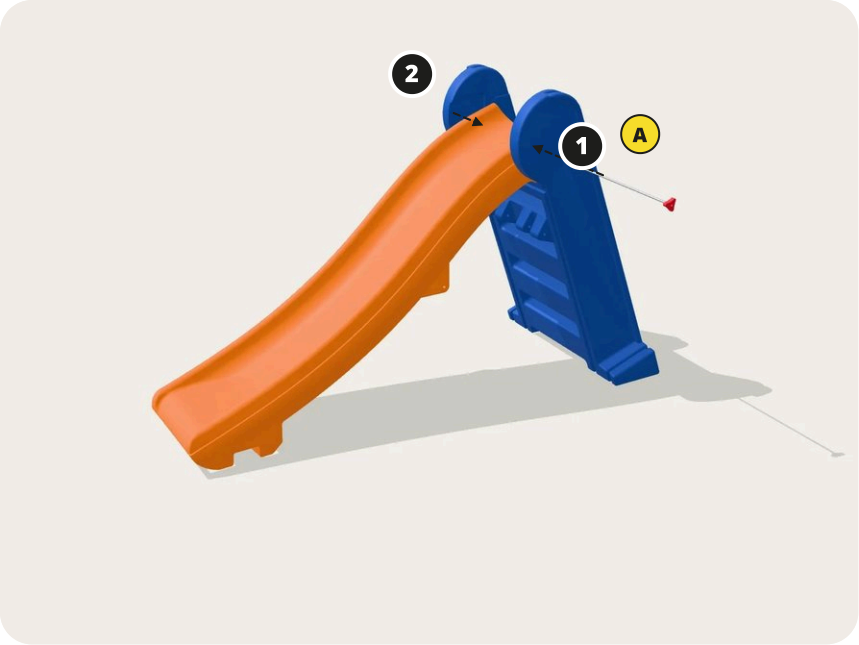

A Long axle (A) with a knob

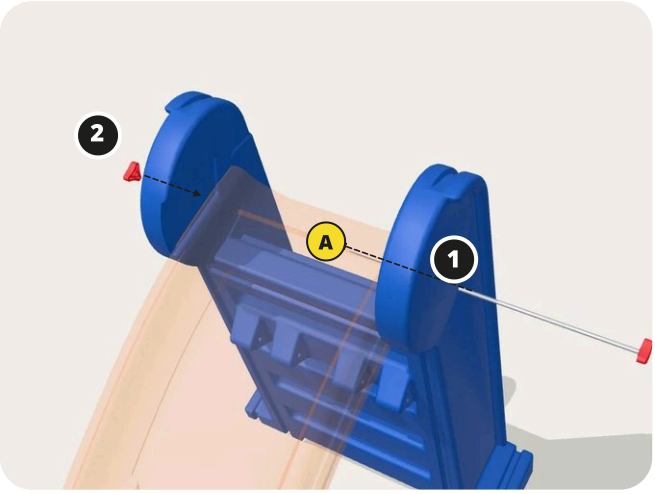

Long axle through the ladder and the slide

A The axle goes through the ladder and the slide

Screw a **knob** onto one end of the **long axle (A)**, 570 mm.

1. Push the axle through the hole at the top of the ladder: it goes through one side of the ladder, the end of the slide and the other side.

2. On the other side, screw the other knob onto the end of the axle. Tighten both by hand until firm.

PARTS FOR THIS STEP


1× Long axle (A) ref. 953207	**2×** Knob ref. 2090296




How it looks at the end of step 2

STEP 3 OF 4

3 Braces on the ladder (axle B)

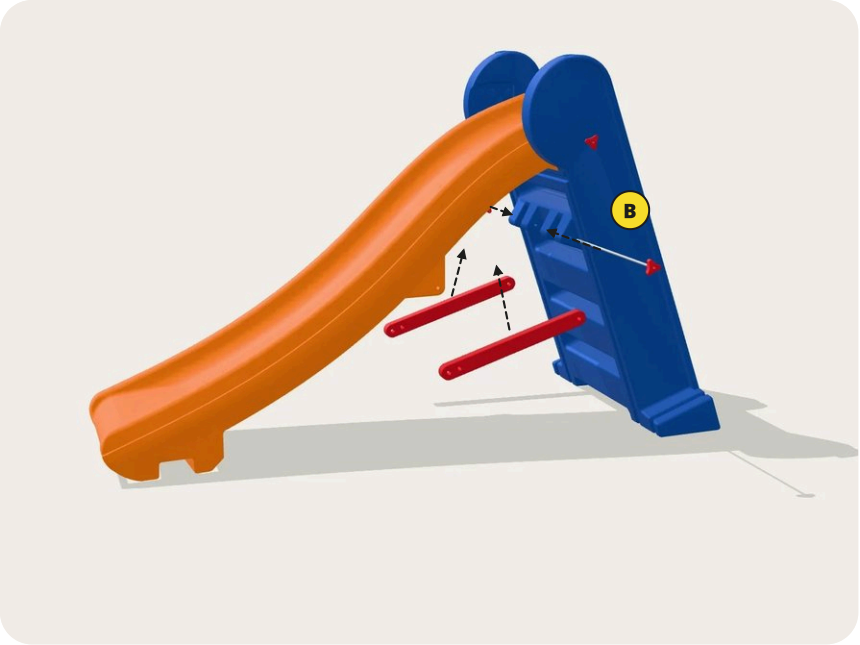

B Medium axle (B)

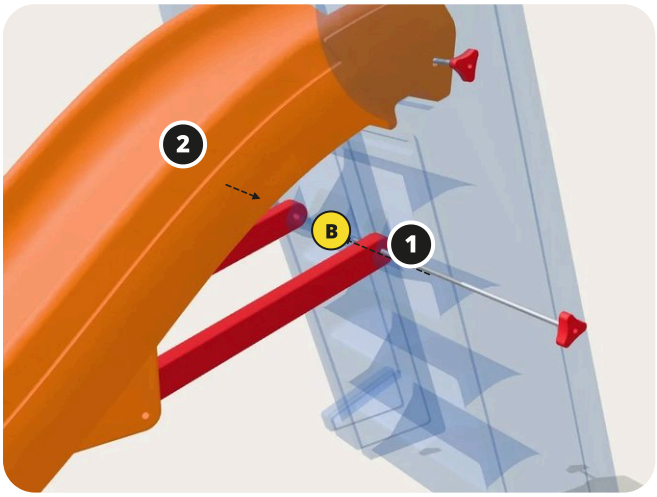

Medium axle through the ladder and the braces

B The axle goes through the ladder and the braces

Take the two **braces**. Behind the steps, the ladder has two lugs on each side: put the end of one brace between the left lugs and the end of the other between the right lugs, lining up the holes.

With a knob already screwed on, push the **medium axle (B)**, 470 mm, through the hole of the ladder and both braces; on the other side, screw on the other knob.

The braces stay loose at the other end, facing the slide.

PARTS FOR THIS STEP

2× Brace
ref. 953203

1× Medium axle (B)
ref. 953206

2× Knob
ref. 2090296




How it looks at the end of step 3

STEP 4 OF 4

4 Braces on the slide (axle C)



C Short axle (C)

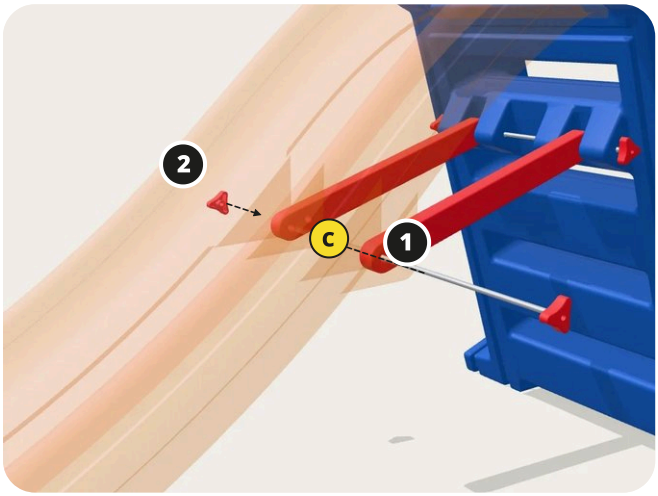

Short axle through the slide and the braces

C The axle goes through the slide and the braces

Lift the loose ends of the braces up to the lugs under the slide: each brace goes between the two lugs on its side.

With a knob already screwed on, push the **short axle (C)**, 415 mm, through the lugs of the slide and the braces; on the other side, screw on the other knob.

Check that the **6 knobs** are tight.

PARTS FOR THIS STEP


1× Short axle (C) ref. 953205	**2×** Knob ref. 2090296



How it looks at the end of step 4


FASTENING DETAILS

How each part is held

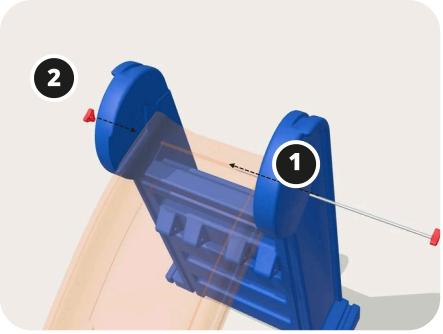


Slide on the ladder

The long axle (A) goes through the top of the ladder and the end of the slide; one knob on each end.

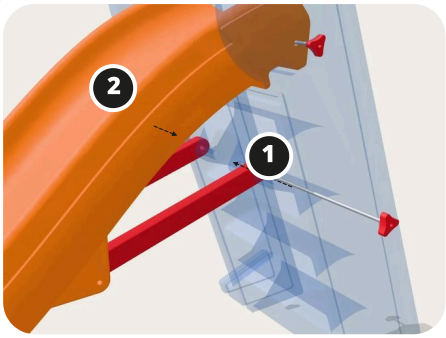

Braces on the ladder

The medium axle (B) goes through the lugs behind the steps and one end of each brace; one knob on each end.

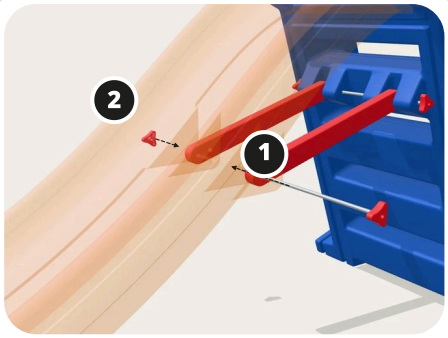

Braces on the slide

The short axle (C) goes through the lugs under the slide and the other end of each brace; one knob on each end.




Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Maximum weight 70 kg. Check that the slide is fitted at the top of the ladder and that the 6 knobs are tight.

INSTALLATION DETAILS

Location and safety area

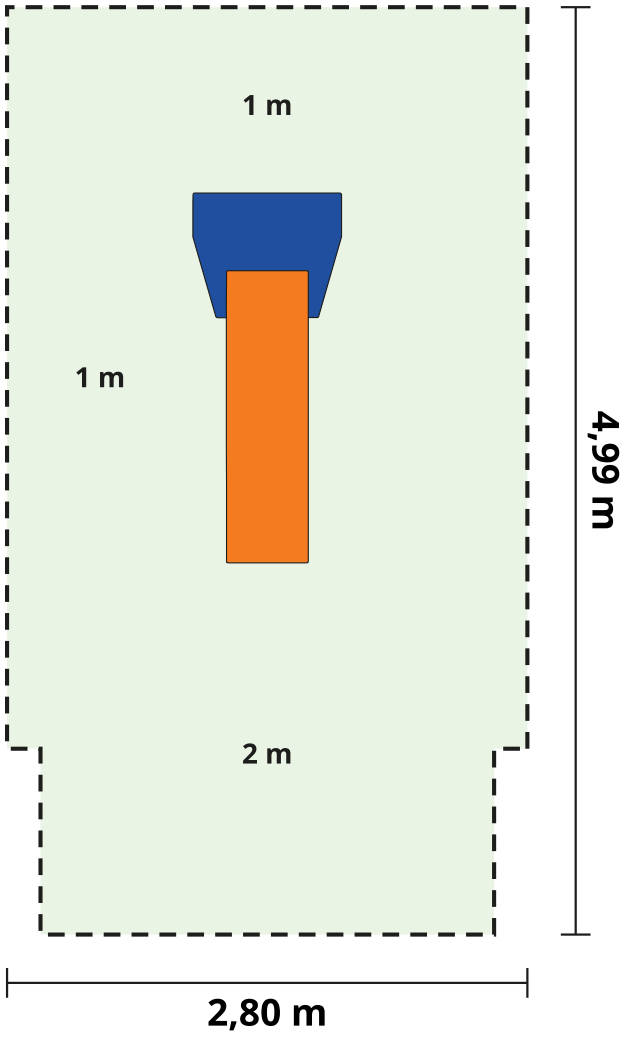

Area reserved for installation and impact (top view): 1 m around and 2 m at the slide exit, 2.80 × 4.99 m. Product size: 1.99 × 0.80 × 1.23 m.

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Fall space: neighboring static equipment with overlapping fall spaces must be at least 1.50 m apart for a fall height of up to 600 mm, and 2.50 m for higher falls. Maximum fall height of this product: **750 mm**.

Slide landing area: at least 1000 mm from the sides of the run-out section and 2000 mm (type 01 run-out) or 1000 mm (type 02 run-out) from the end of the run-out section.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Footprint: the assembled slide takes up about 1.99 × 0.80 m on the ground; keep 1 m clear around it and 2 m in front of the slide exit, as in the figure.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

INSPECTION AND MAINTENANCE

Keep the playground safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Slide fitted on the ladder and knobs tight

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Escorregador Master Laranja · ref. 0953.2
Keep this manual for future reference.