


SCOPE roof - v3 post holes. Lay this over the TOP face of the printed roof, align the outline and the screen window, centre-punch the 3 RED holes. Drill Ø3.3 through, then Ø6.5 x 1.2 deep counterbore from the top (M3 pan head). Green = unchanged hole (front right). Grey = v2 holes that are no longer used - leave them. +Y (front) is UP.

FRONT

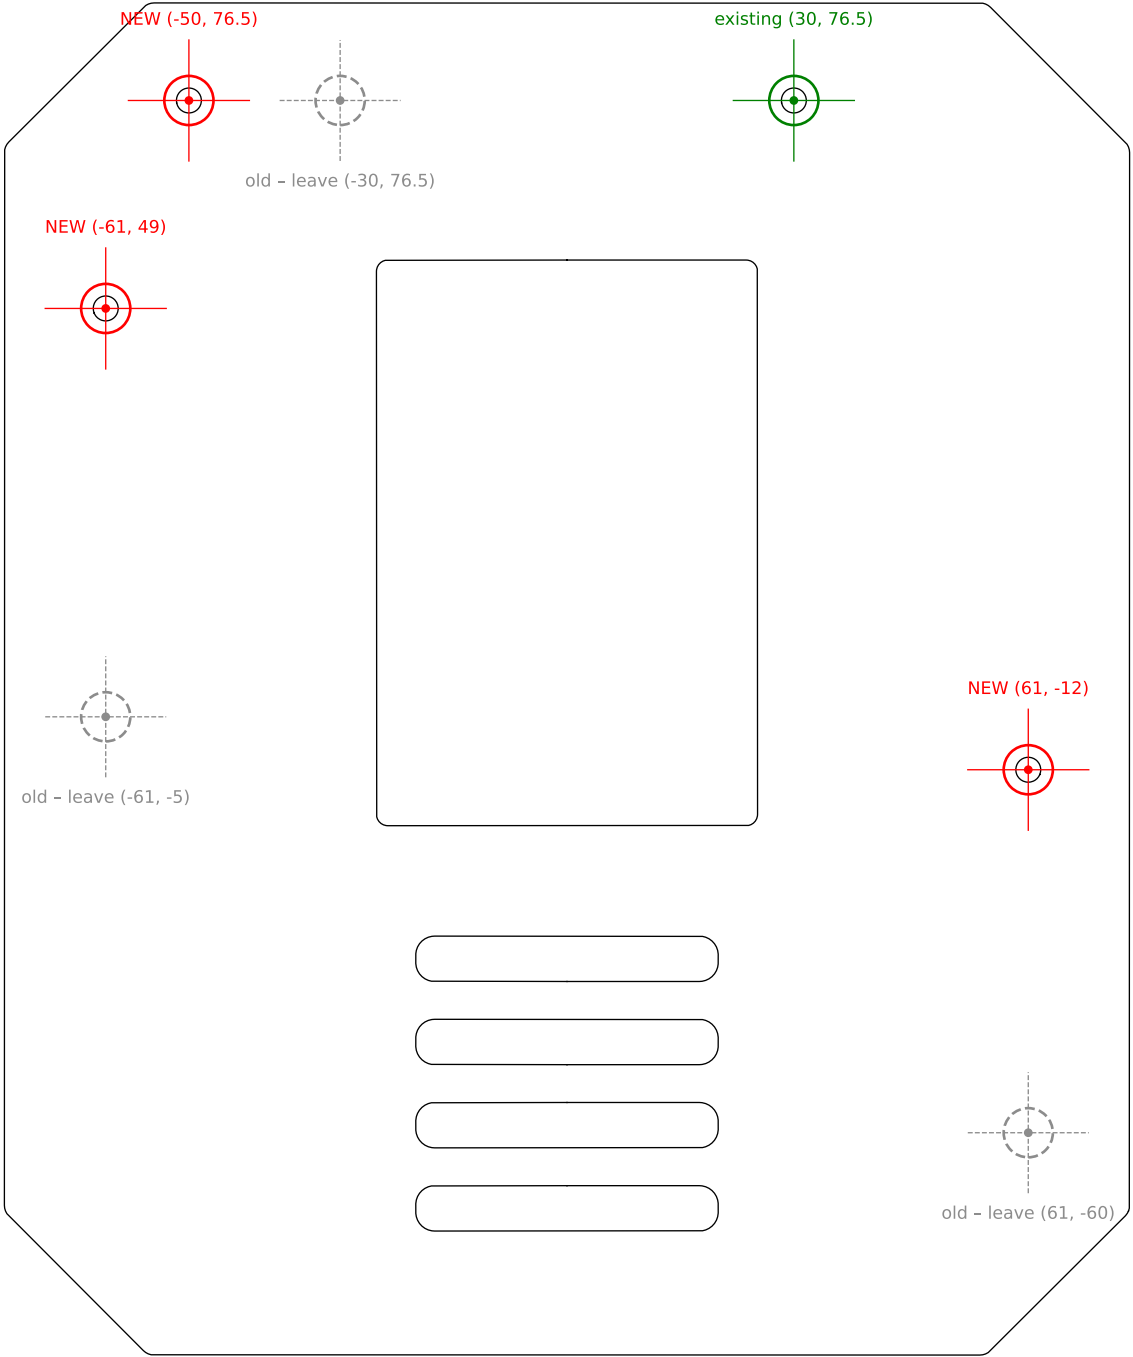

REAR

100 mm – measure this after printing; the template is 1:1 at "actual size"