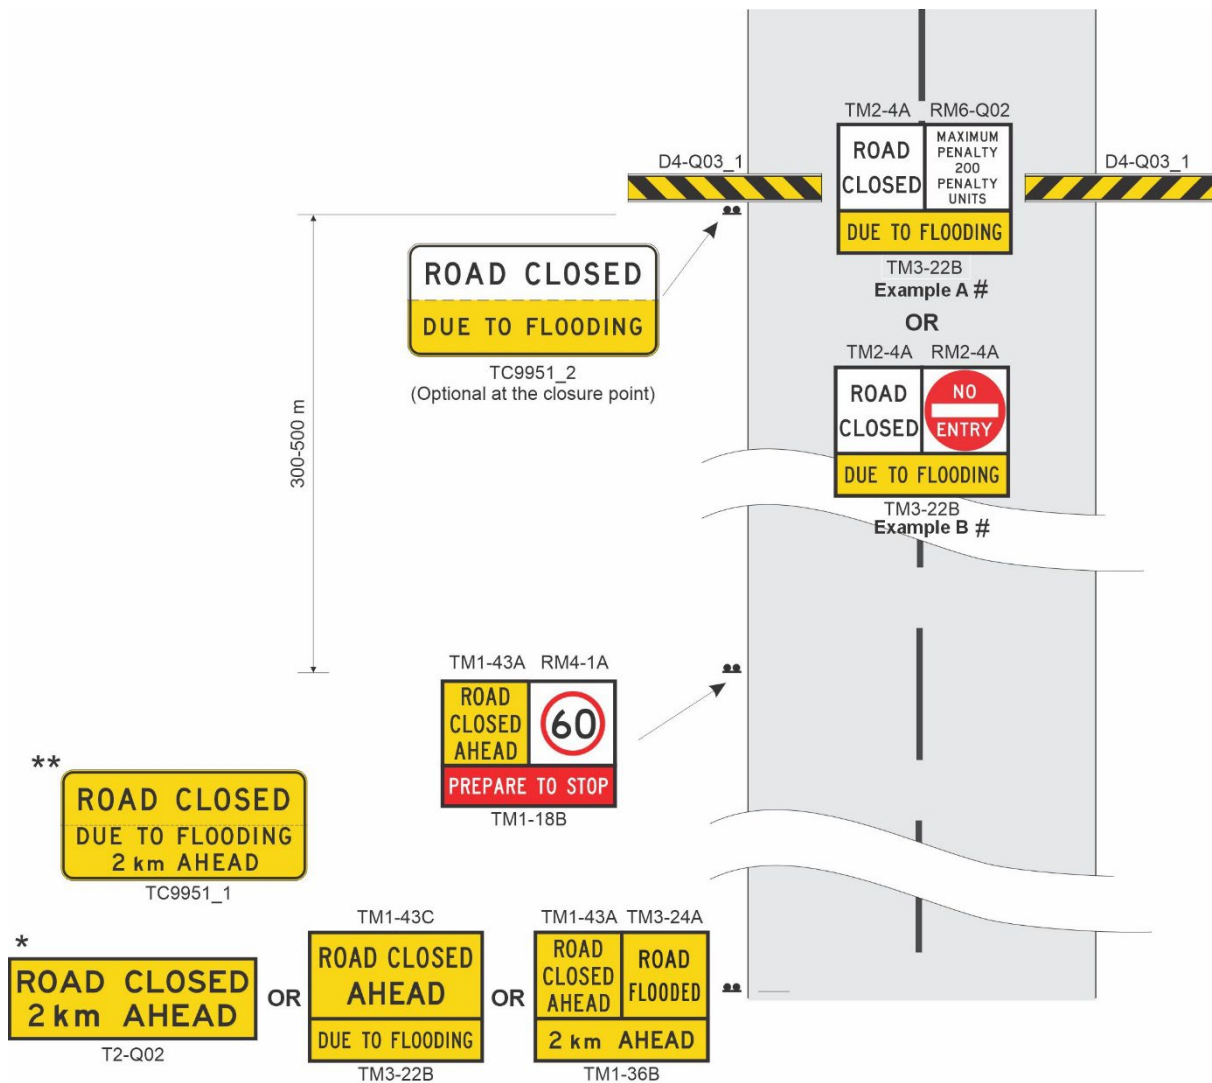


Figure A.6.1 – Example sign layout for closing a road due to flooding**Notes:**

1. * May be used if there is a requirement to give more advanced warning.
2. ** TC9951 hinged, permanent sign may be used in known flood locations to provide advance warning.
3. # Examples A or B may be used to close a road; however, Example A can only be used on a state-controlled road.
4. Signs may be installed in advance of the road closure to provide advance warning (1 or 2 km as shown) or may be installed some distance in advance of the closure where an alternative route may be taken.
5. Regional staff should liaise with Transport Enforcement Officers and Queensland Police Service on sign locations prior to installation.
6. Advance signs may be installed at the start of the road section and may be some distance from actual closure point. They should be installed at decision points, where areas exist to turn around the longest vehicles using that stretch of road or alternative routes are available. As an example, refer to page 3 for details.