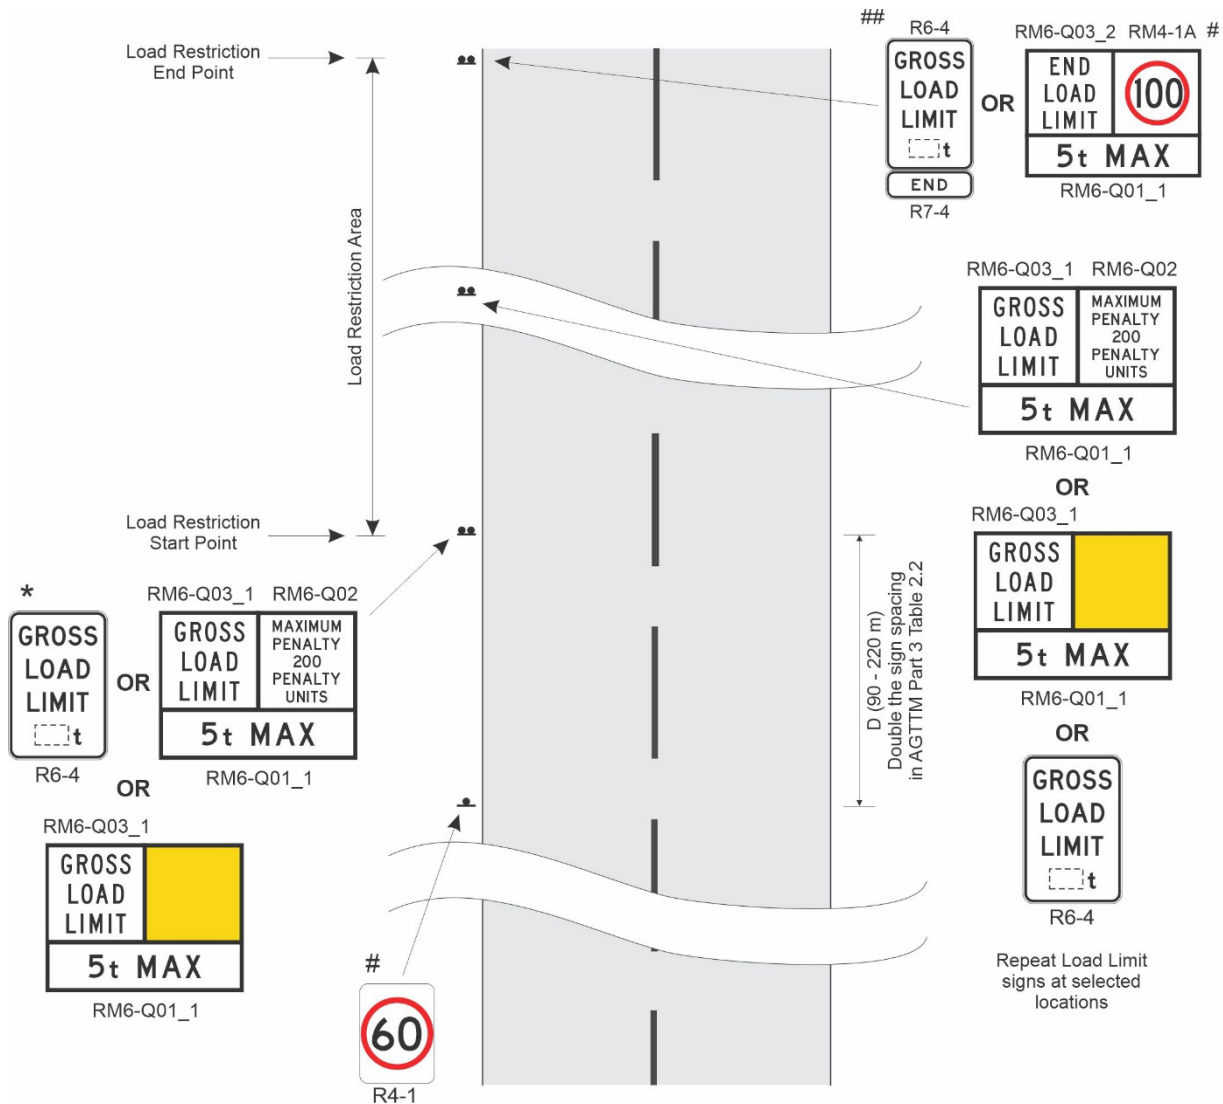


Figure A.6.2 – Example sign layout for restricting access on a road (weight limit)**Notes:**

1. Example of a temporary sign arrangement for a 5 tonne maximum limit. For other load limits refer RM6-Q01.
2. * Either of these signs shall be located at the actual point road restrictions are to apply. MMS arrangement shown may only be used on a state-controlled road.
3. Advance signs may be installed at decision points, where areas exist to turn around the longest vehicles using that stretch of road or alternative routes are available. As an example, refer to Figure A.6.3.
4. # If the speed limit reduction is required in conjunction with a GROSS LOAD LIMIT sign, install R4-1 in advance of the load limit sign. Repeat R4-1 signs over the length of the reduction as required.
5. ## The load restriction area must be terminated with a GROSS LOAD LIMIT sign (R6-4) showing the appropriate weight, combined with an END sign (R7-4) or the multi message frame as shown.
6. Regional staff should liaise with Transport Enforcement Officers and Queensland Police Service on sign locations prior to installation.
7. Load Limit signs should also be installed on the approach to all intersecting roads.