

To detour traffic

- to detour traffic where stopping is not needed, the traffic controller must move to the side of the road (on shoulder, closed lane/s or footpath) and clear of all traffic
- the traffic controller must show the “SLOW” sign of the bat to the traffic
- facing the traffic, extend their free arm and give the TO GO signal indicating the intended direction of travel.

Traffic controllers must remain at the control station until directed by their supervisor to leave or until they are relieved by another traffic controller.

2.9.7 Multi lane roads


Multilane roads are constructed with two or more lanes in one direction. This scenario will not apply on Category 3 roads and speed must be posted speed at the location of the traffic controller must be 60 km/h or less.

Multilane roads that require traffic control must have one (1) traffic controller allocated for each lane open to traffic at all times.

There is often a median strip or concrete barrier dividing the road at the centre. To operate on multi-lane roads, traffic controllers must comply with the relevant competency requirements outlined in AGTTM Part 8. In some situations, lane closures can be implemented downstream from the control point to reduce to one lane for the traffic controller to manage.

Where there is a concrete barrier dividing the road, there may be no escape path for the traffic controller, so extra caution must be taken when operating on such roads. Careful planning should first seek to mitigate circumstances where traffic controllers are placed on a worksite without an escape path.

Figure 2.11: Examples of multi lane roads

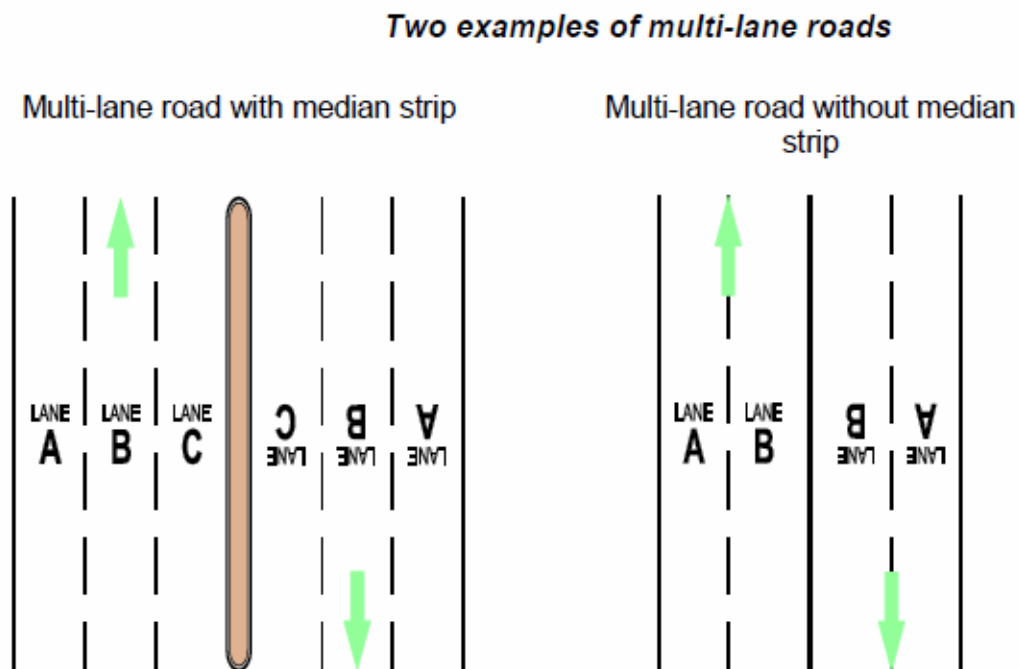

Note: the lanes in these diagrams are designed as LANE A, LANE B and LANE C for explanatory purposes only. They are all assumed to be open lanes for these explanatory purposes.

Source: Traffic Controller Accreditation Scheme Approved Procedure, Transport and Main Roads, December 2017