


Figure 5.5.1 – Speed limit sign location for road worker safety

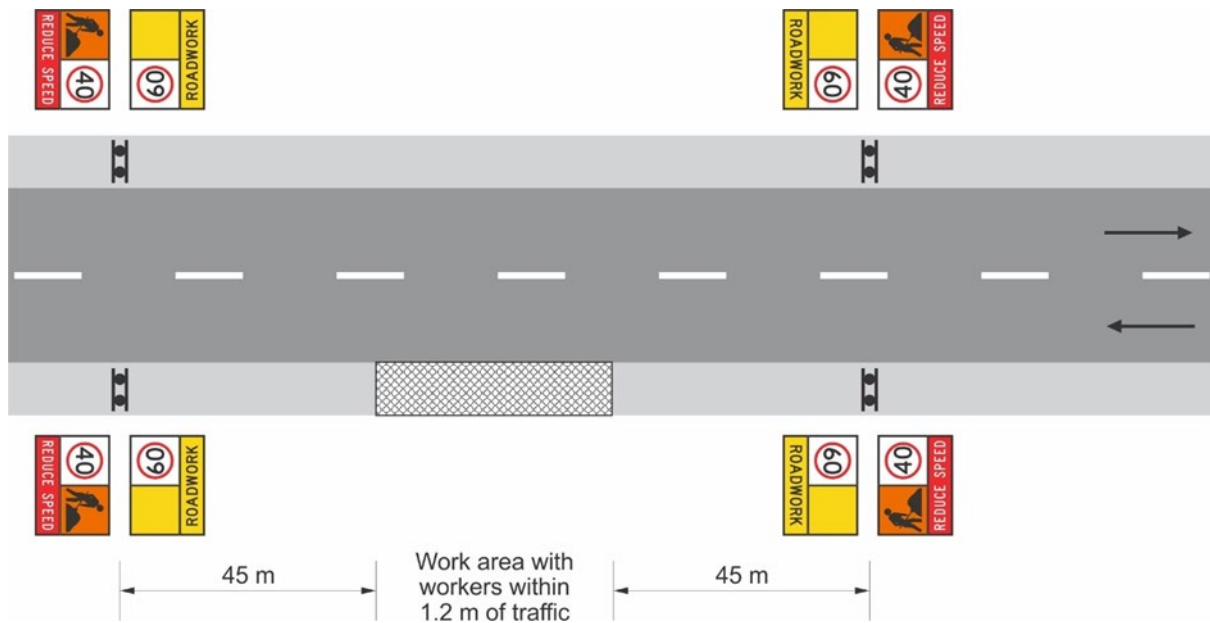

Selecting the speed limit

Selecting the temporary speed limit at works is dependent on workplace safety and traffic safety requirements. Temporary speed limits are a viable option for any of the following examples:

- shuttle flow
- contraflow
- temporary stopping
- temporary traffic signals and PTCD
- the number of lanes is reduced
- merges
- narrow lanes
- protecting traffic controllers
- visibility is restricted (e.g. dust, work equipment, construction materials, abnormal weather conditions)
- limited clearance between road workers or equipment and moving traffic
- the alignment or road surface is below standard
- loose material or stones
- works can be damaged by higher speeds
- emergencies (e.g. flooding, slips, crashes, fire)
- good technical reasons (e.g. the road might otherwise collapse).