


5. Regional staff should liaise with Transport Enforcement Officers and Queensland Police Service on sign locations prior to installation.

6. Advance signs may be installed at the start of the road section and may be some distance from actual closure point. They should be installed at decision points, where areas exist to turn around the longest vehicles using that stretch of road or alternative routes are available. As an example, refer to page 3 for details.

Figure A.6.2 – Example sign layout for restricting access on a road (weight limit)

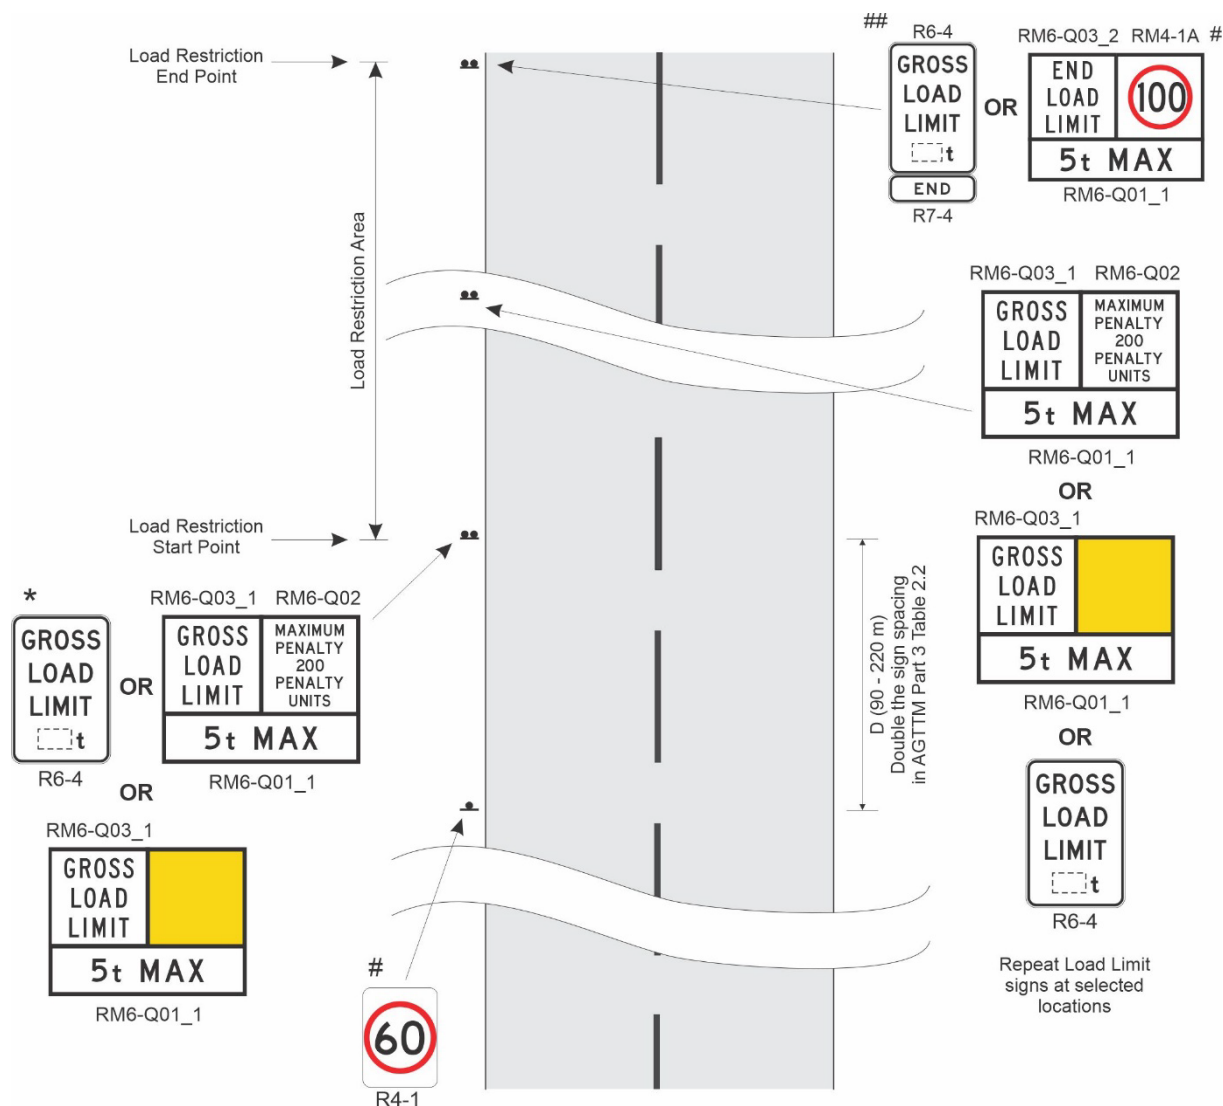

Notes:

1. Example of a temporary sign arrangement for a 5 tonne maximum limit. For other load limits refer RM6-Q01.
2. * Either of these signs shall be located at the actual point road restrictions are to apply. MMS arrangement shown may only be used on a state-controlled road.
3. Advance signs may be installed at decision points, where areas exist to turn around the longest vehicles using that stretch of road or alternative routes are available. As an example, refer to Figure A.6.3.
4. # If the speed limit reduction is required in conjunction with a GROSS LOAD LIMIT sign, install R4-1 in advance of the load limit sign. Repeat R4-1 signs over the length of the reduction as required.