# HP LTO Ultrium 6 Tape Drives Technical Reference Manual Volume 3: Host Interface Guide

#### **Abstract**

This is one of five volumes that document HP LTO Ultrium 6 tape drives (Fibre Channel and SAS). This volume provides host interface information. See "Support and other resources" (page 263) for details of the other guides.



HP Part Number: n/a Published: October 2012 Edition: First © Copyright 2012 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

#### **Acknowledgements**

Windows is a U.S. registered trademarks of Microsoft Corporation.

UNIX is a registered trademark of The Open Group.

#### Warranty

WARRANTY STATEMENT: To obtain a copy of the warranty for this product, see the warranty information website:

http://www.hp.com/go/storagewarranty

# Contents

1	Interface Implementation	11
	The Fibre Channel interface	11
	Supported task management functions	
	The SAS interface	12
	Supported task management functions	12
	Supported commands	12
	SCSI features	13
	Design approach	13
	Power-on	
	Reset strategy	
	Abort handling	
	Link error handling (SAS drives)	
	Multi-initiator support	
	Fibre Channel operation	
	Fibre Channel addressing	
	Names	
	Addresses	
	HP's implementation of names and addresses	
	Implications for libraries	
	Field replaceable units	
	CD-ROM emulation (SAS drives only)	
2	Messages	18
	Status	
3	Response frames and task management functions	10
J	Response frames	10
	Task management functions	
1	· · · · · · · · · · · · · · · · · · ·	
4	Introduction to commands	
	Summary	
	Command details	
	Pre-execution checks	
	LUN check	
	Deferred Error check	
	Diagnostic Status check	
	Fixed Bit check	
	Illegal Command check	
	Illegal Field/Request check	25
	Media Access check	
	Media Information check	
	Media Write checkParameter List check	
	Reservation check	
	Unit Attention check	
_	·	
5	Commands	29
	CLEAR PROTECTED STTF LOG A4h (1Fh)	29
	Vendor-unique ENABLE TRANSPORT LAYER RETRIES (SAS drives only) C2h	
	ERASE 19h	
	ERASE specific status	
	Enhanced FIRMWARE UPGRADE DOWNLOAD FIRMWARE SEGMENT A4h (1Fh)	31

Enhanced FIRMWARE UPGRADE REBOOT A4h (1 Fh)	.32
Enhanced FIRMWARE UPGRADE REPORT IMAGE INFO A3h (1Fh)	.32
FIRMWARE UPGRADE REPORT IMAGE INFO returned data	
Firmware image descriptor (version 1)	.33
FORCED EJECT A4h (1Fh)	.34
FORCE SNAPSHOT A4h (1Fh)	
FORCE SNAPSHOT specific status	
FORMAT MEDIUM 04h	
INQUIRY 12h	
INQUIRY data pages	
INQUIRY returned data	
Standard Inquiry Data format (LUNO)	
Vital Product Data pages	
Supported Vital Product Data Pages page	.41
Unit Serial Number page	
Device Identification page	
Defined identifiers	
Logical Unit Identifier	
Port Name	
Port Identifier	
Target Port Group Identifier	
Target Name (code set 1)	
Management Network Address VPD page	
Extended INQUIRY Data VPD page	46
Mode Page Policy VPD page	
FC drives:	
SCSI Ports VPD page	
FC drives:	
Protocol-Specific Logical Unit Information VPD page (SAS only)	
Sequential Access Device Capabilities page	
Manufacturer-assigned Serial number page	
TapeAlert Supported Flags page	.51
Automation Device Serial Number page	
Data Transfer Element Address page	
Drive Component Revision Levels pages	
Vendor-Specific Device Capabilities page	
HP Alternative Inquiry page	
HP Unique Inquiry page	
LOAD/UNLOAD 18h	
LOAD/UNLOAD specific status	
Loading a cartridge	
Unloading a cartridgeLOCATE 2Bh/92h	
LOCATE specific status	
LOG SELECT 4Ch	
LOG SENSE 4Dh	
Log page format	
Supported Log Pages page	
Write Error Counters log page	
Read Error Counters log page	
Sequential Access Device log page	
Temperature log page	.65
DTD Status log page	.66
Very High Frequency (VHF) data	.66

Very High Frequency polling delay (only available in some variants)	
DT device ADC data encryption control status (only available in some variants)	68
Key management error data (only available in some variants)	
DTD primary status log parameters	69
Fibre Channel port status data	70
SAS port status data	71
VU Very High Frequency data	71
VU key management error data (only available in some variants)	73
VU extended VHF data	73
VU multi-initiator conflict warning (only available in some variants)	74
VU failover status	75
TapeAlert Response log page	75
Requested Recovery log page	76
Recovery procedures	
Device Statistics log page	
Device Statistics log parameters	77
Device statistics data counter log parameter	78
Device statistics medium type log parameter	
Device statistics string data log parameter	
Service Buffers Information Log page	
DT Device Error Log service buffer	79
Health and Error Log service buffer	80
Tape Diagnostic log page	80
Volume Statistics Log page	
Volume Statistics log parameters	
Volume statistics data counter log parameter	
Volume statistics partition record log parameter	83
Volume statistics string data log parameter	
Volume statistics mount history log parameter	
Volume statistics mount history descriptor	
Protocol-Specific Port Log page (SAS´ drives only)	
Protocol-specific log parameters	
Data Compression log page	
TapeAlert log page	
Tape Usage log page	
Tape Capacity log page	89
Data Compression (HP-only) log page	90
Device Wellness Log page	90
Performance Data log page	91
DT Device Error log page	92
Hardware Error data log parameter	92
Device Status log page	
Device Status Bits	
Triggers for changes in the Device Status and Medium Status fields	94
MANAGEMENT ARM SELF-TEST A3h (1Fh)	
MANAGEMENT ARM SELF-TEST returned data	
MODE SELECT 15h/55h	97
MODE SELECT specific status	98
Mode parameter pages	
Mode page representation	98
Mode data format	98
Mode parameter pages	
Mode parameter header	99
Mode block descriptor	
Mode Parameter block descriptor fields	101

Read-Write Error Recovery mode page	.101
Read-Write Error Recovery page fields	.101
Disconnect-Reconnect page	
Disconnect-Reconnect page fields	.102
Control mode page	.103
Control mode page fields	
Control Extension sub-page	
Control Data Protection sub-page	
Data Compression mode page	
Data Compression mode page fields	105
Device Configuration page	
Changeable parameters	
Unchangeable parameters	
Device Configuration Extension mode page subpage	.10/
Medium Partitions mode page	
Specifying partition sizes	
Fibre Channel Logical Unit Control mode page	.112
SAS Logical Unit Control mode page	
Fibre Channel Port Control mode page	.113
SAS Port Control mode page	.114
PHY Control and Discover sub-page (SAS drives only)	.115
Share Port Control mode sub-page	
Enhanced PHY Control mode sub-page	
Power Condition mode page	119
Information Exceptions Control mode page	
Medium Configuration mode page	
Serial Number Override vendor-unique mode page	
Device Time mode page	121
Power-on time descriptor	
World time descriptor	
Library time descriptor	
Cumulative power-on time descriptor	
Field descriptions	
Extended Reset vendor-unique mode page	
CD-ROM Emulation mode page	.124
CD-ROM Emulation/Disaster Recovery mode page fields	.124
MODE SENSE 1Ah/5Ah	.125
PERSISTENT RESERVE IN 5Eh	
PERSISTENT RESERVE IN returned data for service actions	.127
Read Keys service action	.127
Read Reservation service action	
Report Capabilities service action	
Report Full Status service action	
PERSISTENT RESERVE OUT 5Fh	
PERSISTENT RESERVE OUT parameter data	
Additional parameter data	
Parameter data for the Register and Move service action	
Transport IDs	
Fibre Channel Transport ID.	122
SAS Transport ID	. i 34
PREVENT/ALLOW MEDIUM REMOVAL 1Eh	
READ 08h	
READ specific status	
READ residue information	
READ 6 (CD-ROM mode) 08h	.137

READ 6 specific status	138
READ residue information	138
READ 10 (CD-ROM mode) 28h	138
READ 10 specific status	138
READ 10 residue information	139
READ ATTRIBUTE 8Ch	139
READ ATTRIBUTE returned data for service actions	140
Attribute Values service action	140
Attribute List service action	
Partition List service action	141
Volume List service action	
READ ATTRIBUTE specific status	
MAM attribute data	
Attribute ID values.	
Attribute states	
Standard device type attributes	
Standard medium type attributes	
Standard host type attributes.	
Vendor-unique medium type attributes	1
Text localization identifiers.	1 <i>4</i> 0
READ BLOCK LIMITS 05h	
Read Block Limits data	
READ BUFFER 3Ch	
Memory sizes	
READ BUFFER returned data:	
Reading the Snapshot data buffer	
READ CAPACITY (CD-ROM mode) 25h	
Read Capacity data	
READ FIRMWARE TRACE LOG A3h (1Fh)	133 1 <i>E (</i>
READ FIRMWARE TRACE LOG returned data	
READ LOGGED-IN HOST TABLE A3h (1Fh)	
READ LOGGED_IN HOST TABLE returned data	
READ MEDIA SERIAL NUMBER ABh (01h)	
READ MEDIA SERIAL NUMBER returned data	
No barcode stored	
Barcode stored	
READ POSITION 34h	
Short Form Block ID	
READ POSITION returned data fields—short block form	
Long Block Form IDREAD POSITION returned data fields—long block form	162
READ POSITION returned data fields—long block form	162
Extended Block Form ID.	
READ SNAPSHOT LOG A3h (1Fh)	163
READ SNAPSHOT LOG returned data	
READ SNAPSHOT LOG specific status	
READ STTF LOG A3h (1Fh)	
READ TOC (CD-ROM mode) 43h	167
Read TOC data	168
RECEIVE DIAGNOSTIC RESULTS 1Ch	
RECEIVE DIAGNOSTIC RESULTS specific status	169
RECEIVE DIAGNOSTIC RESULTS returned data	170
Page code 70h — Self-Test (Read/Write)	170
RELEASE UNIT 17h/57h	
RELEASE UNIT specific status	
REPORT DENSITY SUPPORT 44h	

REPORT DENSITY SUPPORT header	172
Density Support descriptor blocks	172
Medium Type descriptor blocks	174
REPORT DEVICE IDENTIFIER A3h (05h)	175
REPORT DEVICE IDENTIFIER returned data	176
REPORT IP CONFIGURATION A3h (1Fh)	
REPORT IP CONFIGURATION parameter data	
Descriptor types	
IPv4 Address descriptor	
IPv6 Address descriptor	
Descriptor type 0: Control	
Descriptor type 1: MAC Address	
Descriptor type 2: MTU Size	
REPORT LUNS A0h	
Data returned	
REPORT NETWORK STATISTICS A3h (1Fh)	
Interface statistics	
IP layer statistics	
ICMPv4 statistics	
ICMPv6 statistics	
TCP statistics.	
UDP statistics.	
REPORT SNAPSHOT COMMANDS A3h (1Fh)	
REPORT SNAPSHOT COMMANDS specific status	
Parameter data	
REPORT SNAPSHOT CONFIGURATION A3h (1Fh)	
Parameter data	
REPORT Enhanced SNAPSHOT CONFIGURATION A3h (1Fh)	186
REPORT SNAPSHOTS AVAILABLE A3h (1Fh)	186
Parameter data	
REPORT STTF AVAILABLE A3h (1Fh)	
Parameter data	
REPORT STTF CONFIGURATION A3h (1Fh)	191
REPORT SUPPORTED OPCODES A3h (OCh)	191
REPORT SUPPORTED OPCODES returned data	
All-commands format	
One-command format.	
Timeouts descriptor	
REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS A3h (0Dh)	194
REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS returned data	
REPORT TARGET PORT GROUPS A3h	
Data returned	
Primary Target Port Group descriptor	
Target Port descriptor	
ADC Target Port Group descriptor	197
REPORT TIMESTAMP A3h (0Fh)	
REPORT TIMESTAMP parameter data	
REQUEST SENSE 03h	198
REQUEST SENSE data	
Fixed format	
Returned Sense data fields	200 200
Descriptor format	
Returned Sense data fields.	
Information Sense data descriptor	
Sense Key Specific Sense data descriptor	
JULIAU 1/07 JUUCHIL JULIAU MUM MEJULIDIUI	

Stream Commands Sense data descriptor	203
Drive Error Code Sense data descriptor (Vendor Specific)	203
Cleaning Needed Sense data descriptor (Vendor Specific)	
Sense data management	204
Current sense	
Clearing current sense	
UNIT ATTENTION sense	
DEFERRED ERROR sense	
Write-behind deferred errors.	
Deferred errors reported after abandoned operations	
Sense keys	
Additional Sense codes.	
Error codes	
RESERVE UNIT 16h/56h.	
REWIND 01h.	
REWIND specific status	
SECURITY PROTOCOL IN A2h	
SECURITY PROTOCOL IN returned data	
Security protocol information	
Supported security protocol list:	
Certificate data:	
Tape Data Encryption security protocol	/ ۲۱
Tape Data Encryption In Support page	۱۵ ک
Tape Data Encryption Out Support page	
Data Encryption Capabilities page	
Supported Key Formats page	
Data Encryption Management Capabilities page	
Data Encryption Status page	
Next Block Encryption Status page	
Device Server Key Wrapping Public Key page	
SECURITY PROTOCOL OUT B5h	
SECURITY PROTOCOL OUT returned data	
Tape Data Encryption security protocol information	
Set Data Encryption page for Key Format = Plain-text key (00h)	
Key Descriptor format when Key Format field is 00h	
Set Data Encryption page for Key Format = Wrapped key (02h)	
Key field format when Key Format field is 02h	
Wrapped Key descriptors	228
SECURITY PROTOCÓL OUT specific status	228
SEEK (CD-ROM mode) 2Bh	
SEND DIAGNOSTIC 1Dh	230
SEND DIAGNOSTIC data required	
SEND DIAGNOSTIC specific status	
Standard self-test	231
SET CAPACITY OBh	231
SET DEVICE IDENTIFIER A4h (06h)	232
SET DEVICE IDENTIFIER returned data	233
SET IP CONFIGURATION A4h (1Fh)	233
SET SNAPSHOT COMMANDS A4h (1Fh)	
SET SNAPSHOT COMMANDS specific status	
SET SNAPSHOT COMMANDS parameter data	
SET SNAPSHOT COMMANDS specific status	
SET SNAPSHOT CONFIGURATION A4h (1Fh)	
SET SNAPSHOT CONFIGURATION parameter data	
SET Enhanced SNAPSHOT CONFIGURATION A4h (1Fh)	

SET Enhanced SNAPSHOT CONFIGURATION specific status	240
SET STTF CONFIGURATION A4h (1Fh)	240
SET STTF CONFIGURATION parameter data	240
STTF Control descriptor	242
STTF Flash Management descriptor	242
STTF On Load Failure descriptor	243
STTF On Unload Failure descriptor	244
STTF On Forced Eject descriptor	
STTF On Unload descriptor	245
STTF On Check Condition descriptor	
STTF On Drive Error descriptor'	
STTF On Sense Data descriptor	
STTF On Fault Log descriptor	
STTF On Trace Point descriptor	
STTF On ADT Reported Error descriptor	
SET STTF CONFIGURATION specific status	
SET TIMESTAMP A3h (1Fh)	
SET STTF CONFIGURATION A4h (1Fh)	
SET STTF CONFIGURATION parameter list data format	
SPACE 11h/91h	250 251
SPACE specific status	257
START/STOP (CD-ROM mode) 1Bh	252
TEST UNIT READY OOh	
TEST UNIT READY specific status	
VERIFY 13h	
WRITE OAh	
WRITE specific status	230 254
Residue information	
WRITE ATTRIBUTE 8Dh	
WRITE ATTRIBUTE parameter list format	
WRITE ATTRIBUTE specific status	
WRITE BUFFER 3Bh	
Memory sizes	
Main buffer memory	
SCSI burst buffer	
PCA EEPROM	
WRITE FILEMARKS 10h	
WRITE FILEMARKS specific status	
6 Support and other resources	263
Related documents	263
Documents specific to HP LTO Ultrium drives	
Documentation map	
Drives—general	263
Installation and configuration	263
Operation	
Cartridges	
Interface	
Maintenance and troubleshooting	
Dealing with errors	
LTO Ultrium features	
General documents and standardization	
Glossary	
Index	268

# 1 Interface Implementation

HP LTO Ultirum 6 drives use Fibre Channel or Serial Attached SCSI (SAS) as the interface to connect to the host system.

This chapter gives an overview of how the interface operates. Full details of the messages are given in "Messages" (page 18), of SAS response frames and task management functions in "Response frames and task management functions" (page 19), and of commands in "Introduction to commands" (page 22) and "Commands" (page 29).

### The Fibre Channel interface

Fibre Channel is an industry standard, approved by the American National Standards Institute (ANSI). You are recommended to read the ANSI standard documents in conjunction with this manual. The ANSI specifications define the interface in general while this document describes the HP LTO Ultrium implementation.

The Fibre Channel implementation provides a drive with a standard set of features and functions. These include the following:

- Implementation of all mandatory and most optional commands of the Sequential Access command set, also SPC (SCSI Primary Commands)
- Auto-negotiation to 8 Gb/s, 4 Gb/s and 2 Gb/s with an 8 Gb/s transceiver, and 4 Gb/s, 2 Gb/s and 1 Gb/s with a 4 Gb/s transceiver.
- Dual port capability
- Conformance to the following SCSI standards:
  - SAM-4 ANSI INCITS 447–2008
  - FCP-3 ANSI INCITS.416:2006
  - FC-AL-2 ANSI INCITS.350:200x with AM1:2002
  - FC-FS3 ANSI INCITS.373-2003
  - FC-Tape ANSI INCITS TR-24:1999
  - FC-FLA ANSI INCITS TR-20:1998
  - SPC-4 T10/1731-D revision 23
  - SSC-4 (no version claimed)

# Supported task management functions

The following task management functions are supported by the drives:

- ABORT TASK
- ABORT TASK SET
- CLEAR TASK SET
- LOGICAL UNIT RESET.
- QUERY ASYNCHRONOUS EVENT
- QUERY TASK SET
- TARGET RESET

For implementation details on these, see "Response frames and task management functions" (page 19).

# The SAS interface

Serial Attached SCSI (SAS) is an industry standard, approved by the American National Standards Institute (ANSI). You are recommended to read the ANSI standard documents in conjunction with this manual. The ANSI specifications defines the interface in general while this document describes the HP LTO Ultrium implementation.

The SAS implementation provides a drive with a standard set of features and functions. These include the following:

- Implementation of all mandatory and most optional commands of the Sequential Access command set
- SAS-2 compliant interface
- 6 Gbps serial transfers
- Conformance to the following SCSI standards:
  - SAM-4 ANSI INCITS 447-2008
  - SAS-2 (no version claimed)
  - SPC-4 T10/1731-D revision 23
  - SSC-4 (no version claimed)

#### **NOTE:**

There is backward compatibility with 3 Gb/s and 1.5 Gb/s SAS.

# Supported task management functions

The following task management functions are supported by the drives:

- ABORT TASK
- ABORT TASK SET
- CLEAR TASK SET
- LOGICAL UNIT RESET
- QUERY ASYNCHRONOUS EVENT
- QUERY TASK
- QUERY TASK SET
- TARGET RESET

For implementation details on these, see "Response frames and task management functions" (page 19)

# Supported commands

See "Introduction to commands" (page 22) for a list of supported commands. They include all Mandatory and Extended commands and most Optional commands.

For implementation details on these commands, see "Commands" (page 29).

# SCSI features

# Design approach

The features supported by the drive are based on standards, both official and de facto. The drive is fully compliant with the current SCSI standards: SPC-4, SSC-4, SAM-4, and the relevant transport protocol (such as SAS-2 for SAS drives). All mandatory commands and features are supported, as well as some that are optional. In addition, some features from older standards are still supported for backwards compatibility.

### Power-on

The first command received from an initiator (other than INQUIRY, REQUEST SENSE and REPORT LUNS) will result in CHECK CONDITION status, with UNIT ATTENTION sense data reported for the power on. Once the drive has completed its self-test and set-up procedures, it will attempt to reload any tape that is already present in the drive. It may take some time to recover the tape, especially if it was positioned near EOM whenthe drive was power-cycled. During tape recovery, medium access commands will result in a sense key of NOT READY, with additional sense of 0401 h (drive in process of becoming ready).

# Reset strategy

Following on the receipt of a Logical Unit Reset Task Management Function, the following actions will be carried out by the drive:

- All tasks queued for that Logical Unit will be aborted.
- Mode parameters are cleared to their default values.
- The drive's reservation is released, but not the persistent reservation.
- Any buffered writes are flushed to tape.
- If Rewind-On-Reset has been configured, the tape will be rewound (Logical Position is BOM).
- A UNIT ATTENTION condition is set, based on the type of reset.

The first command from any initiator (other than INQUIRY, REQUEST SENSE and REPORT LUNS) to that particular Logical Unit will result in CHECK CONDITION status with UNIT ATTENTION sense data for the reset.

It is possible to force a hard reset in the drive, which is equivalent to a soft power-cycle.

The Reset button on the front panel is connected to the reset circuitry of the drive. The effect of depressing the Reset button is equivalent to power-cycling the drive.

The ACI\_RST\_L line on the ACI connector will also activate the reset circuitry when pulled low in an ACI automation environment. Activating the ACI\_RST\_L line in an ADI automation environment will result in an ADT port logout and will not activate the reset circuitry.

The contents of the tape and cartridge memory may not be consistent after a reset and any data in the drive buffer will be lost.

# Abort handling

# Link error handling (SAS drives)

In normal operation, random errors will occasionally be encountered on the link between the initiator and the tape drive. A single bit error may result in a frame with a bad CRC value, or in a communication failure if the error corrupts one of the special "primitive" messages used to manage the link. The SAS standard provides an optional mechanism to retry most link errors; this mechanism is known as Transport Layer Retries. See "SAS Logical Unit Control mode page" (page 112). By default the tape drive has retries disabled; an initiator which is also capable of handling retries

must enable them in the tape drive typically during the discovery phase. The tape drive will also support the TLR Control field in SSP command frames.

The following table indicates the drive behavior both with and without transport layer retries enabled, for a variety of possible error scenarios:

Error Type	Behavior					
	Transport Layer Retries Disabled	Transport Layer Retries Enabled				
Data frame CRC error on writes	The drive sends NAK.	The drive sends NAK.				
	The initiator aborts the command using the ABORT task management functions.	The initiator restarts data transfer with the Changing Data Ptr bit set for the first resent frame.				
Data frame CRC error on reads	The initiator sends NAK.	The initiator sends NAK, drive restarts				
	The drive aborts the command with a sense key of ABORTED COMMAND and additional sense of 4BO4h (NAK received).	transfer from start of burst with Changing Data Ptr bit set for 1st resent frame				
XFER_RDY frame CRC error	The initiator sends NAK.	The initiator sends NAK.				
	The drive aborts the command with a sense key of ABORTED COMMAND and additional sense of 4B04h (NAK received)	The drive re-issues XFER_RDY with the Retransmit bit set and a fresh TPTT value.				
Response frame CRC error	The initiator sends NAK.	The initiator sends NAK.				
	The drive re-sends the response frame with the Retransmit bit set.	The drive re-sends the response frame with the Retransmit bit set.				
Loss of ACK for a write data frame	The initiator times out the operation and sends an ABORT task management function.	The drive completes the operation (since all data was received successfully) and sends GOOD status.				
Loss of ACK for read data frame	The drive times out the operation and aborts the command with a sense key of ABORTED COMMAND and additional sense of 4B03 (ACK/NAK Timeout).	The drive times out the operation, then restarts the transfer from the start of the burst with the Changing Data Ptr bit set for the first resent frame.				
Loss of ACK for a XFER_RDY frame	The drive times out the operation and aborts the command with a sense key of ABORTED COMMAND and additional sense of 4B03 (ACK/NAK Timeout).	The drive times out the operation, then re-issues XFER_RDY with the Retransmit bit set and a fresh TPTT value.				
Loss of ACK for a response frame	The drive times out the operation, then re-sends the response frame with the Retransmit bit set.	The drive times out the operation, then re-sends the response frame with the Retransmit bit set.				

# Multi-initiator support

All drives are designed to operate within a multi-initiator environment. The maximum number of concurrently connected initiators is:

- FC drives: 511 (shared across both ports)
- SAS drives: 32 (shared across both ports)

Sense Data, Unit Attention and Deferred Errors are maintained for each initiator. Most Mode parameters are common to all initiators.

Media access commands are executed in order of receipt. Non-media access commands are executed in order of receipt, but will queue-jump media access commands.

The drive implements a simple queueing model and will ignore 'Head of Queue' and 'Ordered Queueing' attributes.

FC drives support the full command queuing model with a queue depth of 4. See "Standard Inquiry Data format (LUNO)" (page 38) for details of the BQue and CmdQue bits which define this support.

# Fibre Channel operation

The following sections have information specific to Fibre Channel operation:

- "Fibre Channel Logical Unit Control mode page" (page 112)
- "Fibre Channel Port Control mode page" (page 113)
- "Vital Product Data pages" (page 41)

# Fibre Channel addressing

Before describing HP's implementation of Fibre Channel addressing, the concepts of **Names** and **Addresses** need to be clarified.

### Names

Names are 64-bit identifiers assigned permanently to the tape drive during manufacture. They are commonly referred to as World Wide Names since they must be guaranteed unique. The names are typically used for identifying the device to operating systems, since addresses are assigned dynamically. One of the principal uses for WWNs in Storage Area Networks is to enable the division of fabrics into separate zones for security, load balancing, redundancy or manageability purposes.

There at least eight different name formats distinguished by the Network Address Authority (NAA). Only one is used on HP LTO Ultrium drives. This is the IEEE Registered Name (NNA=5) and has the following format:

	31 byt	e 0 24	23 byte	1 16	15 byte	≥ 2 8	7 byt	e3 o
word 1	NAA=5 IEEE Company ID (24 bits) VS							
word 2	Vendor Specified ID (36 bits)							

This name is made up of three fields:

- NAA Identifier (4 bits). "5" indicates a IEEE Registered Name.
- IEEE Company ID (24 bits). Assigned by IEEE to the company.
- Vendor Specified ID (36 bits). Assigned by the company.

### Addresses

Each Fibre Channel port has an Address Identifier, which is unique on the fabric to which the port is attached. Address Identifiers are assigned automatically during link initialization and fabric login

Each Fibre Channel port also has a Port Address which is assigned during loop initialization and/or Fabric Login. This is a 24-bit value in the following format:

The AL\_PA is the Arbitrated Loop Physical Address. This is normally assigned dynamically during loop initialization.

If the drive is on a loop that is not attached to a fabric (in other words, when it is on a private link), the top two bytes will be zero. If the loop is attached to a fabric, the top two bytes are assigned when it logs into the fabric.

Together, the three bytes provide a unique address on the Fibre Channel fabric that is used for frame addressing. It forms the equivalent of the Target ID or Initiator ID in SCSI.


### HP's implementation of names and addresses

The HP implementation uses three adjacent IEEE Registered Names:

- The first (last bits = 00) is used as the Port 0 World Wide Name.
- The second (last bits = 01) is used as the Port 1 World Wide Name (full-height drives only).
- The third name (last bits = 10) is used for the Device World Wide Name.

(These are assigned during manufacture from HP's pool of names, although only the first will actually be stored in the drive NV-RAM).

The port addresses will be assigned using the 'standard' AL\_PA initialization mechanisms. The 'Fibre Channel Port Control mode page' controls this. The drive has the ability to support hard addresses as part of this scheme.

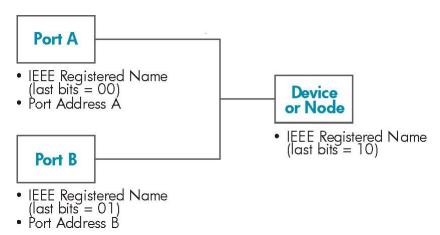

There are two further WWNs, the SCSI Device WWN (typically set equal to the Node WWN) and the ADC Device WWN (last bits = 11)

The values of the names can be obtained using the Device Identification Vital Product Information Page (part of the INQUIRY command).

# Implications for libraries

- Normally a standalone drive will operate using its own factory-programmed 'hard' names.
- The drive knows it is in a library or other 'managed' environment since one of the signal lines on the Automation Interface will be tied down. In this guide, the term "Automation Interface" covers both ACI (Automation Control Interface) and ADI (Automation/Drive Interface).
  In this case, the drive will not go on the FC loop or connect to the fabric until it is told to. The library can optionally configure new soft names (Port 0, Port 1 for full-height drives only, and Node Name) into the drive at this point. The drive will then use this as the origin of its names. The library manufacturer would be responsible for obtaining this IEEE Registered Name. It would be a property of the library, not the drive.
- If the library wants to 'warm swap' drives, it can. It just 'turns off' the drive with the soft name using the ACI and then turns on the spare drive, downloading the same name to it.
- If a drive is removed from the library, it will not have the ACI signal tied low and so will revert to its original hard name. It should forget the soft name in this case.
- After a power-cycle or hard reset soft names will revert to the original hard names assigned during manufacture.
- If the library controller breaks, the drive will continue to use the soft name last downloaded. This will allow drive access without confusing the host.

# Field replaceable units

An FRU code identifies which part of the hardware is considered to have failed. These codes turn up in sense data byte 14 and as the sense code qualifier for sense codes 4400h (internal target failure) and 40XX (diagnostic failure).

Although there are no actual *Field* Replaceable Units on HP LTO Ultrium drives, the following sub-assemblies can be replaced at Repair Centres:

Drive PCA

Head Assembly

Mechanism

• Front Panel

# CD-ROM emulation (SAS drives only)

The One Button Disaster Recovery (OBDR) functionality in HP LTO Ultrium drives enables them to emulate CD-ROM devices in specific circumstances (also known as being in "Disaster Recovery" mode). The drive can then act as a boot device for PCs that support booting off CD-ROM.

A CD-ROM capable drive can be switched into CD-ROM mode by powering on with the eject button held down. The drive then alters its behavior as follows:

- The front panel lights flash a "warbling" sequence.
- CD-ROM commands are executed (as opposed to tape drive mode when they would be rejected). Commands specific to CD-ROM mode are READ 10, READ TOC and READ CAPACITY. In the case of SCSI commands 08h (READ), 1Bh (LOAD/UNLOAD) and 2Bh (LOCATE), these are interpreted as CD-ROM commands 08h (READ 6), 1Bh (START/STOP) and 2Bh (SEEK) respectively.
- Writing is disabled.
- Normal INQUIRY data is modified to add a field indicating that the drive supports CD emulation and to switch the peripheral device type field to indicate a CD-ROM drive.
- The mode header and mode block descriptor are modified.
- A CD-Emulation mode page is added.
- Mode data changes to reflect CD-ROM medium type and block size.
- Status reporting by the media access check is altered.
- The drive's sense data when the media is not ready for access always indicates "loading".

If a tape is inserted while the drive is in CD-ROM mode, the drive assumes that it will contain an image of a CD offset 20 blocks into the tape. It reads the first 250 kilobytes of this image into buffer space reserved for CD-caching. It then looks for a special message ("EL TORITO SPECIFICATION") at the 8th byte of the 18th record of the image. If the drive fails to find this message, it ejects the tape and waits in CD-ROM mode for a properly-written CD-image tape to be inserted.

The drive will remain in CD-emulation mode until one of the following occurs:

- A MODE SELECT command switches it back to tape drive mode using the CD-emulation mode page.
- A Logical Unit Reset task management function or a HARD\_RESET primitive sequence is received, following the reading of at least 100 blocks of CD-ROM data by a host.
- The user power-cycles the drive or resets it using the forced-eject mechanism.

**NOTE:** If the drive exits CD-ROM mode through either of the first two of these, the tape will remain at the last logical position when in CD-ROM mode.

# 2 Messages

# Status

A Status byte is sent from the drive to the host during the Status phase at the end of each command as specified in the SCSI specification, unless the command has been cleared by an ABORT message, by a BUS DEVICE RESET message, or by a hard reset.

The Status bytes that the drive returns are as follows:

00h	GOOD: This status indicates that the drive has successfully completed the command.
02h	<b>CHECK CONDITION</b> : Any error, exception, or abnormal condition that causes sense data to be set returns CHECK CONDITION. The REQUEST SENSE command should be sent following this status to determine the nature of the error.
04h	CONDITION MET: This status will never be returned by an HP LTO Ultrium tape drive.
08h	<b>BUSY</b> : The drive is unable to execute the command at this time. Try again later. The drive tries to avoid using this status code during normal operation. It can sometimes be used after commands have been aborted, during power-on and if there are multiple selecting initiators.
10h	INTERMEDIATE: This status will never be returned by an HP LTO Ultrium tape drive.
14h	INTERMEDIATE CND: This status will never be returned by an HP LTO Ultrium tape drive.
18h	<b>RESERVATION CONFLICT</b> : Returned if the drive is reserved by another party. See the Reservation check.
22h	COMAND TERMINATED: This status will never be returned by an HP LTO Ultrium tape drive.
28h	TASK SET FULL
40h	ABORTED COMMAND

# 3 Response frames and task management functions

# Response frames

This section describes the format of SAS response frames returned by HP LTO Ultrium tape drives. Response frames provide a way for the drive to report the outcome of all SCSI commands and task management functions:

	7	6	5	4	3	2	1	0	
0–7	Reserved (0)								
7	(40000)								
8	Status Qualifier (0000h)								
10	Reserved (0) DATAPRES								
11	Status								
12–15				Reser	ved (0)				
16	(MSB)	Sense Data Length (n bytes)							
19		-	•		(LSB)				
20	(MSB)		Response Data Length ( <i>m</i> bytes)						
23		-	ке	sponse Data	tengin ( <i>m</i> byi	esj		(LSB)	
24									
23+m			Response Data (if any)						
24+m									
23+m+n			Sense Data (if any)						

DATAPRES		Specifies the format and content of the Status, Sense Data Length, Response Data, and Sense Data fields:				
	Code	Name	Description			
	00b	NO_DATA	Neither response data nor sense data are present			
	01b	response_data	Response data is present			
	10b	SENSE_DATA	Sense data is present			
	11 b Reserved					
Status	The Status byte is valid for all response frames, unless the DATAPRES field is set to RESPONSE_DATA. It indicates the outcome of the SCSI command:					
	00h	GOOD	The drive has successfully completed the command.			
	02h	CHECK CONDITION	An error, exception, or abnormal condition has occurred that causes sense data to be set. Check the sense data in the RESPONSE frame to determine the nature of the error.			
	04h	CONDITION MET	Never returned by an HP LTO Ultrium tape drive.			
	08h	BUSY	The drive is unable to execute the command at this time. Try again later. The drive tries to avoid using this status code during normal operation.			
	10h	INTERMEDIATE	Never returned by an HP LTO Ultrium tape drive.			
	14h	INTERMEDIATE CND	Never returned by an HP LTO Ultrium tape drive.			

	18h	reservation conflict	The drive is reserved by another party. See the Reservation check.		
	22h	COMMAND TERMINATED	Never returned by an HP LTO Ultrium tape drive.		
	28h	TASK SET FULL	The drive cannot accept another task at the moment because the internal limit has been reached. Try again later.		
	30h	ACA ACTIVE	Never returned by an HP LTO drive.		
	40h	TASK ABORTED	Returned to the host if the interface is reset by a different host on the same interface, or the interface is reset by the automation control interface.		
Response Data	valid; the		SPONSE_DATA, the Status and Sense Data fields are not conse to a task management function or to an invalid request le:		
	Code	Description			
	00h	Task management fund	ction complete <sup>a</sup>		
	02h	Invalid frame			
	04h	Task managements fur	nction not supported <sup>a</sup>		
	05h	Task management fund	ction failed <sup>a</sup>		
	08h	Incorrect Logical Unit Number <sup>a</sup>			
	09h				
	0Ah				
	All other	codes are reserved.			

<sup>&</sup>lt;sup>a</sup> Only set for a task management frame.

# Task management functions

This section includes all SCSI task management functions, both supported and unsupported.

Task Management functions provide an initiator and a target in the SAS domain with a means of managing specific operations or tasks. The supported functions are listed in this chapter.

In the following table, all the supported task management functions use the Logical Unit Number field, and ABORT TASK (01h) and QUERY TASK (80h) also use the Tag of Task to Be Managed field.

Code	Task Management Function	Description		Value	
Code	lask Management Fonction	Description	FC	SAS	
01 h	ABORT TASK	Performs the ABORT TASK task management function with:  L = Logical Unit Number field  Q = Tag of Task to Be Managed field	1	0	
02h	ABORT TASK SET (SAS only)	Performs the ABORT TASK SET task management function with:  L = Logical Unit Number field	1	1	

<sup>&</sup>lt;sup>b</sup> Returned when a command/task management function or task management function/task management function tag conflicts.

<b>6</b> I	T 1 44		Value	
Code	Task Management Function	Description	FC	SAS
04h	CLEAR TASK SET	Performs the CLEAR TASK SET task management function with:  L = Logical Unit Number field	1	1
08h	LOGICAL UNIT RESET	Performs the LOGICAL UNIT RESET task management function with:	1	1
		L = Logical Unit Number field		
10h	TARGET RESET	Supported by FC for legacy FC host drivers.	1	0
10h	I_T NEXUS RESET		0	0
20h	Reserved			
40h	CLEAR ACA	Not supported	0	0
80h	QUERY TASK (SAS only)	Performs the QUERY TASK task management function with:	0	1
		L = Logical Unit Number field		
		Q = Tag of Task to Be Managed field		
81 h	QUERY TASK SET		1	1
82h	QUERY ASYNCHRONOUS EVENT	Only supported for Fibre Channel.	1	1
others	Reserved			

# 4 Introduction to commands

This chapter contains notes relating to the SCSI commands listed in "Commands" (page 29).

# Summary

The following table is a summary of the SCSI commands for sequential access devices, showing the operation code:

Opcode	Command Name
00h	TEST UNIT READY
01h	REWIND
03h	REQUEST SENSE
04h	FORMAT MEDIUM
05h	READ BLOCK LIMITS
08h	READ
08h	READ 6 (CD-ROM, OBDR-capable drives only)
0Ah	WRITE
OBh	SET CAPACITY
10h	WRITE FILEMARKS
11 h	SPACE 6
12h	INQUIRY
13h	VERIFY
15h	MODE SELECT
16h	RESERVE UNIT
17h	RELEASE UNIT
19h	ERASE
1Ah	MODE SENSE
1Bh	LOAD/UNLOAD
1Bh	START/STOP UNIT (CD-ROM, OBDR-capable drives only)
1Ch	RECEIVE DIAGNOSTIC RESULTS
1Dh	SEND DIAGNOSTIC
1Eh	PREVENT/ALLOW MEDIUM REMOVAL
25h	READ CAPACITY (CD-ROM, OBDR-capable drives only)
28h	READ 10 (CD-ROM, OBDR-capable drives only)
2Bh	LOCATE 10
2Bh	SEEK (CD-ROM, OBDR-capable drives only)
34h	READ POSITION
3Bh	WRITE BUFFER
3Ch	READ BUFFER

Opcode	Command Name			
43h	READ TOC (CD-ROM, OBDR-capable drives only)			
44h	REPORT DENSITY SUPPORT			
4Ch	log select			
4Dh	LOG SENSE			
55h	MODE SELECT			
56h	RESERVE UNIT			
57h	RELEASE UNIT			
5Ah	MODE SENSE			
5Eh	PERSISTENT RESERVE IN			
5Fh	PERSISTENT RESERVE OUT			
8Ch	READ ATTRIBUTE			
8Dh	WRITE ATTRIBUTE			
91 h	SPACE 16			
92h	LOCATE 16			
A0h	REPORT LUNS			
A2h	SECURITY PROTOCOL IN			
A3 05h	REPORT DEVICE IDENTIFIER			
A3 0Ah	REPORT TARGET PORT GROUPS			
A3 0Ch	REPORT SUPPORTED OPERATION CODES			
A3 0Dh	REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS			
A3 OFh	REPORT TIMESTAMP			
A3 1F 05h	Enhanced FIRMWARE UPGRADE REPORT IMAGE INFORMATION			
A3 1F 06h	READ LOGGED-IN HOST TABLE			
A3 1F 07h	REPORT SNAPSHOTS AVAILABLE			
A3 1F 08h	READ SNAPSHOT LOG			
A3 1F 09h	READ STTF LOG			
A3 1F 0Ah	REPORT SNAPSHOT COMMANDS			
A3 1F OBh	REPORT SNAPSHOT CONFIGURATION			
A3 1F 0Dh	REPORT Enhanced SNAPSHOT CONFIGURATION			
A3 1F 0Eh	REPORT STTF CONFIGURATION			
A3 1F 10h	READ FIRMWARE TRACE LOG			
A3 1F 12h	REPORT IP CONFIGURATION			
A3 1F 14h	MANAGEMENT ARM SELF-TEST			
A3 1F 15h	REPORT NETWORK STATISTICS			
A3 1F 18h	REPORT STTF AVAILABLE			
A4 06h	SET DEVICE IDENTIFIER			
A4 0Fh	SET TIMESTAMP			

Opcode	Command Name
A4 1F 05h	Enhanced FIRMWARE UPGRADE DOWNLOAD FIRMWARE SEGMENT
A4 1F 06h	Enhanced FIRMWARE UPGRADE REBOOT
A4 1F 07h	FORCED EJECT
A4 1F 0Ah	SET SNAPSHOT COMMANDS
A4 1F OBh	SET SNAPSHOT CONFIGURATION
A4 1F 0Ch	FORCE SNAPSHOT
A4 1F 0Dh	SET Enhanced SNAPSHOT CONFIGURATION
A4 1F 0Eh	SET STTF CONFIGURATION
A4 1F 12h	SET IP CONFIGURATION
A4 1F 14h	CLEAR PROTECTED STTF LOG
A4 1F 42h	CREATE FIRMWARE UPGRADE TAPE FROM FLASH
AB 01h	read media serial number
B5h	SECURITY PROTOCOL OUT

### Command details

The command descriptions in "Commands" (page 29) are listed in alphabetical order of command name (ignoring words like "Enhanced" and "Vendor-unique"). Each command is described briefly. This is followed by a list of pre-execution checks which are described below. The Command Descriptor Block (CDB) is then given, with details of the various parameter bits and fields.

### Pre-execution checks

**NOTE:** In compliance with the SCSI specification, the drive terminates a command with a CHECK CONDITION status and sets the sense key to ILLEGAL REQUEST when a reserved bit, byte, field or code is received which is not zero.

Before executing a command, the drive performs a number of checks. They fall into three categories:

- Checks on the command sent by the host. These ensure that no reserved or fixed fields have been set to illegal values. They check the syntax of commands, in other words the cross dependency of fields. For example, the Flag bit must not be set if the Link bit is not set.
- Checks to ensure that there are no outstanding UNIT ATTENTION or DEFERRED ERROR events posted for the host that has sent the command.
- Checks on media access abilities. These are performed for commands requiring access to the
  cartridge. A command is rejected if it attempts to access the cartridge when no cartridge is
  present or the cartridge is unloaded.

The checks are described below in alphabetical order. The usual order of execution is Unit Attention checks, Reservation checks, Deferred Error checks, Illegal Field checks, Fixed Bit checks, LUN checks, Media Access checks, Media Write checks, Diagnostic Status checks, Humidity checks, Parameter List checks.

# LUN check

**NOTE:** It is possible to have non-zero LUNs in a library environment.

For all commands except INQUIRY 12h, this checks that the LUN specified by the host is correct. The LUN is taken from the COMMAND frame that encapsulates the Command Descriptor Block.

- If the LUN is unsupported, and the host command is not REQUEST SENSE, INQUIRY or REPORT LUNS, CHECK CONDITION is reported to the host with a sense key of ILLEGAL REQUEST, and additional sense of 2500h (logical unit not supported).
- If the LUN is unsupported, and the host command *is* REQUEST SENSE, the original sense data is replaced with a sense key of ILLEGAL REQUEST, and additional sense of 2500h (logical unit not supported). This new sense data is returned to the host. Once the command has completed successfully, the sense data is cleared.

### Deferred Error check

A deferred error is generated when a command with immediate report fails after the report has been returned. The check looks to see if a deferred error exists for the host which sent the command, in other words, a deferred error for which CHECK CONDITION status has not yet been reported. If such an error exists, then the drive reports CHECK CONDITION. The sense data for the command is set to DEFERRED ERROR (which was generated when some previous command failed).

Note that if a UNIT ATTENTION condition and a DEFERRED ERROR condition both exist for an initiator, the UNIT ATTENTION condition will be reported first.

# Diagnostic Status check

This ensures that the drive is in a fit state to access the media. It does this by checking that there is no DIAGNOSTIC FAIL status within the drive.

If the drive has failed diagnostics, CHECK CONDITION is reported with a sense key of HARDWARE ERROR and additional sense of 400Xh (diagnostic failure on component X).

### Fixed Bit check

For the READ, VERIFY and WRITE commands, a Fixed bit set to 1 indicates that the length parameter of the command is for fixed block mode. If fixed block mode is selected then the block size in the Mode Select block descriptor must not be zero. Otherwise CHECK CONDITION is reported and the sense data is set as described for the ILLEGAL FIELD check.

# Illegal Command check

If the drive does not recognize the opcode of the command that it has been sent, it will do one of the following:

- Report CHECK CONDITION status. The sense key will be set to ILLEGAL REQUEST and the additional sense code will be set to 2000h (invalid command opcode).
- Report an invalid field in the Command Descriptor Block. The sense key will be set to ILLEGAL REQUEST, the additional sense code will be set to 2400h (invalid field in CDB) and the field pointer in the sense data will be zero.

# Illegal Field/Request check

Checks are performed to ensure the host has not set any of the following in the Command Descriptor Block:

- a fixed field
- a reserved field
- the control field
- two or more fields to logically conflicting values


If a field has been set to an illegal value:

- CHECK CONDITION status is reported to the host with a sense key of ILLEGAL REQUEST and additional sense of 2400h "invalid field in CDB".
- The sense key specific bit is set and the sense key specific bytes will be a field pointer.
- The command/data bit is set, indicating that the illegal parameter was in the command.

**NOTE:** Command descriptor blocks are scanned from left (bit 7) to right (bit 0), and down (from byte 0 to byte n). The field pointer will be set to point to the first bit of the first illegal field encountered using this scanning route. In some cases, where multiple fixed fields are contiguous, the field pointer might be set to point to the first bit of the first fixed field in the group of fixed fields, whereas the actual illegality may lie in a later bit.

### Media Access check

This checks if the drive is able to perform media access commands. If the media is inaccessible then CHECK CONDITION status is reported with a sense key of NOT READY. The additional sense will be set to one of the codes associated with the NOT READY key.

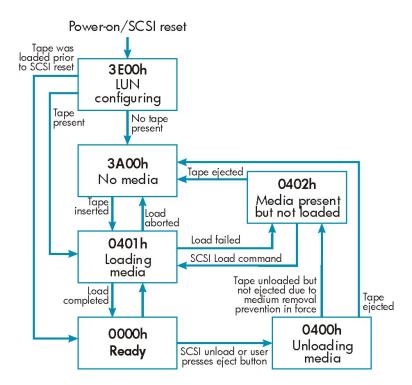

# Media Information check

During power-on and following a SCSI reset, knowledge of the whereabouts of the cartridge is unavailable. It is not possible to execute commands which assume that this knowledge is available until the drive has recovered from the power-on or reset.

The test checks whether the drive knows if a cartridge is physically present in the drive.

If information about the tape cartridge is not available, the test fails with CHECK CONDITION, a sense key of NOT READY, and additional sense of 3E00 (logical unit has not self-configured yet).

### Media Write check

This checks whether the media is write-protected. If it is, CHECK CONDITION is reported with a sense key of DATA PROTECT and additional sense of 2700h (write-protected).

### Parameter List check

For some commands (such as LOG SELECT and MODE SELECT), the associated data sent to the drive is in the form of parameter lists. These are described under the command names in the next chapter. Checks are performed to test the following:

- Fixed and reserved fields have not been modified. Fixed fields are indicated by a number in round brackets following the field name.
- A field has been set to an invalid value.
- The syntax of the page of parameters has been violated—for example, where a particular value in one field imposes limitations on the valid range for another field.

If a field has been set to an illegal value, CHECK CONDITION is reported to the host with a sense key of ILLEGAL REQUEST and additional sense of 2600h (invalid field in parameter list).

The drive scans the data in the Command Description Block from "left" (bit 7) to "right", and "down" (from byte 0 to byte n). It sets the field pointers to the first bit of the first bad field encountered. If the bad field is contained in a contiguous group of fixed fields, the pointers indicate the first bit of the first field in the group, even though the error may be in a later field in the group.

**NOTE:** With MODE SELECT, the drive checks the integrity of the whole parameter list before acting on any parameters, so all the mode parameters need to be correct before any of them are implemented.

### Reservation check

This checks whether the drive has been reserved for use by one or more initiators, and if it has, whether the host is allowed to execute the current command because it owns the reservation. If the drive has been reserved for some other host then RESERVATION CONFLICT status is reported. See the commands "PERSISTENT RESERVE OUT 5Fh" (page 130), "RELEASE UNIT 17h/57h" (page 170) and "RESERVE UNIT 16h/56h" (page 214).

### Unit Attention check

This checks if a UNIT ATTENTION condition exists for the host which sent the command. If it does, the drive reports CHECK CONDITION status with a sense key of UNIT ATTENTION. The remaining sense data will be set according to the unit attention condition which exists. See Unit Attention Sense in the description "REQUEST SENSE 03h" (page 198).

# Command descriptor block

A SCSI Command Descriptor Block (CDB) is a sequence of 6, 10, 12, or 16 bytes (or > 16 bytes for extended commands) sent by a host to a SCSI target with the bus in command phase. The CDB tells the drive what action should be performed.

	7	6	5	4	3	2	1	0
0		Group Code		Operation Code				
1	Various parameters, depending on the command							
2	(MSB)			A.A. le: D. i	D 1			
<i>n</i> -1		-		Multi-Byte	Parameter			(LSB)
n				Contr	ol Byte			

There are a number of fields in a CDB which are common to *all* commands. These are shown in the following table.

Group Code and Operation Code	The operation code us are known as the grown	The operation code uniquely identifies the command. The top three bits of the operation code are known as the <i>group code</i> and these define the length of the Command Descriptor Block:				
	Group 0	Six-byte commands				
	Group 1	Ten-byte commands				
	Group 2 Ten-byte commands					
	Group 3 Six-byte commands					
	Group 4	Sixteen-byte commands				
	Group 5	Twelve-byte commands				
	Group 6	Vendor-unique commands				
	Group 7	not supported				
Multi-Byte Parameter	A multi-byte parameter field in a command is "big-endian", that is, bit 7 of the first byte of this field is the most significant.					
Control	The control byte is zer	о.				

# 5 Commands

This chapter describes all SCSI commands. Parts of the chapter are based on sections of the SCSI specification (see "General documents and standardization" (page 265)).

For general notes on the command descriptions, see "Introduction to commands" (page 22).

# CLEAR PROTECTED STTF LOG A4h (1Fh)

The CLEAR PROTECTED STTF LOG command clears the Protect attribute associated with a specified STTF log so that the log can be overwritten, and allowing the STTF Flash to be reconfigured or reset to the manufacturing default settings.

### Pre-execution checks

Unit Attention	Illegal Field	Reservation	Deferred Error
----------------	---------------	-------------	----------------

### Command descriptor block

	7	6	5	4	3	2	1	0
0				Operation Code (A4h)				
1		Reserved (0)		Service Action (1Fh)				
2	Service Action Qualifier (14h)							
3				Reserved (0)				CA
4	Log Identifier							
5–10	Reserved (0)							
11	Control							

#### **CDB** fields

CA	Clear A	Clear All				
	Oh	Overwriting is not allowed (disabled).				
	1h	The device server allows all STTF logs in flash to be overwritten, cleared or reset. The Log Identifier field must be set to 00h.				
Log Identifier		When the CA bit is set to zero, the Log Identifier field specifies the STTF log that can be overwritten, cleared or reset.				

- If the CA bit is set to one and the Log Identifier field is not set to 00h, the command is terminated with CHECK CONDITION, a sense key of ILLEGAL REQUEST, and additional sense of 2400h (invalid field in CDB).
- If the Log Identifier is invalid the command is terminated with CHECK CONDITION, a sense key of ILLEGAL REQUEST, and additional sense of 2400h (invalid field in CDB).

No error is reported if the command specifies an STTF log that is not protected.

# Vendor-unique ENABLE TRANSPORT LAYER RETRIES (SAS drives only) C2h

This provides a fast benign command to enable SAS Transport Layer Retries. The state of the Transport Layer Retries set by this command for a given host is reflected in the Protocol-Specific Logical Unit mode page for SAS SSP (18h) for that host.

### **Pre-execution checks**

Illegal Field

If the check passes, GOOD status is reported.

### Command descriptor block

	7	6	5		4	3	2	1	0
0	Operation Code (C2h)								
1	Reserved (0)								Enable
2–4	Reserved (0)								
5		Control							

### **CDB** fields

Enable	Enable	es or disables SAS Transport Layer Retries for this initiator:
	0	Disabled
	1	Enabled

# ERASE 19h

The ERASE command is used to erase data on tape from the current logical position. The Long bit is used to decide whether the 'old' data is physically overwritten or not.

FC drives only: ERASE commands (short or long) to a drive containing a WORM cartridge will not overwrite or erase user data on tape.

### Pre-execution checks

Illegal Field	Reservation	Deferred Error	Unit Attention
Media Access	Media Write	Diagnostic Status	

### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (19h)								
1	Reserved (0)						Immed	Long	
2–4	Reserved (0)								
5		Control							

### **CDB** fields

Immed	0	The drive reports status after the command has completed.					
	1	The drive reports status when it starts the command (after any pre-execution checks and prerequisite unloads have completed).					
Long	The Long bit controls the distance to be erased.						
	0	The current position becomes the end of logical data.					
	1	1 End of Data is written, followed by Data Set Separators to the end of the tape.					

**NOTE:** Short erase is only used to truncate data at the current logical position. It cannot be used to create a "hole" in the tape into which data can subsequently be written "in place". This will merely cause the drive to streamfail. The logical tape position is unaffected by this command. A CHECK CONDITION for Early Warning EOM (drive error code 2C98h) will only be given if the tape is logically positioned past EOT immediately before the erase.

# **ERASE** specific status

Event	Status	Кеу	Additional Sense
The erase fails	CHECK CONDITION	HARDWARE ERROR	5100h (erase failure)
WORM media: Erase would result in user data being over-written.	CHECK CONDITION	DATA PROTECT	300Ch (WORM medium —overwrite attempted)

# Enhanced FIRMWARE UPGRADE DOWNLOAD FIRMWARE SEGMENT A4h (1Fh)

The Enhanced FIRMWARE UPGRADE DOWNLOAD FIRMWARE SEGMENT command allows the application client to download a firmware image, via an internal cache buffer, to the Secondary Image bank. No image should be considered written to the flash until this command, sent with LAST=1, returns GOOD status.

### Pre-execution checks

Unit Attention	Illegal Field	Reservation	Deferred Error
----------------	---------------	-------------	----------------

### Command descriptor block

	7	6	5	4	3	2	1	0
0		Operation Code (A4h)						
1		Reserved (0) Service Action (1Fh)						
2		HP LTO VU MI Opcode (05h)						
3	(MSB)		2 . 01					
5		Segment Offset ——					(LSB)	
6	(MSB)							
8		-		segmer	it Length			(LSB)
9		Reserved (0)						
10		Reserved (0) Last					Last	
11				Со	ntrol			

#### **CDB** fields

Segment Offset	The offset within the bank at which this segment will be stored. The application clie set this to zero for the first download segment command. (It is possible to re-start the fidownload process many times by setting Segment Offset to zero). The field has the forestrictions:			
		be a multiple of 4 bytes.		
It must reside within the bank size (1.91 MB).  O The application client is starting a firmware download proc		The application client is starting a firmware download process.		

Segment Length	The length	ne length in bytes allocated of the segment transferred.				
Last	0	The segment will be copied to the internal cache buffer at the specified offset.				
		It is assumed that the last byte of the image is Segment Offset + Segment Length. Then the whole image is validated, and if correct, transferred from the cache buffer to flash. Status will not be returned until the firmware has been successfully written to the Secondary Image bank.				

# Enhanced FIRMWARE UPGRADE REBOOT A4h (1Fh)

The Enhanced FIRMWARE UPGRADE REBOOT command causes the drive to reset and boot from the Primary Image bank. Status will be returned before reboot takes place. Before the reboot, all buffered write data is written to tape, and the tape is unloaded, or unthreaded depending on configuration settings.

### **Pre-execution checks**

Unit Attention	Illegal Field	Reservation	Deferred Error

### Command descriptor block

	7	6	5	4	3	2	1	0	
0		Operation Code (A4h)							
1		Reserved (0) Service Action (1Fh)							
2		HP LTO VU MI Opcode (06h)							
3		Reserved (0) Swap							
4				D	l (O)				
10		Reserved (0)							
11		Control							

### **CDB** fields

Swap	0	The drive resets and reboots the currently running firmware, so the association of Primary and Secondary Images will remain unchanged.
	1	The drive swaps banks associated with the Primary and Secondary Images before resetting the drive. Use this to reboot the drive with the firmware most recently downloaded to the Secondary Image.
		less of the value of the Swap field, the reboot command should not cause the drive to be offline e than about 1 second.

# Enhanced FIRMWARE UPGRADE REPORT IMAGE INFO A3h (1Fh)

The Enhanced FIRMWARE UPGRADE REPORT IMAGE INFO command returns a number of image descriptors to the application client up to the size specified in the Allocation Length field.

#### Pre-execution checks

Unit Attention	Illeaal Field	Reservation	Deferred Error

# Command descriptor block

	7	6	5	4	3	2	1	0	
0		Operation Code (A3h)							
1		Reserved (0)							
2	HP LTO VU MI Opcode (05h)								
3	D 1(0)								
5		Reserved (0)							
6	(MSB)	Allocation Length (LSB)							
7									
8		D 1(0)							
10		Reserved (0)							
11				Со	ntrol				

# CDB fields

Allocation Length The drive will return up to this numb	er of bytes, truncating any parameter data as required.
---	---

# FIRMWARE UPGRADE REPORT IMAGE INFO returned data

	7	6	5	4	3	2	1	0	
0	Firmware Image Info Version								
1	Reserved (0)								
2	(MSB)			Γ:					
3		•	Firmware Image Info Length						
4	(MSB)		Firmware Image Descriptor 0						
47		•						(LSB)	
48	(MSB)		F: 1 D						
91		-	r	Firmware Image Descriptor 1					

Firmware Image Info Version	The version of the following descriptors. Currently at version 1.			
Firmware Image Info Length	56	The total length in bytes of the descriptors that follow.		

# Firmware image descriptor (version 1)

	7	6	5	4	3	2	1	0
0	Bank ID							,
1	Reserved (0)			Status			Rsvd (0)	Primary
2	5. 1.0							
3	Reserved (0)							
4	(MSB) Publication Revision							

	7	6	5	4	3	2	1	0
7								(LSB)
8	(MSB)		Firmware Revision					
15								
16	(MSB)		Lucius Dield Tina					
19			Image Build Time					(LSB)
20	(MSB)			l	· C:			
23			Image Size				(LSB)	
24	(MSB)		Paral, Cina					
27		-	Bank Size					(LSB)

	,	\			
Status	000b	The image is good (no errors)			
	001b-101b	Reserved			
	011	The bank does not contain an image.			
	100b-111 b	Reserved			
Primary	This field will be set if this is the Primary Image bank.				
Publication Revision	As reported in bytes 32–35 of the standard INQUIRY data.				
Firmware Revision	As reported in bytes 30–48 of VPD page C0h.				
Image Build Time	The time (UTC-based) at which this firmware image was built.				
Image Size	The size of the stored image in bytes				
Bank Size	The size of the bank in bytes				

# FORCED EJECT A4h (1Fh)

FORCED EJECT instructs the device server to perform an emergency unload. The device server may abort any command it is currently executing and start executing the forced eject immediately. The Prevent Medium Removal flag is set to Allow for all initiators. The drive mechanism bypasses the normal checks that may otherwise prevent the media being unloaded from the tape drive in order to eject the cartridge, at the expense of risking damage to the media.

Δ

CAUTION: This command may result in damage to the media.

### Pre-execution checks

Illegal Field

### Command descriptor block

	7	6	5	4	3	2	1	0
0	Operation Code (A4h)							
1	Reserved (0)			Service Action (1 Fh)				
2	Service Action Qualifier (07h)							
3–10	Reserved (0)							
11	Control							

### **CDB** fields

Service Action	Must be 1Fh.
Service Action Qualifier	Must be 07h.

# FORCE SNAPSHOT A4h (1Fh)

FORCE SNAPSHOT forces a snapshot to occur immediately. The command initiates the creation of a Snapshot log by the drive executing the commands defined in the Snapshot command set. The Snapshot command set is executed in the background when the FORCE SNAPSHOT command completes, so host-initiated commands can be executed before the Snapshot command set has been completed.

### **Pre-execution checks**

Illegal Field Reservation	Deferred Error	Unit Attention
---------------------------	----------------	----------------

### Command descriptor block

	7	6	5	4	3	2	1	0
0	Operation Code (A4h)							
1	Reserved (0)			Service Action (1Fh)				
2	HP LTO VU MO Opcode (0Ch)							
3	Reserved (0) STTF					STTF		
4	Command Set							
5–10	Reserved (0)							
11	Control							

### **CDB** fields

Service Action	Must be 1Fh.				
HP LTO VU MO Opcode	Must be 0Ch.				
STTF	Save Trace To Flash				
	0	The drive creates a Snapshot log in volatile memory.			
	1	The drive creates a Snapshot log in volatile memory and then, if saving traces to flash is enabled, saves it to an area of non-volatile memory (flash)			
		• If saving traces to flash is not enabled, the device server terminates the command with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).			
		<ul> <li>If the STTF bit is set to one and an STTF log is already being created or being read, the device server terminates with CHECK CONDITION, a sense key of NO SENSE and additional sense of 1600h (operation in progress).</li> </ul>			
Command Set	The snapshot command set to be executed to create the Snapshot log:				
	00h	Default/user-definable			
01 h Debug		Debug			
	02h–FFh	Reserved (0)			

# FORCE SNAPSHOT specific status

Event	Status	Key	Additional Sense
A Snapshot log is already being created.	CHECK CONDITION	no sense	0016h (operation in progress)
Snapshot commands are being set.	CHECK CONDITION	no sense	0016h (operation in progress)

### FORMAT MEDIUM 04h

**CAUTION:** 

Δ

### \_\_\_\_\_

FORMAT MEDIUM is used to prepare the currently threaded tape for use. It is only accepted when the current logical position is BOP in Partition 0. However any unwritten data is guaranteed to be written to the tape (flushed). After successful completion of this command the logical position is also BOP in Partition 0.

This command may erase data on tape and host-type MAM attributes.

### **Pre-execution checks**

Illegal Field Reservation Deferred Error Unit Attention Media Access

### Command descriptor block

	7	6	5	4	3	2	1	0
0	Operation Code (04h)							
1	Reserved (0) Verify (0)					Immed		
2	Reserved (0)				Format			
3	(MSB)	Transfer Length (0) (LSB)						
4								
5	Control							

### **CDB** fields

Immed	0	The drive will not report status until the format operation has completed.				
	1	The drive will report GOOD status (after some initial checks) and continue with the formatting operation in the background. Progress Indication is reported as part of the sense data returned.				
Verify	Not sup	oported. Must be 0.				
Format	Value	Description	Effect			
	Oh	Use default format	Format medium as a single partition. All data on the physical volume is lost.			
	1h	Partition volume	Format medium according to the parameters in the Medium Partitions mode page. All data on the physical volume may be lost. Some errors in the mode page may be detected now and reported as CHECK CONDITION with sense key of ILLEGAL REQUEST. Additional sense may be 2600h (invalid field in parameter list) or 2502h (parameter value invalid). Data may be lost.			

2h	Default format then partition	Equivalent to formatting with code 0h followed by formatting with code 1h
3h-7h	Reserved	ILLEGAL REQUEST
8h–Fh	Vendor-specific (not used)	ILLEGAL REQUEST

### INQUIRY 12h

With INQUIRY, an initiator requests the drive to return information about the basic operating parameters. These parameters cannot be changed. The drive returns Inquiry data to the host in a data-in phase.

**NOTE:** This command is immune from most of the pre-execution checks that other commands must pass (for example, it can be executed while the unit is reserved for another host). Unit attention and deferred error conditions are preserved and reported on subsequent commands.

#### Pre-execution checks

Only the Illegal Field Check is performed before the command is executed.

If the EVPD bit is clear, the page code must be zero, otherwise illegal request is reported.

If the EVPD bit is set, the page code must be one of the supported page codes for Inquiry data. Otherwise illegal request is reported.

#### Command descriptor block

	7	6	5	4	3	2	1	0					
0	Operation Code (12h)												
1		LUN Reserved (0) EVPD											
2	Page Code												
3				Allocation	an Lanath								
4		Allocation Length											
5	Control												

#### **CDB** fields

LUN	This field is ig	This field is ignored.						
EVPD	Enable Vital F	Product Data						
	0	Normal inquiry data is returned.						
	1	A page of vital product data is returned.						
Page Code	If the EVPD bi	t is zero the Page Code field must be zero.						
	If the EVPD bi	t is set to 1, the drive returns the Inquiry page in this Page Code field:						
	00h	Supported Vital Product Pages page						
	80h	Unit Serial Number page						
	83h	Device Identification page						
	85h	Management Network Address page						
	86h	Extended Inquiry Data page						
	87h	Mode Page Policy VPD page						
	88h	SCSI Ports VPD page						
	90h	Protocol-Specific Logical Unit Information VPD page (SAS only)						

	BOh	Sequential Access Device Capabilities VPD page
	B1h	Manufacturer-assigned Serial Number VPD page
	B2h	TapeAlert Supported Flags VPD page
	B3h	Automation Device Serial Number VPD page
	B4h	Data Transfer Device Element Address VPD page
	C0h	Firmware Revision Levels page
	C1h	Hardware Revision Levels page
	C2h	PCA Revision Levels page
	C3h	Mechanism Revision Levels page
	C4h	Head Assembly Revision Levels page
	C5h	ACI page
	C8h	Vendor-Specific Device Capabilities page
	CCh	HP Alternative Inquiry page (variant specific)
	D0h	HP Unique Inquiry page (variant specific)
Allocation Length		mount of data (in bytes) that should be returned. If more than this is available, rned is truncated to allocation length. No error is reported.

### INQUIRY data pages

#### INQUIRY returned data

INQUIRY returns its standard data if the EVPD bit is zero, or returns a page of data as specified by the Page Code field when EVPD is one.

#### Standard Inquiry Data format (LUNO)

This is the data returned by the drive in response to an Inquiry command with its EVPD bit set to zero. The data also depends on the value of the LUN field in the Inquiry CDB, the LUN value in the identify message and the configuration of the drive.

Note that the data below is for the standard distribution firmware.

	7	6	5	4	3	2	1	0		
0	Periphero	al Qualifier (	000b)		Periphe	ral Device T	ype (01h)			
1	RMB (1)				Reserved (0	)				
2				Versio	n Number (6)					
3	Obsol	ete	NACA(0)	HiSup(0)		Response D	ata Format (2)			
4				Addition	al Length (5Bh)					
5	SCCS (0)	ACC (0)	TPGS	(01b)	3PC (0)	Rese	erved (0)	Protect (1)		
6	Obsolete	EncSvr(0)	VS(0)	MultiP		Obsolete		Adr16		
7	Obsol	ete	WBus 16	Sync	Obsole	te	CmdQue (1)	VS(0)		
8	(MSB)		T10 \	/ l   - l 1	f:: /";;	"\				
15		•	110 V	endor identi	fication ("HP	")		(LSB)		
16	(MSB)			D						
31		•	Product Identification (LSB)							
32	(MSB)			Dro el	t Revision Level					
35				rroduc	i kevision level			(LSB)		

	7	7 6 5 4 3 2 1											
36				Vendor-Sn	ecific Informatior	<b>.</b>							
39	WORM Version WORM												
40	WORM Version												
41	Percented (O)												
42	Reserved (0)												
43	(MSB)	(MSB) OBDR string ("\$DR-10") or Reserved (0) if not supported											
48			Obbit siring	( \$DK-10	) or keserved (o)	п пог зоррс	леч	(LSB)					
49	Reserved (0)												
55				Re	served (0)								
56		Reserve	ed (0)		Clockir	ng	QAS (0)	IUS					
57				Re	served (0)								
58	(MSB)	_		Vorsio	n Descriptor 1								
59				Versic	in Descripior 1			(LSB)					
72	(MSB)			Vorsio	n Descriptor 8								
73				VEISIC	ii Descripioi 6			(LSB)					
74				D <sub>0</sub>	served (0)								
95				Re	serveu (U)								

The Standard Inquiry Data is based on the SCSI 3 standard for Standard Inquiry Data.

For the LUN to which the drive is attached, the Peripheral Qualifier field is set to 000b, the Peripheral Device Type field is set to 01h, the Removable Medium (RMB) flag is set to 1 and the Device-type modifier is set to 0.

#### **Inquiry Data fields**

Peripheral Qualifier	000Ь	There is a device on the logical unit selected.
	011b	The LUN field in the identify message has specified an unsupported logical unit.
Peripheral Device Type	01 h	Sequential Access Device
	05h	CD Device (reported when in OBDR mode)
	1Fh	No Device (the Peripheral Qualifier will be 011b in this case)
RMB	1	The Removable Medium bit is one, indicating that the tape can be removed.
Device-Type Modifier	0	This is a six-bit user defined code, set to zero.
Version Number	6	Indicating that the drive complies with the SPC-4 standard.
NACA	0	The Normal ACA flag is 0, indicating that it is not supported.
HiSup	0	The Hierarchical Support flag is 0, indicating that the hierarchical addressing model is not supported.
Response Data Format	2	The Inquiry Data format complies with the SPC-4 standard.
Additional Length	The length	in bytes of the length of the rest of the Inquiry data.
	5Bh	There are 91 (5Bh) more bytes of Inquiry data.

sccs	0	No storage array c	ontroller component is embedded in the drive.				
ACC	0	No Access Controls	s Coordinator may be addressed through this LUN.				
TPGS	01b	Target Port Group S supported.	Target Port Group Support. Only implicit asymmetric logical unit access is supported.				
ЗРС	0	Third-Party Copy co	Third-Party Copy commands are not supported.				
Protect	1	The logical unit sup	ports logical block protection.				
BQue	Basic Que	ving flag					
	0	The flag is 0 for all	drives, with CmdQue = 1.				
EncSvr	0	The drive does not	contain an embedded enclosure services component.				
VS	0	Vendor-Specific fiel	d—not currently used				
MultiP	1	The drive has multip	ole ports.				
MChngr	0	The drive is not eml	bedded within or attached to a medium transport element.				
Adr16, WBus16, Sync	0	These features are i	not applicable.				
Linked	0	The drive does not	support linked commands.				
CmdQue	1	For all drives, with	BQue = 0.				
T10 Vendor Identification	A vendor-s <sub>l</sub> characters		of ASCII characters, left justified and padded with space				
Product Identification  Product Revision Level	padding of First hale Second For all LTO "Ultrium  A vendor-s for half-	n the right. The string f (bytes 16-23): "U1 half (bytes 24-31): ' -6 drives (including F - 6-SCSI"  pecific string of four fies the product (for L height FC, "3" for he	" <generation>-<interface type="">" FC and SAS), the following string has been defined:  ASCII characters: "PdsV":  TO-6 drives, "J" for full-height FC, "o" for full-height SAS, "2" alf-height SAS).</interface></generation>				
		es the product devel	opment phase. ociated with the "PdV" string.				
		nique identifier for e	<u> </u>				
WORM Version		of WORM supporte					
WORM	1	1	the LTO WORM specification.				
OBDR string		1.1	Tape Disaster Recovery.				
Clocking	0	Not applicable	,				
QAS	0	' '	support Quick Arbitration and Selection.				
IUS	Information						
	0	Not applicable					
Version Descriptor	These fields		ntify up to eight standards to which the drive conforms. The ow.				
		Value	Standard				
FC drives:	1	0090h	SAM-4 ANSI INCITS 447-2008				
	2	0A11h	FCP-3 ANSI INCITS.416:2006				
	3	0D7Dh	FC-AL-2 ANSI INCITS.350:200x with AM1:2002				

	4	0DBCh	FC-FS ANSI INCITS.373:2003
	5	131 Ch	FC-Tape ANSI INCITS TR-24:1999
	6	133Ch	FC-FLA ANSI INCITS TR-20:1998
	7	0463h	SPC-4 T10/1731-D revision 23
	8	0520h	SSC-4 (no version claimed)
SAS drives:	1	0090h	SAM-4 ANSI INCITS 447–2008
	2	0C20h	SAS-2 (no version claimed)
	3	0463h	SPC-4 T10/1731-D revision 23
	4	0520h	SSC-4 (no version claimed)
	5–8	0000h	not used

Vendor Specific data may be sent after the Product Revision Level.

### Vital Product Data pages

The following tables describe the vital product data pages. These pages are returned by the INQUIRY command when the EVPD bit is set and the appropriate Page Code is set in the Command Descriptor Block. They contain vendor-specific product information.

#### Supported Vital Product Data Pages page

This is the data returned by the drive in response to an INQUIRY command with its EVPD bit set to one and its Page Code field set to 0.

This page contains a list of all the VPD page-codes supported by the drive. The list of page codes will vary depending on the port-LUN combination to which the INQUIRY command has been sent to, as well as the firmware variant.

	7	6	5	4	3	2	1	0				
0	Peripheral Qualifier (0) Peripheral Device Type (1)											
1		Page Code (00h)										
2				Reser	ved (0)							
3				Page Lei	ngth ( <i>n</i> –3)							
4			Ç	Supported Pag	ges Code (00h	ı)						
			U	nit Serial Nur	mber page (80	h)						
			De	evice Identific	ation page (83	Bh)						
			Manage	ement Netwo	rk Address pag	ge (85h)						
			Exte	ended Inquiry	/ Data page (8	6h)						
			٨	Node Page Pa	olicy page (871	۱)						
				SCSI Ports	page (88h)							
		Prot	ocol-Specific L	ogical Unit In	formation pag	e (SAS only)	(90h)					
			Sequential	Device Acces	s Capabilities	page (BOh)						
			Manufactu	rer-assigned S	Serial Number	page (B1h)						
		TapeAlert Supported Flags page (B2h)										
			Automati	on Device Se	rial Number po	age (B3h)						
			Data Trans	fer Device Ele	ement Address	page (B4h)						

	7	6	5	4	3	2	1	0				
	Firmware Revision Levels page (COh)											
	Hardware Revision Levels page (C1h)											
			PC	CA Revision Le	evels page (C2	h)						
			Mech	anism Revisio	n Levels page	(C3h)						
			Head A	ssembly Revis	sion Levels pag	e (C4h)						
			Auto-Chang	ger Interface F	Revision Levels	page (C5h)						
			Vendor-Sp	ecific Device	Capabilities p	age (C8h)						
	HP Alternative Inquiry page (CCh)											
n			H	IP Unique Inq	uiry page (DOI	n)						

### Unit Serial Number page

The Unit Serial Number page contains a single value which is a 10-byte ASCII string. The string, with the Vendor Identification and Product Identification fields in the standard Inquiry data, uniquely identifies the drive.

	7	6	5	4	3	2	1	0			
0	Perip	heral Qualifie	er (0)	Peripheral Device Type (1)							
1		Page Code (80h)									
2		Reserved (0)									
3				Page Ler	igth (OAh)						
4	(MSB)	(MSB) Serial Number ————									
13		•		Seriai	Number			(LSB)			

# Device Identification page

The Device Identification page contains information that identifies the tape drive uniquely.

	7	6	5	4	3	2	1	0		
0	Perip	heral Qualifier	· (O)	Peripheral Device Type (1)						
1		Page Code (83h)								
2	Reserved (0)									
3				Page Len	gth ( <i>n</i> -3)					
4	(MSB)	(MSB)  Identification Descriptors								
n				identification	Descriptors			(LSB)		

Identification Descriptors are constructed as follows:

	7	6	5	4	3	2	1	0		
0		Protocol I	dentifier		Code Set					
1	PIV	Rsvd (0)	Assoc	ciation	Identifier Type					
2	Reserved (0)									

	7	6	5	4	3	2	1	0		
3	Identifier Length (n-3)									
4	(MSB)			Idan	tifier					
n		•		iden	iller			(LSB)		

Protocol	Oh	Fibre Channel
Identifier	6h	Serial Attached SCSI (SAS)
Code Set	1	The Identification Descriptor is a binary field.
	2	The Identification Descriptor contains only ASCII data.
PIV	1	The Protocol Identifier field is valid. This is set for an Association value of 1 or 2.
Association	0	The Identifier field is associated with the addressed logical unit.
	1	The Identifier field is associated with the port that received the request.
	2	The Identifier field is associated with the SCSI target device that contains the addressed logical unit.
	3	Reserved
Identifier Type	1	Vendor ID followed by the product identification field from the standard inquiry data and the serial number field from the Serial Number Inquiry page.
	3	Identification descriptor is the 64-bit IEEE Registered World Wide Name (in NAA identifier format).
	4	Relative Port identifier
	5	Target Port Group identifier

### Defined identifiers

The following identifiers will be returned in the given order. What Port Name is returned depends on which port the Inquiry is sent through.

### Logical Unit Identifier

	7	6	5 4		3	2	1	0		
0		Protocol Ide	entifier (0)		Code Set (1)					
1	PIV (O)	Rsvd (0)	Associ	ation (0)	Identifier Type (3)					
2				Reserv	ved (0)					
3				Identifier	Length (8)					
4	(MSB)	(MSB)								
11	SSC Device Logical Unit Name (IEEE Registered Name) (LS									

#### Port Name

	7	6	5	4	3	2	1	0	
0		Protocol Id	entifier (0)		Code Set (1)				
1	PIV (1)	Rsvd (0)	Associa	tion (1)		Identifie	r Type (3)		
2	Reserved (0)								

43

	7	6	5	4	3	2	1	0		
3	ldentifier Length (8)									
4	(MSB)		Dowl	Nama (IEEE	Dogistored Na	uma)				
11			FOII	Name (IEEE	Registered Na	imej		(LSB)		

### Port Identifier

	7	6	5	4	3	2	1	0		
0		Protocol	ldentifier		Code Set (1)					
1	PI∨ (1)	Rsvd (0)	Associa	tion (1)	Identifier Type (4)					
2				ved (0)						
3				Identifier	Length (4)					
4	(MSB)	(MSB)								
7		Port Identifier (L.								

The Port Identifier will be set to 1 if the addressed port is port 0, and set to 2 if the addressed port is Port 1.

### Target Port Group Identifier

	7	6	5	4	3	2	1	0							
0		Protocol	Identifier		Code Set (1)										
1	PIV (1)	Rsvd (0)	Associa	tion (1)	Identifier Type (5)										
2	Reserved (0)														
3	ldentifier Length (4)														
4				D	d (O)										
5				Keser	ved (0)										
6	(MSB)														
7		-		iarget re	эн Өгөир		Target Port Group (LSB								

Target Port Group indicates the group to which the target port is a member. For more information, see "REPORT TARGET PORT GROUPS A3h" (page 195).

### Target Name (code set 1)

	7	6	5	4	3	2	1	0		
0		Protocol	ldentifier		Code Set (1)					
1	PI∨ (1)	Rsvd (0)	Associa	tion (2)	Identifier Type (3)					
2		Reserved (0)								
3				Identifier	Length (8)					
4	(MSB)	(MSB)								
11		Device Name (IEEE Registered Name) (Li								

### Target Name (code set 2)

	7	6	5	4	3	2	1	0			
0		Protocol	ldentifier			Code	Set (2)				
1	PIV (1)	PIV (1) Rsvd (0) Association (2) Identifier 1									
2		Reserved (0)									
3		Identifier Length (34)									
4	(MSB)	SB) Vendor ID									
11		-		vend	dor ID			(LSB)			
12	(MSB)			Donalis at La							
27		-		Product Io	entification			(LSB)			
28	(MSB)	(MSB) Serial Number ———									
37		-		Serial	Number			(LSB)			

### Management Network Address VPD page

The Management Network Addresses page provides a list of network addresses of management services associated with a SCSI target device, target port, or logical unit.

	7	6	5	4	3	2	1	0		
0		Protocol	ldentifier	,		Peripheral	Device Type			
1				Page Co	ode (85h)					
2		Page Length ( <i>n</i> -3)								
3	rage Length (n-3)									
4	(MSB)		NI-	مماني والمسام	a Dagariatan (fi	:				
		•	INE	erwork service	s Descriptor (f	irstj		(LSB)		
:					:					
	(MSB)									
n	Network Services Descriptor (last)  (LSB)									

Each Network Services Descriptor is defined as follows:

The contents of descriptors are set by an application client outside the scope of the definition of this page, so no detail is given here.

	7	6	5	4	3	2	1	0	
0	Rsvd (0)	Assoc	ciation	Service Type					
1				Reserved (0)					
2	Network Address Length (n-3)								
3			ľ	Network Addr	ess Length ( <i>n</i> -s	3)			
4	(MSB)	SB) Network Address							
n		•		Network	( Address			(LSB)	

### Extended INQUIRY Data VPD page

This page provides an application client with a means of obtaining information about the drive.

	7	6	5	4	3	2	1	0	
0	Peripheral Qualifier (0)				Peripheral Device Type (1)				
1				Pag	ge Code (86h)				
2				D	1 1 (2CL)				
3				Pag	e Length (3Ch)				
4		ivate ode (10b)		SPT (001b)		Grd_Chk(0)	App_Chk(0)	Ref_Chk(0)	
5	Reser	ved (0)	UASK_Sup Group_Sup(0)		Prior_Sup(0)	HeadSupP(0)	OrdSup(0)	SimSup(1)	
6		R	eserved (0)		WU_Sup (0)	CRD_Sup (0)	NV_Sup(0)	V_Sup (0)	
7		Reserved	(O)	P_I_I_Sup (0)		Reserved (0)		LUICLR (1)	
8		Reserved	(O)	R_Sup (0)	Reserved (0)			CBCS (0)	
9	Reserved (0) Multi I_T Nexus Microcode Download (						ad (0)		
10									
63				, t	Reserved (0)				

Activate Microcode	10b	<ol> <li>The drive activates the microcode after either a vendor specific event, a power on event, or a hard reset event.</li> <li>The drive establishes a UNIT ATTENTION condition for the initiator port associated with every I_T nexus with additional sense code set to 3F01h (microcode has been changed).</li> </ol>
SPT	001b	Protection type is Logical Block Protection .
SimSup	1	The drive supports the Simple Task attribute.
LUICLR	1	The drive clears the UNIT ATTENTION with additional sense of 3F0Eh (reported LUNs data has changed) for all LUNs for one initiator, if the UA has been reported to this initiator for any LUN it can access.

### Mode Page Policy VPD page

The Mode Page Policy VPD page enables an application client to find what mode page policy is in effect for supported mode pages. One descriptor is returned for each mode page, or group of mode pages, that have a specific page policy in effect.

The returned data has the following format:

	7	6	5	4	3	2	1	0	
0	Perip	heral Qualific	er (0)	Peripheral Device Type (1)					
1	Page Code (87h)								
3				D 1	d ( 2)				
4	Page Length (n-3)								
	Mode Page Policy Descriptor List								

# Mode Page Policy Descriptors are as follows:

	7	6	5	4	3	2	1	0
0	Reserved (0) Policy Page Code							
1	Policy Sub-Page Code							
3	MLUS	MLUS Reserved (0) Mode Page Policy						
4		Reserved (0)						

Policy Page Code	The mode p	age to which this descriptor applies.				
	3Fh	All mode pages				
Policy Sub-Page Code	The sub-page to which this descriptor applies.					
	FFh	All sub-pages				
MLUS	Multiple Log	Multiple Logical Units Shared				
	0	The mode page and sub-page indicated are maintained separately by each logical unit.				
	1	This combination of Policy Page Code and Policy Sub-Page Code is shared by more than one logical unit.				
Mode Page Policy	The policy i	n effect for the combination of Policy Page Code and Policy Sub-Page Code:				
	00b	Shared				
	01b	Per Target port				
	10b	Per Initiator port				
	11 b	Per I_T Nexus				

The following Mode Page Policy Descriptors are returned:

### FC drives:

Policy Page Code	Policy Sub-Page Code	Mode Page Policy	MLUS
3Fh	FFh	00b	0
02h	00h	00b	1
18h	00h	00b	1
19h	00h	00b	1
0Ah	00h	00b	1
0Ah	01h	00b	1
0Ah	FOh	11 b	0

#### **SAS drives:**

Policy Page Code	Policy Page Code Policy Sub-Page Code		MLUS
3Fh	FFh	00b	0
02h	00h	00b	1
18h	00h	11 b	1
19h	00h	01 b	1

Policy Page Code	Policy Sub-Page Code	Mode Page Policy	MLUS
19h	01 h	01b	1
0Ah	FOh	11 b	0

### SCSI Ports VPD page

The SCSI Ports VPD page provides a means of retrieving identification descriptors for all SCSI ports in a SCSI target device or SCSI target/initiator device.

The returned data has the following format:

	7	6	5	4	3	2	1	0	
0	Perip	heral Qualifi	er (0)	Peripheral Device Type (1)					
1	Page Code (88h)								
3				D I	( 2 <b>)</b>				
4	Page Length ( <i>n</i> -3)								
	SCSI Port Identification Descriptor List								

#### FC drives:

The following SCSI Port Identification Descriptors (one per port enabled) are returned for FC drives:

	7	6	5	4	3	2	1	0		
0–1	Reserved (0)									
2		Port Identifier								
3		rort identifier								
4–9				Reserve	ed (0)					
10										
11		Target Port Descriptor Length (OCh)								
12		Protocol Ic	lentifier (0)			Code :	Set (1)			
13	PIV (1)	Rsvd (0)	Associ	ation (1)		Identifier	lentifier Type (3)			
14				Reserve	ed (0)					
15				Identifier Le	ngth (08h)					
16		D	Name of AFFF	Danistana d N.	//NI.		E))			
23		POIT	ivame (IEEE	Registered Na	me—see No	imes (page i	3]]			

#### **SAS drives:**

The following SCSI Port Identification Descriptors (one per port enabled) are returned for SAS devices:

	7	6	5	4	3	2	1	0
0–1	Reserved (0)							
2				Da at Iala	:f:			
3		Port Identifier						
4–9				Reserve	ed (0)			

	7	6	5	4	3	2	1	0		
10			Taure	nat Dant Dagonin		ıCL)				
11	Target Port Descriptor Length (OCh)									
12	Protocol Identifier (6) Code Set (1)									
13	PIV (1)	Rsvd (0)	Associ	ation (1)	Identifier Type (3)					
14				Reserve	ed (0)					
15				Identifier Le	ngth (08h)					
16	Port Name (IEEE Registered Name—see "Names" (page 15))									
23		ron	radille (IEEE	Registered 14d	me—see No	illes (page i	<i>ع</i> اا			

Port Identifier	0001 h	The addressed port is port A.					
	0002h	The addressed port is port B.					
Protocol Identifier	00h	Fibre Channel					
	01 h	SCSI					
	06h	AS					
Code Set	1	The Identification Descriptor is a binary field.					
	2	The Identification Descriptor contains only ASCII data.					
PIV	1	The Protocol Identifier field is valid. The PIV flag is set to one for an association value of 1 or 2.					
Association	1	The Identifier field is associated with the port that received the request.					
Identifier Type	1	The subsequent fields contain the Vendor ID followed by the product identification field from the standard inquiry data and the serial number field from the Serial Number Inquiry Page.					
	3	The subsequent field is the Fibre Channel 64-bit Name Identifier.					

## Protocol-Specific Logical Unit Information VPD page (SAS only)

The Protocol-Specific Logical Unit Information VPD page (see SPC-4) contains parameters for the logical unit that are protocol-specific based on the I\_T nexus being used to access the logical unit. The returned data has the following format for logical units with SAS target ports.

	7	6	5	4	3	2	1	0			
0	Perip	heral Qualifie	er (O)		Periph	neral Device	Гуре (1)				
1				Page Co	ode (90h)						
2	Page Length (n-3)										
3	Page Length ( <i>n</i> -3)										
	Logical Unit Information Descriptor List										
4			Logico	al unit informa	ation descripto	r (first)					
15			_	(see tab	le below)						
:					:						
n-15	Logical unit information descriptor (last)										
n			-	(see tab	le below)						

The logical unit information descriptor for logical units with SAS target ports is as follows:

	7	6	5	4	3	2	1	0				
0	(MSB)			Dalastica Da	rt Identifier							
1					(LSB)							
2	Reserved (0) Protocol Identifier (6h)											
3–5	Reserved (0)											
6	(MSB)		г	)	(OOO 4 h.)							
7			L	escriptor Le	ngth (0004h)			(LSB)				
			Per log	ical unit SCS	SI transport sp	ecific data						
8		Reserved (0)										
9–11	Reserved (0)											

Protocol Identifier	Protocol Identifier 6h This is a SAS SSP specific descriptor.					
TLR Control Supported	1	The combination of SCSI target port and logical unit supports the TLR Control field in the SSP frame header.				

### Sequential Access Device Capabilities page

This page provides the application client with a means of determining which features are supported by the Device Server.

	7	6	5	4	3	2	1	0		
0	Perip	heral Qualifie	er (0)	Peripheral Device Type (1)						
1	Page Code (B0h)									
2	Reserved (0)									
3				Page Le	ngth (4h)					
4	Reserved (0) WORM							WORM		
5–7	Reserved (0)									

WORM	1	The Device Server supports Write Once Read Many (WORM) operation.
------	---	---

### Manufacturer-assigned Serial number page

The Manufacturer-assigned Serial Number page provides the application client with a method of determining the device serial number as originally assigned by the manufacturer. The same will returned in the Unit Serial Number page unless an automation controller has provided a new serial number; however this page will always reflect the original serial number.

	7	6	5	4	3	2	1	0			
0	Perip	heral Qualific	er (0)	Peripheral Device Type (1)							
1		Page Code (B1h)									
2	Page Length (000Ah)										

	7	6	5	4	3	2	1	0	
3					,		,		
4–13	Serial Number								

### TapeAlert Supported Flags page

This page enables the application client to determine which TapeAlert flags are supported by the Device Server.

	7	6	5	4	3	2	1	0			
0	Perip	heral Qualifie	er (0)		Peripheral Device Type (1)						
1	Page Code (B2h)										
2		Reserved (0)									
3				Page Le	ngth (8h)						
	Flags										
4	01h (1)	02h (1)	03h (1)	04h (1)	05h (1)	06h (1)	07h (1)	08h (0)			
5	09h (1)	0Ah (1)	OBh (1)	0Ch (1)	0Dh (1)	OEh (1)	OFh (1)	10h (1)			
6	11 h (1)	12h (1)	13h (1)	14h (1)	15h (1)	16h (1)	17h (1)	18h (1)			
7	19h (1)	1Ah (1)	1Bh (1)	1Ch (1)	1Dh (1)	1Eh (1)	1Fh (1)	20h (1)			
8	21h (1)	22h (1)	23h (1)	24h (1)	25h (1)	26h (1)	27h (1)	28h (0)			
9	29h (0)	2Ah (0)	2Bh (0)	2Ch (0)	2Dh (0)	2Eh (0)	2Fh (0)	30h (0)			
10	31h (1)	32h (1)	33h (1)	34h (1)	35h (1)	36h (1)	37h (1)	38h (1)			
11	39h (1)	3Ah (1)	3Bh (1)	3Ch (1)	3Dh (0)	3Eh (0)	3Fh (0)	40h (0)			

Supported flags are set to 1. For information on the flags, see "TapeAlert log page" (page 87)

#### Automation Device Serial Number page

	7	6	5	4 3 2 1 0						
0	Peripheral Qualifier (0) Peripheral Device Type (1)						Гуре (1)			
1		Page Code (B3h)								
2	Reserved (0)									
3				Page Ler	ngth ( <i>n</i> -3)					
4	(MSB)	(MSB)								
n			Automation Device Serial Number (LSB)							

Automation Device Serial Number The automation device serial number contained in the device entity. If configured, the automation device serial number is the product serial number of the media changer containing the device entity under control of the device server. If no automation device serial number has been configured, this field contains ASCII spaces (20h).

## Data Transfer Element Address page

	7	6	5	4	3	2	1	0		
0	Perip	heral Qualifie	er (0)	Peripheral Device Type (1)						
1		Page Code (B4h)								
2	Reserved (0)									
3				Page Le	ength (4)					
4	(MSB)									
7		Data Transfer Device Element (LSB)								

**Data Transfer Device Element** The data transfer device element address from the device entity. If no address has been configured, the field is set to FFFFFFFh.

### Drive Component Revision Levels pages

	7	6	5	4	3	2	1	0		
0	Peripheral Qualifier (0) Peripheral Device Type (1)						Гуре (1)	•		
1	Page Code									
2	Reserved (0)									
3		Page Length (5Ch)								
4	(MSB)		Component ("cccccccccc")							
29		•								
30	(MSB)			Vancion (#	DDD 1777"\					
48		•	Version ("RRR. VVV")					(LSB)		
49	(MSB)		D	ata ("3737377 /h	M/DD lele mone	<b>"</b> \				
72		-	Date ("YYYY/MM/DD hh:mm")							
73	(MSB)		,	Variant ("xxxx	xxxxxxxxx")					
95		-		variani ( XXX				(LSB)		

The Drive Component Revision Levels pages contain details of the revisions of each of the major sub assemblies of the drive. For any given product, if these pages are the same then the drive has been built with the same components and with the same manufacturing process.

Each entry is a null-terminated ASCII string.

Page Code	Page Code	Component Name
	C0h—Firmware	"Firmware"
	C1h—Hardware	"Hardware"
	C2h—PCA	"PCA"
	C3h—Mechanism	"Mechanism"
	C4h—Head Assembly	"Head Assy"
	C5h—ACI	"ACI"
Component	A 12-character entry to iden	tify the component that the revision is for.

Version	A 7-character version code with a three-digit major revision number, a period and a three-digit minor version number.
Date	The date of the version.
Variant	An identifier indicating what version of the product this is.

## Vendor-Specific Device Capabilities page

The Vendor-Specific Device Capabilities VPD Page provides the application client with a means to determine the failover features that are supported by the Device Server.

	7	6	5	4	3	2	1	0		
0	Perip	heral Qualific	er (0)		Peripheral Device Type (1)					
1	Page Code (C8h)									
2	P									
3	Page Length (0004h)									
4	Reserved (0)				ADVFO	BasicFO	Rsvd (0)			
5–7	Reserved (0)									

ADVFO	Advanced FailOver					
	The device server does not support advanced path failover.					
1 The device server supports advanced path failover.						
BasicFO	Basic FailOver					
0		Support for basic path failover is not reported.				
	1	The device server supports basic path failover.				

# HP Alternative Inquiry page

	7	6	5	4	3	2	1	0		
0	Perip	heral Qualifie	er (O)		Peripheral Device Type (1)					
1		Page Code (CCh)								
2	Reserved (0)									
3		Page Length (20h)								
4–6		Reserved (0)								
7	RelAdr (0)	Bus32 (0)	Bus 16	Sync	Linked (0)	Rsvd (0)	CmdQ (1)	SoftRo (0)		
8	(MSB)			\/a = a a = 1a	l:f:					
15		-	Vendor Identifcation							
16	(MSB)		Drod	ot Idantificat	ian (vandaran	acific)				
31			Product Identification (vendor-specific) —							
32	(MSB)			Product Da	evision Level					
35				FTOGUCT RE	evision tevel			(LSB)		

Product Identifiction	A left-justified field of ASCII characters with space character padding on the right. The string is set to:				
	Product	Product Identification			
	LTO-6 full-height LTO-6 half-height	"ULTRIUM8525 DRV" "ULTRIUM8000 DRV"			

# HP Unique Inquiry page

	7	6	5	4	3	2	1	0		
0	Perip	Peripheral Qualifier (0) Peripheral Device Type (1)								
1	Page Code (D0h)									
2	Reserved (0)									
3		Page Length (10h)								
4	(MSB)	(MSB) Queue Depth								
5				Queue	е рертп			(LSB)		
6	PRS (O)		Reserved (0) Multi-initiator Rev (							
7		Reserved (0)								
8	(MSB)			F\A/ l	- C: (I/D)					
9				rvv imag	e Size (KB)			(LSB)		
10	(MSB)			Duit on Buill	- , C: (VD)					
11				Drive butte	er Size (KB)			(LSB)		
12	(MSB)			Cada Iand T	· (					
13				Code Lodd 1	ime (seconds)			(LSB)		
14	(MSB)			E a 214 Tim	(d-)					
15			Format Time (seconds) (LSI					(LSB)		
16				Reserved (0)				RByte (0)		
17–19				Reser	ved (0)					

Queue Depth	The tot	the total number of tags supported. For Fibre Channel drives, this is 4. For SAS drive, it is 32.						
PRS	Persiste	Persistent Reserve In and Persistent Reserve Out have been certified.						
Multi-initiator Revision	The lev	vel of functionality to which multi-initiator has been implemented:						
	00h	A legacy device that cannot be reliably supported in a multi-initiator environment.						
	01 h	O1h A device that supports simultaneous reading and writing from multi-initiators.						
	02h	A device that:						
		<ul> <li>Supports simultaneous reading and writing from multiple initiators.</li> </ul>						
		<ul> <li>Responds to an INQUIRY command from any host with valid data within 5s following a reset.</li> </ul>						
		Supports Inquiry Page 83h (IEEE Extended Unique Identifier) of at least type 2.						
		<ul> <li>Supports responding to INQUIRY with valid data while disconnected and processing a command from another initiator.</li> </ul>						
		Supports the REPORT LUNs command.						

	03h	Equivalent to 02h.				
FW Image Size		in KB of the drive's downloadable firmware image file. The file itself is rounded to the kilobyte, ensuring the file is a multiple of 1024 bytes.				
Drive Buffer Size	nearest k	he size in KB of the drive's usable data buffer (not the memory component size) rounded to the earest kilobyte. The value of this field is FFFFh (65535 KB), which is the closest to the main buffer ize of 512 MB.				
Code Load Time		The time in seconds that the device takes to become ready following completion of the code load process. Set to B4h seconds (3 minutes).				
Format Time	The time in seconds that it takes a generic format command (all optional bits set to zero) to comple Set to 0 (unknown).					
RByte		When set to 1, indicates that the drive expects the code to be sent in Big-Endian order during the WRITE BUFFER command (that is, bytes 01, 00, 03, 02, 05, 04n, n-1). The bit is set to 0.				

## LOAD/UNLOAD 1Bh

The LOAD/UNLOAD command allows the host to specify that a tape cartridge present in the drive is either made ready for data transfer ("loaded") or disabled for data transfer (if Prevent Media Removal is set). It can also cause the cartridge to be ejected from the drive ("unloaded").

#### Pre-execution checks

Illegal Field	Reservation	Deferred Error
Unit Attention	Diagnostic Status	Media Information

If an *unload* is to be performed, the drive checks if the tape is currently being loaded. If it is, CHECK CONDITION is reported with a sense key of NOT READY and additional sense of 0401h (becoming ready).

If a *load* is to be performed, the drive checks to ensure that a tape cartridge is present. If not, it reports CHECK CONDITION with a sense key of NOT READY and additional sense of 3A00h (medium not present). If the media is currently being unloaded or ejected, it reports CHECK CONDITION with sense key of NOT READY and additional sense of 0400h (cause not reportable).

#### Command descriptor block

	7	6	5	4	3	2	1	0		
0	Operation Code (1Bh)									
1	Reserved (0)									
2	Reserved (0)									
3	Reserved (0)									
4	Reserved (0)				Hold	EOT (0)	ReTen	Load		
5	Control									

#### **CDB** fields

Immed	0	The drive reports status after the command has completed.
	1	The drive reports status when it starts the command (after any pre-execution checks and prerequisite unloads have completed).
Hold	0	A normal load/unload will be performed.

	1	A load will cause the cartridge to be pulled in and seated in the drive, but the tape will not be threaded. An unload will cause the tape to be unthreaded, but the cartridge will not be ejected. In Hold position, the Cartridge Memory is accessible.				
ReTen	If this bit and the <b>Load</b> and <b>Hold</b> bits are set to one, the command will fail with CHECK CONDITION, a sense key of ILLEGAL REQUEST, and additional sense of 2400h (invalid field in CDB). Otherwise this bit is ignored.					
Load	0	The drive performs an <i>unload</i> operation.				
	1	1 The drive performs a <i>load</i> operation.				

### LOAD/UNLOAD specific status

Following a successful LOAD command, CHECK CONDITION is posted to all initiators other than the initiator of the LOAD command. The sense key is set to UNIT ATTENTION, with additional sense of 2800h (not ready to ready transition). There is an exception to this: if a load occurs when the tape is already loaded, no UNIT ATTENTION sense is generated.

Once UNIT ATTENTION is cleared, unsolicited positional sense is set. The sense key will be NO SENSE with additional sense of 0004h (BOT detected).

If an unformatted tape is inserted, the drive loads it and it behaves as if it is a blank tape.

If a cartridge with no Cartridge Memory or a failed Cartridge Memory is loaded, CHECK CONDITION is returned with a sense key of MEDIUM ERROR, with additional sense of 5200h (cartridge fault).

## Loading a cartridge

A default non-automation configured drive loads an Ultrium 6, Ultrium 5 or Ultrium 4 tape automatically when it is inserted, without any host interaction. If the load is successful, media access commands are permissible (see the Media Access check).

If the tape is already loaded when a Load request is received, the tape is positioned at the beginning of the tape (as though a REWIND had been sent). Unlike a "full" load, UNIT ATTENTION with additional sense of 2800h (not ready to ready transition) is not generated for other hosts.

If the tape is in the process of being loaded when the Load request is received, the drive will wait for the load to complete and, assuming the load was successful, take one of the following actions:

- If the Load was issued by the current host (that is, a previous immediate-reported load) and completed successfully, GOOD status is reported. No further action is taken.
- If the Load was issued by some other host (or was an autoload) and completed successfully, CHECK CONDITION is reported, with a sense key of UNIT ATTENTION and additional sense of 2800h (not ready to ready transition).
- If the Load was issued by the current host and failed, CHECK CONDITION is reported, since a deferred error condition will exist for the current host.
- If the Load was issued by some other host and failed, the load will be re-attempted on behalf
  of the current host.

## Unloading a cartridge

If an unload is requested and there is a tape present in the drive (either loaded, loading or unloading):

- 1. Any buffered data is written to tape.
- 2. The tape is rewound to the physical BOM (beginning of media).
- 3. If medium removal *is* prevented, CHECK CONDITION is reported with a sense key of ILLEGAL REQUEST and additional sense of 5302h (medium removal prevented).
- 4. GOOD status is reported if the tape unloaded successfully. Otherwise, another unload operation is initiated on behalf of the host that issued the unload request.

Following an unload, any media access commands will be rejected by the Media Access check.

- If an unload request is received while the tape is in the process of unloading (for example, as a result of pressing the eject button), it will be queued until the unload is complete.
- If an unload request is received while there is no tape present, or if a tape is present but not loaded and medium removal is prevented, GOOD status is reported.

It is possible to unload and eject the cartridge by pressing the Eject button on the front panel.

## LOCATE 2Bh/92h

The LOCATE command moves the current logical position to the position specified by the command. The new position is specified by the offset from start of the media in terms of blocks. The first block (that is, BOT) is block address 0.

Any unwritten data is written to tape before the command is executed.

**NOTE:** Ideally an application should determine how many partitions there are on the tape before sending a LOCATE command with CP bit set to 1.

#### **Pre-execution checks**

Illegal Field Reservation Deferred Error
Unit Attention Media Access Diagnostic Status

#### Command descriptor block (10-byte version)

	7	6	5	4	3	2	1	0
0	Operation Code (2Bh)							
1			Reserved (0)		BT (O)	CP	Immed	
2	Reserved (0)							
3	(MSB)							
6		Block Address (LSB)						(LSB)
7	Reserved (0)							
8	Partition							
9	Control							

#### Command descriptor block (16-byte version)

	7	6	5	4	3	2	1	0
0				Operation	Code (92h)			
1	Reserv	ed (0)		Dest Type		Rsvd (0)	CP	Immed
2		Reserved (0)						BAM (0)
3		Partition						
4	(MSB)	(MSB)						
11		Logical Identifier (LSB)						
12		D 1(0)						
14		Reserved (0)						
15		Control						

#### **CDB** fields

ВТ	Addres	Block address Type. This field is not supported and should always be set to zero indicating that the Block Address field represents the count of all blocks and filemarks between the beginning of the media and the current logical position.						
СР	_	Change Partition.  If this bit is set, the Partition field is valid, otherwise it will be ignored.						
Immed	0	The drive only reports status after the Locate command has completed.						
	1	The drive reports status when it starts the command and continues with the positioning in the background.						
BAM	0	O This field is not supported.						
Block Address		The Block Address specifies the number of blocks and filemarks between BOM and the position to be located.						
Partition	If <b>CP</b> is	set to 0, this field will be ignored set to 1, this field specifies the partition number to change to. LTO-5 tapes allow up to 2 partitions O-6 tapes up to 4 (0-3).						
Dest type	000b	Specifies that the Logical Identifier field is a logical object identifier.						
	001b	Specifies that the Logical Identifier field is a logical file identifier.						
	011 b Specifies that the Logical Identifier field is EOD.							
	Other values are not supported.							
Logical Identifier	= 000k	The specific block on tape to locate. It can be a generic block, either a record or a filemark (Dest Type = 000b) or a specific filemark on tape (Dest Type = 001b). If the location is EOD (Dest Type = 011b), this field is ignored.						

# LOCATE specific status

Event	Status	Key	Additional Sense		
EOD encountered	CHECK CONDITION	BLANK CHECK	0005h (EOD encountered).		
EOM encountered	CHECK CONDITION	medium error	0002h (EOT encountered). EOM bit set.		
Failed to read data—media error or non-fatal drive error	CHECK CONDITION	HARDWARE ERROR	3B00h (sequential positioning error)		
Early Warning EOM encountered	Early warning end of medium information is not reported for Locate commands				
Data format corrupt	CHECK CONDITION	medium error	3001h (cannot read media, unknown format)		
Media that does not support partitions is loaded and the application sends a LOCATE command with the CP bit set to 1	CHECK CONDITION				

# LOG SELECT 4Ch

The LOG SELECT command causes log data on the drive to be reset to its default value or to be set to an initiator specific value.

#### **Pre-execution checks**

Illegal Field Deferred Error Reservation **Unit Attention** 

#### Command descriptor block

	7	6	5	4	3	2	1	0	
0		Operation Code (4Ch)							
1	Reserved (0) PCR S						SP (O)		
2	PC Reserved (0)								
3–6	Reserved (0)								
7	(MSB)	(MSB)							
8	Parameter List Length (LSB)						(LSB)		
9	Control								

#### **CDB** fields

The following are valid combinations of values for the PCR (Parameter Code Reset), Parameter List Length and PC (Page Control) fields

PCR	Parameter List Length	PC	Result
1	0	01b or 11b	All the logs on the drive that can be reset are reset to their default values.
1	0	00b <i>or</i> 10b	No action is taken and GOOD status is returned.
0	>0	01b <i>or</i> 11b	Data is sent from the host and is written to the indicated logs, provided those logs are writable.

Otherwise CHECK CONDITION status is returned, the sense key is set to ILLEGAL REQUEST with additional sense of 2400h (invalid field in CDB).

PCR	0	Parameter Code Reset. The function performed is defined by the PC field.						
SP	0	e Save Page (SP) flag is not supported and must be set to 0.						
PC	The Page Control field defines the type of parameter values to be selected:							
	00b <i>or</i> 10b	No operation is performed. The Parameter List Length must be zero. If it is not, CHECK CONDITION with additional sense of 2400h (Invalid Field In CDB) is set.						
	01b	The drive will clear logs as specified by the parameter data.						
	11 b	The drive will clear all of its internal logs.						
Parameter	0	No data is to be transferred. This is not considered an error.						
List Length	>0	Specifies how many bytes of parameter data are to be sent. The data transferred will consist of zero or more 4-byte log page headers with the page length in those headers set to zero. For each log page header received, the drive clears the associated log.						

## LOG SENSE 4Dh

LOG SENSE allows the host to read the drive's logs. A single log is returned with each invocation of LOG SENSE.

### Pre-execution checks

Illegal Field Deferred Error Unit Attention

The Page Code must match one of the supported log page codes. If it does not, then CHECK CONDITION status is reported. Sense data will be as described in the Illegal Field Checks.

## Command descriptor block

	7	6	5	4	3	2	1	0
0				Operation	Code (4Dh)		,	
1			Reserve	ed (0)			PPC (0)	SP (O)
2	PC	2			Page	Code		
3				D	d (O)			
4	Reserved (0)							
5								
6		Parameter Pointer						
7	(MSB)	(MSB)						
8	Allocation Length (LSB)							(LSB)
9		Control						

### **CDB** fields

PC	The Pag	e Control field defines the type of log parameter to be returned:			
	00b	Current Threshold Values—any parameters in the log that are counters contain the maximum value that they can count to.			
	01b	Current Cumulative Values—any parameters in the log that are counters contain their current counts.			
		Note: Counts are reset to their default cumulative values (see below) following a power-on, reset or target/logical unit reset. Media related counts are also reset following a load.			
		For SAS drives, the counters are reset following a power-on reset or a soft reset induced via the front panel. A LUN reset has no effect.			
	10b	Default Threshold Values—same as the Current Threshold Values			
	11 b	Default Cumulative Values—any parameters in the log that are counters contain the initial values of those counters (set at power-on, reset or target/logical unit reset, and, in the case of media logs, load).			
	The PC field has no effect on the data returned when the selected log contains event or trace codes rather than counts.				
Page Code	The Pag Log Pag	e Code field identifies which log page is being requested by the host. See "Supporte es page" (page 62) for the list of valid page codes.			
Parameter Pointer	0	All parameters are returned.			
	n	Parameter data of a specified log page is returned in ascending order beginning from this code. If this code is larger than the largest parameter in the page, the drive			

		will return CHECK CONDITION with additional sense of 2400h (invalid field In CDB).
Allocation Length	The Alloreturned is the les	cation Length field specifies the maximum number of bytes of data that should be to the host. The drive will return the entire log or Allocation Length bytes, whichever ser.

# Log page format

All log pages except Page 0 consist of a page code header followed by a number of parameters. The page header has the following format:

	7	6	5	4	3	2	1	0		
0	Page Code									
1		Reserved (0)								
2	(MSB)	(MSB) Page Length								
3		•		rage	rengin			(LSB)		

The Page Code specifies which Log page is being returned. The Page Length indicates the number of additional bytes in the parameters.

For the LOG SELECT command only, the four bytes shown above are sent for each log page to be cleared. The Page Length field should be set to zero.

For the LOG SENSE command one or more parameters is sent. See the actual page descriptions below for more information. Note that all the parameters for a particular page must be sent. Each parameter is composed of the following fields: Parameter Code, Parameter Control byte (byte 2), Parameter Length and Parameter Bytes. Some pages follow the SPC-3 format and others the SPC-4 format.

#### **SPC-4 format:**

	7	6	5	4	3	2	1	0					
0	(MSB)		Payamatar Cada										
1			Parameter Code (LSB)										
2	DU	Obsolete	TSD	ETC	TM	С	Format ar	nd Linking					
3				Parameter	Length ( <i>n</i> –3)								
4	(MSB)		Parameter Bytes										
n				rarame	eier byles			(LSB)					

#### SPC-3 format:

	7	6	5	4	3	2	1	0			
0	(MSB)		Programator Code								
1			Parameter Code (LSB)								
2	DU	DS	TSD	ETC	TM	TMC LBin		LP			
3				Parameter	Length ( <i>n</i> –3)						
4	(MSB)		Parameter Bytes								
n		•		rarame	ier byies			(LSB)			

Parameter Code	A two-k	pyte value that uniquely identifies the parameter within the log.
DU	0	The parameter is updated every time a related event occurs.
Disable Update	1	The update happens only in response to a LOG SELECT command that specifies a new parameter value.
<b>DS</b> Disable Save	0	The current threshold or cumulative value of the parameter is saved in response to a LOG SELECT or a LOG SENSE command, depending on their PC and SP bit values.
	1	The drive does not support this feature.
<b>TSD</b> Target Save Disable	0	The drive saves the parameter at vendor-specific intervals so that they are available after, for example, a power cycle.
	1	The drive does not implicitly save the log parameters to retain the value after a power cycle.
ETC Enable Threshold Comparison	1	A comparison to the threshold value is performed whenever the cumulative value is updated.
TMC	Defines	old Met Criteria the basis for comparison of the cumulative and threshold values. Only valid if ETC is Only valid if ETC is
LBin	0	Valid only if LP is set to one. The parameter is an ASCII list.
List Binary	1	Valid only if LP is set to one. The parameter is an binary list.
LP	0	The parameter is a data counter.
List Parameter	1	The parameter is a list parameter.
Format and Linking	00b	The parameter is a data counter. Stop incrementing after reaching its maximum value (until the next LOG SELECT).
	01b	The parameter is a list parameter (ASCII).
	10b	The parameter is a data counter.
	11 b	The parameter is a list parameter (binary).
Parameter Length	The len	gth of Parameter Bytes in bytes.
Parameter Bytes	The act	rual parameter data.

# Supported Log Pages page

This SCSI log may be recovered using a LOG SENSE command with the PC field set to anything and the Page Code field set to 00h. The page lists the page codes of other logs supported by the drive. It can neither be reset nor written.

The page has the following format:

	7	6	5	4	3	2	1	0		
0	Reserve	ed (0)		Page Code (00h)						
1	Reserved (0)									
2	(MSB)									
3		-		Page Length ——						
4				Supported	Pages (00h)					
5	Write Error Counters (02h)									
6				Read Error C	Counters (03h)					

	7	6	5	4	3	2	1	0		
7			Seq	uential Acces	s Device Log (C	)Ch)	•			
8	Temperature Log (0Dh)									
9		DTD Status Log (11 h)								
10			7	TapeAlert Res <sub>l</sub>	oonse Log (12h	)				
11			F	Requested Rec	overy Log (13h	)				
12				Device Statis	stics Log (14h)					
13			Serv	rice Buffers Inf	formation Log (	15h)				
14			Та	pe Diagnosti	cs Data Log (16	h)				
15				Volume Stati	stics Log (17h)					
16				SAS Port	Log (18h)					
17				Data Compre	ssion Log (1Bh)	1				
18				TapeAler	t Log (2Eh)					
19				Tape Usag	je Log (30h)					
20				Tape Capa	city Log (31 h)					
21			Data	Compression	(HP-only) Log	(32h)				
22				Device Welln	ess Log (33h)ª					
23		Performance Log (34h)								
24				DT Device E	rror Log (35h)					
25				Device Stat	us Log (3Eh)					

<sup>&</sup>lt;sup>a</sup> May not be present in all firmware versions.

## Write Error Counters log page

The Write Error Counters log is page 02h. The Page Length is 38h. There are seven parameters, 0 through 6. All fields are four bytes long.

All these counters are updated when the data set is physically written. They relate to the current tape and are cleared when the tape is unloaded.

Parm.	Definition	Description
0	Errors corrected without substantial delay	Total number of errors corrected without delay
1	Errors corrected with possible delays	Total number of errors corrected using retries
2	Total	Sum of parameters 3 and 6
3	Total errors corrected	The number of data sets that needed to be rewritten
4	Total times error correction processed	Number of CCQ sets rewritten
5	Total data sets processed	The total number of data sets written
6	Total uncorrected errors	The number of data sets that could not be written

This data can be reset to zero, but not written.

### Read Error Counters log page

The Read Error Counters log is page 03h. The Page Length is 38h. There are seven parameters, 0 through 6. All fields are four bytes long.

All these counters are updated when the data set is physically read. They relate to the current tape and are cleared when the tape is unloaded.

Parm.	Definition	Description
0	Errors corrected without substantial delay	Total number of errors corrected without delay
1	Errors corrected with possible delays	Total number of errors corrected using retries
2	Total	Sum of parameters 3 and 6
3	Total errors corrected	The number of data sets that were corrected after a read retry
4	Total times error correction processed	Number of times C2 correction is invoked
5	Total bytes processed	The total number of data sets read
6	Total uncorrected errors	The number of data sets that could not be read after retries

This data can be reset to zero, but not written.

### Sequential Access Device log page

The Sequential Access Device Log page is page 0Ch. With the exception of 0100h (cleaning required), all the parameters are updated when a data set is logically written, and cleared at the start of tape load; the values of each parameter relate to the current tape.

For parameter 0100h (cleaning requested), the parameter is updated asynchronously, and cleared when a cleaning cycle is performed. The parameter relates to the drive.

**NOTE:** Megabytes are expressed in 10<sup>6</sup> units.

Parm.	Description	Parm. Control Byte	Parm. Length
0000h	The number of data bytes received from application clients during write command operations. This is the number of bytes transferred over SCSI, before compression.	60h	08h
0001h	The number of data bytes written to the media as a result of write command operations, not counting the overhead from ECC and formatting. This is the number of data bytes transferred to media, after compression.	60h	08h
0002h	The number of data bytes read from the media during read command operations, not counting the overhead from ECC and formatting. This is the number of data bytes transferred from media with compression.	60h	08h
0003h	The number of data bytes transferred to the initiator or initiators during read command operations. This is the number of bytes transferred over SCSI, after decompression.	60h	08h
0004h	The approximate native capacity from BOP to EOD, in megabytes.	60h	04h
0005h	The approximate native capacity between BOP and EW in the current partition, in megabytes.	60h	04h
0006h	The minimum native capacity from EW and EOP in the current partition, in megabytes.	60h	04h
0007h	The approximate native capacity from BOP to the current position of the medium, in megabytes.	60h	04h

Parm.	Description	Parm. Control Byte	Parm. Length
0008h	The maximum native capacity that is currently allowed to be in the device object buffer, in megabytes.	60h	04h
0100h	Cleaning requested; a non-volatile cleaning indication.	40h	08h

A non-zero value of parameter 0100h (cleaning requested) indicates that the device has requested a head cleaning, and a subsequent cleaning cycle has not yet been completed. The parameter persists across logical unit resets, hard resets and power cycles.

## Temperature log page

The Temperature Log page is page 0Dh. The following parameters are supported:

Parm.	Description
Oh	The current temperature of the drive in °C (binary value). If the temperature is less than 0, 0 is reported. If the temperature sensor is not functioning properly, FFh is reported.
1h	The maximum temperature in °C (binary value) at which the drive can operate continuously without degrading reliability and operation. This parameter is not supported so FFh is returned.

	7	6	5	4	3	2	1	0			
0		Page Code (0Dh)									
1	Reserved (0)										
2	(MSB)	(MSB)									
3			Page Length (OCh) (LSB)								
4	(MSB)	(MSB) Parameter Code (0000h)									
5				rarameter Co	ode (oooon)			(LSB)			
6	DU (0)	DS (1) TSD (0) ETC (0) TMC (0) LBIN (1)				LP (1)					
7	Parameter Length (2h)										
8				Reserv	red (0)						
9				Tempera	ture (°C)						
10	(MSB)			Parameter C	ada (0001h)						
11				rarameter C	ode (ocorn)			(LSB)			
12	DU (0)	DS (1)	TSD (0)	ETC (0)	TMC	(O)	LBIN (1)	LP (1)			
13				Parameter	Length (2h)						
14				Reserv	red (0)						
15				Reference Ten	nperature (°C)						

# DTD Status log page

The Data Transfer Device (DTD) Status Log page is page 11 h. The following parameters are supported:

Parm.	Description Description					
0000h	Very High Frequency data					
0001h	Very High Frequency polling delay					
0002h	DT device ADC data encryption control status (only available in some variants)					
0003h	Key management error data (only available in some variants)					
0101h-0104h	DTD primary port status					
8000h	VU Very High Frequency data					
8003h	VU key management error (only available in some variants)					
8010h	VU extended VHF data					
8020h	VU multi-initiator conflict warning (only available in some variants)					
A101h-A102h	VU failover status (dual-port Fibre Channel drives only)					

The parameters data follows as described in the following sections.

### Very High Frequency (VHF) data

	7	6	5	4	3	2	1	0
0	(MSB)			Down atom C	l- (0000h)			
1		Parameter Code (0000h) (LSB)						
2	DU (0)	Obsolete (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Linking (11)					
3		Parameter Length (4h)						
4	PAMR	HIU	MAcc	Cmpr	WrtP	CRqst	CRqrd	Dlnit
5	InXtn	Rsvd (0)	RAA	MPrsnt	Rsvd (0)	MStd	MThrd	DAcc
6		DT Device Activity						
7	VS	Rsvd (0)	TDDEC	EPP	ESR	RRqst	IntfC	TAFC

PAMR	Prevent/Allow Medium Removal bit					
HIU	lost Initiated Unload bit					
MAcc	If set to 1, the MAM is accessible. <b>MPrsnt</b> must be set as well.					
Cmpr	Compress bit. If set to 1, the DTD currently has data compression enabled.					
WrtP	Write Protect bit. If set to 1, the media in the DTD is physically write-protected. Only valid if <b>MPrsnt</b> is set to 1.					
CRqst	Clean Requested bit					
CRqrd	Cleaning Required. Not supported. Must be zero.					
DInit	DTD Initialized. When set to 1, the data returned by the VHF parameter data is valid.					
InXtn	In Transition. If 0, the DTD is in the state reflected by the rest of byte 5 and is not attempting to leave this state. This bit must be 0 if <b>RRqst</b> is set.					

RAA	Robotic Access Allo	wed. If set to 1, robotic media access to the DTD is allowed.					
MPrsnt	Media Present bit (l	nardware sensor)					
MStd	Media Seated. If set, the tape is mechanically seated, that is, physical loading is complete.  Otherwise the tape is still threading.						
MThrd	Media Threaded	Media Threaded					
DAcc		Data Accessible. If set to 1 to 1, the DTD has finished processing a load operation. The bit is cleared to 0 at the beginning of the next unload operation.					
DT Device Activity	00h	No tape motion					
	01 h	Cleaning operation in progress					
	02h	Tape being loaded					
	03h	Tape being unloaded					
	04h	Other tape activity					
	05h	Reading					
	06h	Writing					
	07h	Locating					
	08h	Rewinding					
	09h	Erasing					
	OA-OBh	Reserved					
	0Ch	Other DT device activity					
	0Dh	Microcode update in progress					
	OEh	Reading encrypted data from tape					
	OFh	Writing encrypted data to tape					
	10h-7Fh	Reserved					
80h–FFh		Vendor unique					
VS Vendor Spec		fic bit. Indicates changes in the VU Extended VHF Data log parameter.					
	0	O No VU Extended VHF Data log parameter field has changed since the las retrieval of the Extended VHF Data log parameter by this I_T nexus.					
	1	At least one field in the VU Extended VHF Data log parameter has changed since the last retrieval of the VU Extended VHF Data log parameter from the DT Device Status log page by this I_T nexus. The ADC device server sets the VS bit to zero after retrieval of the VU Extended VHF Data log parameter by this I_T nexus.					
TDDEC	Tape Diagnostic Do	ta Entry Created					
	0	The DT device has not created a new Tape Diagnostic Data log page entry since the last retrieval of any of the parameters from the Tape Diagnostic Data log page by this I_T nexus.					
	1	The DT device has created a new Tape Diagnostic Data log page entry since the last retrieval of any of the parameters from the Tape Diagnostic Data log page by this I_T nexus.					
EPP	Encryption Paramet	ers Present					
	1	There is a set of saved data encryption parameters with either the <b>Encryption Mode</b> field set to a value other than Disable or the <b>Decrypti Mode</b> field set to a value other than Disable associated with any I_T nex					
ESR	Encryption Service	Request (only available in some variants)					
	0	A value of zero means one of the following:					
		No bits in the Service Request Indicators field in DT device ADC data					
		encryption control status log parameter have been set to one since the					

		last retrieval of the data encryption control status log parameter by this I_T nexus			
		All of the bits in the Service Request Indicators field in the DT device ADC data encryption control status log parameter are set to zero.			
		The ESR bit is set to zero after retrieval of the DT device ADC data encryption control status log parameter by this I_T nexus.			
	1	At least one bit in the Service Request Indicators field in the DT device ADC data encryption control status log parameter has been set to one since the last retrieval of the data encryption control status log parameter by this I_T nexus.			
RRqst	Recovery Requested circumstances, <b>InXt</b>	d. Set to 1 as long as a recovery procedure is available. In these <b>n</b> must be 0.			
IntfC	Interface Changed. If set to 1, the interface status has changed since the last time this page was retrieved. It is cleared to 0 when the page is retrieved for the initiator.				
TAFC	If set, at least one T retrieved.	f set, at least one TapeAlert flag has changed since the last time the TapeAlert flags were retrieved.			

# Very High Frequency polling delay (only available in some variants)

	7	6	5	4	3	2	1	0		
0	(MSB)		Programator Coda (0001h)							
1			Parameter Code (0001 h) (LSB)							
2	DU (0)	Obsolete (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Linking (11b)							
3		Parameter Length (2h)								
4	(MSB)	VIJE Ballings Dalancia and (10h)								
5		VHF Polling Delay in ms (10h)  (LSB)								

## The VHF Polling Delay is 16 milliseconds.

## DT device ADC data encryption control status (only available in some variants)

	7	6	5	4	3	2	1	0	
0	(MSB)		Parameter Code (0002h)						
1		-		rarameter Co	ode (UUUZn)			(LSB)	
2	DU (0)	Obsolete (0)	TSD (0)	ETC (0)	TM	C (O)	Format and	Linking (11 b)	
3		Parameter Length (8h)							
4		Reserved (0)							
5	EPR	DPR	KME	ABT		Reserve	ed (0)		
6	(MSB)								
9		Parameters Request Sequence Identifier (LSB)							
10–11		Reserved (0)							

ABT	Set to 1 when the data encryption parameters request associated with the value in the <b>Parameters Request Sequence Identifier</b> field has been aborted.			
KME	Key Management Error. If set to 1, it indicates that the Error Type field in the key management error data log parameter is set to a non-zero value.			

DPR	Decryption Parameters Request. If set to 1, it indicates that the device requests a set of encryption parameters for decryption from the automation application client.
EPR	Encryption Parameters Request. If set to 1, it indicates that the device requests a set of data encryption parameters for encryption from the automation application client.
Parameters Request Sequence Identifier	<ul> <li>A unique value that identifies one of the following:</li> <li>The data encryption parameters for an encryption request if EPR is set to 1.</li> <li>The data encryption parameters for a decryption request if DPR is set to 1.</li> <li>The data encryption parameters request that has been aborted if ABT is set to 1.</li> </ul>

# Key management error data (only available in some variants)

	7	6	5	4	3	2	1	0	
0	(MSB)	(MSB) Parameter Code (0003h)							
1		_		rarameter C	ode (UUUSN)			(LSB)	
2	DU (0)	Obsolete (0)	TSD (0)	ETC (0)	TMC	(O)	Format and	Linking (11b)	
3				Parameter	Length (Ch)				
4		Error	Туре		KTO		Reserved (0)	)	
5		Reserved (0)							
6	(MSB)	MSB)							
9		Parameters Request Sequence Identifier (LSB)							
10		Reserved (0) Sense Key (0)							
11	Additional Sense Code (0)								
12		Additional Sense Code Qualifier (0)							
13–15				Reser	ved (0)				

Error Type	Indicates the type o	Indicates the type of the last key management error event.				
	0000Ь	No error				
	0001b Encryption parameters request error					
	0010b	Decryption parameters request error				
кто	Key Timeout. If set t	Key Timeout. If set to 1, the data encryption period timer expired.				
Parameters Request Sequence Identifier	A unique value that key management e	A unique value that identifies the data encryption parameters request associated with the last key management error event. Otherwise this field is set to 0.				

# DTD primary status log parameters

The parameter codes for ports are as follows:

Port	Parameter Code
Fibre Channel port A	101h
Fibre Channel port B	102h
Fibre Channel NPIV port A	103h
Fibre Channel NPIV port B	104h

Port	Parameter Code
SAS port A	101h
SAS port B	102h

# Fibre Channel port status data

	7	6	6 5 4 3 2 1					0	
0	(MSB)								
1		-	Parameter Code (LSB)						
2	DU (0)	Obsolete (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and						
3		Parameter Length (18h)							
4	CurrTop	С	Current Speed		lC	Conflict	Signal	PIC	
5									
7	Current N_Port ID								
8–10		Reserved (0)							
11	Rsvd (0)			Curi	rent FC-AL Loo <sub>l</sub>	p ID			
12									
15	Current Port Name								
16									
23	Current Node Name								

CurrTop	Currer	nt Topology. Ign	ored when the PIC bit is set to zero.				
	0	Current Topology. Ignored when the PIC bit is set to zero.					
	1	The DT device primary port is currently operating in point-to-point mode.					
Current Speed	The bi	e bit rate at which the DT device primary port is currently operating. The field is ignored when PIC bit is set to zero. Valid values are:					
	000b 001b 010b 011b		1 Gbps 2 Gbps 4 Gbps 8 Gbps				
	100b-	– 111 b	reserved				
LC	Login Complete						
	0	A login has not successfully completed through the PRLI phase on the DT device primary port.					
	itiator port has completed process login (PRLI) with the DT device on the DT $\sigma$ port.						
Conflict	0	There is no AL_PA conflict.					
	Another device has the required Hard AL_PA, or no AL_PA is available for the DT deprimary port.						
Signal	0	No light detec	ted				
	1 Light detected						

	path fo	Deassertion of the Signal bit is delayed for 30 seconds when the port is the standby port in a data both failover configuration. This is because Brocade switches signal-cycle the port causing "up/down" tratus indications to percolate to a library.					
PIC	Port In	itialization Complete					
	O The DT device primary port is not in the ACTIVE state and is not synchronized, or has n successfully completed the most recent Loop Initialization Process.						
	1	The FC_Port state machine is in the ACTIVE state and the DT device primary port is operating in point-to-point topology, or the most recent Loop Initialization Process has completed successfully					
Current N_Port ID	The 24-bit N_Port ID that is assigned to the DT device primary port. The field is ignored when the PIC bit is set to zero.						
Current FC_AL Loop ID	The lo	The loop identifier that is assigned to the DT device primary port. The field is ignored when the PIC bit is set to zero or when the CurrTop bit is set to one.					

# SAS port status data

	7	6	5	4	3	2	1	0
0	(MSB)		Parameter Code (LSB)					
1		-						
2	DU (0)	Obsolete (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Linking (11					
3		Parameter Length (OCh)						
4	Negotiated Physical Link Rate Reserved (0) Signal PIC						PIC	
5								
7		Current Hashed SAS Address						
8–15	SAS Address							

# VU Very High Frequency data

	7	6	5	4	3	2	1	0
0	(MSB)			Dawa atau C	- d- (0000h)			
1		-	Parameter Code (8000h) (LSB)					
2	DU (0)	Obsolete (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Linking (11b)					
3	Parameter Length (06h)							
4		V 11:15 D.						
7		Very High Frequency Data						
8	Interfere Manager VIIIE Date							
9		Interface Manager VHF Data						

## Interface Manager VHF data

	7	6	5	4	3	2	1	0
0	Host Login	Reserved (0)		Hardware Error	Media Error	Upgrade Cart.	Loading	Unloading
1			Reserved (0)	Snapshot	Load Complete	Unload Complete		

Host Login	0	No host logins have changed.
-	1	At least one fabric login has occurred since the last retrieval of the Host Login table using a SCSI MAINTENANCE IN command by this I_T nexus. The ADC device server sets Host Login to zero after this I_T nexus has retrieved the Host Login table.
Hardware Error	0	One of the following has occurred:
		The Hardware Error data log has been retrieved by this I_T nexus.
		An appropriate service action has been performed to correct the reported hardware error.
	1	The drive has detected a hardware error since the last retrieval of the Hardware Error data log. The Hardware Error bit is set to one at the same time that the drive indicates a hardware error on its physical user interface.
Media Error	0	One of the following has occurred:
		The Media Error data log has been retrieved by this I_T nexus.
		An appropriate service action has been performed to correct the reported media error.
	1	The drive has detected a media error since the last retrieval of the Media Error data log. The Media Error bit isset to one at the same time the drive indicates a media error on its physical user interface.
Upgrade Cart.	0	No firmware upgrade cartridge is loaded in the drive.
	1	A firmware upgrade cartridge is loaded in the drive to at least the seated position.
Loading	0	The drive is not loading media.
	1	The drive is in the process of executing one of the following:
		A SCSI LOAD/UNLOAD command, with the Load bit set to one.
		A load initiated by a cartridge being physically pushed into the drive.
		An ACI Load command.
Unloading	0	The drive is not unloading media.
	1	The drive is in the process of executing one of the following:
		A SCSI LOAD/UNLOAD command, with the Load bit set to zero.
		A unload initiated via the physical user interface of the drive.
		An ACI Unload command.
Snapshot	0	A snapshot log has not been created since this I_T nexus last retrieved the list of available snapshot logs using the REPORT SNAPSHOTS AVAILABLE command or the DT Device has not created a Snapshot log. The ADC device server sets the Snapshot bit to zero after this I_T nexus has retrieved the list of available snapshot logs using the REPORT SNAPSHOTS AVAILABLE command.
	1	A Snapshot log has been created since the last retrieval of the list of available snapshot logs by this I_T nexus using the REPORT SNAPSHOTS AVAILABLE command.
Load Complete	0	The bit is set to zero when:
		A load operation has not been initiated.
		An unload operation has been initiated since the last load operation.
		A load operation is in progress.
		Media is not in load state (e) or (i) (see ADC 4.2.4.1).
	1	The drive has completed a load operation for the media that is currently loaded in the drive to load state (e) or (i) (see ADC 4.2.4.1).

Unload Complete	0	<ul> <li>The bit is set to zero when:</li> <li>An unload operation has not been initiated.</li> <li>A load operation has been initiated since the last unload operation.</li> </ul>
	1	An unload operation is in progress.  The drive has completed an unload operation.

## VU key management error data (only available in some variants)

	7	6	5	4	3	2	1	0		
0	(MSB)	(MSB) Parameter Code (8003h)								
1		_		rarameter C	ode (ouusn)			(LSB)		
2	DU (0)	Obsolete (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Linking					Linking (11b)		
3				Parameter	Length (8h)					
4		Reserve	ed (0)		KTO		Error Type			
5–7				Reser	ved (0)					
8		Reserve	ed (0)			Sense	е Кеу			
9		Additional Sense Code								
10		Additional Sense Code Qualifier								
11				Reser	ved (0)					

### VU extended VHF data

	7	6	5	4	3	2	1	0		
0	(MSB)			Davis atau C	(0010k)					
1		Parameter Code (8010h) (LSB)								
2	DU (0)	Obsolete (0)	ete (0) TSD (0) ETC (0) TMC (0) Format and Linking (11b)							
3				Parameter	Length (8h)					
4	(MSB)			F 1.1.1	efe e					
7		Event Notification (LSB)								
8–11		Reserved (0)								

## **Event Notification descriptor format:**

	7	6	5	4	3	2	1	0
0		Reserved (0)						Snapshot
1–2		Reserved (0)						
2							PAMRC	

MICW	Multi-l	nitiator Conflict Warning
	0	The drive has detected a potential multi-initiator conflict since the last time the Multi-Initiator Conflict Warning log parameter was successfully reported on this I_T nexus.

	The drive has not detected a potential multi-initiator conflict since the last time the Multi-Initiator Conflict Warning log parameter was successfully reported on this I_T nexus. Only available in some variants.						
HM	Hibernate Mode						
	O The drive is in its active state.						
	1 The drive is in its standby state to reduce power consumption.						
LRC	Legacy Reservations Changed						
	O The legacy reservations held by the drive for the SMC logical unit have not changed since the last time the REPORT LEGACY RESERVATIONS command was successfully reported on this I_T nexus.						
	The legacy reservations held by the drive for the SMC logical unit have changed since the last time the REPORT LEGACY RESERVATIONS command was successfully processed by this I_T nexus.						
PRC	Persistent Reservations Changed						
	O The persistent reservations held by the drive for the remote SMC logical unit have not changed since the last time the REPORT PERSISTENT RESERVATIONS command was successfully reported on this I_T nexus.						
	The persistent reservations held by the drive for the remote SMC logical unit have changed since the last time the REPORT PERSISTENT RESERVATIONS command was successfully reported on this I_T nexus.						
PAMRC	Prevent Allow Medium Removal Changed						
	OT The prevent allow medium removal settings held by the drive for the remote SMC logical unit have not changed since the last time the REPORT PREVENT MEDIUM REMOVAL command was successfully reported on this I_T nexus.						
	The prevent allow medium removal settings held by the drive for the remote SMC logical unit have changed since the last time the REPORT PREVENT MEDIUM REMOVAL command was successfully reported on this I_T nexus.						

### VU multi-initiator conflict warning (only available in some variants)

	7	6	5	4	3	2	1	0	
0	(MSB)								
1		_		Parameter C	ode (6020n)			(LSB)	
2	DU (0)	Obsolete (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Link						
3				Parameter	Length (12h)				
4	(MSB)			I I at NI ama	1 (				
11		_		Host Name	i (previous)			(LSB)	
12	(MSB)			Haat Nlaus	- 0 ( 1)				
19		_	Host Name 2 (latest) (LSB)						
20		Operation Code							
21		Reserved (0)			Ç	Service Action	ı		

When the device server processes a hard reset condition, Host Name 1, Host Name 2, Operation Code, and Service Action are set to zero.

If a potential multi-initiator conflict has occurred:

**Host Name 1** contains the name of the previous host that initiated media access command while no reservation was set.

**Host Name 2** contains the name of the most recent host that initiated a media access command while no reservation was set.

Operation Code contains the media access SCSI Operation Code executed by Host Name 2.

**Service Action** contains the service action of the media access command executed by Host Name 2. If the media access command did contain a service action this file is set to 00h.

#### **VU** failover status

Parameter Code	Description						
A101h	bre Channel port A failover status						
A102h	Fibre Channel port B failover status						

	7	6	5	4	3	2	1	0			
0	(MSB)	Deventator Codo									
1		Parameter Code (LSB)									
2	DU (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Linking (11)									
3				Parameter	Length (4h)						
4				Reserved (0)				Active			
5		Reserved (0) Failover Trigger									
6–7				Reser	ved (0)						

Active	0	The specified	d port is not active.					
	1	client. If data report an Ac	d port is active or was the port requested to be active by the automation application a path port failover is enabled, then only one port failover status data log parameter will ctive bit set to one. If the drive could not successfully activate any primary ports enabled data path failover, no ports will have the Active bit set to one.					
Failover Trigger								
		0000b	No failover trigger has been detected.					
		0001b	A signal loss failover trigger was detected.					
		0010b	A link error threshold exceeded trigger was detected.					
	0011b A command transport error threshold exceeded trigger was detected.							
	01	00b-1111 b	Reserved					

## TapeAlert Response log page

The TapeAlert Response log page is page 12h. There is only 1 parameter, which contains 64 flags. For a list of supported flags, see "TapeAlert log page" (page 87).

	7	6	5	4	3	2	1	0
0	Page Code (12h)							
1				Reser	ved (0)			

	7	6	5	4	3	2	1	0	
2	(MSB)			Deve a Laure	# (000CP)				
3				rage Leng	rameter Length (08h) g 04h Flag 05h Flag 06h Flag 07h				
4	(MSB)		D						
5				rarameter C	.ode (UUUUn)			(LSB)	
6	DU (1)	Obsolete (0)	TSD (1)	ETC (0)	TMC	(0)	Linking (11 b)		
7				Parameter I	Length (08h)				
8	Flag 01 h	Flag 02h	Flag 03h	Flag 04h	Flag 05h	Flag 06h	Flag 07h	Flag 08h	
9	Flag 09h	Flag OAh	Flag OBh	Flag OCh	Flag ODh	Flag OEh	Flag OFh	Flag 10h	
10	Flag 11 h	Flag 12h	Flag 13h	Flag 14h	Flag 15h	Flag 16h	Flag 17h	Flag 18h	
11	Flag 19h	Flag 1Ah	Flag 1Bh	Flag 1Ch	Flag 1Dh	Flag 1Eh	Flag 1Fh	Flag 20h	
12	Flag 21h	Flag 22h	Flag 23h	Flag 24h	Flag 25h	Flag 26h	Flag 27h	Flag 28h	
13	Flag 29h	Flag 2Ah	Flag 2Bh	Flag 2Ch	Flag 2Dh	Flag 2Eh	Flag 2Fh	Flag 30h	
14	Flag 31h	Flag 32h	Flag 33h Flag 34h Flag 35h Flag 36h Flag 37h					Flag 38h	
15	Flag 39h	Flag 3Ah	Flag 3Bh	Flag 3Ch	Flag 3Dh	Flag 3Eh	Flag 3Fh	Flag 40h	

Each flag is either zero to indicate the corresponding condition is deactivated or one to indicate that the corresponding condition has been activated.

Flags are *not* cleared when the log is read. The log is cleared at power-on or on a reset condition. Specific flags may be cleared when corrective action has removed the condition that caused the flag to be activated.

## Requested Recovery log page

The Requested Recovery log page is 13h. One parameter is supported:

Parameter	Description
0000h	Recovery procedures
0001 h–FFFFh	Reserved

### Recovery procedures

	7	6	5	4	3	2	1	0
0	(MSB)			Down atom C	(0000h)		,	
1		Parameter Code (0000h) (LSB)						
2	DU (1)	Obsolete TSD (1) ETC (0) TMC (0) Format & Linl				inking (11b)		
3	Parameter Length (1 h)							
4	Recovery Procedure							

Recovery Procedure	The recovery p	procedures that can be requested by HP tape drives are as follows:
	00h	No recovery requested
	0Dh	Request creation of a DT device error log

OEh	Retrieve a DT device error log
OFh	Modify the configuration to allow microcode update

## Device Statistics log page

This log provides information about the use of the tape device.

	7	6	5	4	3	2	1	0
0	DS (0)	SPF (O)		'	Page Co	de (14h)	,	
1		Subcode page (00h)						
2	(MSB)			D	1 41-			
3				rage	Length			(LSB)
4			Devi	ice Statistics l	og parameter (	(first)		
:		:						
m		Device Statistics log parameter (last)						

### Device Statistics log parameters

The supported log parameters include those shown below; more parameters are expected to be added as development progresses.

Parameter Code	Description	Length (bytes)	Туре
0000h	Lifetime volume loads	4	Counter
0001h	Lifetime cleaning operations	4	Counter
0002h	Lifetime power-on hours	4	Counter
0003h	Lifetime media motion (head) hours	4	Counter
0004h	Lifetime meters of tape processed	4	Counter
0005h	Lifetime medium motion (head) hours when an incompatible volume was last loaded	4	Counter
0006h	Lifetime power-on hours when the last temperature condition occurred (TapeAlert code 24h)	4	Counter
0007h	Lifetime power-on hours when the last power consumption condition occurred (TapeAlert code 1Ch)	4	Counter
0008h	Medium motion (head) hours since the last successful cleaning operation	4	Counter
0009h	Medium motion (head) hours since the second to last successful cleaning operation	4	Counter
000Ah	Medium motion (head) hours since the third to last successful cleaning operation	4	Counter
000Bh	Lifetime power-on hours when the last operator-initiated forced reset or emergency eject occurred	4	Counter
000Ch	Lifetime power cycles	4	Counter
000Dh	Volume loads since last parameter reset	4	Counter
000Eh	Hard write errors	4	Counter
000Fh	Hard read errors	4	Counter

Parameter Code	Description	Length (bytes)	Туре
0010h	Duty cycle sample time (time in milliseconds since last hard reset)	8	Counter
0011 h	Read duty cycle (percentage of duty cycle spent processing read-type commands)	2	Counter
0012h	Write duty cycle (percentage of duty cycle spent processing write-type commands)	2	Counter
0013h	Activity duty cycle (percentage of duty cycle spent processing commands that move the medium)	2	Counter
0014h	Volume not present duty cycle (percentage of duty cycle when there is no volume present)	2	Counter
0015h	Ready duty cycle (percentage of the duty cycle sample time when the drive is in the ready state)	2	Counter
0016h	MB transferred from the application client in the duty cycle sample time (MB=10 <sup>6</sup> bytes)	8	Counter
0017h	MB transferred to the application client in the duty cycle sample time (MB=10 <sup>6</sup> bytes)	8	Counter
0040h	Drive manufacturer's serial number	See Inquiry page B1h	String
0041h	Drive serial number	See Inquiry page 80h	String
0080h	Medium removal prevented	2	Counter
0081h	Max recommended mechanism temperature exceeded	2	Counter
1000h	Medium motion (head) hours for each medium type	48	Medium

# Device statistics data counter log parameter

Most of the log parameters are counters, and are formatted as follows:

	7	6	5	4	3	2	1	0	
0	(MSB)			D	Cl -			,	
1		-	Parameter Code (LSB)						
2	DU (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Lii					Linking (11b)		
3		Parameter Length (n-3)							
4–n	Device Statistics Data Counter								

## Device statistics medium type log parameter

	7	6	5	4	3	2	1	0
0	(MSB)			D	Caala			
1		Parameter Code (LSB)						
2	DU (0)	Obsolete (0)	TSD (0)	ETC (0)	TMG	C (O)	Format and	Linking (11 b)
3	Parameter Length (n-3)							
4–n	Device Statistics Medium Type Log Descriptors							

This log parameter will report six descriptors (one per supported density code/medium type combination) of the following format:

	7	6	5	4	3	2	1	0
0–1	Reserved (0)							
2	Density Code							
3	Medium Type							
4–7	Medium Motion Hours							

#### Device statistics string data log parameter

	7	6	5	4	3	2	1	0
0	(MSB)			Days	tau Caala			
1		Parameter Code (LSB)						
2	DU (0)	Obsolete (0)	TSD (0)	ETC (0)	TMC	C (O)	Format and	Linking (11 b)
3	Parameter Length (n-3)							
4-n		String Data						

## Service Buffers Information Log page

Two service buffers are supported by HP LTO-6 drives:

Parameter Code	Description
0000h	DT Device Error log
0003h	Health and Error log
other values	Reserved

## DT Device Error Log service buffer

The Error Log service buffer contains firmware trace logs that may be useful for the diagnosis of a drive failure. The parameter format is as follows:

	7	6	6 5 4 3 2 1 0							
0	(MSB)	MSB) Parameter Code (0000h)								
1				rarameter CC	de (0000n)			(LSB)		
2	DU (0)	Obsolete	Obsolete TSD (1) ETC (0) TMC (0) Format and Linking (11							
3		Parameter Length (18h)								
4		Buffer ID (41 h)								
5		Reserved (0)		TU	NMP (0)	NMM (0)	Offline (0)	PD (0)		
6		Reserv	ed (0)			Code S	et (01 h)			
7				Reserve	ed (0)					
8			Samilaa	Buffer Title ("[	OT Double Erre	or loo")				
27			Service	Duller Tifle ( L	Di Device Effe	or tog )				

TU	Temporar	ily Unavailable
	1	The service buffer identified by the contents of the Buffer ID field is temporarily unavailable for retrieval from the device server, either because the buffer has not been initialized or because it is in the process of being filled with log data.

#### Health and Error Log service buffer

The Health and Error Log service buffer contains information that may be useful for determining the overall health of the drive. I also contains firmware trace logs that may be useful for the diagnosis of a drive failure. The parameter format is as follows:

	7	7 6 5 4 3 2 1 0								
0	(MSB)	(MSB) Parameter Code (0003h)								
1				rarameter Co	de (0003n)			(LSB)		
2	DU (0)	(0) Obsolete TSD (1) ETC (0) TMC (0) Format and Linking (11								
3	Parameter Length (18h)									
4	Buffer ID (44h)									
5		Reserved (0) TU NMP (0) NMM (0) Offline (0) PD (0)								
6		Reserved (0) Code Set (01 h)								
7				Reserve	ed (0)					
8			Sorvice	e Buffer Title ("I	Hoalth & Erro	r   00")				
27			Service	e buller Tille (	riediiri & Effo	r tog j				

TU	As above.

### Tape Diagnostic log page

The Tape Diagnostic Data log page provides a number of error-event records using the list parameter format. Each error-event record contains diagnostic information for a single error type encountered by the device including data counters associated with the error event, sense data, operation code/service action, and medium type with associated media motion hours, and so on.

It only includes parameter entries for commands that terminated with CHECK CONDITION and a sense key of MEDIUM ERROR, HARDWARE ERROR or ABORTED COMMAND.

The parameter code value associated with an error-event indicates the relative time at which a command terminated with a CHECK CONDITION status. A lower parameter code indicates that the command terminated with CHECK CONDITION at a more recent time. The parameter code values returned are numbered consecutively from 0000h (the most recent) up to n, where n is the number of current parameter entries.

The number of supported parameter entries is 60; 30 non-volatile entries and 30 volatile entries.

	7	7 6 5 4 3 2 1 0								
0	DS (0) SPF (0) Page Code (16h)									
1	Subcode page (00h)									
2	(MSB)									
3		•	Page Length (n–3) (LSB)							
	Tape diagnostic data log parameters									

	7 6 5 4 3 2 1 0									
4	Tape Diagnostic Data log parameter (first)									
:	:									
n	Tape Diagnostic Data log parameter (last)									

## Each log parameter is formatted as follows:

	7	6	5	4	3	2	1	0
0	(MSB)			Paramete	or Codo			
1				raramete	:r Code			(LSB)
2	DU (0)	Obsolete	TSD (0)	ETC (0)	TMG	C (0)	Format & L	inking (11b)
3				Parameter Le	ength (44h)			
4–5				Reserve	ed (0)			
6				Density	Code			
7				Mediun	п Туре			
8–11		Lifetime Medium Motion Hours						
12		Reserved (0)						
13	Repeat	Repeat Reserved (0) Sense Key						
14				Additional S	ense Code			
15		Additional Sense Code Qualifier						
16		Deivo Feron C-d-						
19		Drive Error Code						
20				Product Rev	ision loval			
23				r roduci kev	ision tevel			
24				Hours Since	Last Cloan			
27				1 louis Silice	Lusi Cleuii			
28				Орс	ode			
29		Reserved (0)			Ç	Service Action		
30–31				Reserve	ed (0)			
32				Medium l	dontifier			
63				Medium	denimer			
64			Reserved (0)			Time	stamp Origin	ı (O)
65				Reserve	ed (0)			
66				Times	amp			
71				rimes	чпр			

the host.	<b>Drive Error Code</b> The short form (16-bit integer) drive error correspond the host.	ling to the failure reported to
-----------	--	---------------------------------

# Volume Statistics Log page

This log provides information about the use of the tape device.

	7	6 5 4 3 2 1							
0	DS (0)	(0) SPF (0) Page Code (17h)							
1	Subcode page (00h)								
2	(MSB)								
3		Page Length							
4	Volume Statistics log parameter (first)								
:		÷.							
m			Volu	me Statistics l	og parameter	(last)			

## Volume Statistics log parameters

The supported log parameters include those shown below; more parameters are expected to be added as development progresses.

Parameter Code	Description	Length (bytes)	Туре
0000h	Page valid	2	Counter
0001 h	Thread count	4	Counter
0002h	Total data sets written	8	Counter
0003h	Total write retries	4	Counter
0004h	Total unrecovered write errors	2	Counter
0005h	Total suspended writes	2	Counter
0006h	Total fatal suspended writes	2	Counter
0007h	Total datasets read	8	Counter
0008h	Total read retries	4	Counter
0009h	Total unrecovered read errors	2	Counter
000Ch	Last mount unrecovered write errors	2	Counter
000Dh	Last mount unrecovered read errors	2	Counter
000Eh	Last mount megabytes written	4	Counter
000Fh	Last mount megabytes read	4	Counter
0010h	Lifetime megabytes written	4	Counter
0011 h	Lifetime megabytes read	4	Counter
0012h	Last load write compression ratio	2	Counter
0013h	Last load read compression ratio	2	Counter
0014h	Medium mount time	8	Counter
0015h	Medium ready time	8	Counter
0016h	Total native capacity	4	Counter
0017h	Total used native capacity	4	Counter

Parameter Code	Description	Length (bytes)	Туре
0040h	Volume serial number	10	String
0041 h	Tape lot identifier	8	String
0042h	Volume barcode	32	String
0043h	Volume manufacturer	8	String
0044h	Volume license code	4	String
0045h	Volume personality	9	String
0046h	Volume manufacture date	8	String
0080h	Write protect	2	Counter
0081h	Volume is WORM	2	Counter
0082h	Maximum recommended tape path temperature exceeded	2	Counter
0101 h	Beginning of medium passes	4	Counter
0102h	Middle of medium passes	4	Counter
0200h	First encrypted logical object identifiers	12	Partition
0201h	First unencrypted logical object on the EOP side of the first encrypted logical object identifiers	12	Partition
0202h	Approximate native capacity of partitions	8	Partition
0203h	Approximate used native capacity of partitions	8	Partition
0300h	Mount history		Mount history
F000h	Version number (vendor-unique)	2	Counter

## Volume statistics data counter log parameter

Most of the log parameters are counters, and are formatted as follows:

	7	6 5 4 3 2 1 0								
0	(MSB)	Parameter Code								
1		(LSB)								
2	DU (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Linking (11b)								
3		Parameter Length (n-3)								
4–n		Volume Statistics Data Counter								

## Volume statistics partition record log parameter

	7	6	5	4	3	2	1	0				
0	(MSB)		Parameter Code									
1		(LSB)										
2	DU (0)	Obsolete (0) TSD (0) ETC (0) TMC (0) Format and Linking (11										
3	Parameter Length (n-3)											
4–n	Volume Statistics Partition Record Descriptors											

This log parameter will report one descriptor of the following format:

	7	6	5	4	3	2	1	0	
0	Partition Descriptor Length (n)								
1	Reserved (0)								
2–3	Partition Number								
4-n			Р	artition Recor	d Data Counte	er			

## Volume statistics string data log parameter

	7	6	5	4	3	2	1	0			
0	(MSB)			Daves	han Caala		,				
1		Parameter Code (LSB)									
2	DU (0)	Obsolete (0)	TSD (0)	ETC (0)	TMC	C (O)	Format and	Linking (11 b)			
3	Parameter Length ( <i>n</i> –3)										
4-n		String Data									

## Volume statistics mount history log parameter

	7	6	5	4	3	2	1	0				
0	(MSB)		Parameter Code									
1		(LSB)										
2	DU (0)	Obsolete (0)	TSD (0)	Format and	Linking (11 b)							
3	Parameter Length (n-3)											
4-n		Volume statistics mount history descriptors										

### Volume statistics mount history descriptor

	7	6	5	4	3	2	1	0			
0	Mount History Descriptor Length (n)										
1	Reserved (0)										
2											
3		Mount History lindex [03]									
4				Mat Llists	\/ d ID						
11				Mount Histo	ry Vendor ID						
12		Mount History Unit Serial Number									
n			MO	oni History U	nii Seriai INUM	bei					

# Protocol-Specific Port Log page (SAS drives only)

The basic structure of the page is as follows:

	7	6	5	4	3	2	1	0			
0	DS (0)	SPF (O)		Page Code (18h)							
1		Subpage Code (00h)									
2	(MSB)		D ( 701)								
3		_	Page Length (78h) (LSB)								
4			Dura		Law Dawanasta	- O					
63			FIC	лосог-эрестіс	Log Paramete	r U					
64		Protocol-Specific Log Parameter 1									
123			Pro	orocor-specific	Log raramete	r I					

## Protocol-specific log parameters

	7	6	5	4	3	2	1	0			
0	(MSB)				Davier atou Codo	[0 1]					
1					Parameter Code	[0,1]		(LSB)			
2	DU (0)	Obsolete (0)	TSD (0)	ETC (0)	TMC	C(O)	Format and Link	nd Linking (3h)			
3					Parameter Length	(38h)					
4		Reserve	ed (0)			Protocol Identif	ier (6h)				
5					Reserved (0	)					
6	Generation Code										
7	Number of Phys (1)										
8	Reserved (0)										
9	PHY Identifier [0,1]										
10					Reserved (0	)					
11				SAS	PHY Log Descriptor	Length (30h)					
12	Rsvd (0)	Attach	ed Device	Туре		Attached Re	ason				
13		Reaso	n (0)		Negotiated Physical Link Rate						
14		Reserve	ed (0)		Attached SSP Initiator Port	Attached STP Initiator Port	Attached SMP Initiator Port	Rsvd (0)			
15		Reserve	ed (0)		Attached SSP Target Port	Attached STP Target Port	Attached SMP Target Port	Rsvd (0)			
16	(MSB)				CAC A LL (O.L						
23		•			SAS Address (8 b	oyres)		(LSB)			
24	(MSB)			<b>A</b> 11	achod (VC V 141	o (0 butos)					
31		•	Attached SAS Address (8 bytes)  (LSB)								
32					Attached PHY Ide	entifier					

	7	6	5	4	3	2	1	0				
33–39		,			Reserved (0) (7	bytes)						
40	(MSB)			l	alid DMODD Caus	4 / 4 h4aa\						
43				inv	alid DWORD Cour	it (4 bytes)		(LSB)				
44	(MSB)		Running Disparity Error Count (4 bytes) —									
47												
48	(MSB)		Loss of DWORD Synchronization Count (4 bytes)									
51				LOSS OF DVV	OKD Synchronizati	on Count (4 bytes)		(LSB)				
52	(MSB)			DLIV	Danat Dualilana Cau							
55				гпі	Reset Problem Cou	nis (4 bytes)		(LSB)				
56–57					Reserved (0) (2	bytes)						
58	PHY Event Descriptor Length (0)											
59				Num	ber of PHY Event D	escriptors (0)						

Parameter Code	The relative port identifier
Generation Code	A one-byte counter that is incremented each time the values in either the PHY Control and Discover mode page or the Enhanced PHY Control mode page change. This counter wraps from FFh to 01h as a value of 00h means unknown. The counter is used to correlate PHY settings across mode and log pages.
PHY Identifier	The same value as the Parameter Code
Invalid DWORD Count	Number of invalid DWORDS received outside of PHY reset sequences.
Running Disparity Error Count	Number of DWORDS containing running disparity errors received outside the PHY reset sequences.
Loss of DWORD synchronization	Number of times the PHY restarted the link reset sequence because it lost DWORD synchronization.
PHY Reset Problem Count	Number of times the PHY did not obtain DWORD synchronization during the final SAS speed negotiation window.

**NOTE:** The counters are the only fields affected by a LOG SELECT command or the value of the PC field in the LOG SENSE command.

## Data Compression log page

The Data Compression log page code is 1Bh.

The supported parameters are listed below. This data relates to the most recently mounted volume, and is cleared at the start of tape load.

Parameter	Description
0000h	Read compression ratio
0001 h	Write compression ratio
0002h	Megabytes transferred to host
0003h	Bytes transferred to host
0004h	Megabytes read from tape

Parameter	Description
0005h	Bytes read from tape
0006h	Megabytes transferred from host
0007h	Bytes transferred from host
0008h	Megabytes written to tape
0009h	Bytes written to tape
0010h	Dara compression enabled

The format of a data compression counter log parameter is as follows:

	7	6	5	4	3	2	1	0			
0	Parameter Code										
1	rarameter Code										
4	DU (0) Obsolete TSD (0) ETC (0) TMC (0) Format & Linking (11 b)							inking (11b)			
63				Parameter	Length ( <i>n</i> –3)						
4											
n				Daia Compre	ession Counter						

## TapeAlert log page

**NOTE:** Reading the TapeAlert log clears the flags, as stipulated in the TapeAlert specification.

The TapeAlert log page is page 2Eh. There are 64 parameters numbered from 1 through 64. Only parameters 1 through 18, 20 through 23, 29 through 39 and 55 have definitions for tape drives without attached loaders. The remaining parameters are always zero.

The Parameter Control Byte value for each parameter is 40h.

All parameters are one byte long. Each parameter is either zero to indicate the corresponding condition has not occurred or one to indicate that the corresponding condition has occurred. All log parameters are cleared when the log is read. The Log is also cleared at power on, on a reset condition and by a LOG SELECT command. Specific flags may be cleared when corrective action has removed the condition that caused the flag to be set.

The supported parameters are as follows. The Set column indicates if the flag can be set by drives. The other flags are supported but never set.

Parameter	Description	Туре	Set
1	Read Warning	Warning	Yes
2	Write Warning	Warning	Yes
3	Hard Error	Warning	Yes
4	Medium	Critical	Yes
5	Read Failure	Critical	Yes
6	Write Failure	Critical	Yes
7	Medium Life	Warning	Yes
9	Write-Protect	Critical	Yes

Parameter	Description	Туре	Set
10	Volume Removal Prevented	Information	Yes
11	Cleaning Volume	Information	Yes
12	Unsupported Format	Information	Yes
13	Recoverable Mechanical Cartridge Failure	Critical	Yes
14	Unrecoverable Mechanical Cartridge Failure	Critical	Yes
15	Memory Chip in Cartridge Failure	Warning	Yes
16	Forced Eject	Critical	Yes
17	Read-Only Format	Warning	Yes
18	Tape Directory Corrupted on Load	Warning	Yes
19	Nearing Medium Life	Information	Yes
20	Cleaning Required	Critical	Yes
21	Cleaning Requested	Warning	Yes
22	Expired Cleaning Volume	Critical	Yes
23	Invalid Cleaning Volume	Critical	Yes
24	Retension Requested	Warning	
25	Multi-port Interface Error on Primary Port	Warning	
26	Cooling Fan Failure	Warning	
27	Power Supply Failure	Warning	
28	Power Consumption	Warning	
29	Drive Preventative Maintenance Required	Warning	
30	Hardware A	Critical	Yes
31	Hardware B	Critical	Yes
32	Primary Interface	Warning	Yes
33	Eject Media	Critical	Yes
34	Microcode Update Failure	Warning	Yes
35	Drive Humidity	Warning	
36	Drive Temperature	Warning	Yes
37	Drive Voltage	Warning	Yes
38	Predictive Failure	Critical	Yes
39	Diagnostics Required	Warning	
49	Diminished Native Capacity	Information	Yes
50	Lost Statistics	Warning	Yes
51	Tape Directory Invalid at Unload	Warning	Yes
52	Tape System Area Write Failure	Critical	
53	Tape System Area Read Failure	Critical	
54	No Start of Data	Critical	
55	Loading or Threading Failure	Critical	Yes

Parameter	Description	Туре	Set
56	Unrecoverable Unload Failure	Critical	Yes
57	Automation Interface Failure	Critical	
58	Microcode Failure	Warning	Yes
59	WORM Medium — Integrity Check Failed	Warning	Yes
60	WORM Medium — Overwrite Attempted	Warning	Yes

### Tape Usage log page

The Tape Usage log page code is 30h. There are nine parameters. These are all read directly from the LTO-CM Tape Usage Log.

This data relates to the current tape and can be neither reset nor written.

Parm.	Description	Length	Updated When
1	Thread Count	4	Tape threaded
2	Total Data Sets Written	8	Data set physically written
3	Total Write Retries	4	Data set physically written
4	Total Unrecovered Write Errors	2	Data set physically written
5	Total Suspended Writes	2	Data set physically written
6	Total Fatal Suspended Writes	2	Data set physically written
7	Total Data Sets Read	8	Data set physically written
8	Total Read Retries	4	Data set physically written
9	Total Unrecovered Read Errors	2	Data set physically written

## Tape Capacity log page

The Tape Capacity log page code is 31 h. The Page Length is 20h. There are eight parameters, 1 through 8, each 4 bytes long. They relate to the current tape. All parameters are in megabytes (1,048,576 bytes) and assume no compression. The data can neither be reset nor written with LOG SELECT.

The supported parameters are as follows:

Parm.	Description	Control Byte	Length	Updated When
1	Partition 0 Remaining Capacity	60h	4	Data set physically written
2	Partition 1 Remaining Capacity	60h	4	Data set physically written
3	Partition 0 Maximum Capacity	60h	4	SET CAPACITY executes successfully. The tape is formatted.
4	Partition 1 Maximum Capacity	60h	4	SET CAPACITY executes successfully. The tape is formatted.
5	Partition 2 Remaining Capacity	60h	4	Data set physically written
6	Partition 3 Remaining Capacity	60h	4	Data set physically written
7	Partition 2Maximum Capacity	60h	4	SET CAPACITY executes successfully. The tape is formatted.
8	Partition 3 Maximum Capacity	60h	4	SET CAPACITY executes successfully. The tape is formatted.

## Data Compression (HP-only) log page

The Data Compression (HP-only) log page code is 32h and the page length is 4Ch. There are ten parameters, 0 through 9. Parameters 0 and 1 are two bytes long. Parameters 2 through 9 are each 4 bytes long.

The supported fields are listed below. Parameters 2 through 9 occur as pairs that represent a large number of bytes transferred. The first four-byte parameter represents the number of whole megabytes transferred, rounded to the nearest megabyte. The second four-byte parameter represents the difference between this number of megabytes and the actual number of bytes. This may be a signed quantity.

This data relates to the current tape and is cleared at the start of tape load. It may not be written.

Parameter	Description	Length	Updated When
0	Read compression ratio x100	2	Data set logically read
1	Write compression ratio x100	2	Data set logically written
2	Megabytes transferred to host	4	Data set logically read
3	Bytes transferred to host	4	Data set logically read
4	Megabytes read from tape	4	Data set logically read
5	Bytes read from tape	4	Data set logically read
6	Megabytes transferred from host	4	Data set logically written
7	Bytes transferred from host	4	Data set logically written
8	Megabytes written to tape	4	Data set logically written
9	Bytes written to tape	4	Data set logically written

### Device Wellness Log page

The Device Wellness Log page has page code 33h and consists of a FIFO parameter code list of the last 16 drive error conditions caused by various sense keys.

However, to enable connectivity to the peripheral management tools only, the page structure has been implemented, but all parameter values returned by the drive will be zero.

	7	6	5	4	3	2	1	0
0		Page Code (33h)						
1				Reserv	ed (0)			
2	(MSB)		B ( ) (01001)					
3		Parameter Code (0100h) (LSB)					(LSB)	
4+(16 <i>n</i> )		Parameter Code <i>n</i> ( <i>n</i> = 0 through 15)						
5+(16 <i>n</i> )			raran	leter Code n	(n = 0  through	gn 13)		
6+(16 <i>n</i> )	DU (0)	DS (1)	TSD (1)	ETC (0)	TM	C (0)	LBIN (0)	LP (1)
7+(16 <i>n</i> )				Reserv	ed (0)			
8+(16 <i>n</i> )	(MSB)			Time C	'tama			
11+(16 <i>n</i> )		Time Stamp (LSB)					(LSB)	
12+(16n)	(MSB)	- Media Signature						
15+(16 <i>n</i> )		-		media 3	ignature			(LSB)

	7	6	5	4	3	2	1	0
16+(16 <i>n</i> )	Sense Key							
17+(16 <i>n</i> )	Additional Sense Code							
18+(16 <i>n</i> )	Additional Sense Qualifier							
19+(16 <i>n</i> )	Additional Error Information							

## Performance Data log page

The Performance Data log page is 34h. This log is intended to report data of interest to a user/application on how efficiently the drive is being used.

Parameter	Description	Length	Updated
0	Repositions per 100 MB	2	After each 100 MB has been physically written
1	Data rate into buffer	2	After each data set has been logically written
2	Maximum data rate	2	After each data set has been logically written
3	Current data rate	2	After each data set has been logically written
4	Native data rate	2	When the tape is loaded or unloaded

The Parameter Control Byte is 60h for all the parameters.

All the parameters relate to the current tape. They are all cleared at the start of tape load, except Parameter 4, which is never cleared. All data will be reset when the log page is reset. The parameters are as follows.

Repositions per 100 MB	Number of tape direction changes per 100 MB written. The higher the figure the more wear occurs.					
Data rate into buffer	Rate at which data is e This is the true 'tape' do		er (after data compression), given in units of 100 KB/s.			
Maximum data rate	Given the compressibility of the data that has been sent to the drive, this is the maximum data rate that could be achieved, given in units of 100 KB/s. The figure is calculated based on the compressibility of each dataset received, and datasets that have a compressibility greater than the compression bandwidth of the drive will be 'capped'.					
Current data rate	Rate at which data is b 100 KB/s.	Rate at which data is being accepted by the drive <i>before</i> compression, given in units of 100 KB/s.				
Native data rate	The native rate (that is, in units of 100 KB/s:	without using c	ompression) at which the drive writes data to tape, given			
	Drive	Value	Native Data Rate			
	LTO-4	4B0h	120 MB/s			
	LTO-5 578h 140 MB/s					
	LTO-6 or no tape loaded	640h	160 MB/s			

# DT Device Error log page

The DT Device Error log page defines log information relatning to hardware and media errors reported by the DT Device via the drive's front panel, where applicable, and/or the Interface Manager VHF data fields HARDWARE ERROR and MEDIA ERROR.

	7	6	5	4	3	2	1	0
0	DS (0)	SPF (O)	Page Code (35h)					
1	Subpage Code (00h)							
2	(MSB)		D 1 4 ( 21)					
3		_	Page Length (n-3h) (LSB)					
4								
n		DT Device Error Log Parameters						

DT Device Error Log Parameters	Code	Description
	0000h	Hardware Error data (see below)
	0001 h	Media Error data
	0002h-7FFFh	Reserved
	8000h–FFFFh	Vendor-specific

## Hardware Error data log parameter

	7	6	5	4	3	2	1	0			
0	(MSB)		Parameter Code (0000h)								
1		-	Parameter Code (0000h) (LS								
2	DU (0)	Obsolete	TSD (0)	ETC (0)	TMC	(O)	Format & L	inking (11b)			
3				Parameter	Length (16h)						
4		Reserve	ed (0)			Sens	se Key				
5				Additional	Sense Code						
6			Ad	ditional Sen	se Code Qua	lifier					
7	(MSB)			11 1	F						
8		-		Haraw	rare Error			(LSB)			
9	(MSB)				fr						
16		-		Host Ide	entification			(LSB)			
17	(MSB)			D	<b>C</b> .						
18		-		Power-	on Count			(LSB)			
19	(MSB)			D .	T: (F						
22		-	Power-on Time of Error (LS								
23	(MSB)			1:h T	[ F						
25		-		Library I	ime of Error			(LSB)			

Hardware Error		hardware error reported by the drive. Set to zero if no hardware error n reported.				
Host Identification	that resu	The NAA-format World Wide Name of the host that initiated the command hat resulted in the hardware error, if known to the DT Device. If the DT Device does not know the host identification, the field is treated as reserved.				
Power-on Count	The num	he number of times the drive has been powered on before the hardware error occurred.				
Power-on Time of Error		th of time (in seconds) the DT Device had been powered on when the e error occurred.				
Library Time of Error	and seco	the hardware error occurred. The time is expressed in hours, minutes onds using the Library Time, which may be set using the Device Time age (3Ch).				
	Byte 0 Hours					
	Byte 1 Minutes					
	Byte 2 Seconds					

# Device Status log page

The Device Status log page is 3Eh, with a page length of 28h. There are five supported parameters, all of which are four bytes long. In the table, PCB = Parameter Control Byte.

Parameter	Name	Description	PCB
0	Device Type	Obsolete. Set to all zeros.	40h
1	Device Status Bits	Used to provide remote status of selected monitoring points on the drive. See below for the format.	40h
2	Total Number of Loads	Number of loads/unloads over the life of the device.	60h
3	Cleaning Cartridge Status	Accumulated number of uses of the <i>last</i> cleaning cartridge. Updated after the tape is loaded and a cleaning event attempted. If there is no value, FFFFFFFF is returned.	40h
4	Product Number	Unique number that identifies the product	40h

#### **Device Status Bits**

The parameter has the following format:

	7	6	5	4	3	2	1	0
0			Reserved (0)	,		CRQ	CR	ECT
1		Reserv	red (0)		Тетре	rature	Device	Status
2				Mediun	n Status			
5	Reserved (0)							

CRQ	Cleaning R	Cleaning Required flag					
CR	Cleaning R	eaning Requested flag					
ECT	Exhausted	khausted Cleaning Tape flag					
Temperature	00b	00b Field not supported					

	01 b	Temperature OK					
	10b	Temperature degraded					
	11 b	Temperature failed					
Device Status	The overall	status of the drive:					
	00b	Field not supported					
	01b	Device status OK					
	10b	Device status degraded					
	11 b	Device status failed					
Medium	The overall	status of the tape cartridge:					
Status	00b	Field not supported					
	01b	Medium status OK					
	10b	Medium status degraded					
	11 b	Medium status failed					
Product		Product	Product Number				
Number	נז	O-6 full-height FC standalone	0109022Ch				
	LT	O-6 full-height FC automation	0109022Dh				
	LTC	O-6 full-height SAS standalone	0109022Eh				
	LTC	O-6 full-height SAS automation	0109022Fh				
	LT	O-6 half-height FC standalone	01090230h				
	LTO	O-6 half-height FC automation	01090231 h				
	LTC	D-6 half-height SAS standalone	01090232h				
	LTC	D-6 half-height SAS automation	01090233h				

## Triggers for changes in the Device Status and Medium Status fields

The following table summarizes the triggers that cause the Device Status and Medium Status fields to be set to different values:

Event	Fault Drive	Fault Drive Unrecoverable	Fault Tape	Fault Tape Unrecoverable	Device Status	Medium Status
Power-on self-test failure	1	1	0	0	Failed	Good
Mechanism interface hardware error	1	0	0	0	Degraded	Good
Snapped tape	0	0	1	0	Good	Degraded
Unrecoverable snapped tape	1	1	1	1	Failed	Failed
Load failure for drive error with MediaFault bit set in error code	0	0	1	0	Good	Degraded
Load failure for drive error with DriveFault bit set in error code	1	0	0	0	Degraded	Good
Unrecoverable unload failure	0	1	0	0	Failed	Good
Unload failure error with MediaFault bit set in error code	0	0	1	0	Good	Degraded
Unload failure error with DriveFault bit set in error code	1	0	0	0	Degraded	Good

Event	Fault Drive	Fault Drive Unrecoverable	Fault Tape	Fault Tape Unrecoverable	Device Status	Medium Status
Read, write or search tape error	0	0	1	0	Good	Degraded
Read, write or search drive error	1	0	0	0	Degraded	Good
Cleaning tape error	0	0	1	0	Good	Degraded
Cleaning drive error	1	0	0	0	Degraded	
Cleaning tape expired	0	0	1	0	Good	Degraded
Mechanism failure	1	0	0	0	Degraded	
Cartridge Memory read/write failure	0	0	1	0	Good	Degraded
Firmware upgrade via tape with checksum or incompatible image	0	0	1	0	Good	Degraded
Load failure due to unsupported format	0	0	1	0	Good	Degraded
Load failure with invalid cleaning media	0	0	1	0	Good	Degraded
Rewind failure for drive error with the MediaFault bit set	0	0	1	0	Good	Degraded
Rewind failure for drive error with the DriveFault bit set	1	0	0	0	Degraded	Good
Media life expired	0	0	1	0	Good	Degraded
Media EOD invalid	0	0	1	0	Good	Degraded

## MANAGEMENT ARM SELF-TEST A3h (1Fh)

The MANAGEMENT ARM SELF-TEST command allows an application client to initiate a specific Management ARM self-test.

**NOTE:** Executing this command requires the Network Interface to be re-initialized to return it to an operational state.

#### **Pre-execution checks**

Illegal Field Reservation Deferred Error Unit Attention

A valid Test ID must be provided, otherwise the device server terminates the command with CHECK CONDITION, a sense key of HARDWARE ERROR and additional sense of 4400h (internal target failure), and reports drive error 1879h.

#### Command descriptor block

	7	6	5	4	3	2	1	0
0	Operation Code (A3h)							
1	Ignored Service Action (1Fh)							
2	Service Action Qualifier (14h)							
3	Test ID							

	7	6	5	4	3	2	1	0			
4	Reserved (0)										
8				Keserv	ed (U)						
9		Allocation Length									
10		Reserved (0)									
11				Cor	ntrol						

#### **CDB** fields

Test ID	the com	TESTID must be provided. If an invalid TESTID is specified the device server will terminate mand with CHECK CONDITION, a sense key of HARDWARE ERROR, additional sense 4400h (internal target failure), and report drive error 1879h.
	00h	All tests
	01 h	Test FB1
	02h	Test FB2
	03h	Test FB3
	04h	Test FB4
	05h	MAC reg1
	06h	MAC reg2
	07h	MAC reg3
	08h	PHY reg1
	09h	PHY reg2
	0Ah	PHY reg3
	OBh	VIC
	0Ch	Timer
	ODh	DRAM
	OEh	Tracepoint
	OFh	RTC
Allocation Length		of the parameter data. The actual number of bytes returned will esser of the length of the actual parameter list and the allocation length specified in the and.

# MANAGEMENT ARM SELF-TEST returned data

The command returns 1 byte of result data during the data-out phase to indicate test completion status:

	7	6	5	4	3	2	1	0
0				Completi	on Status			

Completion Status	0Ah	Success
	OBh	Failure

## MODE SELECT 15h/55h

MODE SELECT is used to send configuration data to the drive. Both 6-byte and 10-byte versions of the command are supported.

The Mode Select parameter list is transferred from the host to the drive during the data-out phase. It contains zero or more bytes of information. If any information is sent, it should consist of a Mode Parameter Header followed by zero or more mode select pages. Internal parameters are set according to the values specified in the header and pages. Fields in the parameter list are checked and the operation will terminate if an error is found.

**NOTE:** The drive does not check that the parameter list is correct before modifying internal parameters. The list is checked as the operation proceeds, so if there is an error in the list, all parameters up to that point will be set to their new values, but the parameter in error and later parameters will not be updated.

#### **Pre-execution checks**

Illegal Field Reservation Deferred Error Unit Attention

NOTE: Failure to flush write-behind data will be reported as a Deferred Error.

The parameter list length must be such that only "entire" parts of a parameter list are sent. It is illegal to send a partial mode parameter header, a partial mode block descriptor or a partial mode page. If this happens, then CHECK CONDITION status is reported. The sense key is set to ILLEGAL REQUEST. The additional sense is set to 1A00h (parameter list length error).

Extra checks may be performed on the data, see the descriptions for the parameter list for more details.

#### Command descriptor block (6-byte version)

	7	6	5	4	3	2	1	0	
0		Operation Code (15h)							
1		Reserved (0)		PF	Reserved (O) SP (O)				
2–3				Reser	ved (0)				
4	Parameter List Length								
5	Control								

#### Command descriptor block (10-byte version)

	7	6	5	4	3	2	1	0
0		Operation Code (55h)						
1		Reserved (0)	Reserved (0) PF Reserved (0) SP (0					
2–6		Reserved (0)						
7	(MSB)							
8		-	Parameter List Length (LSB)					
9		Control						

#### **CDB** fields

PF	Page Fo	ormat					
	0	The MODE SELECT parameter data is not SCSI-2 mode page compatible. Only the parameter header and block descriptor may be sent.					
	1	1 The parameter data is SCSI-2 mode-page compatible.					
SP	Save Pa	nges					
	0	This bit is not supported and must be zero.					
Parameter List Length	0	No data is transferred.					
	>0	The length in bytes of the MODE SELECT parameter list to be transferred.					

### MODE SELECT specific status

Following a successful Mode Select command, Unit Attention status is posted to all initiators other than the initiator of the Mode Select command. The sense key is set to UNIT ATTENTION. Additional sense is set to 2A01h (mode parameters changed).

### Mode parameter pages

Mode data is recovered from the drive by means of a MODE SENSE command. After modification, it is returned to the drive via a MODE SELECT command. In real-life, many hosts do not use MODE SENSE and return whatever MODE SELECT data suits them into the drive.

#### Mode page representation

Certain conventions are used in the following Mode Parameter pages in order to describe the nature of the parameters. Most parameters are given by name, followed by a number in brackets. The brackets have the following meanings:

Square brackets [ ]	Square brackets indicate that the parameter may be modified. The number inside
Square brackers [ ]	the brackets is the default value for the field—in other words, the power-up or reset value.
	MODE SELECT may modify this value by sending the page with a new value in the field.
	MODE SENSE (current values) will return the current value of the parameter.
	MODE SENSE (default values) will return the value in brackets [].
	MODE SENSE (changeable values) will return a value of all ones.
Round brackets ( )	Round brackets indicate that the parameter is fixed. The number inside the brackets is the fixed value for the field.
	MODE SELECT must set the parameter to this value, otherwise CHECK CONDITION will be reported with a sense key of ILLEGAL REQUEST.
	MODE SENSE (default values) will return the fixed value.
	MODE SENSE (changeable values) will return a value of all zeros.

#### Mode data format

Mode data consists of a 4-byte header, optionally followed by block descriptor and Mode Parameter pages:

	7	6	5	4	3	2	1	0
1	(MSB)		Mode Parameter Header					
3				Mode rarar	neier neader			(LSB)

	7	6	5	4	3	2	1	0
4	(MSB)	,		A A  - D	l. D		,	
11			Mode Block Descriptor (LSB)					
12	(MSB)			Mada Para	motor Pages			
n				Mode rard	meter Pages			(LSB)

#### Mode parameter pages

HP LTO Ultrium drives support the following mode pages:

- 01h "Read-Write Error Recovery mode page" (page 101)
- 02h "Disconnect-Reconnect page" (page 102)
- OAh "Control mode page" (page 103)
- OFh "Data Compression Characteristics page" (page 105)
- 10h "Device Configuration page" (page 105)
- 11h "Medium Partitions mode page" (page 108)
- 18h "Fibre Channel Logical Unit Control mode page" (page 112)
- 18h "SAS Logical Unit Control mode page" (page 112)
- 19h FC drives: "Fibre Channel Port Control mode page" (page 113)
- 19h SAS drives: "SAS Port Control mode page" (page 114)
- 1Ah "Power Condition mode page" (page 119)
- 1Ch "Information Exceptions Control mode page" (page 119)
- 1Dh "Medium Configuration mode page" (page 121)
- 3Bh "Serial Number Override vendor-unique mode page" (page 121)
- 3Ch "Device Time mode page" (page 122)
- 3Dh "Extended Reset vendor-unique mode page" (page 124)
- 3Eh OBDR FW variants only: "CD-ROM Emulation mode page" (page 124)
- Return all pages (page 3Fh) for MODE SENSE only

#### Mode parameter header

The Mode Parameter header must always be sent at the start of Mode Select data. It is always returned at the start of Mode Sense data.

#### 6-byte header

The 6-byte Mode Parameter header has the following format:

	7	6	5	4	3	2	1 0			
0		Mode Data Length								
1		Medium Type [00h or 01h if WORM media is loaded or 80h if in CD-ROM mode]								
2	WP	WP Buffered Mode [001b] Speed (0)								
3		Block Descriptor Length								

## 10-byte header

The 10-byte Mode Parameter header has the following format:

	7	6	5	4	3	2	1	0	
0	(MSB)								
1			Mode Data Length (LSB)						
2	Medi	Medium Type [00h or 01h if WORM media is loaded (FC drives) or 80h if in CD-ROM mode]							
3	WP	Buffe	red Mode [0	01b]		Spe	ed (0)		
4–5				Reserv	red (0)				
6	(MSB)								
7			Block Descriptor Length (LSB)						

### **Header fields**

Mode Data Length	MODE S	SELECT:	Mode Data Length field must be zero.			
	MODE S	SENSE:	Mode Data Length field is set to the number of bytes of data available to return excluding itself (in other words, the number of actual bytes available is mode data length + 1 for 6-byte MODE SENSE or +2 for 10-byte MODE SENSE).			
		Note: The actual amount returned may be truncated to tallocation length for the command.				
Medium Type	00h	The usual med	ium type when the drive is in normal tape drive mode.			
	01 h	WORM medic	ı is loaded.			
	80h	The tape drive	is in CD-ROM emulation mode for OBDR.			
WP	Write Pr	otect. Ignored fo	or MODE SELECT.			
	0	MODE SENSE	: The tape is write-enabled			
	1	MODE SENSE	: The tape is write-protected			
Buffered Mode	0	The drive will not report GOOD status on Write and Write Filemarks command until all data (blocks and filemarks) has been successfully written to tape.				
	1	soon as all the to the data but buffered. This field is set to 1 method of flush	report GOOD status for Write and Write Filemarks commands as a data or marks specified in the command have been transferred ffer. Data for multiple commands from different initiators may be is the default value. NOTE: It is strongly recommended that this , otherwise there will be significant performance penalties. A ning the buffer to tape without changing logical position is available Filemarks command.			
	2	soon as all the to the data but	report GOOD status for Write and Write Filemarks commands as a data or marks specified in the command have been transferred ffer and all buffered data from different initiators has been ritten to the tape.			
Speed	0	The Speed field is not used and should be zero.				
Block Descriptor Length		e values 0 and 8 are valid. Any value other than 0 or 8, CHECK CONDITION reported. See the Parameter List check for details of the sense data generated.				
	0	No block desc	riptor is being transferred.			
	8		ameter header must be followed by the 8-byte block descriptor ne next section.			

## Mode block descriptor

The format of the Mode Parameter block descriptor is as follows:

	7	6	5	4	3	2	1	0
0		Density Code						
1	(MSB)			N I la	[ D]l - (O)			
3			Number of Blocks (0) (LSB)					
4			Reserved (0)					
5	(MSB)		Block Length [O or 800h]					
7		•		block Length	[O or 800n]			(LSB)

## Mode Parameter block descriptor fields

Density Code		ifies the format of the media loaded in the drive. See "REPORT DENSITY SUPPORT 44h" (1) for details.					
Block Length		is indicates the size of fixed blocks for fixed mode Read and Write commands. It is also used in edecision process on whether to report an illegal length record on reads.					
	0	O The drive is in variable block size mode.					
	>0	The drive is in fixed block size mode, and this field specifies the block size. If the drive is in CD-ROM mode, the value will be 0800h.					

# Read-Write Error Recovery mode page

The Read-Write Error Recovery mode page has the following format:

	7	6	5	4	3	2	1	0
0	PS (O)	Rsvd (0)			Page Co	de {01 h}		
1	Additional Page Length {OAh}							
2	Reserve	Reserved (0)		Res (0)	EER (1)	PER [O]	DTE (0)	DCR (0)
3				Read Re	etry Count			
4–7				Reser	ved (0)			
8	Write Retry Count							
9–11	Reserved (0)							

## Read-Write Error Recovery page fields

ТВ	Transfer	Block				
	0	Always set to 0, meaning that an unrecoverable data block will not be transferred to the host.				
EER	Enable Early Recovery					
	1	The drive should attempt error correction before performing retries.				
PER	Post Erro PER=0.	r. Although this bit is changeable, the drive's internal behavior always corresponds to				
	0	The drive does not report CHECK CONDITION for recovered errors. The DTE bit must also be zero.				

	_	TI I CUECU COMPITION I				
	1	ne drive reports CHECK CONDITION for recovered errors.				
DTE	Disable	Transfer on Error				
	0	Always set to 0, meaning that the drive will not terminate the transfer for errors recovered within the limits established by the read-write error parameters.				
DCR	Disable	Correction				
	0	Always set to 0, meaning that the use of error correction codes for error recovery is allowed.				
Read Retry Count		The number of times the drive will attempt its recovery algorithm during a read operation before reporting an unrecoverable error.				
	0	The drive will not use its recovery algorithm during read operations.				
	15h	The drive will attempt 21 retries.				
Write Retry Count	The num	ber of times the drive will attempt its recovery algorithm during a write operation before g an unrecoverable error.				
	0	The drive will not use its recovery algorithm during write operations.				
	0Ah	The value for all LTO Ultrium drives, giving 10 retries.				

# Disconnect-Reconnect page

The Disconnect-Reconnect page has the following format:

	7	6	5	0						
0	PS (O)	Rsvd (0) Page Code {02h}								
1		Additional Page Length {OEh}								
2				Buffer Fu	ll Ratio (0)					
3				Buffer Emp	oty Ratio (0)					
4	(MSB)		D. J. W. W. W. (2)							
5			Bus Inactivity Limit (0)							
6	(MSB)		Disconnect Time Limit [0]							
7				Disconnect	ime timir [O]			(LSB)		
8	(MSB)			Cammand Ti	l::t (O)					
9				Connect Ti	ne Limit (O)			(LSB)		
10	(MSB)			A A : D	[0]					
11			Maximum Burst Size [0]							
12	EMDP (0)	Fair	Fair Arbitration (0) DIMM (0) DTDC (0)							
13–15		Reserved (0)								

## Disconnect-Reconnect page fields

Buffer Full/Empty Ratio	0	Buffer management is controlled by the drive, so these should always be zero.
Bus Inactivity Limit	0	This parameter is not supported and should be zero.
Disconnect/ Connect Time Limit	0	This parameter is not supported and should be zero.

Maximum Burst Size	>0	The maximum amount of data that the target port will transfer during a single data transfer operation, in units of 512 bytes. For FC, the maximum burst size is 4096 blocks, which gives a maximum burst of 2 MB.
		The drive may send bursts of any size. This is the default value.
	For max	imum performance, it is recommended that the value is left at the default of zero.

# Control mode page

The Control mode page is defined as follows:

	7	6	5	4	3	2	1	0		
0	PS (O)	SPF (0) Page Code (0Ah)								
1		Page Length {OAh}								
2		TST		TMF_ONLY (0)	Rsvd (0)	D_SENSE	GLTSD(0)	RLEC (0)		
3	Queue Algorithm Modifier (0)				Rsvd (0)	QErr	(0)	Obsolete		
4	Rsvd (0)	RAC (0)	AC (0) UA Interlock Cntrl (0)				Obsolete			
5	ATO (0)	TAS (1)		Reserved (0)		Αι	itoload Mode	•		
6–7				Obs	solete					
8	(MSB)			D Ti	4 Davia d (O)					
9			Busy Timeout Period (0)  (LSB)							
10	(MSB)			Extended Self-Test (	Completion Tim	· (O)				
11				Exterided Sell-Test C	completion fill	le (U)		(LSB)		

# Control mode page fields

D_SENSE	0	Fixed format sense data will be returned in the auto-sense sense data.				
	1	Descriptor format sense data will be returned in auto-sense sense data.				
TST	1	e Task Set Type.				
Autoload Mode	0	If a cartridge is inserted, the drive pulls it in and threads the tape so that primary access is allowed.				
	1 or 2	When a cartridge is inserted, the drive pulls it in but does <i>not</i> thread the tape. In this position, only the Cartridge Memory is accessible.				
	All other vo	alues are invalid.				

## Control Extension sub-page

	7	6	5	4	3	2	1	0		
0	PS (O)	SPF (1)		Page Code (OAh)						
1	Sub-page Code (01h)									
2	(MSB)									
3		•	Page Length (1Ch) (LSB)							
4	Reserved (O)					TCMOS	SCSIP	IALUAE (1)		

	7	6	5	4	3	2	1	0	
5		Reserv	red (0)		Initial Priority (0)				
6–31		Reserved (0)							

TCMOS	Timestam	p Changeable by Methods Outside T10 Standards
	0	The timestamp cannot be changed by the Device Time Mode Page (3Ch).
	1	The timestamp may be initialized using the Device Time Mode Page.
SCSIP	SCSI Prec	redence
	0	The Device Time Mode Page (3Ch) can change the timestamp and the SET TIMESTAMP command is illegal.
	1	A timestamp changed using a SET TIMESTAMP command takes precedence over the Device Time Mode Page.
IALUAE	Implicit A	symmetric Logical Unit Access Enabled

# Control Data Protection sub-page

	7	6	5	4	3	2	1	0		
0	PS (O)	SPF (1)		Page Code (OAh)						
1		Sub-page Code (F0h)								
2	(MSB)		Page Length (O4h)							
3		•		rage Ler	igtn (U4n)			(LSB)		
4			Lo	gical Block Pı	rotection Metho	od				
5	Reserve	ed (0)		Logical	Block Protection	on Informatio	n Length			
	LBP_W	LBP_R	RBDP (0) Reserved (0)							
6	Reserved (0)									

Logical Block	0	O Logical block protection is disabled, and LBP_W and LBP_R must be set to 0.						
Protection Method	1	Logical block protection (Reed-Solomon CRC) is enabled.						
Logical Block Protection Information Length	If Logical	If Logical Block Protection Method is set to 1, this field must be set to 4.						
LBP_W	Logical Block Protected during Write							
	0	Protection information is not included with logical blocks transferred when writing.						
	1	Protection information is included with logical blocks transferred during WRITE commands.						
LBP_R		ock Protected during Read. This bit is also used to enable Logical Block Protection checks RIFY command, though no data is transferred in this case.						
	0	Protection information is not included with logical blocks transferred when reading.						
	1	Protection information is included with logical blocks transferred during READ commands.						

## Data Compression mode page

The Data Compression mode page is defined as follows:

	7	6	5	4	3	2	1	0			
0		Page Code {OFh}									
1		Page Length {OEh}									
2	DCE [1]	DCC (1)			Reserv	red (0)					
3	DDE (1)	RED (0)			Reserv	red (0)					
4	(MSB)			C	. Alasa sida sa (1)						
7		-		Compression	Algorithm (1)			(LSB)			
8	(MSB)		1	Di-	Alana with (1	1					
11		-		Decompression	on Algorithm (1	)		(LSB)			
12		Reserved (0)									
15				keser	vea (U)						

## Data Compression mode page fields

DCE	Data Compression Enable. This bit controls whether the drive uses compression when writing. The value has no meaning when reading, that is, if the tape contains compressed data, decompression will occur regardless of the setting of this bit. The bit is analogous to the Select Data Compression Algorithm field on the Device Configuration mode page (see "Changeable parameters" (page 106)).
	O Compression is disabled Compression is enabled
DCC	Data Compression Capable: Read only. It will have the value of 1, indicating that compression is supported.
DDE	Data Decompression Enable: Read only. It will have the value of 1, indicating that compression is enabled.
RED	Report Exception on Decompression: Read only. It will have the value 0, meaning that the drive returns CHECK CONDITION status when it encounters data that cannot be decompressed. This applies when data has been compressed with an unknown or unsupported compression algorithm.
Compression Algorithm	This indicates which compression algorithm will be used to process data from the host when the DCE bit is set to one. If the host selects an algorithm which the drive does not support, CHECK CONDITION is returned, with a sense key of ILLEGAL REQUEST. Only the default algorithm (ID 1) is supported.
Decompression Algorithm	This will also always be 1, indicating that the default decompression algorithm should be used.

# Device Configuration page

The drive supports the Device Configuration page, which has the following format:

	7	6	5	4	3	2	1	0		
0	PS (O)	Rsvd (0)	Page Code {10h}							
1	Additional Page Length (OEh)									
2	Rsvd(0)	Obsolete	CAF (0)		А	ctive Format (	(O)			

	7	6	5	4	3	2	1	0			
3	Active Partition										
4	Write Buffer Full Ratio (0)										
5		Read Buffer Empty Ratio (0)									
6	(MSB)	(MSB)									
7		Write Delay Time: 012Ch (LSB)									
8	OBR (0)	LOIS (1) RSmk(0) AVC (1) SOCF (00) RBO(0)				REW (0)					
9				Gap S	Size (0)						
10	EO	D Defined (0	00)	EEG (1)	SEW [0]	SWP (0)	BAML (0)	BAM (0)			
11	(MSB)		D.	.ll C: E		0)					
13			DU	inter size at E	arly Warning (	0)		(LSB)			
14	Select Data Compression Algorithm [1]										
15	WTRE	[0]	OIR [0]	Rewind o	n Reset [0]	ASOCWP (0)	PERSWP (O)	PRMWP (O)			

### Pre-execution checks

The only check made when this page is sent in Mode Select data is Parameter List.

# Changeable parameters

Active Partition	The pa	he partition in which the current logical position lies.						
Write Delay	0	The drive will never flush buffered data to tape as a result of a time-out.						
Time	>0	The time in 100 ms increments that the drive should wait with unwritten data in the buffer an no activity on the interface before forcing data to tape. The delay is timed from the completio of the preceding Write or Write Filemarks command. The default value is 12Ch, which translates to a write delay of 30s.						
SEW	Synchro	onize at Early Warning flag						
	0	Do not synchronize at Early Warning (default)—the drive may buffer all logical objects when positioned between EW and EOT.						
	1	Synchronize at Early Warning—the drive flushes all logical objects to tape before returning status when positioned between EW and EOT.						
Select Data Compression	0	Use Scheme 2 of the LTO-DC algorithm (pass-through mode). Note that clearing this parants not advised.						
Algorithm	1	Use the default compression scheme. This is the default.						
WTRE	WORA	WORM Tampered Read Enable						
	00b	Same as 10b.						
	01b	The device server will complete a valid locate, read, space, or verify operation with GOOD status even if the device server detects compromised data stored on the WORM tape.						
	10b	The device server returns CHECK CONDITION in response to a locate, read, space, or verify operation if the device detects compromised data on the WORM tape. The sense key is MEDIUM ERROR, with additional sense of 300Dh (WORM medium—integrity check failed). This has no effect on the completion of a valid locate, read, space, or verify operation when the device contains a non-WORM tape.						
	11 b	Reserved.						

OIR	1	The device server only processes commands from an I_T nexus if the logical unit holds a (persistent) reservation. If it is not reserved, the command returns CHECK CONDITION with a sense key of ILLEGAL REQUEST and additional sense of 2C 0Bh (not reserved). Note that some commands are always allowed.					
Rewind on Reset		The Rewind on Reset functionality is defined as positioning to BOP in Partition 0, regardless of the partition active at the time that the reset occurred.					
	00b A Logical Unit Reset does not alter the logical position.						
	01b	A Logical Unit Reset will cause the tape to be rewound to BOP for Partition 0.					
10b A Logical Unit Reset does not alter the logical position.							
	11 b	Reserved					

# Unchangeable parameters

PS	0	
CAF	0	The Change Active Format flag should be zero since changing formats is not supported.
Active Format	0	Changing formats is not supported.
Write Buffer Full Ratio	0	Buffer management is done by the drive.
Read Buffer Empty Ratio	0	Buffer management is done by the drive.
OBR	0	The Object Buffer Recovery flag should be clear since this feature is not supported.
LOIS	1	The Logical Object Identifiers Supported flag should be set since logical object identifiers are supported.
Rsmk	0	The Report Set Marks flag should be clear since this feature is not supported.
AVC	1	The Automatic Velocity Control flag should be clear since velocity control is managed by the drive.
SOCF	0	The Stop On Consecutive Filemarks flag should be clear since this feature is not supported.
RBO	0	The Recover Buffer Order flag should be clear since this feature is not supported.
REW	0	The Report Early Warning on read flag should be clear since this feature is not supported.
Gap Size	0	There is no concept of inter-block gaps in the format.
EOC Defined	0	
EEG	0	The Enable EOD Generation flag should be set since EOD generation is always enabled.
Buffer Size at Early Warning	0	The Buffer Size at Early Warning field should be zero as this cannot be set.

# Device Configuration Extension mode page subpage

	7	6	5	4	3	2	1	0			
0	PS (O)	SPF (1)		Page Code (10h)							
1	Subpage Code (01h)										
2				D	III- (1 Cl-)						
3				PO	age Length (1Ch)						
4	Reserved (0) TARPF [1] TASER [1] TARPC [0] TAPSLD							TAPSLD [0]			
5	Write Mode (0) Short Erase Mode (02h)										

	7	6	5	4	3	2	1	0			
6	Page and (O)										
31					Reserved (0)						

TARPF	ТареА	lert Respect Parameter Fields					
	0	The device server ignores the PPC and Parameter Pointer fields and all TapeAlert parameters are reported.					
	1	The device server reports parameter values using the value specified in the PPC and Parameter Pointer fields of the LOG SENSE command for the TapeAlert log page.					
TASER	ТареА	lert Select Exception Reporting					
	0	Activation of a TapeAlert flag results in an informational exception condition.					
	1	Activation of a TapeAlert flag does not result in an informational exception condition.					
TARPC	ТареА	vlert Respect Page Control					
	0	The PC field is ignored and the values returned will always be the cumulative values.					
	1	The device server reports parameter values using the value specified in the PC field of LOG SENSE command for the TapeAlert log page.					
TAPLSD	TapeAlert Prevent Log Sense Deactivation						
	0	Processing of a LOG SENSE command for the TapeAlert log page will clear all TapeAle flags.					
	1	TapeAlert flags will not be cleared.					
Rsmk	ТареА	lert Prevent Log Sense Deactivation					
	0	Processing a LOG SENSE command for the TapeAlert log page clears all TapeAlert flags.					
	1	The flags are not cleared.					
Write Mode	Oh	Append-only mode is disabled (overwriting data is allowed).					
Short Erase Mode	Specif	ies the action to be taken when receiving an ERASE command with the Long bit set to zero.					
	02h	The device server records an EOD indication at the specified location on the medium.					

## Medium Partitions mode page

**NOTE:** Partitioning is supported from LTO-5 cartridges onwards.

The Medium Partitions mode page has the following format.

Values that were sent in the last MODE SELECT command will be reported instead of the current ones, until a FORMAT MEDIUM is successfully executed, the cartridge is unloaded, or a Logical Unit Reset task management function is received.

	7	6	5	4	3	2	1	0			
0	PS (O)	SPF (O)		Page Code (11 h)							
1		Page Length									
2	Maximum Additional Partitions										
3			,	Additional Part	itions Defined	I					
4	FDP	SDP	IDP PSUM (11b) POFM (1) CLEAR (0) ADDP (								
5	Medium Format Recognition (3)										

	7	6	5	4	3	2	1	0	
6	Reserved (0) Partition Units								
7		Reserved (0)							
8	(MSB)			D	- C:				
9				Partitio	n Size			(LSB)	
:				:					
(n–1) – n				Partitio	n Size				

Page Length		value is 08h. It reflects how many Partition Size descriptors are specified.					
	Partition-incap	pable cartridges will report only one Partition Size descriptor.					
Maximum Additional Partitions	0	For partition-incapable cartridges. Otherwise, it is set to the maximum number of additional partitions supported by the drive-cartridge combination. For LTO-6 cartridges, it is set to 03h					
	1	For LTO-5 cartridges, which can support two partitions in an LTO-6 drive.					
	3	For LTO-6 cartridges, which can support four partitions in an LTO-6 drive.					
Additional Partitions	For MODE SE	ELECT, the number of additional partitions to be created.					
Defined	For MODE SE	ENSE, the number of additional partitions in the cartridge.					
	See "Specifyi	ng partition sizes" below.					
FDP		artitions. Partitions will be created according to the drive's default values. If this a SDP and IDP must be 0.					
	See "Specifyi	ng partition sizes" below.					
SDP		artition. Partitions are created up to the number specified in the <b>Additional Partitions</b> Their sizes are chosen by the drive.					
	If this bit is set, FDP and IDP must be 0.						
	See "Specifyi	ng partition sizes" below.					
IDP	Additional Pa descriptors. If	ed Data Partitions. Partitions are created up to the number specified in the rititions Defined field. The partition sizes are specified in the Partition Size this bit is set, then FDP and SDP must be 0. This bit is always set for MODE a FORMAT MEDIUM command has been executed successfully.					
	See "Specifyi	ng partition sizes" below.					
PSUM	3	Partition Size Unit of Measure: The value of 11b indicates that the units of measure for the Partition Size descriptor are defined by the Partitions Units field: 10 <sup>(Partition Units)</sup> bytes.					
Medium Format recognition	3	This indicates that the drive is capable of format and partition recognition.					
Partition Units	9	This defines the units of the Partition Size field as 10 <sup>9</sup> bytes, in other words in gigabytes. For MODE SELECT, units other than GB are also accepted.					
Partition Size	For MODE SELECT, the value in this field must be multiple of 37.5 GB. If FFFFh is received for one partition, the maximum remaining capacity is assigned to that partition after allocating the specified capacity for any other partitions, if there is any. See "Specifying partition sizes" below.						
	NOTE: There must be a physical gap between partitions, a "guard area", where no writing/reading is allowed. This amounts to a loss of 37.5 GB in total capacity. As a result, the sum of the values specified in the Partition Size descriptors plus 37.5 is roughly equal to the maximum capacity of the cartridge.						
	For MODE SE	ENSE, the following are some of the values that may be returned.					

NOTE: The partition previously.	sizes will be scaled appropriately if a SET CAPACITY command executed
Partition Size	Таре Туре
<800	LTO-4 tape loaded
<1500	LTO-5 tape loaded (for a single partition)
2500	LTO-6 tape loaded
2500	Default value. No data cartridge present

### Specifying partition sizes

There are three methods for specifying the partition sizes, using the FDP, SDP or IDP bits (which are all mutually exclusive). The resulting configurations for each method are shown in the tables below, assuming a total capacity of 2.55 TB and 136 wraps, which corresponds to a nominal capacity of 37.5 GB per two wraps.

The capacity figures in the table assume that the medium capacity has not been reduced using the SET CAPACITY command; otherwise they need to be scaled accordingly. The figures are only nominal, and should be treated as quidelines rather than precise quarantees of how much data may be stored in each partition.

The first case is where the partition sizes are specified using the FDP and SDP bits, with the drive using the parameters to derive (fixed) partition sizes. The partition size descriptors are ignored on MODE SELECT with FDP=1 or SDP=1.

FDP	SDP	IDP	Additional		Resultin	g Partition	
			Partitions Defined	0	1	2	3
1	0	0	Ignored	2475 GB (132 wraps)	37.5 GB (2 wraps)	0 (nonexistent)	0 (nonexistent)
0	1	0	0	2550 GB (136 wraps)	0 (non-existent)	0 (nonexistent)	0 (nonexistent)
			1	1275 GB (68 wraps)	1237.5 GB (66 wraps)	0 (nonexistent)	0 (nonexistent)
		2		825 GB (44 wraps)	825 GB (44 wraps)	825 GB (44 wraps)	0 (nonexistent)
			3	637.5 GB (34 wraps)	600 GB (32 wraps)	600 GB (32 wraps)	600 GB (32 wraps)

If you require more fine-grained control of partition sizes, set the IDP bit (with FDP=0 and SDP=0). In this case, the partition size descriptors indicate the desired partition sizes. If one Partition Size field is set to FFFFh, the corresponding partition will occupy whatever capacity remains after satisfying the specified size for the other partitions. At most one partition size may be set to FFFFh. If the IDP bit is set to 1 and no Partition Size field is set to FFFFh, the sum of the specified partition sizes must not exceed the total available capacity. Partition sizes are specified in GB (10<sup>9</sup> bytes),

and the drive will always round up the parameters to the nearest multiple-of-two wraps as illustrated in the following table:

Value	Resulting Partition Size
0	0 (non-existent)
1–37	37.5 GB (two wraps)
38–75	75 GB (four wraps)
76–112	112.5 GB (six wraps)
:	:

#### **NOTE:**

The lowest-numbered partitions always take precedence, and are calculated first. The remaining capacity is allocated to the highest-numbered partition (or to the partition whose size has been specified as FFFFh).

The size constraints are dictated by the format, which requires an even number of wraps (each nominally 18.75 GB) for a partition. When a volume is partitioned, there is some capacity lost due to the overhead of the two Guard Wraps between partitions.

The following table shows the resulting partition layout when IDP=1 and FDP=SDP=0.

Additional	Par	tition Size	Descrip	tors	Resulting Partitions				
Partitions Defined	First	Second Third		Fourth	0	1	2	3	
00h	FFFFh	0	0	0	2550 GB	0 (nonexistent)	0 (nonexistent)	0 (nonexistent)	
	0 to 09F6h (2550d)	0	0	0	2550 GB	0 (nonexistent)	0 (nonexistent)	0 (nonexistent)	
01h	FFFFh	0	0	0	(2550–s′–37.5) GB	s' GB	0 (nonexistent)	0 (nonexistent)	
	r	FFFFh	0	0	r' GB	(2550–r′–37.5) GB	0 (nonexistent)	0 (nonexistent)	
	r	s	0	0	r′ GB	(2550–r′–37.5) GB	0 (nonexistent)	0 (nonexistent)	
02h	FFFFh	s	t	0	(2550–s'–t'–75) GB	s' GB	t' GB	0 (nonexistent)	
	r	FFFFh	t	0	r′ GB	(2550-r'-t'-75) GB	t' GB	0 (nonexistent)	
	r	s	FFFFh	0	r′ GB	s' GB	(2550–r'–s'–75) GB	0 (nonexistent)	
	r	s	t	0	r′ GB	s' GB	(2550–r'–s'–75) GB	0 (nonexistent)	
03h	FFFFh	s	t	U	(2550-s'-t'-u' -112.5) GB	s" GB	t' GB	υ′ GB	
	r	FFFFh	t	U	r' GB	(2550-r'-t'-u' -112.5) GB	t' GB	υ′ GB	
	r	s	FFFFh	U	r′ GB	s' GB	(2550–r′–s′–u′ –112.5) GB	υ′ GB	

Additional	Par	tition Size	Descrip	tors	Resulting Partitions				
Partitions Defined	First	Second	Third	Fourth	0	1	2	3	
	r	s	t	FFFFh	r′ GB	s' GB	t' GB	(2550-r'-s'-t' -112.5) GB	
	r	s	t	U	r′ GB	s' GB	t' GB	(2550-r'-s'-t' -112.5) GB	

A partition size specified as x results in a partition size labelled as x' denoting the size after rounding has been applied.

Regardless of which method was used to specify partition sizes (FDP, SDP or IDP bits), once a FORMAT MEDIUM command has completed, a MODE SENSE command will always report IDP=1. The drive will not retain information on how the partitions were specified.

# Fibre Channel Logical Unit Control mode page

	7	6	5	5 4 3 2 1 0								
0	PS (O)	Rsvd (0)	Page Code {18h}									
1		Page Length (O6h)										
2				Reser	ved (0)							
3				Reserved (0)				EPDC[1]				
4–7	Reserved (0)											

EPDC	0	The target does not use the precise delivery function and ignores the contents of the CRN field in the Fibre Channel Extended Link Service FCP_CNTL. HP LTO Ultrium drives support this feature by default.
	1	The logical unit uses the precise delivery function defined in the FCP-2 standard. It makes use of the CRN field.

# SAS Logical Unit Control mode page

	7	6	5 4 3 2 1 0							
0	PS (O)	SPF (O)		Page Code (18h)						
1				Page Len	gth {06h)					
2		Reserved (0)		TLR (O)		Protocol Id	lentifier (6h)			
3–7		Reserved (0)								

TLR	Transp	port Layer Retries
	0	Transport layer retries are disabled.
	1	The target port supports transport layer retries for XFER_RDY and DATA frames for the logical unit.
Protocol Identifier	6	The protocol to which this mode page applies is SAS.

# Fibre Channel Port Control mode page

For FC drives, the Protocol-Specific Port Control page allows you to set the initialization and addressing behavior of the Fibre Channel interface.

	7	6	5	4	3	2	1	0
0	PS (O)	Rsvd (0)			Page Co	de {19h}		
1				Page Ler	ngth {06h)			
2		Reserv	ed (0)			Protocol Ider	ntifier (FCP=0)	
3	DTFD (0)	PLPB(O)	DDIS(0)	DLM(1)	RHA(0)	ALWLI(0)	DTIPE(O)	DTOLI(0)
4–5				Reser	ved (0)			
6	Reserved (0) RR_TOV Units (3)							
7		Res	ource Recovery	y Time-Out Vo	alue—RR_TOV	(FOh, that is,	24s)	

DTFD		arget Fabric Discovery. If the drive is not attached to an arbitrated loop, the DTFD bit						
	is ignored	is ignored.						
	0	When attached by an arbitrated loop, the drive will discover a fabric loop port one is present on the loop and perform public loop functions.						
	1	When attached by an arbitrated loop, the drive will not recognize the presence of a fabric loop port on the loop. The drive performs only the private loop functions.						
PLPB	Prevent Lo	pop Port Bypass						
	0	The drive allows the Loop Port Bypass (LPB) and Loop Port Enable (PBE) primitive sequences to control the port bypass circuit.						
	1	The drive ignores any Loop Port Bypass (LPB) and Loop Port Enable (LPE) primitive sequences. The loop port remains enabled. When the PLPB bit is zero, the drive allows the LPB and PBE primitive sequences to control the port bypass circuit.						
		Note: If the PLPB bit is set to 1, the DTIPE bit must be set to 0.						
DDIS	Disable [	Discovery						
	0	The drive must wait to receive an Address Discovery Link Service (ADISC) or Port Discovery Link Service (PDISC) before it resumes processing tasks for the initiator						
	1	The drive does not require receipt of Address or Port Discovery following loop initialization. The drive resumes processing of tasks on completion of loop initialization.						
DLM	Disable L	oop Master.						
	0	The drive may become loop master during the loop initialization process.						
	1	The drive will never attempt to be a loop master; it only repeats LISM frames it receives. This allows the initiator to be loop master during loop initialization.						
RHA	Require H	Hard Address. If the drive is not attached to an arbitrated loop, the RHA bit is ignored.						
	0	The drive follows the normal initialization procedure, including the possibility of obtaining a soft address during the loop initialization process.						
	1	When attached to an arbitrated loop, the drive will only attempt to obtain its hard address (available via the device address jumpers) during loop initialization. The drive will not attempt to obtain an address during the LISA phase of initialization. If there is a conflict for the hard address selection during loop initialization or it does not have a valid hard address available, the drive will enter the non-participating state. If the drive detects loop initialization while in the non-participating state, it will again attempt to get its hard address. If the hard address has not changed from the address obtained in a previous successful loop initialization, the drive will attempt to obtain the address in the LIFA phase if a valid Fabric Login exists or in the LIPA						

		phase of loop initialization. If the hard address has changed, the target will attempt to obtain the new address in the LIHA phase.						
ALWLI	Allow Logi	Allow Login Without Loop Initialization						
	0	The drive is required to verify its address through the loop initialization process before a login is accepted.						
	1	The drive uses the hard address available in the SCA connector or device address jumpers and accepts logins without verifying the address with loop initialization.						
DTIPE	Disable Ta	rget Initiated Port Enable						
	0	The drive enables its port into the loop without waiting for a Loop Port Enable primitive.						
	1	The drive waits for an initiator to send the Loop Port Enable primitive before inserting itself into the loop. The drive uses the hard address available in the SCA connector or device address jumpers to determine if primitives are addressed to it. A Loop Port Enable primitive with the broadcast address will also cause the drive to insert itself into the loop.						
		Note: If the DTIPE bit is set to 1, the PLPB bit must be set to 0.						
DTOLI	Disable Ta	rget Originated Loop Initialization						
	0	The drive generates the Initializing LIP after it enables a port into a loop.						
	1	The drive does not generate the Initializing LIP following insertion into a loop. It will respond to an Initializing LIP when it is received. It will generate the Loop Failure LIP at its input and the Initializing LIP when the loop failure is corrected.						
RR_TOV Units	Resource R	ecovery Time-Out Value Unit. The field specifies the unit of measure as follows:						
	000b	No timer specified						
	001b	0.001s						
	011b	0.1 s, units used by HP LTO Ultrium drives						
	101 b	10s						
RR_TOV		or of time units specified by the RR_TOV Units field that are used by the timer that the RR_TOV time-out functions.						
	FOh	240 x 0.1s units = 24 seconds						

# SAS Port Control mode page

In addition to the Protocol-Specific Port mode page (ie. when SPF = 0), the following subpages are also supported:

Subpage	Description			
01 h	HY Control and Discover mode page			
02h	Shared Port Control mode page			
03h	Enhanced PHY Control mode page			
all others				

When the SubPage Format bit (SPF) is 0, page code 19h represents the Protocol-Specific Port mode page:

	7	6	5	4	3	2	1	0
0	PS (O)	SPF (O)	Page Code (19h)					
1	Page Length (OEh)							

	7	6 5		4	3	2	1	0
2	Reserved (0)	Continue AWT (0)	Broadcast Asynchronous Event (0)	Ready LED Meaning (0)	F	rotocol Id	lentifier (6h	)
3	Reserved (0)							
4								
5	I_T Nexus Loss Time [07 D0h]							
6–7	Initiator Response Timeout [03 E8h]							
8								
9	Reject to Open Limit [0]							
10–15	Reserved (0)							

I_T Nexus Loss Time	The time for which the target port will retry connection requests to an initiator are rejected with responses indicating the initiator port may no longer be pre recognizing an I_T nexus loss. Values are as follows:					
	0000h	Vendor specific amount of time				
	0001h– FFFEh	Time in milliseconds. The default value of 07D0h falls within this range, so the drive will retry request for 2 seconds, that is, 07D0h (2000) milliseconds.				
	FFFFh	Retry requests forever.				
Initiator Response Timeout	write data fr	milliseconds for which the drive will wait for an initiator to starting sending rames after it has acknowledged a XFER_RDY frame, before aborting the ssociated with this transfer. A value of zero means that the drive will wait				
Reject to Open Limit	connection r (RETRY), OP CONTINUE field set to C	The minimum time in $10~\mu s$ increments that the target port will wait to establish a connection request with an initiator port on an I_T nexus after receiving and OPEN_REJECT (RETRY), OPEN_REJECT (RESERVED CONTINUE 0), or OPEN_REJECT (RESERVED CONTINUE 1). This value may be rounded as defined in SPC-4. A Reject to Open Limit field set to 0000h indicates that the minimum time is vendor-specific. This minimum time is enforced by the port layer.				

# PHY Control and Discover sub-page (SAS drives only)

The sub-page consists of a page header followed two PHY mode descriptors.

	7	6	5	4	3	2	1	0
0	PS (O)	SPF (1)			Page Co	de (19h)		
1				Sub-Page	Code (01 h)			
2				Davis Isas	al- (004 4l-)			
3				rage teng	<sub>j</sub> th (0064h)			
4	Reserved (0)							
5		Reserv	ed (0)		Protocol Identifier (6h)			
6				General	ion Code			
7				Number (	of PHYs (2)			
	SAS PHY Mode Descriptors							
8	F: 1545 NIV (4   D   1   (40   1   )							
55		First SAS PHY Mode Descriptor (48 bytes)						

	7	6	5	4	3	2	1	0
56	Sarand SAS DIDVAA da Danaintan (40 la tan)							
103		Second SAS PHY Mode Descriptor (48 bytes)						

Generation Code	in this more counter r Generati Protocol-	yte counter that is incremented by one by the device server every time the values ode page or the Enhanced PHY Control mode page are changed. When the reaches its maximum value of FFh, the next increment wraps it back to 01 h. The ion Code field is also contained in the Enhanced PHY Control mode page and the Specific Port log page, and may be used to correlate PHY settings across mode d log page accesses.
00h The generation code is unknown.		The generation code is unknown.

# Each SAS mode descriptor is defined as follows:

	7	6	5	4	3	2	1	0		
+0		Reserved (0)								
+1				Pl	HY Identifier [0,1]					
+2-3		Reserved (0)								
+4	Rsvd (0)	Attacl	ned Device	: Туре		Attached Re	ason			
+5		Reaso	on (0)		1	Vegotiated Logica	ıl Link Rate			
+6		Reserv	ed (0)		Attached SSP Initiator Port	Attached STP Initiator Port	Attached SMP Initiator Port	Rsvd (O)		
+7		Reserv	ed (0)		Attached SSP Target Port	Attached STP Target Port	Attached SMP Target Port	Rsvd (0)		
+8	(MSB)	MSB) SAS Address								
+15					SAS Address			(LSB)		
+16	(MSB)			٨ 44.	ached SAS Addre	•••				
+23		•		All	ached SAS Addre	355		(LSB)		
+24				Atto	ached PHY Identif	ier				
+25–31					Reserved (0)					
+32	Prograi	mmed Min F	hys. Link R	tate [8h]	Hard	ware Min Physica	l Link Rate (8h)			
+33	Programmed Max Phys. Link Rate [Ah] Hardware Max Physical Link Rate (Ah)									
+34–41	Reserved (0)									
+42	(MSB)			\/	dar Spacific 1000	Ohi				
+43		Vendor Specific [0000h]						(LSB)		
+44–47					Reserved (0)					

PHY Identifier	Associates this SAS Mode D	Associates this SAS Mode Descriptor with a particular PHY within the tape drive.					
Attached Device Type	The type of SAS device connected to this PHY:						
	000b	No device					
	001b	End device					
	010b	Edge expander device					
	011b	Fanout expander device					

	110	b-111 b	Reserved				
Negotiated Logical Link Rate	Minimum Ph	The link rate negotiated during the last link reset. This may be less than the Programmed Minimum Physical Link Rate or greater than the Programmed Maximum Physical Link Rate if they have been changed since the last link reset. Values appropriate for this device are as follows:					
	PHY is enabled. Unknown physical link rate.						
	1h	DISABLED	PHY is disabled.				
	8h	G1	PHY is enabled—1.5 Gb/s				
	9h	G2	PHY is enabled—3.0 Gb/s				
	Ah	G3	PHY is enabled—6.0 Gb/s				
Attached SSP/STP/SMP Initiator Port	1	The attached F	PHY is capable behaving as a SSP/STP/SMP initiator.				
SAS Address	The WWN	of this PHY.					
Attached SAS Address	The WWN	of the PHY conr	nected to this PHY.				
Attached PHY Identifier	The PHY ide	entifier for the at	tached PHY.				
Programmed Minimum Physical Link Rate	The minimu	The minimum link rate that will be negotiated for during the next link reset sequence.					
Programmed Maximum Physical Link Rate	The maximu	m link rate that	will be negotiated for during the next link reset sequence.				

# Share Port Control mode sub-page

	7	6	5	4	3	2	1	0						
0	PS (O)	SPF (1)		Page Code (19h)										
1	Sub-Page Code (02h)													
2														
3		Page Length (000Ch)												
4				Reser	ved (0)									
5		Reserv	ed (0)			Protocol Ic	lentifier (6h)							
6				Dower Loss Tir	magust (0000h)									
7	Power Loss Timeout (0000h)													
8–15				Reser	ved (0)			Reserved (0)						

**NOTE:** Although Power Loss Timeout is not support, the page can still be retrieved.

# Enhanced PHY Control mode sub-page

This page consists of a page header followed by two Enhanced PHY Control mode descriptors.

	7	6	5	4	3	2	1	0	
0	PS (0)	SPF (1)	Page Code (19h)						
1	Sub-Page Code (03h)								
2		Page Length (002Ch)							

	7	6	5	4	3	2	1	0			
3											
4	Reserved (0)										
5	Reserved (0) Protocol Identifier (6h)										
6	Generation Code										
7		Number of PHYs (2)									
			Enhan	ced PHY Con	trol mode desc	criptors					
8			Eirat Enhance	d DUV Cantra	ا سمطم طممين	tor (20 bytes	١				
27		First Enhanced PHY Control mode descriptor (20 bytes)									
28		Second Enhanced PHY Control mode descriptor (20 bytes)									
47			econa Ennanc	ed IIII Com	ioi mode desci	ipioi (20 byi	ະນ <sub>ຸ</sub>				

Generation Code	in this po counter r Generati Protocol-	rte counter that is incremented by one by the device server every time the values age or the PHY Control and Discover mode sub-page are changed. When the eaches its maximum value of FFh, the next increment wraps it back to 01 h. The on Code field is also contained in the Enhanced PHY Control mode page and the Specific Port log page, and may be used to correlate PHY settings across mode d log page accesses.
	00h	The generation code is unknown.

# Each Enhanced PHY Control mode descriptor is defined as follows:

	7	6	5	4	3	2	1	0		
+0		Reserved (0)								
+1				PHY Ider	ntifier [0-1]					
+2		Descriptor Length (0010h)								
+3				Descripior Le	engin (oor	on)				
+4		D. LINIV.C. Libr								
+7		Programmed PHY Capabilities								
+8		Current PHY Capabilities								
+11				Current First	Саравінн	les				
+12				Attached DL	V Canabili	tion.				
+15				Attached PH	ГСаравііі	iles				
+16-17				Reser	ved (0)					
+18		Reserved (0)  Negotiated SSC  Negotiated Physical Link Rate								
+19				Reserved (0)				Hardware Muxing Supported		

# Power Condition mode page

The Power Condition mode page controls the power condition transitions (idle or standby) of a logical unit:

	7	6	5	4	3	2	1	0	
0	PS (O)	SPF (O)			Page Co	de {1Ah}			
1				Page Ler	ngth (26h)				
2	PM_BG Prece	dence (01b)		F	Reserved (0)			Standby Y (0)	
3		Reserv	ed (0)		Idle C (0)	Idle B (0)	Idle A [0]	Standby Z (0)	
4	(MSB)		Idle A Condition Timer						
7									
8	(MSB)		6. II. 7.C. III. 7.						
11			Standby Z Condition Timer						
12	(MSB)			Idle B Condi	1: T:				
15				iale B Conai	tion timer			(LSB)	
16	(MSB)			Idle C Cond	::: T:				
19				iale C Cona	ition Timer			(LSB)	
20	(MSB)		c	1	alini a a Tiasaa				
23			3	tandby Y Cor	iaiiion iimer			(LSB)	
24–38		Reserved (0)							
39	FIDCP	PC (0) FSBCP (0) FSTCPC (0) Reserved (0)				erved (0)			

PM_BG_Precedence	Set to 01b. If the drive is performing background functions and a power condition timer expires, the drive will finish the background functions before changing to the power condition.
Idle_A	If set to 1, the drive will transition to Idle mode as soon as all media-related background activities are finished (in other wrods, media is not loaded).  NOTE: Idle mode equates to a lower power consumption state.
Idle_A Condition Timer	If Idle_A is set, this field must be 0. Otherwise this field is ignored.

The rest of the Idle and Standby bits are not changeable. Because they are set to 0, their Timers are ignored.

# Information Exceptions Control mode page

The Information Exceptions Control mode page is used to control exception reporting through the "Requested Recovery log page" (page 76):

	7	6	5	4	3	2	1	0	
0	PS (O)	Rsvd (0)	Page Code {1Ch}						
1	Page Length {OAh}								
2	Perf (O)		Reserved (0)		DExcpt	Test	Rsvd (0)	LogErr (0)	
3		Reserv	ed (0)			MRII	∃ (3h)		

	7	6	5	4	3	2	1	0			
4	(MSB)		Interval Timer (O)								
7		•	Interval Timer (0)								
8	(MSB)		Report Count/Test Flag Number -								
11		•									

Perf	0	Informational exception operations that cause delays are acceptable.					
DExcpt		le Exception Control					
•	0	Information exception operations (such as TapeAlert flags being activated, depending on the value of the TASER bit in the Device Configuration Extension mode page) are enabled. The reporting of information exception conditions is determined from the MRIE field.					
	1	Default. A DExcpt bit of one indicates the target will disable all information exception operations. The method of reporting informational exceptions field is ignored when DExcpt is set to one. The <b>Test</b> bit must not be set at the same time.					
Test	0	If the Test flag is clear the next command will be processed normally.					
	1	A test bit of one will generate false informational exception conditions. As a result, the next SCSI command after the Mode Select will return CHECK CONDITION with a sense key of RECOVERED ERROR and additional sense of 5DFFh (failure prediction threshold exceeded - false). The <b>DExcpt</b> bit must not be set at the same time.					
	indica it may drive v sense	The Test bit will never be read as 1 when performing a Mode Sense command. This is not an indication that the drive is in test mode. For example, using the Test bit and Test Flag Number, it may be possible to set a flag with the DExcpt bit set to 1. When the DExcpt bit is next set, the drive will report CHECK CONDITION with a sense key of RECOVERED ERROR and additional sense of 5DFFh (failure prediction threshold exceeded - false). In order to set the DExcpt bit again, note that the Test bit must still be set during the Mode Select command.					
LogErr	0	Log Errors bit. This bit must be zero, indicating that the logging of informational exception conditions within the drive is vendor-specific.					
MRIE	Method of Reporting Informational Exceptions						
	3h	This field indicates the method used by the target to report informational exception conditions and must be set to 3. The target will report informational exception conditions by returning a CHECK CONDITION status on any command. The sense key will be set to RECOVERED ERROR with additional sense of 5D00h (failure prediction threshold exceeded). The command that has the CHECK CONDITION will complete without error before any informational exception condition may be reported.					
Interval Timer	0	Must be zero, indicating that the drive only reports an informational exception condition once.					
Report Count/Test Flag Number	0	If the <b>Test</b> bit is also zero, there is no limit on the number of times the drive can report an informational exception condition. Treat this case with <i>caution</i> ; only a hard reset or power-cycle will clear this condition.					
	n	If the <b>Test</b> bit is zero, this field is the Report Count, and indicates the number of times the device server will report an informational exception condition (subject to the <b>DExcpt</b> bith the <b>Test</b> bit is one, this field is the Test Flag Number, that is, the number of a supported TapeAlert flag. The target will generate a test informational exception condition. As a result, the next SCSI command after MODE SELECT will return CHECK CONDITION with a sense key of RECOVERED ERROR and additional sense of 5DFFh (failure prediction threshold exceeded - false). The following are valid settings:					
		1 through 64 This sets the TapeAlert flag with this number in the Log page.					

	This clears the TapeAlert flag indicated by the absolute value of the Test Flag Number.
32767 (7FFFFh)	This sets all the TapeAlert flags supported by the target in the Log page.

Note that if an attempt is made to set or clear a flag that is not supported by the drive, CHECK CONDITION will be reported with a sense key of ILLEGAL REQUEST and additional sense of 2600h (invalid field in parameter list).

# Medium Configuration mode page

The Medium Configuration mode page is used to specify special restrictions when the device server is processing commands that access the tape.

	7	6	5	4	3	2	1	0	
0	PS (O)	SBF (O)		Page Code (1 Dh)					
1	Page Length (1Eh)								
2	Reserved (0) WORMM							WORMM	
3	Reserved (0)								
4			WOF	RM Mode Lak	el Restrictions	(01 h)			
5	WORM Mode Filemark Restrictions (02h)								
6–31	Reserved (0)								

WORMM	WORM Mode is set to 1 when there is a WORM tape loaded in the drive. Default is 0. Not changeable by a MODE SELECT command.				
WORM Mode Label Restrictions	01 h	The device server does not allow some types of format labels to be overwritten.			
WORM Mode FileMark Restrictions	02h	The device server allows any number of filemarks immediately preceding EOD to be overwritten except the filemark closest to BOP.			

# Serial Number Override vendor-unique mode page

**NOTE:** This page is not available on all variants.

The Serial Number Override mode page provides a means to override the drive's serial number. The page is support by the SSC/RMC Device (Logical Unit 0), and so is accessible via ACI/ADI and the primary port. This provides a common method for changing the drive serial number.

	7	6	5	4	3	2	1	0
0	PS (O)	SBF (O)	Page Code (3Bh)					
1		Page Length (OEh)						
2		Reserved (0) MSN						SN
3–5		Reserved (0)						
6	(MSB)		Cartal Nivellan					
15		-		Serial Number (LSB)				

	MODE	SENSE	MODE SELECT				
MSN	00b	Not reported	This is a NO-OP. The drive's serial number remains unchanged and the Serial Number field is ignored.				
	01b	The Serial Number field contains the Drive Serial Number being used by the drive and it is the manufacturer's default value.	Sets the Drive Serial Number back to the manufacturer's default value. The Serial Number field is ignored.				
	10b	Not reported	Same as 00b				
	11 b	The Serial Number field contains the Drive Serial Number being used by the drive and it is not the default value.	The Drive Serial number will be set to the value supplied in the Serial Number field.				
Serial Number		An ASCII serial number. MODE SELECT data will be check to ensure that this field contains only ASCII values in the range 20h–7Fh.					

The Mode Page policy for this page is shared amongst all initiators on all ports, so if the Drive Serial number is modified via MODE SELECT, all initiators, apart from the issuer of the MODE SELECT command, on all ports will received UNIT ATTENTION—Mode Parameters Changed.

Similarly, the VPD inquiry pages 80h (Unit Serial Number) and 83h (Device Identification) supported by the SSC/RMC device (LUN 0) will return the same Drive Serial number regardless of which port the INQUIRY command is issued.

For example, if the Drive Serial number is modified using an ACI MODE SELECT command, subsequent INQUIRY commands for pages 80h or 83h issued via the primary port or ADT port will report the same modified serial number.

# Device Time mode page

The Device Time mode page consists of the following page header followed by three Timebase descriptors:

	7	6	5	4	3	2	1	0
0	PS (O)	SBF (O)	Page Code (3Ch)					
1		Page Length (22h)						
2		Reserved (0) LT WT PT						
3		Reserved (0)						

### Power-on time descriptor

	7	6	5	4	3	2	1	0	
4		Timebase Identifier (00h)							
5		Timebase Field Length (06h)							
6	(MSB)		Current Power-on Count (LSB)						
7									
8	(MSB)		Power-on Time						
11		•		rower-	on time			(LSB)	

# World time descriptor

	7	6	5	4	3	2	1	0	
12		Timebase Identifier (01h)							
13		Timebase Field Length (06h)							
14	Reserved (0) UTC NTP							NTP	
15		Reserved (0)							
16	(MSB)								
19		-	World Time (LSB)					(LSB)	

# Library time descriptor

	7	6	5	4	3	2	1	0	
20		Timebase Identifier (10h)							
21		Timebase Field Length (06h)							
22		Reserved (0)							
23				Library T	ime (hrs)				
24				Library Ti	me (mins)				
25		Library Time (secs)							
26–27				Reserv	/ed 0)				

# Cumulative power-on time descriptor

	7	6	5	4	3	2	1	0
28		Timebase Identifier (18h)						
29		Timebase Field Length (06h)						
30–31		Reserved (0)						
32	(MSB)	C. L.: D. T.						
35		-	Cumulative Power-on Time (LSB)					(LSB)

# Field descriptions

	MODE	SENSE	MODE SELECT	
LT	0	Library time is invalid.	1 to set Library time (ignored if the target	
	1 Library time is valid.		port is not ADT)	
WT	0	World time is invalid.	1 to set world time	
	1	World time is valid.		
PT	0	Power-on time is invalid.	Ignored	
	1	Power-on time is valid.		
Current Power-on Count	The nu	mber of times the drive has been powered	Ignored	

	MODE	SENSE	MODE SELECT		
Power-on Time	1	umber of seconds since the drive has been red on.	Ignored		
UTC	0	The local timezone has been used.	Ignored if WT is 0.		
	1h World Time is UTC. Set to		Set to 1 if UTC World Time is being used.		
NTP	0	Unsure if NTP-synced.	Ignored if WT is 0.		
	1h	World Time is set from NTP source.	Set to 1 if World time is NTP-synced.		
World Time		umber of seconds from 00:00:00 on ry 1, 1970	Ignored if WT = 0.		
Library Time	The tir	ne in hrs:mins:secs set by the automation ller.	Ignored if the target port is not ADT.		
Cumulative Power-on Time		umber of seconds since the drive was red on for the very first time.	Ignored		

# Extended Reset vendor-unique mode page

	7 6 5 4 3 2 1							0	
0		Page Code {3Dh}							
1		Page Length {02h}							
2		Reserved (0) Reset Behavior							
3		Reserved (0)							

Reset Behavior	Controls tl	he behavior of the drive when it detects a target or LUN reset message.
	00b	Normal reset behavior (this is the default value).
	01b	The drive will flush and position itself at BOT upon:  • FC drives: a Logical Unit Reset or Target Reset.  • SAS drives: a Logical Unit Reset task management function.
	10b 11b	No automatic flush. Logical position is maintained.  Reserved

# CD-ROM Emulation mode page

This page can be used irrespective of whether the drive is acting as a tape or a CD device.

	7	6	5	4	3	2	1	0				
0		Page Code {3Eh}										
1		Page Length {02h}										
2		Reserved (0) Non-Auto CDmode										
3				Reser	ved (0)							

# CD-ROM Emulation/Disaster Recovery mode page fields

	When a system restarts after booting off tape, the drive detects the SCSI resets issued during reboot
	and, in conjunction with knowing that more than 100 blocks have been read in CD-ROM emulation
	mode, will revert back to behaving as a tape device. This is the standard method by which the drive

	The method of revers seconds during its "p involve a firmware re Setting this flag to 1	automatically reverts to being a tape drive in order that a backup application can do file system recovery. The method of reversion involves a firmware reboot, so the drive might become unavailable for a few seconds during its "power-on" following the SCSI reset. (Note that normal SCSI reset response does not involve a firmware reboot).  Setting this flag to 1 inhibits this automatic return to tape drive behavior; the drive will remain in CD-ROM mode irrespective of blocks read and SCSI resets.						
CDmode	MODE SENSE	0	The drive is in tape drive mode.					
		1	The drive is in CD-ROM emulation mode.					
	MODE SELECT		ag can be used to switch the drive between normal operation and CD-ROM tion mode:					
		• If th	nis bit is set to its existing value, there is no change.					
		cho the trai is o	his bit is changed from 0 to 1, the drive will enter CD-emulation mode. It will range its Inquiry and Mode data appropriately and cache the first 250 KB of CD image off tape. CD-ROM support commands will be enabled. This resition is primarily present to support automated functional testing. If the bit changed from 1 to 0, the drive leaves CD-ROM emulation mode and reverts normal tape drive mode.					
		Inq sup BC of o	nis bit is changed from 1 to 0, the drive will leave CD-emulation mode. The uiry and Mode data will revert to that for a tape drive and CD-ROM command oper will stop. The tape will be reloaded and the logical position will be IP. Backup applications can use this transition to switch to a normal mode operation for file system recovery off tape. Note that operating systems that the cload class drivers at boot might not be prepared to talk to the erstwhile IPROM drive					

# MODE SENSE 1Ah/5Ah

MODE SENSE allows the drive to return its current configuration and report which configuration parameters can be changed through MODE SELECT.

The mode sense header, block descriptor (optional), and zero or more of the are sent to the host. Mode pages contain drive configuration parameters. Some of these parameters are fixed, others are configurable (through the MODE SELECT command). The host should use MODE SENSE to determine which drive parameters are configurable and what their current values are before using mode select to alter them.

**NOTE:** See "MODE SELECT 15h/55h" (page 97) for full descriptions of the Mode Parameters. If a MODE SENSE command is issued whilst an immediate reported Load command is executing or close to completing then the values of some parameters in some mode pages which depend on the results of the load may be undefined. Similarly, the write-protect field in the Mode Parameter Header will be unstable unless a cartridge is present and medium removal is prevented.

#### Pre-execution checks

Illegal Field Reservation Deferred Error Unit Attention

The page code field must contain a valid mode page code or the value 0 or the value 3Fh. If it does not then CHECK CONDITION status is reported. Sense data will be as described in the Illegal Field Checks.

#### Command descriptor block (6-byte version)

	7	6	5	4	3	2	1	0	
0				Operation	Code (1Ah)				
1		Reserved (0) DBD Reserved (0)							
2	PC	;			Page	Code			

	7	6	5	4	3	2	1	0
3	Sub Page Code							
4				Allocatio	on Length			
5				Со	ntrol			

# Command descriptor block (10-byte version)

	7	6	5	4	3	2	1	0
0		,		Operation	Code (5Ah)		,	
1	Reserved (0) DBD Rese				Reserved (0)			
2	PC				Page	Code		
3			Sub Page Code					
4				D	l (O)			
6				Keser	ved (0)			
7	(MSB)			A II43				
8		-		Allocatio	on Length			(LSB)
9				Со	ntrol			

# CDB fields

DDD	D: 11	isable Block Descriptors flag									
DBD	Disabl	le Block	Descriptors flag								
	0	O Allows the drive to return the MODE SELECT block descriptor.									
	1	Prevents the drive from returning the MODE SELECT block descriptor.									
PC	Page (	Control followii	—Indicates the type of page parameter values to be returned to the host, as shown ng table:								
	7	6	Description								
	0	0	Report Current Values: the current values of the parameters are returned.								
	0	1	Report Changeable Values: the page returned has its non-changeable parameter fields cleared to 0. The fields that are changeable are set to all 1's.								
	1	0/1	Report Default Values: the page returned contains the power-on/reset/bus-device-reset values of the mode parameters.								
Page Code	This a	llows th	e host to select any specific page, or all the pages supported by the drive.								
	(	)	The drive returns no mode pages, so only the header and block descriptor are returned.								
	Any mode page code		The drive returns that page.								
	31	3Fh The drive returns all mode pages.									
Sub Page Code		The sub-page code of the page code for data to be returned. If there are no sub-pages, it should be set to 0.									
Allocation Length	Specif	ies the	number of bytes that the host has allocated for returned MODE SENSE data.								

0	No data transfer will occur. This is not considered an error.
n	The maximum number of bytes which the drive should return in its data-out phase. Either the entire mode page or allocation length bytes of the page are returned, whichever is least.

### PERSISTENT RESERVE IN 5Eh

PERSISTENT RESERVE IN is used to obtain information about persistent reservations and reservation keys that are active within a tape drive logical unit.

#### **Pre-execution checks**

	eferred Error l	Unit Attention
--	-----------------	----------------

### Command descriptor block

	7	6	5	4	3	2	1	0				
0		,		Operation	Code (5Eh)							
1		Reserved (0)	served (0) Service Action									
2		D. LO										
6		Reserved (0)										
7	(MSB)			All it	1 1							
8		Allocation Length (LSB)										
9				Со	ntrol							

### **CDB** fields

Service Action	The service	e action types that are su	The service action types that are supported are:						
	00h	Read Keys	Returns all registered reservation keys						
	01 h	Read Reservation	Returns information on any current persistent reservation						
	02h	Report Capabilities	Returns details of the persistent reservation features supported						
	03h	Report Full Status	Returns registration and reservation status fore each registered I_T nexus.						
Allocation Length	The maxii of the req	mum amount of data (in k uested information or allo	bytes) that should be returned to the host. The drive will return all ocation length bytes, whichever is least.						

# PERSISTENT RESERVE IN returned data for service actions

### Read Keys service action

The drive will return a parameter list containing an 8-byte header and list of the reservation keys for each currently registered I\_T nexus. Each key is 8 bytes long. The format of the returned data is as follows:

	7	6	5	4	3	2	1	0										
0	(MSB)		DD Concention															
3			PR Generation (LSB)															
4				Additional	Length ( <i>n</i> -7)			Additional Length (n-7)										

	7	6	5	4	3	2	1	0	
7									
8				First Dage					
15		First Reservation Key							
:		:							
n-7				Look Dono	nation Voy				
n				Lasi Kesei	rvation Key				

PR Generation	A 32-bit counter that is maintained by the drive and incremented every time a PERSISTENT RESERVE OUT command requests a Register, Register and Ignore Existing Key, Clear, Preempt, or Preempt
	and Abort service action.

### Read Reservation service action

The drive returns a parameter list containing an 8-byte header and the persistent reservation, if any, that is present in the drive. If no persistent reservation is present, Additional Length is 0 and no reservation data is returned. If a persistent reservation is present, Additional Length is 10h and 16 bytes of reservation data are returned as follows:

	7	6	5	4	3	2	1	0	
0	(MSB)	'	PR Generation —————						
3		-		rk Ge	neration			(LSB)	
4				Add:tional Lo	ngth (0 or10h)				
7				Additional Le	ngin (O or ion)				
8				Dagarus	ation Key				
15				Keservo	mon key				
17				Ohaa	lete (0)				
19				Obso	iele (O)				
20				Reser	ved (0)				
21		Scope (0) Type							
22		Obsolete (0)							
23				Obso	ieie (U)				

PR Generation	As for "Read Keys service	As for "Read Keys service action" (page 127).						
Reservation Key	The key under which the	he key under which the persistent reservation is held.						
Scope	0	0 Indicates LU_SCOPE.						
Туре	The characteristics of the persistent reservation currently held. Persistent reservation types supported by the drive are:							
	3h	Exclusive access						
	6h	Exclusive access, registrants only						
	8h Exclusive access, all registrants							
	See PERSISTENT RESERVE OUT for more information and also the appropriate standards.							

### Report Capabilities service action

This provides a mechanism for the drive to report which features of Persistent Reservation are implemented. The format of the data returned is as follows:

	7	6	5	4	3	2	1	0		
0	(MSB)		Length (0008h)							
1			ı	engin (oc	Jonj			(LSB)		
2		Reserved (0)		CRH (1)	SIP_C (1)	ATP_C(0)	Rsvd (0)	PTPL_C (1)		
3	TMV (1)			Reserved	l (O)			PTPL_A		
4	WR_EX_AR (0)	EX_AC_RO (1)	WR_EX_RO (0)	Rsvd (0)	EX_AC (1)	Rsvd (0)	WE_EXC (0)	Rsvd (0)		
5		Reserved (0) EX_AC_AR(1)								
6	Reserved (0)									
7				Kesel ve	≠u (∪)					

PTPL_A	0	Persist Through Power Loss has not been activated
	1	The most recent successfully completed PERSISTENT RESERVE OUT command with Register or Register and Ignore Existing Key service action had the APTPL bit set to one in the parameter data.

All the other fields are fixed. Refer to the description of PERSISTENT RESERVE OUT or the appropriate standards for more information.

## Report Full Status service action

This provides a mechanism for the drive to report a description of the registration and persistent reservation status of each currently registered I\_T nexus. The format of the data returned is as follows:

	7	6	5	4	3	2	1	0	
0	(MSB)		DD C ''						
3			PR Generation (LSB)						
4	(MSB)		Additional Legal (c. 7)						
7		•	Additional Length (n-7) (LSB)					(LSB)	
:			:						
		Last Full Status Descriptor							
n				Lasi Fuli Siali	us Descripior				

The format of a Full Status descriptor is as follows:

	7	6	5	4	3	2	1	0		
0	(MSB)			Person Vov						
7			Reservation Key (LSB)							
8		Reserved (0)								

	7	6	5	4	3	2	1	0		
11										
12	ALL_TG_PT(0) R_Ho									
13		Scope (0) Type								
14				D	operand (O)					
17		Reserved (0)								
18				Dolotivo T	arget Port Ide	ntiliar				
19				Relative i	arger Forr Ide	miner				
20				Additional D	aasintas lans	(m. 22)				
23		Additional Descriptor Length (n–23)								
24		Transport ID								
n				ı	idisport iD					

R_Holder	1	The I_T nexus is a Persistent Reservation holder.
Transport ID	See deta	ils in PERSISTENT RESERVE OUT.

# PERSISTENT RESERVE OUT 5Fh

PERSISTENT RESERVE OUT is used to request service actions that create a persistent reservation in a logical unit within the tape drive for the exclusive or shared use of a particular I\_T nexus. The command uses other service actions to manage and remove such persistent reservations.

An I\_T nexus performing Persistent Reserve Out service actions is identified by a reservation key.

### **Pre-execution checks**

Illegal Field Reservation Deferred Error Unit Attention

### Command descriptor block

	7	6	5	4	3	2	1	0		
0				Operation	Code (5Fh)					
1		Reserved (0)			Service Action					
2		Sco	ре		Туре					
3		- Lo								
6				Keser	ved (0)					
7										
8	Parameter List Length									
9	Control									

### **CDB** fields

Service Action	00b	Register	Registers or unregisters a reservation key with the device server.
	01b	Reserve	Creates the persistent reservation.
	02b	Release	Releases the persistent reservation.

	03h	Clear	Clears all reservation keys and the persistent reservation.				
	04h	Preempt	Pre-empts the persistent reservation and/or remove registrations.				
	05h	Preempt and Abort	Pre-empts the persistent reservation and/or remove registrations, and aborts all tasks for all pre-empted I_T nexuses.				
	06h	Register and Ignore Existing Key	Registers or unregisters a reservation key with the device server.				
	07h	Register and Move	Registers a reservation key for another T_T nexus and moves the persistent reservation to that I_T nexus				
Scope	0	Indicates LU_SCOPE.					
Туре	The char by the d		reservation currently held. Persistent reservation types supported				
	3h	Exclusive access					
	6h	Exclusive access, registra	nts only				
	8h	Exclusive access, all regis	strants				
Parameter List Length	the SPEC	The amount of data (in bytes) that should be sent to the drive from the host in parameter list data. If the SPEC_I_PT bit in the parameter data is 0, this field is set to 18h. If SPEC_I_PT is 1, this field specifies the number of bytes of parameter data (minimum is 18h).					

# PERSISTENT RESERVE OUT parameter data

**NOTE:** The Register and Move service action has its own specific Register and Move parameter data—see "Parameter data for the Register and Move service action" (page 133).

	7	6	5	4	3	2	1	0				
0	(MSB)		Reservation Key									
7			Reservation Rey									
8	(MSB)		Service Action Reservation Key									
15		•										
16												
19					Obsolete (0)							
20		Reser	ved (0)		SPEC_1_PT	ALL_TG_PT	Rsvd(0)	APTPL				
21					Reserved (0)							
22					Obselete (O)							
23			Obsolete (0)									
24	(MSB)			۸ ماما:۱:	onal Parameter D	a la						
n		•		Additio	onai rarameter Di	uiu		(LSB)				

# Reservation Key Identifies the I\_T nexus that sent the command. The value must match the registered reservation key for the I\_T nexus except for: The Register and Ignore Existing Key service action, where this field is ignored. The Register service action for an unregistered I\_T nexus, where this field is 0.

		ervation Key does not match with the one registered in the device server for the I_T nexus, e server returns Reservation Conflict.							
Service Action Reservation Key		Information needed for the following service actions: Register, Register and Ignore Existing Key, Preempt, and Preempt and Abort.							
	For the Re	egister and Register and Ignore Existing Key service actions:							
	0	Unregisters the registered reservation key specified in the Reservation Key field.							
	n	The new reservation key to replace the existing one as specified in the Reservation Key field for the I_T nexus.							
	For the Pr	reempt and Preempt and Abort service actions, this field contains:							
	n	The reservation key of registrations to be removedor, if this field also identifies a persistent reservation holder, the persistent reservation to be pre-empted.							
	For the Register and Move service action, this field contains:								
	n	The reservation key to be registered on the specified I_T nexus.							
SPEC_I_PT	Valid only for the Register and Register and Ignore Existing Key service actions.								
	0	The Additional Parameter Data is ignored and the registration is applied only to the I_T nexus that sent the command.							
	1	The Additional Parameter Data includes a list of transport IDs and the device server applies the registration to the I_T nexus for every initiator port specified in the transport list.							
ALL_TG_PT	Not supp	orted and ignored.							
APTPL	Only valid	Only valid for the Register, Register and Ignore Existing Key and Register and Move service actions.							
	1	The logical unit preserves any persistent reservation and all registrations if power is logical unit preserves any persistent reservation and all registrations if power is logical later returned. If the EEPROM (non-volatile memory) is unable to store data anymothe device server returns CHECK CONDITION.							

This is a summary of the field validity in the parameter data:

Service Action	Scope	Туре	Reservation Key	Service Actions Reservation Key	APTPL	SPEC_I_PT
Register	ignored	ignored	valid	valid	valid	valid
Register and Ignore Existing Key	ignored	ignored	ignored	valid	valid	invalid
Reserve	LU_SCOPE	valid	valid	ignored	ignored	ignored
Release	LU_SCOPE	valid	valid	ignored	ignored	ignored
Clear	ignored	ignored	valid	ignored	ignored	ignored
Preempt	LU_SCOPE	valid	valid	valid	ignored	ignored
Preempt and Abort	LU_SCOPE	valid	valid	valid	ignored	ignored
Register and Move	LU_SCOPE	valid	valid	valid	valid	n/a

# Additional parameter data

	7	6	5	4	3	2	1	0		
24	(MSB)	,	Transport Parameter Data Length (n-27)							
27			irans	port raramete	r Daia Lengin	(n-27)		(LSB)		

	7	6	5	4	3	2	1	0			
	Transport IDs List										
28											
:		•	First Transport ID (LSB								
				:							
:	(MSB)  Last Transport ID										
n		-		Lasi Ital	isport ID			(LSB)			

Transport Parameter Data Length	Specifies the number of bytes of Transport IDs to follow. The Parameter List Length in the CDB contains all the bytes specified in Transport Parameter Data Length.
Transport IDs	See "Transport IDs" (page 133).

# Parameter data for the Register and Move service action

	7	6	5	4	3	2	1	0			
0	(MSB)		Reservation Key								
7		•	Reservation Rey								
8	(MSB)		C . A D								
15		•	Service Action Reservation Key								
16	Reserved (0)										
17	Reserved (0) Unreg							APTPL			
18				Dalastica D	ort Identifier						
19				Relative ro	orr identifier						
20			T	us a ut Davisaus at	ou Douber Lourenth	(10L)					
23			Transport Parameter Data Length (18h)								
24	(MSB)										
n		-		irans	port ID			(LSB)			

Unreg	1	The device server unregisters the I_T nexus on which the command was received.			
Service Action Registration Key	n The reservation key to be registered on the specified I_T nexus.				
APTPL	1	The logical unit preserves any persistent reservation and all registrations if power is lost and later returned. If the EEPROM (non-volatile memory) is unable to store data anymore, the device server returns CHECK CONDITION.			

# Transport IDs

# Fibre Channel Transport ID

	7	6	5	4	3	2	1	0		
0	Format Co	de (00b)	Reserved (0) Protocol Identifie							
1		D 1/0)								
7		Reserved (0)								

	7	6	5	4	3	2	1	0				
8	(MSB)	'	World Wide Port Name (LSB)									
15		-										
16	Reserved (0)											
23				keser	vea (U)							

#### SAS Transport ID

	7	6	5	4	3	2	1	0		
0	Format Co	rmat Code (00b) Reserved (0) Protocol Identifier (6h)								
1–3		Reserved (0)								
4	(MSB)		SAS Address (LS							
11										
12	P									
23			Reserved (0)							

# PREVENT/ALLOW MEDIUM REMOVAL 1Eh

PREVENT/ALLOW MEDIUM REMOVAL tells the drive to enable or disable the removal of the cartridge.

When cartridge removal is prevented, the front panel eject button is completely disabled (though a 'forced eject' will still work). An Unload command issued by a host will result in CHECK CONDITION. The sense key will be ILLEGAL REQUEST or MEDIUM REMOVAL PREVENTED.

When cartridge removal is enabled, pressing the front panel eject button or sending an Unload command from a host will cause the media to be unloaded and ejected.

Removal prevention is on a per-host basis. All the hosts have to allow media removal for any of them to do so.

**NOTE:** If a firmware upgrade is initiated over any interface, the cartridge will be ejected from the drive regardless of the state of this command.

#### Pre-execution checks

Illegal Field Reservation Deferred Error Unit Attention

#### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (1Eh)								
1–3	Reserved (0)								
4	Reserved (0) Prevent								
5	Control								

#### **CDB** fields

Prevent	00b	Medium removal is allowed for the drive
	01b	Media removal is prohibited for the drive
10b, 11b		Invalid

### READ 08h

READ transfers zero or more data blocks to the host starting at the current logical position.

#### Pre-execution checks

Illegal Field Fixed Bit Reservation Deferred Error

Unit Attention Media Access Diagnostic Status

If both the SILI and Fixed bits are set, CHECK CONDITION status is reported. Sense data is as described in the Illegal Field Checks. The field pointers indicate the Fixed bit field.

### Command descriptor block

	7	6	5	4	3	2	1	0		
0	Operation Code (08h)									
1	Reserved(0) SILI									
2	(MSB)		Transfer Length							
4		-	(LSB)							
5	Control									

#### CDB fields

If the Fixed flag is clear and Transfer Length is not zero, then a single block of the length in Transfer Length is to be transferred. If the next block on tape is of this length or shorter it is transferred to the initiator. If the next block is longer than this length, only the length requested is returned and the logical position is set to after the record. If the length of the block was the same as the Transfer Length field, GOOD status is returned. If the length of the block was not the same as in Transfer Length and the Suppress Illegal Length Indicator (SILI) flag was clear, CHECK CONDITION status is returned, ILI will be reported as described below. If the length of the block was not the same as in Transfer Length and the Suppress Illegal Length Indicator (SILI) flag was set, Good status is returned.

If the fixed flag is set and the Transfer Length field is not zero and the Suppress Illegal Length Indicator (SILI) flag is clear, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field. If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status. If a block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported

as described below). The current position is set after the last block that was returned or partially returned

The read operation is terminated when the length of a block (on the tape) differs from the Transfer Length. Transfer Length bytes of data will have been transferred. The logical tape position will be the EOM side of the illegal sized block.  1 The drive will not report CHECK CONDITION status if the only error is that the Transfer Length is not equal to the actual block length recorded on the media.  6 The Transfer Length field specifies the length of the transfer in bytes. A single block of the length in Transfer Length is to be transferred.  9 If the next block on tape is of Transfer Length, it is transferred to the initiator and GOOD status is returned.  10 If the next block on tape is not of Transfer Length:  11 If the next block on tape is not of Transfer Length:  12 If it is shorter, the whole block is transferred to the initiator.  13 If SILI = 0, CHECK CONDITION status is returned and the logical position is set to after the record.  14 If SILI = 1, GOOD status is returned.  15 The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor. If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.  1 If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  1 If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.  10 No data is transferred. This is not considered an error and the current logical position will be unchanged.	SILI	Suppre	ess Incorrect Length Indicator					
Fixed  O The Transfer Length field specifies the length of the transfer in bytes. A single block of the length in Transfer Length is to be transferred.  • If the next block on tape is of Transfer Length, it is transferred to the initiator and GOOD status is returned.  • If the next block on tape is not of Transfer Length:  • If it is shorter, the whole block is transferred to the initiator.  • If it is longer, only the length requested is returned and the logical position is set to after the record.  • If SILI = 0, CHECK CONDITION status is returned. ILI is reported as described below.  • If SILI = 1, GOOD status is returned.  The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor. If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.  • If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  • If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length is to the stransferred. This is not considered an error and the current logical position will be unchanged.		- ' '	The read operation is terminated when the length of a block (on the tape) differs from the Transfer Length. Transfer Length bytes of data will have been transferred. The logical tape position will					
in Transfer Length is to be transferred.  If the next block on tape is of Transfer Length, it is transferred to the initiator and GOOD status is returned.  If the next block on tape is not of Transfer Length:  If it is shorter, the whole block is transferred to the initiator.  If it is longer, only the length requested is returned and the logical position is set to after the record.  If SILI = 0, CHECK CONDITION status is returned. ILI is reported as described below.  If SILI = 1, GOOD status is returned.  The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor. If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.  If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length		1	The drive will not report CHECK CONDITION status if the only error is that the Transfer Length is not equal to the actual block length recorded on the media.					
If it is shorter, the whole block is transferred to the initiator.  If it is longer, only the length requested is returned and the logical position is set to after the record.  If SILI = 0, CHECK CONDITION status is returned. ILI is reported as described below.  If SILI = 1, GOOD status is returned.  The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor. If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.  If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.  If a block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length	Fixed	0	<ul> <li>in Transfer Length is to be transferred.</li> <li>If the next block on tape is of Transfer Length, it is transferred to the initiator and GOOD</li> </ul>					
If it is longer, only the length requested is returned and the logical position is set to after the record.   If SILI = 0, CHECK CONDITION status is returned. ILI is reported as described below.   If SILI = 1, GOOD status is returned.   The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor. If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.   If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.   If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.								
record.  If SILI = 0, CHECK CONDITION status is returned. ILI is reported as described below.  If SILI = 1, GOOD status is returned.  The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor. If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.  If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.  If a block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length  O No data is transferred. This is not considered an error and the current logical position will be unchanged.			·					
If SILI = 1, GOOD status is returned.  The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor. If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.  If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Itansfer Length  O No data is transferred. This is not considered an error and the current logical position will be unchanged.								
The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor.  If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.  • If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  • If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.  • If a block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length  O No data is transferred. This is not considered an error and the current logical position will be unchanged.			If SILI = 0, CHECK CONDITION status is returned. ILI is reported as described below.					
bytes) is specified by the current block length specified in the Mode Parameter block descriptor.  If SILI = 0, a sequence of blocks of the currently configured block length is to be returned, the number of blocks being indicated in the Transfer Length field.  • If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  • If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.  • If a block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length  O No data is transferred. This is not considered an error and the current logical position will be unchanged.			If SILI = 1, GOOD status is returned.					
number of blocks being indicated in the Transfer Length field.  • If there is a sequence of blocks of this length on the tape, they are returned to the initiator with GOOD status.  • If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.  • If a block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer  Length  O No data is transferred. This is not considered an error and the current logical position will be unchanged.		1						
with GOOD status.  If a block that is shorter than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.  If a block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length  O No data is transferred. This is not considered an error and the current logical position will be unchanged.								
complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was returned.  • If a block that is longer than the configured length is encountered before the sequence is complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length  O No data is transferred. This is not considered an error and the current logical position will be unchanged.								
complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described below). The current position is set after the last block that was partially returned.  Transfer Length  Complete, the blocks up to that block are returned followed by the configured length from the record that was position is set after the last block that was partially returned.  No data is transferred. This is not considered an error and the current logical position will be unchanged.			complete, the blocks up to that block are returned followed by all of that block and CHECK CONDITION status (ILI will be reported as described below). The current position is set after					
Length unchanged.			complete, the blocks up to that block are returned followed by the configured length from the record that was too long and CHECK CONDITION status (ILI will be reported as described					
>0 The amount of data to be transferred, in bytes or blocks as specified by the Fixed field.	_	0						
		>0	The amount of data to be transferred, in bytes or blocks as specified by the Fixed field.					

# READ specific status

Event	Status	Key	Notes
SILI error	CHECK COND'N	no sense	ILI and Valid bits are set. The information bytes will be set as follows:
			Variable Block Mode: The difference between the requested Transfer Length and the actual block size. If the block size is bigger than the Transfer Length, this will be negative (twos complement).
			Fixed Block Mode: The difference between the requested number of records and the number of whole good records transferred. If the last record was under length, it is considered "whole good" for the purposes of this calculation.
Filemark encountered during a read	CHECK COND'N	no sense	The Mark bit is set. Logical position will be on the EOM side of the filemark. Additional sense is 0001 h (filemark

Event	Status	Key	Notes
			detected). The logical position will be on the EOM side of the filemark. Residue information is as described below.
EOD encountered during a read	CHECK COND'N	BLANK CHECK	Additional sense is set to 0005h (EOD detected). Residue information is as described below.
EOP/M encountered during a read	CHECK COND'N	MEDIUM ERROR	The EOM bit is set. Additional sense is set to 0002h (EOP/M detected). Residue information is as described below.
Failure to read data through media error or non-fatal drive error	CHECK COND'N	MEDIUM ERROR	Additional sense is set to 1100h (unrecovered read error) or 3B00h (sequential positioning error). Residue information is as described below.
Corrupt data format	CHECK COND'N	MEDIUM ERROR	Additional sense set to 3002h (can't read media).
Blank media encountered during a read	CHECK COND'N	BLANK CHECK	Caused by an attempt to read an unformatted tape. Additional sense is set to 5000h (EOD not found). Residue information is as shown below.

**NOTE:** Early warning end of medium information is not reported on reads.

### READ residue information

The Valid bit will be set. The information bytes will be as follows:

Variable Block Mode The requested transfer length (in bytes).				
Fixed Block Mode	The difference (in blocks) between the requested transfer size and the actual number of blocks transferred. A partially transferred block is not counted, so for example, if 3.5 out of 10 blocks have been transferred the residue will be 7.If the last block is an illegal length block, it is not counted among those transferred. For example, if 4 legal length blocks and 1 illegal length block have been transferred out of a total of 10, the residue will be 6.			

# READ 6 (CD-ROM mode) 08h

Transfer Length blocks of data are transferred to the host, starting from the current logical position specified by Logical Block Address. Any spacing performed to locate to the specified block address is performed with mark counting disabled.

Requests falling within the first 250 kilobytes of data on tape will be performed with very little delay (less than 2 seconds) because the drive caches this data at load time.

#### **Pre-execution checks**

Illegal Field	Fixed Bit	Bad LUN	Reservation
Deferred Error	Unit Attention	Media Access	Diagnostic Status

### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (08h)								
1	(MSB)		Logical Block Address						
3		-							
4	Transfer Length								
5	Control								

#### **CDB** fields

Logical Block Address	Specifies the block address from which to read. The tape drive will space to this block before reading data.				
Transfer Length	The number of blocks of data to return. Each CD-ROM block is 2048 bytes in size. This size is automatically set in the mode data's fixed block length while in CD-ROM mode.				

### READ 6 specific status

See the "READ specific status" (page 136).

### READ residue information

See the "READ residue information" (page 137) for the normal Read command.

# READ 10 (CD-ROM mode) 28h

Transfer Length blocks of data are transferred to the host, starting from the current logical position specified by Logical Block Address. Any spacing performed to locate to the specified block address is performed with mark counting disabled.

Requests falling within the first 250 kilobytes of data on tape will be performed with very little delay (less than 2 seconds) because the drive caches this data at load time.

#### Pre-execution checks

Illegal Field	Fixed Bit	Bad LUN	Reservation
Deferred Error	Unit Attention	Media Access	Diagnostic Status

### Command descriptor block

	7	6	5	4	3	2	1	0	
0				Operation	Code (28h)				
1	Logi	ical Unit Num	ber	DPO (0)	FUA (0)	Reser	ved (0)	RelAdr(0)	
2	(MSB)			1: l Dl.	l. A -ll				
5		-		rodicai Bio	ock Address			(LSB)	
6				Reser	ved (0)				
7	(MSB)	MSB)							
8		Transfer Length (LSB						(LSB)	
9		Control							

#### **CDB** fields

Logical Block Address	Specifies the block address from which to read. The tape drive will space to this block before reading data.
	The number of blocks of data to return. Each CD-ROM block is 2048 bytes in size. This size is automatically set in the mode data's fixed block length while in CD-ROM mode.

# READ 10 specific status

See the "READ specific status" (page 136).

#### READ 10 residue information

See the "READ residue information" (page 137) for the normal Read command.

### READ ATTRIBUTE 8Ch

The READ ATTRIBUTE command allows an application client to read attribute values to MAM (Medium Auxiliary Memory). It should be executed before sending a WRITE ATTRIBUTE command.

#### Pre-execution checks

Deferred Frror Illegal Field Reservation Unit Attention Media Access

In order to execute a READ ATTRIBUTE command, there must be a cartridge in the drive, even if it is only partially loaded, so that the MAM can be read. If there is no cartridge in the drive, the command is terminated with CHECK CONDITION, a sense key of NOT READY and additional sense of 3A00h (medium not present).

If there is no cartridge in the drive, the Cache bit is set to 1, and no cartridge has been loaded since the drive was power-cycled, the command is terminated with CHECK CONDITION, a sense key of NOT READY and additional sense of 3A00h (medium not present).

If the Volume Number or Partition Number values are invalid, CHECK CONDITION is reported. Sense data will be as described in the Illegal Field Checks.

The Service Action and the First Attribute ID fields must match one of the supported Service Actions and Attribute IDs. If they do not, CHECK CONDITION is reported. Sense data will be as described in the Illegal Field Checks.

### Command descriptor block

	7	6	5	4	3	2	1	0	
0		Operation Code (8Ch)							
1		Reserved (0)		Service Action					
2–4		Reserved (0)							
5		Volume Number (0)							
6		Reserved (0)							
7		Partition Number							
8	(MSB)			C: A 44	ribute ID				
9		_		rirsi Aii	ribute ID			(LSB)	
10	(MSB)			۸ اا م مسان	1 41-				
13		Allocation Length (LSB)							
14		Reserved (0) Cache					Cache		
15				Со	ntrol				

#### **CDB** fields

Service Action		Service actions are defined as follows. The data returned for each Service Action is described below.						
	Code Name Description							
	00h Attribute Values Returns the attribute values.							

	,	l control of the cont		
	01 h	Attribute List	Returns a list of available attribute IDs (read-only state or read/write state IDs).	
	02h	Volume List	Returns a list of known volume numbers. For LTO Ultrium drives, there is only a single volume, Volume 0.	
	03h	Partition List	Returns a list of known partition numbers. For LTO-1 to LTO-4 products there is only one partition, whose value is 0. For LTO-5 products there can be up to 2 partitions. For LTO-6 products there can be up to 4 partitions.	
	04h	Reserved		
	05h	Supported Attributes	Returns a list of supported attribute IDs (read-only state, read/write state IDs, or non-existent state).	
			NOTE: The first host-type vendor-unique attribute (1400h) is always reported even if it does not exist. Other host-type vendor-unique attributes will only be reported as supported if they exist.	
	06h-1Fh	Reserved		
Partition Number		the volume, where number will be retu	the first partition is 00h. Only attributes corresponding arned.	
First Attribute ID	more attribute	ifier of the first attribute to be returned. If it does not exist in MAM, but there a ibutes available after this one, the data returned will contain the values of thos . Otherwise CHECK CONDITION is returned with ILLEGAL REQUEST sense.		
Allocation Length			n bytes) that will be returned to the host. The drive will Allocation Length bytes, whichever is the lesser.	
Cache			rom the most recently mounted cartridge is reported. This attribute information. If a cartridge is mounted this bit is	

### READ ATTRIBUTE returned data for service actions

### Attribute Values service action

This service reads the values of attributes for the specified volume and partition, starting at the First Attribute ID. The attributes are returned in ascending numerical order. The format of the returned data is as follows:

	7	6	5	4	3	2	1	0	
0	(MSB)		Available Data (n=3)						
3			Available Data (n-3) (LSB)						
4		First Attaches and ID							
m		First Attribute ID							
:		:							
:	Attribute ID x								
n				Aiiribi	ле и х				

The Available Data field contains the number of bytes of attribute values returned. Even if the data returned has to be truncated because the Allocation Length is too small, the contents of the Available Data field remain the same.

For details of the available attributes and the format of the data returned for each, see "MAM attribute data" (page 142).

#### Attribute List service action

This service action is used to retrieve the identifiers of all the attributes that are supported and exist. The First Attribute ID field in the CDB is ignored. The attribute identifiers are returned in ascending numerical order. The format of the returned data is as follows:

	7	6	5	4	3	2	1	0
0	(MSB)		Available Data (n-3) (LSB)					
3								
4		Aurikuta ID O						
5			Attribute ID 0					
:		;						
<i>n</i> –1		Attribute ID x						
n				Allilbi	ле го х			

The Available Data field specifies the number of bytes of attribute ID data returned. Even if the data returned has to be truncated because the Allocation Length is too small, the contents of the Available Data field remain the same.

A two-byte Attribute ID is returned for each attribute available on MAM. See "Attribute ID values" (page 143) for a description of the Attribute ID values.

#### Partition List service action

The Partition List service action is used to report the number of partitions supported in the specified volume. The First Attribute ID field in the CDB is ignored. The information returned is as follows:

	7	6	5	4	3	2	1	0	
0	(MSB)		Available Data (2)						
1			Available Data (2) (LSB)						
2			First Partition Number (0)						
3		Number of Partitions Available							

The First Partition Number is the first partition available on the specified volume.

The Number of Partitions Available indicates the number of partitions available on the specified volume (1-4 for LTO-6 tape).

#### Volume List service action

The Volume List service action is used to report the number of volumes that the device server supports, which in the case of LTO Ultrium drives is 1. The Volume Number, Partition Number and Attribute fields in the CDB are ignored. The information returned is as follows:

	7	6	5	4	3	2	1	0
0	(MSB)	,	Available Data (2)					
1		Available Data (2) (LSB)						
2		First Volume Number (0)						
3		Number of Volumes Available (1)						

The Available Data field contains the length in bytes of the data that follows. Even if the data returned is truncated as a result of insufficient allocation length, the contents of the Available Data field are not altered.

## **READ ATTRIBUTE** specific status

The command will be terminated and will return CHECK CONDITION under the following circumstances:

Description	Sense Key	Addition	al Sense
There is no cartridge present in the drive, not even partially loaded.	NOT READY	3A00h	(medium not present)
The MAM is not accessible even though there is a tape in the drive.	MEDIUM ERROR	0410h	(MAM not accessible)
The MAM has failed (for example from a bad checksum).	MEDIUM ERROR	1112h	(MAM read error)
The combination of Volume Number and Partition Number is not valid.	ILLEGAL REQUEST	2400h	(invalid field in CDB)
The Service Action field does not match a supported Service Action ID.	ILLEGAL REQUEST	2400h	(invalid field in CDB)
The First Attribute ID field does not match a supported First Attribute ID.	ILLEGAL REQUEST	2400h	(invalid field in CDB)

### MAM attribute data

Attribute data sent with a WRITE ATTRIBUTE command or returned in response to a READ ATTRIBUTE command has the following format:

	7	6	5	4	3	2	1	0
0	(MSB)		Attribute Identifier					
1			Attribute identitier (LSB)					(LSB)
2	Read-Only		Reserved (0) Format					mat
3	(MSB)							
4		•		Attribute Length (n-4) (LSB)				
5	(MSB)		Attribute Value					
n		•		Attribu	re value			(LSB)

The format implies nothing about the physical representation of the data in the Medium Auxiliary Memory.

Attribute Identifier	The bin	The binary identifier for a single attribute. See "Attribute ID values" below.				
Read-Only		Specifies whether an attribute is read-only. The bit is ignored by the READ ATTRIBUTE command.				
	0	O The attribute may be changed by the WRITE ATTRIBUTE command.				
	1	The at	tribute is read-only and cannot be changed by WRITE ATTRIBUTE.			
Format	Specifie	s the d	ata format of the Attribute Value field. The possible values are:			
	Val	Value Description				
	00	00b Binary. The Attribute Value field contains binary data.				

	01b	ASCII. The Attribute Value field contains only graphic codes (20h–7Eh). It must be left-aligned and contain 20h (ASCII space) in any unused bytes.		
	10b	Text. The Attribute Value field contains textual data. The character set is as described in the Text Localization Identifier attribute in "Standard host type attributes" (page 147).		
	11 b	Reserved.		
Attribute Length	The length in bytes of the Attribute Value field.			

## Attribute ID values

Attributes can be Standard or Vendor-Unique. There are three groups of attributes: Device, Medium and Host attributes. Each group has a list of attributes, which characterize the group:

Attribute ID	Attribute Type	Standard/Vendor-Unique	Read-Only		
0000h-03FFh	Device	Standard	Yes		
0400h-07FFh	Medium	Standard	Yes		
0800h–0BFFh	Host	Standard	No		
OCOOh-OFFFh	Device	Vendor-Unique	Yes		
1000h-13FFh	Medium	Vendor-Unique	n/a		
1400h-17FFh	Host	Vendor-Unique	No		
1800h–FFFFh	Reserved				

WRITE ATTRIBUTE commands are only accepted for Host type attributes (either Standard or Vendor-Unique).

Trying to read or write Device or Medium type vendor-unique attributes will fail and CHECK CONDITION status is reported. Sense data will be as described in the Illegal Field Checks.

### Attribute states

Attribute Type	Atttribute State	Description				
Medium or Device	Read-only	An application client may read the contents of the MAM attribute with the READ ATTRIBUTE command, but an attempt to clear or change the MAM attribute using the WRITE ATTRIBUTE command results in the command being terminated with CHECK CONDITION status. When the Read-Only bit is one, the attribute is in the read-only state.				
	Unsupported	The device server does not support the MAM attribute and will not return it in response to a READ ATTRIBUTE command.				
	Unavailable	The MAM attribute exists but it is not available at this time. The device server will not return it in response to a READ ATTRIBUTE command.				
Host	Non-existent	A host attribute does not exist in the MAM until a WRITE ATTRIBUTE command creates it.				
	Read/Write	The MAM attribute has been created using the WRITE ATTRIBUTE command. After the MAM attribute has been created, the contents may be altered using subsequent WRITE ATTRIBUTE commands. A read/write MAM attribute may be returned to the non-existent state using a WRITE ATTRIBUTE command with the attribute length set to zero. When the Read-Only bit is zero, the MAM attribute is in the read/write state.				
	Unsupported	The device server does not support the MAM attribute and will not return it in response to a READ ATTRIBUTE command.				

Remaining capacity in partition and Maximum capacity in partition	Native c	apacities	in MB, c	assuming i	no data	compressi	on.		
TapeAlert flags	1 bit per flag (MSB = flag 1, LSB = flag 64). Bits specify flags set during previous load.							previous	
Load count	The number of times this tape has been fully loaded. It is never reset.								
MAM space remaining	The space currently free in the MAM. The total MAM capacity is reported in the MAM Capacity attribute defined in "Standard medium type attributes" (page 147). Note that it may not always be possible to use all the free space in a given MAM implementation. Depending on the internal organization of the memory and the software that controls it, fragmentation issues may mean that certain attribute sizes might not be fully accommodated as the MAM nears its maximum capacity.								
Assigning organization	The Vendor ID of the organization that will define attribute 0006h. It contains the string "LTO-CVE".						ntains the		
Formatted density code	The medium density code.								
Initialization count	O The tape is not initialized.								
	1 In other cases.								
Volume identifier	Set and reset by the SET MEDIUM ATTRIBUTE ADC command.								
Volume change reference	Indicates changes in the state of the medium related to logical objects.								
Device make/serial number at last load and Device make/ serial	These attributes provide a rolling history of the last four device servers in which the tape has been loaded. The format of the attributes is as follows:								
number at load –n		7	6	5	4	3	2	1	0
	0	(MSB)					Į.		
	7		Vendor Identification (L						(LSB)
	8	(MSB)	ISB)						
	Product Serial Number —						(LSB)		
	Vendor Identification			The same value as is returned in the SCSI INQUIRY command by the device server, padded with ASCII spaces (20h).					
	Product Serial Number			Vendor-assigned serial number, padded with ASCII spaces (20h).					
Total MB written in medium life and Total MB read in medium life	The total number of data bytes written to or read from the tape (after any data compression has been applied) over the entire tape life. These figures are cumulative and will never be reset.								
Total MB written in current/last load and Total MB read in current/last load	These are similar to the attributes above but apply to the current load (if the tape is currently loaded) or the last load (if the tape is currently unloaded). The device server should reset these attributes to zero when the tape is loaded.								
Logical position of first encrypted block	Logical address on tape of the first encrypted block on tape.  If there are no encrypted blocks, set to FFFF FFFF FFFFh.  If it is unknown whether there are any encrypted blocks, then set to FFFF FFFF FFFF FFFFh.								
Logical position of first unencrypted block after the first encrypted block						of first			

The attribute value is set to FFFF FFFF FFFF FFFEh if the logical position of first encrypted block attribute is set to:

- FFFF FFFF FFFFh; or

## Standard device type attributes

ID	Attribute	Size (bytes)	Format
0000h	Remaining capacity in partition	8	Binary
0001 h	Maximum capacity in partition	8	Binary
0002h	TapeAlert flags	8	Binary
0003h	Load count	8	Binary
0004h	MAM space remaining	8	Binary
0005h	Assigning organization	8	ASCII
0006h	Formatted density code	1	Binary
0007h	Initialization count	1	Binary
0008h	Volume identifier	0–32	ASCII
0009h	Volume change reference	4	Binary
000Ah-0209h	Reserved		
020Ah	Device make/serial number at last load	40	ASCII
020Bh	Device make/serial number at load –1	40	ASCII
020Ch	Device make/serial number at load –2	40	ASCII
020Dh	Device make/serial number at load -3	40	ASCII
020Eh-021Fh	Reserved		
0220h	Total MB written in medium life	8	Binary
0221 h	Total MB read in medium life	8	Binary
0222h	Total MB written in current/last load	8	Binary
0223h	Total MB read in current/last load	8	Binary
0224h	Logical position of first encrypted block	8	Binary
0225h	Logical position of first unencrypted block after the first encrypted block	8	Binary
0225h-03FFh	Reserved		

Remaining capacity in partition and Maximum capacity in partition	Native capacities in MB, assuming no data compression.
TapeAlert flags	1 bit per flag (MSB = flag 1, LSB = flag 64). Bits specify flags set during previous load.
Load count	The number of times this tape has been fully loaded. It is never reset.
MAM space remaining	The space currently free in the MAM. The total MAM capacity is reported in the MAM Capacity attribute defined in "Standard medium type attributes" (page 147). Note that it may not always be possible to use all the free space in a

	and the	given MAM implementation. Depending on the internal organization of the memory and the software that controls it, fragmentation issues may mean that certain attribute sizes might not be fully accommodated as the MAM nears its maximum capacity.							
Assigning organization		The Vendor ID of the organization that will define attribute 0006h. It contains the string "LTO-CVE".							
Formatted density code	The med	ium dens	sity code.						
Initialization count	0	The tap	e is not in	itialized					
	1	In other	cases						
Volume identifier	Set and	reset by	the SET N	IEDIUM A	TTRIBUTI	ADC co	mmand.		
Volume change reference	Indicates	change	s in the st	ate of the	medium	related to	logical	objects.	
Device make/serial number at last load and Device make/serial number at load –n			provide a n loaded.						n which
number at load –n		7	6	5	4	3	2	1	0
	0	(MSB)		\/.	ممامة اداء	entification			
	7			V€	endor ide	eninicatior	1		(LSB)
	8	(MSB)	SB) Product Serial Number						
	39		-	rro	duct ser	iai ivumbe	er		(LSB)
	Vendor I	dentifica	ıtion		d by the	is is return device se			
	Product	Serial Nu	umber	Vendor-o spaces (:		serial num	nber, pa	dded witl	h ASCII
Total MB written in medium life and Total MB read in medium life	compres	sion has	of data b been app vill never l	ilied) over					
Total MB written in current/last load and Total MB read in current/last load	is curren	tly loade	to the atted) or the et these a	last load (	if the tap	e is curre	ntly unlo	oaded). Tl	
Logical position of first encrypted	Logical o	address c	on tape of	the first e	encryptec	l block on	tape.		
block			crypted b						
	FFFF FFF	_	vhether the	ere are ar	ny encryp	ted block	s, then s	et to FFFI	-
Logical position of first unencrypted block after the first encrypted block			on tape of ock on tap		inencryp	ed block	on tape	that follo	ws the
			ie is set to attribute is		F FFFF FF	FFh if the	logical	position (	of first
	• FFFF	FFFF FFF	F FFFFh; c	or					
			er than FF e first encr						and no
			ue is set to attribute is		F FFFF FF	FEh if the	logical	position (	of first
	• FFFF	FFFF FFF	F FFFFh; c	or					
		own whet	er than FF ther any b						

# Standard medium type attributes

ID	Attribute	Size (bytes)	Format	Description		
0400h	Medium manufacturer	8	ASCII	The name of the manufacturer.		
0401 h	Medium serial number	32	ASCII	The serial number, left-aligned and padded with ASCII spaces (20h).		
0402h	Medium length	4	Binary	The length of the tape in meters. A value of 0 means the length is undefined.		
0403h	Medium width	4	Binary	127 The width of the tape in tenths of a mm		
0404h	Assigning organization	8	ASCII	Contains the string "LTO-CVE".		
0405h	Medium density code	1	Binary	The tape density code.		
0406h	Medium manufacturer date	8	ASCII	The date of manufacture in the format YYYYMMDD.		
0407h	MAM capacity	8	Binary	The total capacity of the MAM, not its free space.		
0408h	Medium type	1	Binary	The type of tape:		
				0 Data cartridge 1 Cleaning cartridge 80h WORM cartridge Other values are reserved.		
0409h	Medium type information	2	Binary	Only meaningful for a cleaning cartridge, where it gives the maximum number of cleaning cycles permitted.		
040Ah – 07FFh	Reserved					

## Standard host type attributes

These only exist if they are initialized by an application:

ID	Attribute	Size (bytes)	Format	Description
0800h	Application vendor	8	ASCII	
0801h	Application name	32	ASCII	
0802h	Application version	8	ASCII	
0803h	User medium text label	160	Text	The user level identifier for the tape.
0804h	Data and time last written	12	ASCII	Format is YYYYMMDDHHMM (0–24 hours)
0805h	Text localization identifier	1	Binary	Defines the character set for the attributes defined as "text". See the table below.
0806h	Barcode	32	ASCII	The barcode associated with the medium in the MAM.
0807h	7h Owning host textual name		Text	The host server from which the User Medium Text Label originates.
0808h	Media pool	160	Text	Indicates the media pool to which this tape belongs.
0809h	Partition user text label	16	ASCII	Identifier for the partition specified in the CDB.

ID	Attribute	Size (bytes)	Format	Description		
080Ah	Load/unload at partition	1	Binary	0	The load or unload occurs at the beginning of the tape. This is the default setting if the attribute does not exist.	
				1	Loads and unloads at the partition specified in the CDB are allowed	
080Bh	Application format version	16	ASCII			
080Ch	Volume coherency information	23-n	Binary	Contains information used to maintain coherency of information on a volume. It may be used to identify whether the volume contents have changed since the last time this attribute was written to MAM.		
080Dh– BFFh	Reserved					

# Vendor-unique medium type attributes

Attribute	Name	Attribute	Format		Description							
ID		Length		Bytes								
1000h	Unique Cartridge Identity (not	28	Binary	0–3	LTO CM Serial Number	4 bytes						
	applicable to cleaning cartridges)			4–11	Tape pancake identification field from the Manufacturer's Word	8 bytes						
				12–19	Manufacturer's Name field from the Manufacturer's Word	8 bytes						
										20–23	The LPOS value at LP1 (deduced from the tape, or extracted from the Initialization Data page in the CM)	4 bytes
				24–25	Cartridge Type field from the Cartridge Manufacturer's Page in the LTO CM	2 bytes						
				26–27	Reserved (set to zero)	2 bytes						
1001 h	Alternative Unique Cartridge Identity	24	Binary	0–3	LTO CM Serial Number	4 bytes						
				4–11	Tape pancake identification field from the Manufacturer's Word	8 bytes						
				12–21	Cartridge Serial Number	10 bytes						
				22–23	Cartridge Type field from the Cartridge Manufacturer's Page in the LTO CM	2 bytes						

### Text localization identifiers

The Text Localization Identifier defines the character set used for attributes with a text format:

ID	Format
00h	No code specified (ASCII)
01 h	ISO/IEC 8859-1 (Europe, Latin America)
02h	ISO/IEC 8859-2 (Eastern Europe)
03h	ISO/IEC 8859-3 (SE Europe/miscellaneous)
04h	ISO/IEC 8859-4 (Scandinavia/Baltic)
05h	ISO/IEC 8859-5 (Cyrillic)
06h	ISO/IEC 8859-6 (Arabic)
07h	ISO/IEC 8859-7 (Greek)
08h	ISO/IEC 8859-8 (Hebrew)
09h	ISO/IEC 8859-9 (Latin 5)
0Ah	ISO/IEC 8859-10 (Latin 6)
OBh–7Fh	Reserved
80h	ISO/IEC 10646 (Unicode)
81 h	ISO/IEC 10646 -1, Amendment no. 2 (UTF-8)
82h–FFh	Reserved

## READ BLOCK LIMITS 05h

READ BLOCK LIMITS tells the drive to return data defining the maximum block size that it can support. Note that this is the maximum supportable, not the fixed block size.

#### **Pre-execution checks**

Deferred Error Illegal Field **Unit Attention** Reservation

### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (05h)								
1–4	Reserved (0)								
5				Со	ntrol				

### Read Block Limits data

	7	6	5	4	3	2	1	0			
0	00h										
1	(MSB)										
3			Maximum Block Length								
4	(MSB)										
5		-	Minimum Block Length (0001 h)								

If Logical Block Protection is enabled (see the "Control_Data_Protection_sub-page" (page 104)), then this value is set to 2 <sup>24</sup> -1-4
(FFFFBh). Otherwise it is set to FFFFFFh.

## READ BUFFER 3Ch

READ BUFFER reads data from the memory on the drive and sends it to the initiator. The value of the Mode field determines whether only the 4-byte descriptor is returned, only the data is returned, or whether both are returned.

#### **Pre-execution checks**

Illegal Field Reservation Deferred Error Unit Attention

If any of the following rules are broken then CHECK CONDITION status is reported. Sense data will be as described in Illegal Field Checks.

### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (3Ch)								
1	Reserved (0) Mode								
2	Buffer ID								
3	(MSB)	SB)  Buffer Offset							
5		-	(LSB)						
6	(MSB)		Allocation Length -						
8		-							
9	Control								

#### **CDB** fields

Mode	O0000b A 4-byte descriptor is returned, followed by (Allocation Length – 4) bytes of d data is read from the buffer identified by the Buffer ID, starting from offset zero buffer.					
		The Buffer ID and Buffer Offset must bot	h be 00h.			
	00010b The drive returns Allocation Length bytes of data which is read from the buby the Buffer ID, starting from Buffer Offset bytes from the start of the buffer					
	There are no restrictions on the value of Buffer ID and Buffer Offset, except the Offset must be kept within the buffer size.					
O0011b The drive returns a 4-byte descriptor for the buffer identified by the Buffer buffer IDs will return a buffer descriptor of all zeros.  The Buffer Offset field must be zero.					D field. Invalid	
	01010b	The drive returns data from the Echo But	fer. The Buffe	r ID and Offset are ig	gnored.	
	01011b	The drive returns the Echo Buffer descrip	tor. The Buffe	er ID and Offset are ig	gnored.	
Buffer ID		The Buffer ID indicates which buffer is to be read. The buffers are defined as follows.  NOTE: Processor memory (Buffer ID 01h) is not accessible.				
	Buffer ID	Memory Area	Category	Offset Boundary		
	00h	Main buffer memory	RAM	4 byte		

02h	Burst buffer	RAM	4 bytes	
10h	CM EEPROM	EEPROM	1 byte	
11 h	Mechanical EEPROM	EEPROM	1 byte	
12h	Head assembly EEPROM	EEPROM	1 byte	
13h	PCA EEPROM	EEPROM	1 byte	
20h-3Fh	Main buffer segments 0–31	RAM	4 bytes each	details below
40h	Snapshot data buffer		1 byte	see below
90h	Mech EPPROM Manufacturing Parameters	EEPROM	1 byte	
91 h	Mech EPPROM Drive Usage Parameters	EEPROM	1 byte	
93h	Mech EPPROM Drive Usage Parameters (Shipped)	EEPROM	1 byte	
94h	Mech EPPROM In-House Testing	EEPROM	1 byte	
95h	Mech EPPROM Servo/Mech Use	EEPROM	1 byte	
96h	Mech EPPROM Host Access Table	EEPROM	1 byte	
97h	Mech EPPROM Partner-specific Config Table	EEPROM	1 byte	
99h	Mech EPPROM Ethernet I/F Table	EEPROM	1 byte	
9Ah	Mech EPPROM Certificate Table	EEPROM	1 byte	
9Bh	Mech EPPROM Reserved	EEPROM	1 byte	
9Ch	Mech EEPROM LTT Drive Health Rules	EEPROM	1 byte	
9Dh	Mech EEPROM Tape Pull Usage	EEPROM	1 byte	
A0h	Head EPPROM Manufacturing Parameters	EEPROM	1 byte	
A1h	Head EPPROM Tuning Parameters	EEPROM	1 byte	
A2h	Head EPPROM Resistance Parameters	EEPROM	1 byte	
A3h	Head EPPROM Formatter Data Skew Parameters	EEPROM	1 byte	
A4h	Head EPPROM In-House Testing	EEPROM	1 byte	
A5h	Head EPPROM Manufacturing Use	EEPROM	1 byte	
A6h	Head EPPROM Read/Write Tuning Parameters	EEPROM	1 byte	
A7h	Head EPPROM Media Usage Table	EEPROM	1 byte	
A8h	Head EPPROM Reserved	EEPROM	1 byte	
A9h	Head EPPROM Jabil Production	EEPROM	1 byte	
AAh	Head EPPROM Reserved	EEPROM	1 byte	
ABh	Head EEPROM Vendor Information	EEPROM	1 byte	
BOh	PCA EPPROM Manufacturing Parameters	EEPROM	1 byte	
B1h	PCA EPPROM Tape Speed Parameters	EEPROM	1 byte	
B2h	PCA EPPROM Tape Tools Area	EEPROM	1 byte	

	4									
	B3h	PCA EPPROM Thermal Data Parameters	EEPROM	1 byte						
	B4h	PCA EPPROM Tape 'A' Log	EEPROM	1 byte						
	B5h	PCA EPPROM Tape 'B' Log	EEPROM	1 byte						
	B6h	PCA EPPROM Tape 'C' Log	EEPROM	1 byte						
	B7h	PCA EPPROM Tape 'D' Log	EEPROM	1 byte						
	B8h	PCA EPPROM Write ERT Logs	EEPROM	1 byte						
	B9h	PCA EPPROM Write Fault Counters	EEPROM	1 byte						
	BAh	PCA EPPROM In-House Testing	EEPROM	1 byte						
	BBh	PCA EPPROM Read ERT Logs	EEPROM	1 byte						
	BCh	PCA EPPROM Persistent Reservation Table	EEPROM	1 byte						
	BDh	PCA EPPROM Host I/F Information Table	EEPROM	1 byte						
	BEh	PCA EPPROM NV Logs	EEPROM	1 byte						
	BFh	PCA EEPROM Physical Calbration Table	EEPROM	1 byte						
	C0h	PCA-2 EPPROM KMA Security Table	EEPROM	1 byte						
	C1h	PCA-2 EPPROM Reserved	EEPROM	1 byte						
Buffer Offset	The Buffer Offset field may be set to any address in the buffer, but must obey the specified Offset Boundary.									
Allocation Length	The amount	of data to return. Allocation Length + Buf	fer Offset mu	st be within the buffer size.	The amount of data to return. Allocation Length + Buffer Offset must be within the buffer size.					

# Memory sizes

Main	Buffer	Memory
------	--------	--------

Size: 512 MB, reported size FFFFFh.

Because the buffer is greater than 16 MB, additional buffer IDs have been defined to allow the buffer to be accessed in 16 MB segments. These are as follows:

Buffer ID	Address
20h	0000000h + Buffer Offset (same as Buffer ID 00h)
21 h	01000000h + Buffer Offset (in other words, +16 MB)
22h	02000000h + Buffer Offset (in other words, +32 MB)
23h	0300000h + Buffer Offset (in other words, +48 MB)
24h	0400000h + Buffer Offset (in other words, +64 MB)
25h	05000000h + Buffer Offset (in other words, +80 MB)
26h	06000000h + Buffer Offset (in other words, +96 MB)
27h	0700000h + Buffer Offset (in other words, +112 MB)
28h	08000000h + Buffer Offset (in other words, +128 MB)
29h	0900000h + Buffer Offset (in other words, +144 MB)
2Ah	0A000000h + Buffer Offset (in other words, +160 MB)
2Bh	OBO00000h + Buffer Offset (in other words, +176 MB)

	2Ch	OCO00000h + Buffer Offset (in other words, +192 MB)		
	2Dh	0D000000h + Buffer Offset (in other words, +208 MB)		
	2Eh	0E000000h + Buffer Offset (in other words, +224 MB)		
	2Fh	0F000000h + Buffer Offset (in other words, +240 MB)		
	30h	10000000h + Buffer Offset (in other words, +256 MB)		
	31h	11000000h + Buffer Offset (in other words, +272 MB)		
	32h	12000000h + Buffer Offset (in other words, +288 MB)		
	33h	13000000h + Buffer Offset (in other words, +304 MB)		
	34h	14000000h + Buffer Offset (in other words, +320 MB)		
	35h	15000000h + Buffer Offset (in other words, +336 MB)		
	36h	16000000h + Buffer Offset (in other words, +352 MB)		
	37h	17000000h + Buffer Offset (in other words, +368 MB)		
	38h	18000000h + Buffer Offset (in other words, +384 MB)		
	39h	19000000h + Buffer Offset (in other words, +400 MB)		
	3Ah	1A000000h + Buffer Offset (in other words, +416 MB)		
	3Bh	1B000000h + Buffer Offset (in other words, +432 MB)		
	3Ch	1C000000h + Buffer Offset (in other words, +448 MB)		
	3Dh	1D000000h + Buffer Offset (in other words, +464 MB)		
	3Eh	1E000000h + Buffer Offset (in other words, +480 MB)		
	3Fh	1F000000h + Buffer Offset (in other words, +496 MB)		
SCSI Burst Buffer	Addressable size :	= 200000h bytes		
LTO-Cartridge Memory	Size = 3FE0h bytes			
Mechanism EEPROM	Size = 10000h by	rtes		
Head Assembly EEPROM	Size = 8000h bytes			
PCA EEPROM	Size = 8000h byte	es		

## READ BUFFER returned data:

The format of the 4-byte descriptor for Mode 00000b is as follows:

	7	6	5	4	3	2	1	0
0		Reserved (0)						
1	(MSB)			D				
3		-	Buffer Capacity (LS					(LSB)

The format of the 4-byte descriptor for Mode 00011b is as follows:

	7	6	5	4	3	2	1	0
0	Buffer Offset Boundary							
1	(MSB)			D				
3		•	Buffer Capacity (LSB)					(LSB)

The format of the 4-byte Echo buffer descriptor for Mode 01011 b is as follows:

	7	6	5	4	3	2	1	0
0	Reserved (0)						EBOS (1)	
1	(MSB)		E   D (( C: (1000 )					
3		•	Echo Buffer Size (1000h)					(LSB)

## Reading the Snapshot data buffer

You can use the READ BUFFER command with Buffer ID 40h to retrieve the latest Snapshot log. The main advantage of this over using the READ SNAPSHOT LOG command to retrieve the most recent Snapshot log, is that the data can be retrieved over a number of commands, making the data more manageable in library systems. However the Snapshot data buffer has neither a fixed location nor size, so you must create a Snapshot log before you can access the Snapshot data buffer. Consequently, using READ BUFFER commands to access the Snapshot data buffer requires special handling and consideration, as described below.

- 1. To determine the length of the Snapshot data buffer, execute a READ BUFFER command with Mode set to Descriptor (03h) and Buffer ID set to 40h.
- 2. Retrieve the buffer contents by executing a READ BUFFER command with Mode set to Data (02h) and Buffer ID set to 40h.

So that the contents of the Snapshot data buffer are preserved during retrieval using a READ BUFFER command, they are locked from the moment the first byte of the buffer is retrieved, and remain locked until the last byte has been retrieved. This allows you to retrieve the contents of the buffer using multiple READ BUFFER commands. The contents cannot be retrieved using READ BUFFER until the buffer has been locked; it is therefore necessary to start retrieval from Buffer Offset 000000h. You do not need to read the entire buffer contents to unlock the buffer; only to read the last byte. The buffer is also unlocked when a FORCE SNAPSHOT command is executed.

- If a Snapshot log has not been created, the READ BUFFER command terminates with CHECK CONDITION status, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).
- If a Snapshot log is being created, or the Snapshot command set is being updated, the command terminates with CHECK CONDITION status, a sense key of NO SENSE and additional sense of 0016h (operation in progress).
- If another initiator is retrieving the most recent Snapshot log using either a READ SNAPSHOT LOG or READ BUFFER command, the READ BUFFER command terminates with CHECK CONDITION status, a sense key of NO SENSE and additional sense of 0016h.

## READ CAPACITY (CD-ROM mode) 25h

READ capacity transfers Read Capacity data to the host.

#### Pre-execution checks

Illegal Field	Fixed Bit	Bad LUN
Reservation	Deferred Error	Unit Attention

If the drive is not in CD-ROM mode, the request will return CHECK CONDITION status with a sense key Illegal Command.

#### Command descriptor block

	7	6	5	4	3	2	1	0
0		,		Operation	Code (25h)			
1	Log	ical Unit Num	nber		Reserv	red (0)		RelAdr(0)
2	(MSB)				l. A -l-l (O)			
5		Logical Block Address (0)					(LSB)	
6	Reserved (0)							
7	Reserved (0)							
8	Reserved (0)				PMI			
9	Control							

#### **CDB** fields

Logical Block Address	This flag is ignored. It is recommended that it should be zero.
PMI	This flag is ignored. It is recommended that it should be zero.

## Read Capacity data

The following data is always returned

	7	6	5	4	3	2	1	0			
0	(MSB)		Poturned Logical Plack Address (OOO (POOOb)								
3			Returned Logical Block Address (0004B000h)								
4	(MSB)		Block Length in bytes (0000800h)								
7			ВЮС	k tengin in b	yies (000008)	Junj		(LSB)			

## READ FIRMWARE TRACE LOG A3h (1Fh)

READ FIRMWARE TRACE LOG allows an application client to retrieve a list of supported firmware trace logs and retrieve drive firmware trace logs. Each firmware subsystem's trace logs consist of one or more trace log banks, which need to be extracted individually using separate READ FIRMWARE TRACE LOG commands.

If the Trace Log and Trace Bank fields are set to zero, the command reports a list of supported trace logs. In order to extract all trace logs an application client should retrieve the list of supported firmware trace logs and then retrieve all the logs in the order they are reported in the list. Trace log banks should be retrieved in numerical order; bank zero should always be retrieved first.

#### Pre-execution checks

Illegal Field	Reservation	Deferred Error	Unit Attention

### Command descriptor block

	7 6 5 4 3 2 1								
0	Operation Code (A3h)								
1		Ignored			Ser	vice Action (1	Fh)		
2				Service Action	Qualifier (10h)				
3				Trace	e Log				
4	Trace Bank								
5				Reserv	red (0)				
6				Allocatio	n I anath				
9		Allocation Length							
10	Reserved (0)								
11				Cor	ntrol				

#### **CDB** fields

Trace Log	Specifies the	firmware subsystem trace log to return:						
	00h	Supported list of trace logs						
	01 h	System ARM Trace Log						
	02h	Host ARM Trace Log						
	03h	Management ARM Trace Log						
	04h	Orion ARM Trace Log						
	05h–FFh	Reserved						
Trace Bank	trace log in a	bank to return of the firmware subsystem specified in the Trace Log field. The first my firmware subsystem is Bank O. The Trace Bank field can take values in the 19th to the number of trace banks minus one.						
Allocation Length	The length in be the lesser command.	bytes allocated for the parameter data. The actual number of bytes returned will of the length of the actual parameter list and the allocation length specified in the						

### READ FIRMWARE TRACE LOG returned data

The format of firmware trace logs depends on the subsystem dependant and not defined here. The format of the parameter data when reporting the list of supported trace logs (both the Trace Log and Trace Bank fields set to 0) is as follows:

	7	6	5	4	3	2	1	0			
0	(MSB)			Deter Lan			,	,			
3			Data Length (n-3) (LSB)								
				Trace Log D	escriptor List						
4 : 11				Trace Log De	escriptor (first)						

	7	6	5	4	3	2	1	0		
:										
n–7				Trace Loa Do	escriptor (last)					
n				nace log Di	escripior (lasi)					

### **Trace Log Descriptors:**

	7	7 6 5 4 3 2 1 0								
0		Trace Log								
1		Trace Banks								
2–3		Reserved (0)								
4–7				Maximum Tı	ace Log Size					

Trace Log	As above, in the Command Descriptor Block field.
Trace Banks	The number of trace log banks supported by the firmware subsystem specified in Trace Log.
Maximum Trace Log Size	The maximum length in bytes of the each trace log bank indicated in the Trace Log field.

# READ LOGGED-IN HOST TABLE A3h (1Fh)

The READ LOGGED-IN HOST TABLE command reports the hosts currently logged in to the drive.

#### **Pre-execution checks**

**Unit Attention** Illegal Field Reservation Deferred Error

### Command descriptor block

	7	6	1	0								
0		Operation Code (A3h)										
1		Ignored Service Action (1 Fh)										
2		Service Action Qualifier (01h)										
3		Reserved (0) Report Type							Reserved (0)			
4–5				Reser	ved (0)							
6	(MSB)			۸ اا م مس <b>ن</b>	1 41-							
9		Allocation Length (LSB)										
10	Reserved (0)											
11		Control										

#### **CDB** fields

Report Type	Determines the	contents of the returned data:
	00h	Return a logged-in host descriptor for all hosts
	01 h	Only return a descriptor for the host that issued this command

	02h–0Fh	Reserved
Allocation Length		bytes allocated for the returned parameter data. The actual number returned er of the length of the actual parameter list and the allocation length.

# READ LOGGED\_IN HOST TABLE returned data

The format of the READ LOGGED-IN HOST TABLE parameter list is as follows:

	7	6	5	4	3	2	1	0			
0	(MSB)		Description list length (n. 2)								
3		-	Parameter List Length (n-3) (LSB)								
4		Host Descriptor									
n				HOST D	escribior						

Host Descriptors are defined as follows:

	7	6	5	4	3	2	1	0
0		,	\\/-		da Niarra (O las	4\	,	'
7		World-Wide Node Name (8 bytes)						
8		NA/and NA/inda Dank Narras (O buston)						
15		World-Wide Port Name (8 bytes)						
16		C						
19		Source ID (4 bytes)						
20								
25		Port Log-In Time (6 bytes)						
26	Reserv	red (0)	ME		Reserved (0)		PHY	Port
27				На	ot ID			
28		Host ID						
29		Relative Port Index						
30–31				Reser	ved (0)			

World-Wide Node Name	The logged	l-in host's Node WWN identifier				
World-Wide Port Name	The logged	ne logged-in host's Port WWN identifier.				
Source ID		channel drives, the logged-in host's source identifier from the fabric switch. On the field is zero.				
Port Log-In Time	The time-stamp of when the host completed its PLOGI process.					
ME	1	The information reported in this descriptor corresponds to the initiator that sent the command.				
PHY Port	The physical target port this host is connected to:					
	00b	Port A				
	01b Port B					
	10b-11 b	Reserved				

Host ID	The logged	he logged-in host's index in the Logged-In Host Table (in the range 0–511).					
Primary Port Index	The primar	y port index value for the port the host is logged-in on:					
	00h	Reserved					
	01 h	Primary Fibre Channel/SAS Port A					
	02h	Primary Fibre Channel/SAS Port B					
	03h	Primary Fibre Channel NPIV Port A					
	04h	Primary Fibre Channel NPIV Port B					
	05h–FFh	Reserved					

## READ MEDIA SERIAL NUMBER ABh (01h)

READ MEDIA SERIAL NUMBER provides a method for the host application to read the serial number of the cartridge currently loaded in the drive.

#### Pre-execution checks

Illegal Field	Reservation	Deferred Error	Unit Attention	Media Access
---------------	-------------	----------------	----------------	--------------

#### Command descriptor block

	7	6	5	4	3	2	1	0
0	Operation Code (ABh)							
1	Reserved(0) Service Action (01h)							
2	D 1/0							
8		Reserved (0)						
6	(MSB)							
9		Allocation Length (LSB)						(LSB)
10	Reserved(0)							
11		Control						

#### **CDB** fields

Allocation Length	The maximum amount of data (in bytes) to be returned to the host. The drive will return the entire serial number string or allocation length bytes, whichever is least.
	schar homber shing of anocanon length bytes, whichever is least.

If there is no cartridge in the drive, the command is terminated with CHECK CONDITION status. The sense key is set to NOT READY with additional sense of 3A00h (medium not present).

### READ MEDIA SERIAL NUMBER returned data

The data returned depends on whether a barcode number has been stored in the LTO-CM using the WRITE ATTRIBUTE command. Storing this is the responsibility of the automation controller or host application.

#### No barcode stored

	7	6	5	4	3	2	1	0	
0	(MSB)	,	Serial Number Length (OCh)						
3			Serial Number Length (UCh)						
4	(MSB)		Cartridge Serial Number						
13									
14	(MSB)		ASCII NUL characters (00h)						
15									

Cartridge Serial Number	The serial number of 10 ASCII characters stored in the LTO-CM Cartridge Manufacturer's
	Information page.

### Barcode stored

	7	6	5	4	3	2	1	0	
0	(MSB)		Serial Number Length (2Ch)						
3									
4	(MSB)		Cartridge Serial Number						
13									
14	(MSB)		ASCII Space characters (20h)						
15									
16	(MSB)		Barcode Number						
47									

## **READ POSITION 34h**

The READ POSITION command returns data representing the current logical position to the host. The position is the count of all marks and blocks between BOM and the current logical position. The first block is block 0.

The command causes no tape movement.

#### **Pre-execution checks**

Illegal Field	Reservation	Deferred Error
Unit Attention	Media Access	Diagnostic Status

### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (34h)								
1	Reserved(0)			Service Action					
2	Reserved (0)								

	7	6	5	4	3	2	1	0			
6				'							
7											
8		Allocation Length									
9				Со	ntrol						

### **CDB** fields

Service Action	The follo	wing values are supported:						
	00h	Short Form Block ID						
	06h Long Form							
	08h	Extended Form						
Allocation Length	For Servi	ce Actions 00h and 06h, must be 0.						

## Short Form Block ID

	7	6	5	4	3	2	1	0		
0	ВОР	EOP	EOP LOCU (1) BYCU (1) Rsvd (0) LOLU (0) Obsolete							
1	Partition Number									
2	Reserved (0)									
3				Keser	ved (U)					
4	(MSB)			Eirot Dlac	l. Location					
7			First Block Location							
8	(MSB)		Leat Dlack	location (can	ne as First Bloc	l. Location)				
11			LUSI DIOCK	Localion (sair	ie as riisi bioc	k Localion)		(LSB)		
12				Reser	ved (0)					
13	(MSB)			lumbar af bla	ala in hullor //	<b>N</b>				
15			Number of blocks in buffer (0)							
16	(MSB)		Number of bytes in buffer (0)							
19			ı	Antimet of by	ies iii buller (C	')		(LSB)		

## READ POSITION returned data fields—short block form

ВОР	0	The current logical position is <i>not</i> at BOM (beginning of media).	
	1	The current logical position is at BOM.	
EOP	1	The current logical position is within the EW-EOM region.	
LOCU	1	The number of blocks in the buffer is unknown.	
BYCU	1	The number of bytes in the buffer is unknown.	
LOLU	0	The Partition Number, First Block Location and Last Block Location fields are valid.	
Partition Number The partition number for the current logical position.			

First Block Location	The number of blocks and filemarks from BOM to the current position. Counting starts at zero, so BOM is block location 0. If this field is not large enough to be able to represent the current logical position, the command will fail with CHECK CONDITION, sense key of DATA PROTECT, and additional sense of 3B1Ch (too many logical objects on partition to support operation).					
Last Block Location	Always set to the value of the First Block Location.					

# Long Block Form ID

	7	6	5	4	3	2	1	0			
0	ВОР	EOP	Reserve	ed (0)	MPU	LONU (0)	Reserv	ed (0)			
1		Person and (O)									
3		Reserved (0)									
4	(MSB)			Partition	Numbor						
7			Partition Number (LSB)								
8	(MSB)			Dlask I	Number						
15				DIOCK I	Nullibei			(LSB)			
16	(MSB)			Fila N	lumber						
23				Tile IN	tomber			(LSB)			
24	(MSB)			Set Nu	mber(0)						
31				Jei I Nu	inber(o)			(LSB)			

# READ POSITION returned data fields—long block form

MPU	Mark Pos	Mark Position Unknown						
	0	The File Number and Set Number fields are valid.						
LONU	0	O The Partition Number and Block Number are valid.						
Partition Number	The parti	ition number for the current logical position.						
Block Number	The num position.	ber of logical blocks between BOP (beginning of partition) and the current logical Filemarks count as one logical block each.						
File Number	The num	he number of filemarks between BOP and the current logical position.						
Set Number	The num	ber of setmarks between BOP and the current logical position.						

# Extended Block Form ID

	7	7 6 5 4 3 2 1						0	
0	ВОР	EOP	LOCU (1)	BYCU (1)	Rsvd (0)	LOLU (0)	Reserv	red (0)	
1				Partition	Number				
2									
3				Additional	Length (1Ch)				
4				Reser	ved (0)				
5	(MSB)								
7		Number of blocks in buffer (0)  (LSB)							

	7	6	5	4	3	2	1	0		
8	(MSB)	,								
15			First Block Location -							
16	(MSB)			Last Bloc	k Location					
23			(	same as First	Block Location	)		(LSB)		
24	(MSB)			Number of bytes in buffer (0)						
31		•	I	vulliber of by	ies iii buffer (O	1		(LSB)		

# READ SNAPSHOT LOG A3h (1Fh)

READ SNAPSHOT LOG retrieves the Snapshot log referenced by the Snapshot Number.

### **Pre-execution checks**

Illegal Field Reservation Deferred Error **Unit Attention** 

### Command descriptor block

	7	6	0							
0	Operation Code (A3h)									
1		Reserved (0)			Sei	vice Action (	1 Fh)			
2			S	ervice Action	Qualifier (08h	n)				
3				Reserved (0)				SNV		
4	(MSB)	(MSB) Snapshot Number								
5		_		Snapsno	i Number			(LSB)		
6	(MSB)			Allocation	an Ionath					
8	Allocation Length (LS									
9–10	Reserved (0)									
11	Control									

#### **CDB** fields

Service Action	This mu	st be 1Fh
HP LTO VU MI Opcode	This mu	st be 08h.
SNV	Snapsh	ot Number Valid
	0	The Snapshot Number field is ignored and the most recent Snapshot log created is retrieved.
	1	The Snapshot Number field specifies the reference number of the Snapshot to be retrieved.
Snapshot Number		= 1, this is the reference number of the Snapshot to be retrieved. = 0, this field is ignored and the most recent Snapshot log created is retrieved.
Allocation Length	The dri	ve will return up to this number of bytes, truncating any parameter data as required.

## READ SNAPSHOT LOG returned data

	7	6	5	4	3	2	1	0			
0	(MSB)		D . E. U . I								
1			Data File Header -								
	Dataset Descriptor List										
160	(MSB)										
				Dataset De	scriptor (first)			(LSB)			
:					:						
	(MSB)		Dataset Descriptor (last)								
n		•		Daidset De	scriptor (last)			(LSB)			

### Data file header

Byte	Description
0–3	Signature (DECAFBADh)
4–7	Header Length (00A0h)
8–9	Version (0000h)
10–11	Timestamp Type (0005h)
12–19	Timestamp
20–51	Library Model
52–83	Library Serial Number
84–87	Generator (0005h)
88–91	Subject Device Category
92–123	Subject Product ID
124–155	Subject Serial Number
156–159	Number of Dataset

Signature	Used for identification. Must be set to DECAFBADh.				
Header Length	The size of the data file header. Must be set to 000Ah (160).				
Version	The version numbe	er for the datafile header structure. Must be set to 0000h.			
Timestamp Type	The timestamp forr	The timestamp format.			
	5	5 Power-on time.			
Timestamp	The time from power-on at which the Snapshot log was created, in units of 16 µS.				
Library Model	The model name of the library from which data has been acquired. Filled with ASCII space characters (20h).				
Library Serial Number	The serial number of the library from which data has been acquired. Filled with ASCII space characters (20h).				
Generator	05h Indicates an LTO drive created the data file.				
Subject Device Category	The drive type that created the data file:				

	4000000Dh	HP LTO Ultrium 4 full-height SCSI		
	4000000Eh	HP LTO Ultrium 4 full-height SAS		
	4000000Fh	HP LTO Ultrium 4 full-height FC		
	4000001Ch	Cerf SAS		
	4000001 Dh	HP LTO Ultrium 4 half-height SCSI		
	4000001Eh	HP LTO Ultrium 4 half-height SAS		
	4000001Fh	HP LTO Ultrium 4 half-height FC		
	40000020h	HP LTO Ultrium 5 full-height SAS		
	40000021h	HP LTO Ultrium 5 full-height FC		
	40000022h	HP LTO Ultrium 5 half-height FC		
	40000023h	HP LTO Ultrium 5 half-height SAS		
	40000028h	HP LTO Ultrium 6 full-height SAS		
	40000029h	HP LTO Ultrium 6 full-height FC		
	4000002Ah	HP LTO Ultrium 6 half-height FC		
	4000002B	HP LTO Ultrium 6 half-height SAS		
Subject Project ID	The Product ID of the device from which the data has been acquired, taken from the standard INQUIRY data left-aligned and space-padded, for example: "Ultrium-6 FC"			
Subject Serial Number	The serial number of the device from which the data has been acquired.			
Number of Dataset	The total number of datasets available in this data file.			

## Dataset descriptor

Byte	Description
0–127	Dataset Header
128-n	Dataset Payload

Dataset Header	See below.
•	If Error Number (in the Dataset Header) = 0000h, the payload is any SCSI data IN captured when the SCSI command in the CDB field was executed.  If Error Number = 0849h, the payload is any SCSI sense data captured when the SCSI command in the CDB field was executed.

### Dataset header

Byte	Description	
0–3	quisition Mode (0000001h)	
4–7	Timestamp	
8–23	CDB	
24–27	Payload Offset	
28–31	Payload Length	
32–35	Byte Order (0)	

36–39	Compression Algorithm (0)	
40–71	ataset Identifier	
72	IS Stale Flag (0)	
73–76	Error Number	
77–127	Protocol Specific Area (0)	

	1					
Timestamp	The last 4 bytes of the 6-byte timestamp indicating the time the dataset was created.					
CDB	The Command De	The Command Descriptor Block of the command that generated the dataset.				
Payload Offset	An absolute offset from the start of the data file to the Dataset Payload field for this dataset.					
Byte Order	0000h Order is Big-Endian.					
Compression Algorithm	0000000h No compression.					
Dataset Identifier	The identifier for the dataset.					
Error Number 0000h		The SCSI command in the CDB field completed with GOOD status. Any SCSI data from the command is in the Dataset Payload field.				
	0849h	The SCSI command in the CDB field completed with non-GOOD status. Any SCSI sense data from the command is in the Dataset Payload field.				

# READ SNAPSHOT LOG specific status

Event	Status	Кеу	Additional Sense
The Snapshot log specified in the Snapshot Number field is not available for retrieval, or no Snapshot log is available for retrieval.	CHECK CONDN	ILLEGAL REQUEST	2400h (invalid field in CDB)
The Snapshot log is in the process of being created.	CHECK CONDN	no sense	0016h (operation in progress)

# READ STTF LOG A3h (1Fh)

The READ STTF LOG command retrieves a Snapshot log from non-volatile flash memory.

#### **Pre-execution checks**

Illegal Field Reservation Deferred Error Unit Attention

### Command descriptor block

	7	6	5	4	3	2	1	0
0		Operation Code (A3h)						
1		Reserved (0)			Ser	vice Action (1	Fh)	
2	Service Action Qualifier (09h)							
3	Reserved (0) Retrieval Option					l Option		
4								
5	Relative Log Index							
6	Allocation Length							

	7	6	5	4	3	2	1	0
8								
9–10	Reserved (0)							
11	Control							

#### **CDB** fields

Retrieval Option	Specifies how	the Relative Log Index is used to specify which STTF log to retrieve:				
	00b	The Relative Log Index field is relative to all STTF logs regardless of the section in which they are stored, and whether they are protected.				
	01b	The Relative Log Index field is relative to logs stored in section 1 only.				
	10b	ne Relative Log Index field is relative to logs stored in section 2 only.				
	11 b	The Relative Log Index field is relative to protected STTF logs regardless of the section in which they are stored.				
Relative Log Index	Which STTF log to read, relative to the most recently captured STTF log within the section specified by the Retrieval Option field:					
	00h	Retrieve the most recently captured Snapshot log.				
	01 h	Retrieve the previous Snapshot log.				
	02h–FFh	Retrieve earlier Snapshot logs, 02h retrieving the last but two log, and so on.				
Allocation Length	The drive will return up to this number of bytes, truncating any parameter data as necessary.					

If a Snapshot log to be saved to flash, is in the process of being created, the device server terminates the command with CHECK CONDITION, a sense key of NO SENSE and additional sense of 0016h (operation in progress).

If the specified STTF log is not available for retrieval, the device server will terminate the command with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).

The retrieved STTF log data is returned in the same format as the READ SNAPSHOT LOG parameter data format (see page "READ SNAPSHOT LOG returned data" (page 164)

## READ TOC (CD-ROM mode) 43h

READ TOC transfers the Table of Contents data to the host.

#### Pre-execution checks

Illegal Field	Fixed Bit	Bad LUN	Reservation
Deferred Error	Unit Attention	Media Access	Diagnostic Status

If the drive is not in CD-ROM mode, the request will return CHECK CONDITION status with a sense key Illegal Command.

The Track/Session Number must be set to 0 or 1. Any other value will result in CHECK CONDITION status with sense data as described in Illegal Field Checks.

#### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (43h)								
1	Logi	ical Unit Num	ber	Reserved (0)			MSF	RelAdr(0)	

	7	6	5	4	3	2	1	0	
2		Reserv	ed (0)						
3	(MSB)		Reserved (0) (LS						
5									
6	Track/Session Number								
7	(MSB)			ا ا ا	1				
8		-	Allocation Length -						
9	Control								

#### **CDB** fields

MSF	This flag is ignored.			
Track/Session Number	This may be set to 0 or 1. It does not affect the data returned.			
Allocation Length	The maximum number of data bytes that may be returned.			

### Read TOC data

The following data is always returned

	7	6	5	4	3	2	1	0	
0	(MSB)			TOC Date	1 a a - th (10h)				
1		-		IOC Daia	Length (12h)			(LSB)	
2				First Track	Number (1)				
3				Last Track	Number (1)				
4	Reserved (0)								
5		ADI	R (1)			Con	trol (4)		
6		Track Number (1)							
7		Reserved (0)							
8	(MSB)		l:	aal Dlaak Aala	J (000000	001			
11			Logi	Cai biock Add	dress (000000	oonj		(LSB)	
12				Reser	ved (0)				
13		ADI	R (1)			Con	trol (4)		
14				Track Nur	mber (AAh)				
15				Reser	ved (0)				
16	(MSB)		l:	مما الممار ٨ ياء	ارم ۱۸۸۸	00h)			
19			Logi	cui biock Add	dress (0004B0	oon)		(LSB)	

## RECEIVE DIAGNOSTIC RESULTS 1Ch

RECEIVE DIAGNOSTIC RESULTS tells the drive to return data from the last diagnostic test requested through the SEND DIAGNOSTIC command. If none has been sent, the data refers to the power-on self-test.

#### **Pre-execution checks**

Illegal Field Deferred Error Reservation **Unit Attention** 

#### Command descriptor block

	7	6	5	4	3	2	1	0		
0	Operation Code (1 Ch)									
1	Reserved(0) PCV									
2	Page Code									
3	(MSB)			A II	1 1					
4		Allocation Length								
5	Control									

#### **CDB** fields

PCV	Page Co	ode Valid flag
	0	The device server will return parameter data based on the diagnostic page with the same page code as that specified in the most recent SEND DIAGNOSTIC command).
		The device server will return CHECK-CONDITION with sense key ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB) in any of the following circumstances:
		The most recent SEND DIAGNOSTIC command did not define parameter data to return.
		<ul> <li>No SEND DIAGNOSTIC command defining parameter data to return has been processed since power on, hard reset, or logical unit reset.</li> </ul>
		The most recent SEND DIAGNOSTIC command was not for this I_T nexus.
	1	The device server will return the diagnostic page specified in the Page Code field.
Page Code	Identifier	for the diagnostic information page to be returned. 70h returns the Self-Test page.
Allocation Length	0	No data will be returned. This is not considered an error.
	>0	The number of bytes which the host has allocated for returned diagnostic data. The drive will return allocation length bytes or the amount of data that is available, whichever is least.

### RECEIVE DIAGNOSTIC RESULTS specific status

If the drive is not connected to a compatible enclosure, a RECEIVE DIAGNOSTIC command with a Enclosure Services page number (01h to 0Fh) will return a CHECK CONDITION with sense key of NOT READY and additional sense of 3502h (enclosure services unavailable).

If other invalid pages are requested, CHECK CONDITION will result with status of ILLEGAL REQUEST and additional sense of 2601h (parameter not supported).

### RECEIVE DIAGNOSTIC RESULTS returned data

### Page code 70h — Self-Test (Read/Write)

Page Format for Write:

	7	6	5	4	3	2	1	0	
0	Page Code (70h)								
1	Reserved (0)								
2	(MSB)			D	:				
3		-		rarameter L	ist Length (0)			(LSB)	

No parameters are needed. Sending this page is equivalent to a Send Diagnostic command with both the SelfTest and UnitOfl bits set.

Page format for Read:

	7	6	5	4	3	2	1	0		
0				Page Co	ode (70h)		,			
1	Reserved (0)									
2	(MSB)		Parameter List Length (4)							
3		•								
4	(MSB)		Error Code							
7		•		Error	Code			(LSB)		

## RELEASE UNIT 17h/57h

RELEASE UNIT enables the host to release any reservation it may have on the drive. Reserving a device is a way of ensuring exclusive access to that device from a single initiator for the period of the reservation. The drive may be reserved using a RESERVE command. The 10-byte RELEASE UNIT command is supported by all drives. Its functionality is the same as for the 6-byte command, but it also supports third-party reservation.

#### **Pre-execution checks**

Illegal Field Deferred Error Unit Attention

#### Command descriptor block (6-byte version)

	7	6	5	4	3	2	1	0		
0	Operation Code (17h)									
1		Reserved (0)		3rd Pty	Third-Party Device ID Rsvd(0)					
2										
4	Reserved (0)									
5	Control									

3rdPty	This bit is always zero because third-party reservation is not supported.
Third-Party Device ID	This bit is always zero because third-party reservation is not supported.

### Command descriptor block (10-byte version)

	7	6	5	4	3	2	1	0		
0	Operation Code (57h)									
1	Reserved (0) 3rd Pty Reserved (0) LongID						Rsvd(0)			
2		Reserved (0)								
3		Third-Party Device ID								
4				D						
6				Keser	ved (0)					
7	(MSB)			D	. 1:-1 1 1b					
8		-	Parameter List Length (L.					(LSB)		
9				Со	ntrol					

3rd Pty	0	Third-party release is not requested.					
	1	The initiator requests third-party release. The value in the Third-Party Device ID field valid.					
LongID	This is o	always zero because device IDs greater than 255 are not supported.					
Third-Party Device ID	operation	required and used only when the 3rd Pty bit is set. The device will perform the release on only if the initiator ID, the 3rd Pty bit and the Third-Party Device ID are identical to a the RESERVE UNIT command that established the reservation.					
	the initi third-po	ve ignores any attempt to release the reservation made by any other initiator, including ator for which the reservation was made. If an initiator reserved the drive using a arry reservation over itself, a non-third-party RELEASE UNIT command could also release ervation.					

## **RELEASE UNIT specific status**

Status is returned as follows:

- If the drive is not reserved, GOOD status is reported.
- If the drive is reserved by another host, GOOD status is reported.
- If the drive is reserved by this host for this host, the reservation status is cleared.

## REPORT DENSITY SUPPORT 44h

The Report Density Support command returns details about the tape formats supported by the drive. The data is returned as a header and a series of density descriptor blocks or medium type descriptor blocks.

#### Pre-execution checks

Illegal Field Deferred Error Unit Attention

#### Command descriptor block

	7	6	5	1	0					
0		Operation Code (44h)								
1			Re	eserved (0)			Medium Type	Media		
2–6					Reserved (0)	1				

	7	6	5	5 4 3 2 1							
7	(MSB)		Allerestine Levelle								
8			Allocation Length								
9		Control									

#### **CDB** fields

Medium Type	0	The drive reports density descriptor blocks.
	The drive reports medium type descriptor blocks.	
Media	0	One descriptor block is returned for each format supported by the drive. The Capacity field in the descriptor block indicates the capacity of the current media.
	1	One descriptor block is returned with the data for the currently loaded tape. The Capacity field indicates the maximum for the format. If there is no tape inserted in the drive, the drive will return CHECK CONDITION with a sense key of NOT READY and additional sense of 3A00h (medium not present).
Allocation Length	This spectified the entire	cifies the maximum number of bytes which the drive should return in its data-out phase. Either available data or allocation length bytes of the page are returned, whichever is least.
	0	No data transfer will occur. This is not considered an error.

## REPORT DENSITY SUPPORT header

	7	6	5	4	3	2	1	0		
0	(MSB)	Available Density Descriptor Length								
1	Available Density Descriptor Length —									
2	Reserved (0)									
3	Reserved (0)									

The available length gives the total amount of data available to be returned.

# Density Support descriptor blocks

If the Medium Type field is set to 1, the header is followed by one or more Density Support descriptor blocks with the following format:

	7	6	5	4	3	2	1	0	
0		Primary Density Code							
1				Secondary	Density Code				
2	WRTOK	DUP (0)	DEFLT		Reserv	ed (0)		DLV (0)	
3–4				Reser	ved (0)				
5	(MSB)			D:1					
7		-		ыт р	er mm			(LSB)	
8	(MSB)			A 4 lt -	. <b>\ A /</b> : -  <sub>4</sub>  -				
9		-	Media Width (LSB)						
10	(MSB)		Tracks ———						
11		-		irc	ICKS			(LSB)	

	7	6	5	4	3	2	1	0		
12	(MSB)		Capacity (MB)							
15										
16	(MSB)		٨:	i O	:; / /_	77.77I				
23			Assi	gning Organ	ization (LTO-0	ZVE)		(LSB)		
24	(MSB)			Danaita Na						
31				Density INd	me (8 bytes)			(LSB)		
32	(MSB)		Description (20 bytes)							
51				Description	i (zo bytes)			(LSB)		

The values reported for Ultrium 6 format tapes are as follows:

Primary Density Code	5Ah	This is reported via the MODE SENSE command.
Secondary Density Code	5Ah	Not used
WRTOK	The Write OK flag ir	ndicates whether the drive supports writing to this format.
DUP	The Duplicate flag w reported once.	ill be set to zero for every descriptor block indicating that each density is only
DEFLT	The Default flag will	be set to 1 if it specifies the drive's default density code.
Bits per mm	15142	
Media Width	127	Tape width is $1/2^{\prime\prime}$ or 12.65 mm. The value in this field is in tenths of millimeters rounded to the nearest 0.1 mm.
Track	2176	
Capacity	2 500 000	The approximate maximum capacity for the format (or the capacity of the media if the Media bit is set), in MB
Assigning Organization	LTO-CVE	The CVE assigns these codes.
Density Name	U-616	The format of this is: [U/A] - [Format Generation: 1,2] [No of Tracks: 4,8,16]
Description	Ultrium 6/16T	A longer version of the above

If this command is sent to the HP LTO Ultrium 6 drive with the Media bit set to 0, three descriptor blocks will be returned, with the following values:

	Ultrium 4	Ultrium 5	Ultrium 6
Primary Density Code	46h	58h	5Ah
Secondary Density Code	46h	58h	5Ah
WRTOK	1	1	1
DEFLT	0	0	1
Bits per mm	12725	15142	15142
Media width (0.1 mm)	127	127	127
Tracks	896	1280	2176

	Ultrium 4	Ultrium 5	Ultrium 6	
Capacity (Million Bytes)	Approx. 800,000	Approx. 1,500,000	Approx. 2,500,000	
Assigning Organisation	LTO-CVE	LTO-CVE	LTO-CVE	
Density Name	U-416	U-516	U-616	
Description	Ultrium 4/16T	Ultrium 5/16T	Ultrium 6/16T	

Density Code	WRTOK	DEFLT	Capacity
46h	1	0	C3500h = 800 (GB)
58h	1	0	16E360h = 1500 (GB)
5Ah	1	1	2625A0h = 2500 (GB)

# Medium Type descriptor blocks

If the Medium Type field is cleared to 0, the header is followed by one or more Medium Type descriptor blocks with the following format:

	7	6	5	4	3	2	1	0	
0			Medium Type						
1		Reserved (0)							
2	(MSB)			Descriptord	(2 4 l-)				
3		-		Descriptor i	ength (34h)			(LSB)	
4			Ν	lumber of Der	nsity Codes (01	h)			
5				Primary D	ensity Code				
6				D	l (O)				
13				Keser	ved (0)				
14	(MSB)			A Ali	Width				
15		-		Media	vviatn			(LSB)	
16	(MSB)			A A 11:	1				
17		-		Media	Length			(LSB)	
18–19				Reser	ved (0)				
20	(MSB)			A i i (	)				
27		-		Assigning C	Organization			(LSB)	
28	(MSB)								
35		Medium Type Name (8 bytes)					(LSB)		
36	(MSB)			December :	(20   +)				
55		-		Description	n (20 bytes)			(LSB)	

Medium Type	00h	The tape is a data tape.
	01 h	The tape is WORM.
	80h	The drive is in CD-ROM mode.

For the other fields, values are returned as in the following table:

Field	Ultrium 4	Ultrium 5	Ultrium 6	Ultrium 4 WORM	Ultrium 5 WORM	Ultrium 6 WORM
Medium Type	00h	00h	00h	01 h	01 h	01 h
Primary Density Support	46h	58h	5Ah	46h	58h	5Ah
Media width (0.1 mm)	127	127	127	127	127	127
Medium Length (m)	820	846	846	820	846	846
Assigning Organization	HP	HP	HP	HP	HP	HP
Medium Type Name	Data	Data	Data	WORM	WORM	WORM
Description	Ultrium 4 Data Tape	Ultrium 5 Data Tape	Ultrium 6 Data Tape	Ultrium 4 WORM Tape	Ultrium 5 WORM Tape	Ultrium 6 WORM Tape

If OBDR is supported, the CD-ROM Medium Type descriptors are the same as Data Medium Type descriptors but with the Medium Type field set to 80h.

## REPORT DEVICE IDENTIFIER A3h (05h)

The REPORT DEVICE IDENTIFIER command returns the identifier of the current device to the initiator.

#### **Pre-execution checks**

Illegal Field Deferred Error Reservation **Unit Attention** 

### Command descriptor block

	7	6	5	4	3	2	1	0	
0		Operation Code (A3h)							
1		Reserved (0)			Sei	rvice Action (	05h)		
2				D	l (O)				
5				Keser	ved (0)				
6	(MSB)			A II 1.1	1 ul-				
9		-		Allocatio	on Length			(LSB)	
10		Reserved (0)							
11				Со	ntrol				

### **CDB** fields

Allocation Length	The number of bytes that have been allocated for the Device Identifier The actual number returned will be the lower of the stored Device Identifier length and the allocation length specified in this command.
-------------------	---

### REPORT DEVICE IDENTIFIER returned data

The returned Parameter Data is as follows:

	7	6	5	4	3	2	1	0		
0	(MSB)		Identifier Length ( <i>n</i> –3)							
3		-								
4			Identifier							
n				ider	ntitier					

# REPORT IP CONFIGURATION A3h (1Fh)

The REPORT IP CONFIGURATION command is used by an application client to retrieve the drive's current Ethernet port configuration.

NOTE: The device server will not report iADT-DISC multicast addresses (see ADT-2).

#### Pre-execution checks

Illegal Field Reservation Deferred Error Unit Attention

### Command descriptor block

	7	6	5	4	3	2	1	0
0				Operation (	Code (A3h)			
1		Ignored			Ser	vice Action (1	Fh)	
2				Service Action	Qualifier (12h)			
3–5				Reserv	red (0)			
6				۸ اا م مین م				
9				Allocatio	n tengin			
10	Reserved (0)							
11				Cor	ntrol			

Allocation Length The drive will return up to this number of bytes, truncating any parameter data as necessary.

### REPORT IP CONFIGURATION parameter data

The format of the parameter data for the REPORT IP CONFIGURATION and SET IP CONFIGURATION commands is as follows:

#### IP configuration parameter List format

	7	6	5	4	3	2	1	0	
0–1		Reserved (0)							
2			ŗ	D	. I ( 2 )				
3			ľ	rarameter Lis	t Length ( <i>n</i> –3)				
		IP Configuration descriptors							
4			Firs	st IP Configu	ration Descript	or			

	7	6	5	4	3	2	1	0
4+m								'
:					:			
n–m			Les	u ID Cantia	ration Descrip	ło.		
n			Las	ir Configu	ration Descrip	ior		

### IP configuration descriptor format

	7	6	5	4	3	2	1	0
0			IP (	Configuration	n Descriptor Ty	ре		
1–2				Reser	ved (0)			
3				Descriptor	Length ( <i>m</i> –3)			
4				Danasia	ta a Valora			
m				Descrip	tor Value			

IP Configu	ration
Descriptor	Туре

The parameter data contains all descriptors for the following default addresses (those stored in non-volatile memory):

Value	Description	Report <sup>a</sup>	Set <sup>b</sup>
00h	Control	Х	Х
01 h	MAC address	Х	Х
02h	MTU size	Х	Х
03h	IPv4 default static address (see IPv4 address descriptor below)	Х	Х
04h	IPv4 default subnet address (see <i>IPv4 address descriptor</i> below)	Х	Х
05h	IPv4 default gateway address (see IPv4 address descriptor below)	Х	Х
06h	IPv4 default preferred DNS server address (see IPv4 address descriptor below)	Х	Х
07h	IPv4 default alternate DNS server address (see IPv4 address descriptor below)	Х	Х
08h	IPv6 default preferred DNS server address (see IPv6 address descriptor below)	Х	Х
09h	IPv6 default alternate DNS server address (see IPv6 address descriptor below)	Х	Х
0Ah	IPv6 default static address (see IPv6 address descriptor below)	Xq	Xq
OBh–OFh	Reserved		
10h	IPv4 assigned address	Xc	
11 h–1 Fh	Reserved		
20h	IPv6 link-local address	X <sup>c</sup>	
21 h	IPv6 global address	Xc	
22h	IPv6 preferred DNS server address	Х	

	23h	IPv6 alternate DNS server address	Х	Х				
	24h-FFh	-FFh Reserved						
	<sup>a</sup> Descripto data.	· · · · · · · · · · · · · · · · · · ·						
	<sup>b</sup> Descripto	r may be set in SET IP CONFIGURATION command parc	ımeter data.					
		r is not reported before the completion of address acquisi	tion.					
	<sup>d</sup> Descripto	r may not be supported in all products.						
Descriptor Length	The length of the descriptor data to follow. If the descriptor is truncated because of the Allocation Length, this field is not affected.							
Descriptor Value		cception of the fields noted below, all DESCRIPTOR VALUE V4 or an IPv6 address.	fields shall o	contain				

## Descriptor types

## IPv4 Address descriptor

	7	6	5	4	3	2	1	0	
0		IPv4 Address—byte 1							
1		IPv4 Address—byte 2							
2		IPv4 Address—byte 3							
4	IPv4 Address—byte 4								

## IPv6 Address descriptor

	7	6	5	4	3	2	1	0	
0		IPv6 Address—byte 1 (MSB)							
:		·							
15	IPv6 Address—byte 16 (LSB)								
16–18	Reserved (0)								
19	Prefix								

Prefix	The global routing prefix size for the address. For example, the IPv6 address
	FE80::21E:68FF:FE37:BC53/64 will contain the bytes FEh, 80h, 00h,, FEh, 37h, BCh, 53h, 00h, 00h, 00h, 40h.

## Descriptor type 0: Control

	7	6	5	4	3	2	1	0
0	Reserved (0)							Disable
1	IPV4ACQ					IPV6	ACQ	
2–3	Reserved (0)							

IADT-Disc	0	iADT Discovery protocol is disabled.
	1	iADT Discovery protocol is enabled.
Disable	0	The Ethernet port is enabled.

	1	The Ethernet port is disabled.				
IPV4ACQ	and the with CH	vence in which IPv4 address acquisition methods are attempted. If the field is set to 2h default static IPv4 address is set to zero, the device server will terminate the command ECK CONDITION status, a sense key of ILLEGAL REQUEST and additional sense of invalid field in parameter list).				
	Oh	Reserved				
	1h	Attempt address acquisition in the order: 1. DHCPv4 2. AutoIP 3. Static				
	2h	Attempt address acquisition in the order: 1. AutoIP 2. Static				
	3h	Attempt address acquisition in the order:  1. DHCPv4  2. Static				
	4h	Use static IP Address				
	5h–Fh	Reserved				
IPV6ACQ	and the with CH	of the IPv6 address acquisition values in EEPROM. If the IPV6ACQ field is set to 3h default static IPv6 address is set to zero the device server will terminate the command ECK CONDITION status, a sense key of ILLEGAL REQUEST and additional sense of invalid field in parameter list).				
	Oh	Reserved				
	1h	SLAAC/ND (Reference: RFC2461, 2462, 4861, 4862, 4311)				
	2h	DHCPv6 (Reference: RFC 3315)				
	3h <sup>a</sup>	Use static IPv6 address				
	4h–Fh	Reserved				
	<sup>a</sup> Code is treated as reserved in products that do not support IP Configuration Descriptor type OAh.					

### Descriptor type 1: MAC Address

The MAC identifier of the drive.

	7	6	5	4	3	2	1	0
0	MAC Identifier (byte 1)							
:	:							
5	MAC Identifier (last byte)							

Example: If the MAC Address of the device is 00306E:B4B8FE, byte 0 of the descriptor will be 00h and byte 5 will be FEh.

### Descriptor type 2: MTU Size

The Maximum Transmission Unit size.

	7	6	5	4	3	2	1	0	
0–1		Reserved (0)							
2									
3		Maximum Transmission Unit Size							

If the value in the Maximum Transmission Unit Size field is less than 64 or larger than 1,500, the device server will terminate the command with CHECK CONDITION status, a sense key of ILLEGAL REQUEST and additional sense of 2600h (invalid field in parameter list). The value saved in non-volatile storage is not modified.

### REPORT LUNS AOh

The Report LUNS command allows the host to retrieve information about what logical units the drive supports. The standard drive only has a single SSC LUN, whereas a drive operating within a library and communicating over ADI may have one or two additional LUNs. However, the ADC LUN will only be reported to an initiator on the primary interface in the REPORT LUNS response if the ADC Logical Unit ENABLE mode parameter is set to one in the ADC Device Server Configuration mode sub-page. An SMC LUN will be reported if the automation controller has enabled bridging.

#### Pre-execution checks

Illegal Field

### Command descriptor block

	7	6	5	4	3	2	1	0
0	Operation Code (A0h)							
1		Reserved (0)						
2		Select Report						
3	D. 140)							
5		Reserved (0)						
6	(MSB)		All or d					
9		•	Allocation Length (LSE					
10	Reserved (0)							
12		Control						

#### **CDB** fields

Select Report	The type of logical unit address that will be reported. Allowable values:				
	00h/02h	Report all logical units accessible by the initiator through the address target port.			
	01 h	No logical unit descriptors are returned because there are no well-known logical units.			
	03h–FFh	Reserved. CHECK CONDITION returned.			
Allocation Length	Must be at least 16 bytes. If not, the drive will return CHECK CONDITION status and provide a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).				

### Data returned

	7	6	5	4	3	2	1	0				
0	(MSB)	LUN List Le	ength (08h or (	Oh/10h/18h	if the drive is c	perating with	nin a library					
3		-			cating over AD		,	(LSB)				
4–7				Reser	ved (0)							
		List of LUNs										
8	(MSB)	- IUN 0 (00 00 00 00 00 00 00h)										
15		LUN 0 (00 00 00 00 00 00 00h) (LSB)										
		If the driv	ve is operating	ı within an Al	OI library and l	has bridging	enabled					
16	(MSB)		IIINI	1 (00 01 00	00 00 00 00	00h)						
23			LOIN	1 (00 01 00	00 00 00 00	OON		(LSB)				
	If the drive is	operating wit			ADC Logical u guration mode		arameter is se	t to one in the				
24	(MSB)	_	IIINI	7 (00 07 00	00 00 00 00	006)	·					
30			LUIN	/ (00 0/ 00	00 00 00 00	oon)		(LSB)				

# REPORT NETWORK STATISTICS A3h (1Fh)

The REPORT NETWORK STATISTICS command allows an application client to retrieve information about the current state of network statistics counters for various protocols supported by the Network Interface.

### **Pre-execution checks**

Deferred Error Illegal Field **Unit Attention** Reservation

### Command descriptor block

	7	6	5	4	3	2	1	0				
0		Operation Code (A3h)										
1	Ignored Service Action (1Fh)											
2		Service Action Qualifier (15h)										
3–5		Reserved (0)										
6	(MSB)			A II	1 .1							
9		-		Allocatio	n Length			(LSB)				
10		Reserved (0)										
11				Cor	ntrol							

#### **CDB** fields

The maximum number of bytes the drive should return in its data-out phase. A zero value means no data transfer will occur; this is not considered an error. Either the entire network statistic
counters or Allocation Length bytes of the page are returned, whichever is least.

# Returned parameter data

	7	6	6 5 4 3 2 1									
0	(MSB)		D . I . I . 2)									
3			Data Length (n-3) (LSB)									
4–7			Version Number ( 1.0 )									
8–51		Interface Statistics (44 bytes)										
52–119				IP layer statist	ics (68 bytes)							
120–215			I	CMPv4 statis	tics (96 bytes	)						
216–311			I	CMPv6 statis	tics (96 bytes	)						
312–343		TCP statistics (32 bytes)										
344–359				UDP statistic	cs (16 bytes)							

_	
Version Number	Identifies any future changes to the parameter data.

# Interface statistics

	7	7 6 5 4 3 2 1 0										
8–11		InOctets (bytes received )										
12–15		OutOctets (bytes sent )										
16–19		InUcastPkts (unicast packets received )										
20–23			Outl	JcastPkts (uni	cast packets s	sent )						
24–27		InNUcastPkts (non-unicast packets received )										
28–31			OutNUca	stPkts (non-un	icast packets	received )						
32–35			InDisco	ırds (received	packets disc	arded )						
36–39			OutDi	iscards (sent p	oackets disca	rded )						
40–43		InErrors (bytes sent )										
44–47		OutErrors (bytes sent )										
48–51			In	UnknownProt	os (bytes sen	1)						

# IP layer statistics

	7	6	5	4	3	2	1	0			
52–55		InReceives (total received datagrams)									
56–59				InHdrErrors (h	neader errors						
60–63		InAddrErrors (nonsense IP addresses)									
64–67			For	wDatagrams	(routed pack	ets)					
68–71			Unknov	vnProtos (unk	nown protoco	l types)					
72–75		InDiscards (dropped)									
76–79			InDel	ivers (delivere	ed receive pa	ckets)					

	7	7 6 5 4 3 2 1 0										
80–83		OutRequests (sends—not including routed)										
84–87		RoutingDiscards (dropped)										
88–91			OutDis	cards (sends (	dropped—no	buffer)						
92–95		OutNoRoutes (dropped, unable to route)										
96–99		ReasmReqds (fragments received)										
100–103			ReasmOK	(s (packets su	ccessfully rea	ssembled)						
104–107			Reasm	Fails (packet	reassemblies	failed)						
108–111			FragO	Ks (packets fr	agmented fo	r send)						
112–115		FragFails (packets that could not be fragmented)										
116–119			Fr	agCreates (fr	agments mad	e)						

# ICMPv4 statistics

	7	6	5	4	3	2	1	0				
120–123		lnΛ	∕lsgs (numbe	er of message	s received, ir	cluding erro	ors)	,				
124–127		С	outMsgs (nur	mber of mess	ages sent, inc	luding error	s)					
128–131			InErr	ors (number o	of errors recei	ved)						
132–135		OutErrors (ICMP layer errors only)										
136–139		InDestUnreachs (number of DEST UNREACHABLEs received)										
140–143		Out	DestUnreach	ns (number of	DEST UNRE	ACHABLEs s	ent)					
144–147		I	nTimeExcds	(number of T	IME EXCEED	ED received	)					
148–151			OutTimeExc	cds (number o	of TIME EXCE	EDED sent)						
152–155		InPa	rmProbs (nu	mber of PARA	AMETER PRO	BLEMs recei	ved)					
156–159		Οι	ntParmProbs	(number of P	ARAMETER P	ROBLEMs se	ent)					
160–163		InSr	cQuenchs (r	number of SC	URCE QUEN	ICHes recei	ved)					
164–167		Oı	utSrcQuench	ıs (number of	SOURCE QL	JENCHes se	nt)					
168–171			InRedired	cts (number o	F REDIRECTS	received)						
172–175			OutRed	irects (numbe	r of REDIREC	TS sent)						
176–179			InEch	os (number o	f ECHOs rece	eived)						
180–183			Outl	Echos (numbe	er of ECHOs s	sent)						
184–187			InEchoRep	s (number of	ECHO REPLY	s received)						
188–191			OutEchoR	Reps (number	of ECHO RE	PLYs sent)						
192–195			InTimestam	ps (number c	f TIMESTAMF	s received)						
196–199			OutTimest	tamps (numbe	er of TIMESTA	MPs sent)						
200–203		InTir	nestampRep	s (number of	TIMESTAMP	REPLYs recei	ved)					
204–207		Ou	ıtTimestampl	Reps (number	of TIMESTAN	ΛΡ REPLYs se	ent)					
208–211		In	AddrMasks	(number of A	ADDRESS MA	SKs received	d)					
212–215		(	OutAddrMa	sks (number o	of ADDRESS	MASKs sent)						

### ICMPv6 statistics

	7	6	5	4	3	2	1	0			
216–223		InMsgs (messages received)									
224–231		OutMsgs (messages sent)									
232–239		InErrors (input errors)									
240–247				OutErrors (c	utput errors)						
248–255		InMLDReports (not supported)									
256–263			Oı	utMLDReports	(not supporte	ed)					
264–271			lı	nMLDDones (	not supported	d)					
272–279			C	OutMLDones (	not supported	<b>4</b> )					
280–287			InRouterS	Solicits (router	solicitations	received)					
288–295			OutRou	uterSolicits (ro	uter solicitatio	on sent)					
296–303		I	nNeighborS	olicits (neighb	oour solicitatio	ons received	)				
304–311			OutNeighb	orSolicits (nei	ghbour solici	tations sent)					

### TCP statistics

	7	7 6 5 4 3 2 1 0									
312–315		ActiveOpens									
316–319		PassiveOpens									
320–323		AttemptFails (failed connection attempts)									
324–327			Es	stabResets (res	set connectio	ns)					
328–331			C	urrEstab (curre	ent connectio	ns)					
332–335				InSegs (segm	ents received	)					
336–339		OutSegs (segments sent)									
340–343			Retra	nsSegs (segm	ents retransn	nitted)					

### **UDP** statistics

	7	6	5	4	3	2	1	0		
344–347		InDatagrams (total delivered datagrams)								
348–351		NoPorts (undelivered datagrams: unused port)								
352–355			InErrors (ur	ndelivered da	tagrams: oth	er reasons)				
356–359			OutDatag	grams (succes	ssfully sent do	tagrams)				

# REPORT SNAPSHOT COMMANDS A3h (1Fh)

READ SNAPSHOT LOG retrieves the current Snapshot command set. You can use this in a similar way to LOG SENSE/LOG SELECT to report the command set, after which you can alter any commands and then use SET SNAPSHOT COMMANDS to alter the drive's command set.

#### **Pre-execution checks**

Illegal Field Deferred Error **Unit Attention** Reservation

### Command descriptor block

	7	6	5	4	3	2	1	0		
0		Operation Code (A3h)								
1	Reserved (0) Service Action (1Fh)									
2		Service Action Qualifier (0Ah)								
3–5	Reserved (0)									
6	(MSB)									
7		_	Allocation Length (LSB)							
8–10		Reserved (0)								
11	Control									

Service Action	This must be 1Fh.
HP LTO VU MI Opcode	This must be OAh.
Allocation Length	The drive will return up to this number of bytes, truncating any parameter data as required.

# REPORT SNAPSHOT COMMANDS specific status

Event	Status	Key	Additional Sense	
The tape drive is in the process of setting the Snapshot command set.	CHECK CONDITION	no sense	0016h (operation in progress)	

### Parameter data

See "SET SNAPSHOT COMMANDS parameter data" (page 235).

# REPORT SNAPSHOT CONFIGURATION A3h (1Fh)

READ SNAPSHOT CONFIGURATION retrieves the current Snapshot log configuration.

#### **Pre-execution checks**

Illegal Field Deferred Error **Unit Attention** Reservation

## Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (A3h)								
1		Reserved (0) Service Action (1Fh)							
2	Service Action Qualifier (OBh)								
3–5	Reserved (0)								
6	(MSB)	All et al.							
7		-	Allocation Length						

	7	6	5	4	3	2	1	0	
8–10	Reserved (0)								
11		Control							

Service Action	This must be 1Fh.
HP LTO VU MI Opcode	This must be OBh.
Allocation Length	The drive will return up to this number of bytes, truncating any parameter data as required.

### Parameter data

See "SET SNAPSHOT CONFIGURATION parameter data" (page 237).

# REPORT Enhanced SNAPSHOT CONFIGURATION A3h (1Fh)

The REPORT Enhanced SNAPSHOT CONFIGURATION command is used to retrieve the current enhanced snapshot configuration.

#### Pre-execution checks

Illegal Field Reservation Deferred Error Unit Attention

### Command descriptor block

	7	6	5	4	3	2	1	0		
0		Operation Code (A3h)								
1	Ignored Service Action (1Fh)									
2		Service Action Qualifier (0Dh)								
3–5	Reserved (0)									
6		Allocation Length								
7				Allocatio	n tengin					
8–10	Reserved (0)									
11		Control								

Allocation Length	The drive will return up to this number of bytes, truncating any parameter data as necessary.
-------------------	---

#### Parameter data

The format of the parameter data is as in "SET Enhanced SNAPSHOT CONFIGURATION A4h (1Fh)" (page 238).format.

MMLL The Modify Maximum Log Length field is set to 00b.	
---	--

# REPORT SNAPSHOTS AVAILABLE A3h (1Fh)

REPORT SNAPSHOTS AVAILABLE returns a list of Snapshot logs that are available for retrieval using the READ SNAPSHOT LOG command.

#### Pre-execution checks

Illegal Field Reservation Deferred Error Unit Attention

# Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (A3h)								
1	Reserved (0) Service Action (1Fh)								
2		Service Action Qualifier (07h)							
3–5	Reserved (0)								
6	(MSB)		Allocation Length (LSB)						
7		-							
8–10		Reserved (0)							
11	Control								

Service Action	This must be 1Fh.
Service Action Qualifier	This must be 07h.
Allocation Length	The drive will return up to this number of bytes, truncating any parameter data as required.

# Parameter data

	7	6	5	4	3	2	1	0			
0	(MSB)		1 A 111								
1			Logs Available -								
2	(MSB)		Additional Page Length (n–5)								
5		-									
	Snapshot Log Descriptor List										
6	(MSB)		Snapshot Log Descriptor (first) — 14 bytes								
19											
:	: :										
n-13	(MSB)		Samuelanta a Descriptor (last) 14 lanta								
n			Silapsi	Snapshot Log Descriptor (last) — 14 bytes							

Logs Available	The n	The number of Snapshot logs that are available for retrieval.									
Additional Page Length	The n	The number of bytes needed to allow transfer of the complete Snapshot log descriptor list.									
Snapshot Log Descriptor		7	6	5	4	3	2	1	0		
	0	(MSB)	SB) Log Number								
	1										
	2										
	3	Reserved (0)									
	4	(MSB)	- Log Length								
	7				(LSB)						

	8	(MSB)		Timestern (4 h. dee)			
	13			Timestamp (6 bytes)	(LSB)		
	Log N	umber	The reference number READ SNAPSHOT	per of the Snapshot log, which must be speci LOG command.	fied in the		
	Log Tr	igger	The event that caus	ed the Snapshot log to be created:			
			Value	Description			
			OOh	Unload failure			
			01 h	Successful unload			
			02h	Drive responded to a SCSI command from a hosprimary port with CHECK CONDITION status as sense key of Media Error (03h) or Hardware Error			
			03h	SCSI FORCE SNAPSHOT command or REA command with a Service Buffer ID.	D BUFFER		
			04h	Drive responded to a SCSI command from a primary port with CHECK CONDITION state configured drive error, or an error specified On Drive Error descriptor.	tus for a		
			05h	Drive responded to a SCSI command from a primary port with CHECK CONDITION state configured sense key, ASC and ASCQ, or specified in the STTF On Sense Data descri	tus for a sense data		
			06h	Load failure			
			07h	Catastrophic servo error			
			08h	Forced eject			
			09h	Drive created a Fault Log entry with an errospecified in an STTF On Fault Descriptor.	or code		
			OAh	Drive created a System ARM trace log entry Point ID specified in an STTF On Trace Poin			
			OBh	12 Volt power failure.			
			0Ch	Drive responded to a SCSI command from ADT port with CHECK CONDITION status error specified in an STTF On ADT Reported Descriptor.	and a drive		
			0Dh–FFh	Reserved			
	Log Le	ength	The size of the Sna	pshot log.			
	Timest	amp	The time at which t	he Snapshot log was created.			

# REPORT STTF AVAILABLE A3h (1Fh)

The SET STTF AVAILABLE command is used to retrieve the attributes of STTF logs that can be retrieved using the READ STTF LOG command.

### **Pre-execution checks**

Illegal Field Reservation Deferred Error Unit Attention

# Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (A3h)								
1	Reserved (0) Service Action (1Fh)								
2	Service Action Qualifier (18h)								
3–5	Reserved (0)								
6				۸ ۱۱ ۱۱ ۸					
7				Allocatio	n Length				
8–10	Reserved (0)								
11		Control							

Allocation	The drive will return up to this number of bytes, truncating any parameter data as required.
Length	

# Parameter data

	7	6	6 5 4 3 2 1							
0	(MSB)		Logs Available							
1										
2	(MSB)		Additional Page Length ( <i>n</i> –5)							
5										
	Available STTF Log Descriptor List									
6	(MSB)		E: rot	STTE Law Day	criptor — 12 k	v doo				
17			LIISI	STIF LOG DES	спріог — 12 к	byles		(LSB)		
•					:					
<i>n</i> –11	(MSB)		Last STTF Log Descriptor — 12 bytes							
n		-	Lasi	(LSB)						

Logs Available	The nu	The number of STTF logs that are available for retrieval.									
Additional Page Length	The nu	The number of bytes needed to allow transfer of the complete STTF log descriptor list.									
STTF Log Descriptor		7	7 6 5 4 3 2 1 0								
	0	Re	dex								
	1 Additional Length (OAh)										
	2	Protected				Log Trigge	r				
	3				Log I	dentifier					
	4				Rese	rved (0)					
	5	(MSB)	(MSB) STTF Log Length (LSB)								
	7										
	8	(MSB)			Timestam	p (4 bytes)					

	11			(LSB)				
	Relative Log Index	captured ST log capture and so on.	TTF log l ed has a Availab	of when an STTF log was captured. The most recently has a Relative Log Index of 00h. The penultimate STTF n index of 01h, the STTF log captured before that 02h, le STTF Log descriptors are reported in ascending Relative the Available STTF log Descriptor list.				
	Protected	0	The driv	rive may overwrite the STTF log.				
		1		TF log cannot be overwritten by another STTF log or I by changing the STTF configuration.				
	Log Trigger	The event th	nat caus	ed the STTF log to be created:				
		Value		Description				
		00h	ı	Unload failure				
		01 h		Successful unload				
		02h		Drive responded to a SCSI command from a host on the primary port with CHECK CONDITION status and a sense key of MEDIA ERROR or HARDWARE ERROR).				
		03h	l	SCSI FORCE SNAPSHOT command or READ BUFFER command with a Service Buffer ID.				
		04h		Drive responded to a SCSI command from a host on the primary port with CHECK CONDITION status for a configured drive error, or an error specified in the STTF On Drive Error descriptor.				
		05h		Drive responded to a SCSI command from a host on the primary port with CHECK CONDITION status for a configured sense key, ASC and ASCQ, or sense data specified in the STTF On Sense Data descriptor.				
		06h		Load failure				
		07h		Catastrophic servo error				
		08h	I	Forced eject				
		09h	l	Drive created a Fault Log entry with an error code specified in an STTF On Fault Descriptor.				
		0Ah	l	Drive created a System ARM trace log entry with a Trace Point ID specified in an STTF On Trace Point Descriptor.				
		OBh		12V power failure.				
		0Ch	ı	Drive responded to a SCSI command from a host on an ADT port with CHECK CONDITION status and a drive error specified in an STTF On ADT Reported Error Descriptor.				
		0Dh	1	Assert Reset.				
		OEh–F	Fh	Reserved				
	Log Identifier			for the STTF log. It is used in the CLEAR PROTECTED STTF specify that this specific protected STTF log can be				
	STTF Log Length	The length	of the ST	TTF log in bytes.				
	Timestamp	The lifetime in seconds.		on time of the drive at which the STTF log was created,				

# REPORT STTF CONFIGURATION A3h (1Fh)

The REPORT STTF CONFIGURATION command is used to retrieve the current STTF configuration.

#### **Pre-execution checks**

Illegal Field Deferred Error Reservation Unit Attention

### Command descriptor block

	7	7 6 5 4 3 2 1 0								
0		Operation Code (A3h)								
1		Reserved (0) Service Action (1Fh)								
2		Service Action Qualifier (0Eh)								
3–5		Reserved (0)								
6				A II	1 1					
7				Allocatio	n Length					
8–10	Reserved (0)									
11		Control								

# REPORT SUPPORTED OPCODES A3h (0Ch)

The REPORT SUPPORTED OPCODES command requests information on commands supported by logical unit that is addressed.

### **Pre-execution checks**

Deferred Error Illegal Field Reservation

**Unit Attention** Diagostic Status

## Command descriptor block

	7	6 5 4 3 2 1						0			
0		Operation Code (A0h)									
1		Reserved (0)			Ser	vice Action (	OCh)				
2	RCTD		Reserv	/ed (0)		R	eporting Optic	ons			
3		Requested Operation Code									
4	(MSB)										
5		-		Requested S	Service Action			(LSB)			
6	(MSB)			A II 1.	1						
9		-	Allocation Length (LSB)								
10	Reserved (0)										
11	Control										

### **CDB** fields

RCTD	Return C	Command Timeouts Descriptor				
	1	A Timeouts descriptor will be included in the parameter data.				
Reporting Options	000Ь	Requests the Device Server to return a list of supported operations and service actions from the port through which the REPORT SUPPORTED OPCODES command was received. The parameter data has the "all-commands" format.				
	001b	Requests the Device Server to return support data for the OpCode specified in Requested Operation Code field from the port through which the REPORT SUPPORTED OPCODES command was received. The parameter data has the "one-command" format. If the OpCode has Service Actions associated, the command will fail with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).				
	010b	Requests the Device Server to return support data for the OpCode specified by the Requested Operation Code and Requested Service Action fields from the port through which the REPORT SUPPORTED OPCODES command was received. The parameter data has the "one-command" format. If the OpCode has Service Actions associated, the command will fail with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).				
Requested Operation Code	Ignored	for Reporting Option 000b.				
Requested Service Action	Ignored	nored for Reporting Options 000b and 001b.				
Allocation Length	The num	ber of bytes allocated for the returned parameter data.				

# REPORT SUPPORTED OPCODES returned data

### All-commands format

The returned Parameter Data contains a 4-byte header followed by one or more command descriptors:

	7	6	5	4	3	2	1	0
0	(MSB)			Command	Data Lanath			
3		•		Commana	Data Length			(LSB)

Command Data Length The amount of Parameter Data available for return minus the size of the header.	
---	--

Each command descriptor contains either a supported Operation Code or an Operation Code/Service Action combination. The format of each descriptor is as follows:

	7	6	5	4	3	2	1	0		
0		Operation Code								
1		Reserved (0)								
2	(MSB)		5 ·							
3		-	Service Action -							
4				Reser	ved (0)					
5		Reserved (0) CPTD								
6	(MSB)	(MSB) CDB Length								

	7	6	5	4	3	2	1	0				
7												
8		(LSB)  Timeouts Descriptor (if any) — 12 bytes										
19			Timeo	outs Descripto	r (if any) — 12	bytes						

Operation Code	The operc	e operation code of the supported command.								
Service Action	A support be 00h.	upported service action of the operation code. If no service actions are supported this field will 00h.								
ServActv	0	No service actions are supported and the Service Action field should be ignored.								
	1	This operation code supports service actions and the Service Action field contains a valid service actions.								
CTPD	1	The command timeout descriptor is included. If the RCTD bit is set, this bit must be set.								
CDB Length	The length	n of the CDB for this operation code or operation code/service action command.								

# One-command format

## One-command format

	7	7 6 5 4 3 2 1 (									
0		Reserved (0)									
1	CTPD		Reser	ved (0)			Support				
2				CDD -:	/ 2)						
3		CDB size (n-3)									
4				CDP II.	una Data						
n		CDB Usage Data									
n+1		Timeouts Descriptor (if any) — 12 bytes									
n+12			rimed	ouis Descriptor	(ii diiy) — 12	z bytes					

Support	001b	The device server does not support the requested command. All data after byte 1 is undefined.							
011 b The device server supports the requested command in conformance with a SCSI sta									
	101 b	O1b The device server supports the requested command in a vendor-specific manner.							
CDB Usage Data	will be loo map. Byte that the D	yte is the OpCode being queried. If the OpCode has a Service Action associated, this cated in the second byte, in the correct location. All other CDB bytes contain a usage by byte, the Device Server must place a one in the corresponding bit position of the CDB evice Server supports as a parameter field. Any CDB fields that are ignored by the device are reserved, contain a zero.							

# Timeouts descriptor

	7	6	5	4	3	2	1	0				
0		Descriptor Langth (OAh)										
1		Descriptor Length (OAh)										
2				Reserv	red (0)							

	7	6	5	4	3	2	1	0				
3		Command Specific (0)										
4		N I.C Tr C (001)										
7		Nominal Command Processing TimeOut (00h)										
8		Recommended Command TimeOut										
11			Ked	commenaea C	ommana IIme	eOut						

Recommended Command	The time in seconds the application should wait before timing out the command. If 00h is reported, then no timeout is reported.
TimeOut	·

# REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS A3h (0Dh)

The REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS command returns information about which task management functions are supported by the logical unit that is addressed.

#### Pre-execution checks

Illegal Field Reservation Deferred Error
Unit Attention Diagnostic Status

### Command descriptor block

	7	6	5	4	3	2	1	0					
0		Operation Code (A3h)											
1		Reserved (0) Service Action (0Dh)											
2–5		Reserved (0)											
6	(MSB)												
9		_	Allocation Length (LSB)										
10		Reserved (0)											
11		Control											

### **CDB** field

Allocation Length	The number of bytes that have been allocated for the returned parameter data. This value must be at least four.
-------------------	---

# REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS returned data

The returned Parameter Data is as follows:

	7	6	5	4	3	2	1	0			
0	ATS	ATSS	CACAS	CTSS	LURS	QTS	TRS	WakeS			
1		Reserved (0) QAES QTSS ITNRS									
2–3		Reserved (0)									

	,	
ATS	0	FC drives: The Abort Task task management function is not supported.
	1	SAS drives: The Abort Task task management function is supported.
ATSS	1	The Abort Task Set task management function is supported.
CACAS	0	The Clear ACA task management function is not supported.
CTSS	1	The Clear Task Set task management function is supported.
LURS	1	The Logical Unit Reset task management function is supported.
QTS	0	FC drives: The Query Task task management function is not supported.
	1	SAS drives: The Query Task task management function is supported.
TRS	0	SAS drives: The Target Reset task management function is not supported.
	1	FC drives: The Target Reset task management function is supported.
WakeS	0	The Wakeup task management function is not supported.
QAES	1	(Fibre Channel) The QUERY ASYNCHRONOUS EVENT management function is supported.
	0	Otherwise.
QTSS	1	(Fibre Channel) The QUERY TASK SET management function is supported.
	0	Otherwise.
ITNRS	0	Zero as the I_T NEXUS RESET management function is not supported.

# REPORT TARGET PORT GROUPS A3h

The REPORT TARGET PORT GROUPS command returns information about target port groups from which the addressed logical unit allows access.

### **Pre-execution checks**

Illegal Field Deferred Error **Unit Attention** Diagnostic Status

## Command descriptor block

	7	6	5	4	3	2	1	0			
0		Operation Code (A3h)									
1		Reserved (0) Service Action (0Ah)									
2–5		Reserved (0)									
6	(MSB)		All and a								
9		_	Allocation Length (LSB)								
10		Reserved (0)									
11		Control									

#### **CDB** field

_	The number of bytes that have been allocated for the returned parameter data. Zero is not considered an error.
---	--

# Data returned

The returned parameter data is as follows:

	7	6	5	4	3	2	1	0			
0	(MSB)		Returned Data Length (n-3)  (LSB)								
3		-									
4											
	Primary Target Port Group Descriptor										
		ADC Target Port Group Descriptor									
n			AD	C larger Port	Group Descrip	oior					

# Primary Target Port Group descriptor

	7	6	5	4	3	2	1	0		
0	Pref (1)		Reserved (0)			Asymm Aco	cess State (0)			
1	T_Sup (0)		Reserved (0)		U_Sup (0)	S_Sup (0)	AN Sup (0)	AO_Sup (1)		
2				Taura at D	- wt C Di-	-t (O)				
3				larger re	ort Group Descrip	otor (U)				
4		Reserved (0)								
5	Status Code (2)									
6		Reserved (0)								
7				Та	rget Port Count (2	2)				
8				E:1 7		l				
	First Target Port Descriptor									
	Lord Toward Bord Description									
n	Last Target Port Descriptor									

Asymm Access State	0	This target port group has currently active/optimized asymmetric access.
AO_Sup	1	The Active/Optimized asymmetric state is supported from this port group to the SSC Logical unit if set to 1.

# Target Port descriptor

	7	6	5	4	3	2	1	0		
0	D 1(0)									
1	Reserved (0)									
2	Relative Port Identifier									
3				reidfive Po	ri identifier					

Asymm Access State	3	This target port group has currently unavailable asymmetric access.
AO_Sup	1	The Unavailable asymmetric state is supported from this port group to the SSC Logical unit if set to 1.

## ADC Target Port Group descriptor

	7	6 5 4		3	2	1	0		
0	Pref (0)	R	eserved ((	D)		Asymm Acce	ess State (3)		
1	T_Sup (0)	R	eserved ((	D)	U_Sup (1)	S_Sup (0)	AN Sup (0)	AO_Sup (1)	
2	T								
3	Target Port Group Descriptor (1)								
4	Reserved (0)								
5	Status Code (2)								
6	Reserved (0)								
7				To	arget Port Count	(1)			
8					D				
9	Reserved (0)								
10									
11	Relative Port Identifier (0)								

Relative Port Identifier	01 h	Port 0
	02h	Port 1

# REPORT TIMESTAMP A3h (OFh)

The REPORT TIMESTAMP command requests the device server to return the value of the logical unit's timestamp.

### **Pre-execution checks**

Illegal Field Deferred Error Reservation **Unit Attention** 

## Command descriptor block

	7	6	5	4	3	2	1	0		
0		Operation Code (A3h)								
1	Reserved (0) Service Action (0Fh)									
2–5	Reserved (0)									
6										
9		Allocation Length								
10	Reserved (0)									
11	Control									

#### **CDB** fields

Allocation Length The drive will return up to this number of bytes, truncating any	y parameter data as necessary.

## REPORT TIMESTAMP parameter data

	7	6	5	4	3	2	1	0				
0		Timestamo Parameter Data Length (OAh)										
1		Timestamp Parameter Data Length (OAh)										
2	Reserved (0) Timestamp Origin							in				
3		Reserved (0)										
4				Т:								
9		Timestamp										
10–11	Reserved (0)											

Timestamp Parameter Data Length	The drive will r	e drive will return up to this number of bytes, truncating any parameter data as necessary.						
Timestamp Origin	000b	Timestamp initialized to zero at power-on as the result of a hard reset.						
	001b	Reserved						
	010b	Timestamp initialized by the SET TIMESTAMP command.						
	011b	Timestamp initialized by the Device Time mode page (3Ch).						
	100b-111b	Reserved						
Timestamp	The current value 1 January 197	ue of the timestamp (the number of milliseconds that have elapsed since midnight, 0 UT).						

## REQUEST SENSE 03h

The REQUEST SENSE command transfers sense data held within the drive to the host during a data-in phase. The data is valid in the following circumstances:

- After reporting CHECK CONDITION status to the host.
- After a command has terminated unexpectedly.
- Immediately after the following commands that cause tape motion:

READ	SPACE	VERIFY
WRITE	WRITE FILEMARKS	REWIND

Positional sense data is valid whenever media is present and loaded and no higher priority sense data is present. An unsolicited request sense (that is, one with no preceding CHECK CONDITION) will result in sense data with no valid data, which will be all zeros.

The drive maintains valid positional information for normal read and write commands only (READ, WRITE, SPACE, WRITE FILEMARKS, REWIND). If abnormal commands (such as WRITE BUFFER) are received this positional sense information is lost. See "Sense data management" (page 204).

The drive clears sense data for the host following execution of the REQUEST SENSE command for that host, unless the data is positional sense data.

#### **Pre-execution checks**

Only Illegal Field Check is performed before execution of the command.

### Command descriptor block

	7	6	5	4	3	2	1	0		
0	Operation Code (03h)									
1		LUN		Reserved (0) DESC						
2–3	Reserved (0)									
4	Allocation Length									
5		Control								

### **CDB** fields

LUN	This fiel	nis field is ignored.						
DESC	0	O Fixed Format sense data will be returned.						
Descriptor Format sense data will be returned.								
Allocation	0	No data is transferred to the host.						
Length	>0	The maximum amount of sense data in bytes that should be transferred to the host. The drive returns up to Allocation Length bytes of data; any extra sense data is lost.						

### **REQUEST SENSE data**

Sense data is recovered from the drive by means of a REQUEST SENSE command following the reporting of CHECK CONDITION by the drive. There are two formats in which the data can be returned: Fixed and Descriptor.

### Fixed format

The Fixed format of the returned data is as follows:

	7	6	5	4	3	2	1	0		
0	Valid	Valid Error Code								
1		Segment Number (0)								
2	Mark	EOM	ILI	Rsvd(0)		Sense	е Кеу			
3	(MSB)									
6		•	Information Bytes (LSE							
7		Additional Sense Length (10h)								
8	(MSB)		-	ا د بن	ı ( ı. D					
11		•	Comi	mana Specific	: Information B	ytes		(LSB)		
12				Additional	Sense Code					
13			Ad	lditional Sens	e Code Qualif	ier				
14			F	ield Replace	able Unit Code	•				
15	SKSV	C/D	Reserv	red (0)	BPV		Bit Pointer			
16	(MSB) Field Pointer/Drive Error Code									

	7	6	5	4	3	2	1	0		
17	(LSB)									
18–20	Reserved (0)									
21		Reserv	ed (0)		CLN		Reserved (0)	)		
22										
23				raa b	ytes (0)					

## Returned Sense data fields

Valid	1	Indicates that the information bytes contain valid information as defined in the SCSI						
		specification.						
Error Code	70h	Indicates that the error is <i>current</i> , that is, it is associated with the command for which CHECK CONDITION status has been reported.						
	<i>7</i> 1h	Indicates that the error is <i>deferred</i> . A deferred error occurs when there is a failure for an operation that has already been terminated with a GOOD status, or when failure occurs in "cleanup" activity following an operation that was terminated by BUS RELEASE. The command for which CHECK CONDITION status was reported is therefore unlikely to be the cause of the deferred error. It simply gives the drive the opportunity to report CHECK CONDITION status for an error that already exists.						
Segment Number	This field	eld is cleared to zero.						
Mark	1	The Mark bit is set to 1 if a SPACE, READ or VERIFY command did not complete because a filemark was read. This bit may only be set if the sense key is NO SENSE.						
EOM	1	The End of Medium flag is set if a WRITE or WRITE FILEMARKS command complet in the early warning area. If no other error occurred, the sense code will be set to N SENSE with additional sense of 0002h (EOT). If another error occurred, the sense code and additional sense will reflect that error. It is also set if BOP is encountered while spacing over blocks or filemarks in the reverse direction.						
Ш	1	Indicates that the requested block length did not match the actual block length. Only READ and VERIFY can cause this bit to be set.						
Sense Key	See "Sense keys" (page 206) for details of sense keys that can be returned.							
Information Bytes	following field can	rmation Bytes field is only valid if the Valid bit is set. It contains residue information g the failure of either a READ, WRITE, WRITE FILEMARKS or SPACE command. The take a negative value, expressed in 2's complement notation for the SPACE command. description of the command that failed for the contents of the field.						
Additional Sense Length	10h	Specifies the number of additional sense bytes to follow. It is never truncated to reflect the actual Transfer Length.						
Command Specific Information Bytes	0	Provides additional information specific to the failing command. The field is normally set to 0.						
Additional Sense Code and Qualifier	or the cu	or bytes provide additional information about the cause of the CHECK CONDITION, purrent tape position when the REQUEST SENSE is unsolicited. See "Additional Sense page 207).						
SKSV	0	The Sense Key Specific Bytes (bytes 15 through 17) are invalid. The C/D, BPV and Bit pointer fields will be zero. The top byte of the Field Pointer will be zero, and the bottom byte will contain a product-specific error code.						
	1	The Sense Key Specific Bytes are valid. This will only happen when the bytes assume the role of Field Pointer Bytes as defined by ANSI. This occurs when an Illegal Field check detects an error in a Command Descriptor Block or a Parameter List check detects an error in a command parameter list.						
C/D	Commai	nd Data. Only valid if the SKSV flag is set.						
	0	The Field Pointer information applies to the parameter list for the command.						

	1	The Field Pointer information applies to the Command Descriptor Block.				
BPV	Bit Pointe	Bit Pointer Valid				
	0	The Bit Pointer field is invalid.				
	1	The Bit Pointer field is valid. If the SKSV bit is set then the BPV bit must be set as well.				
Bit Pointer	paramet	the bit position of the field in error, whether it is a command descriptor or a command er list field. When a multi-bit field is in error, this will point to the most significant bit of . Only valid when the SKSV flag is set.				
Field Pointer /Drive Error Code	= 5 (ILLE	= 1, the interpretation of this field depends on the sense key reported. For Sense Key GAL REQUEST), this field represents the Field Pointer, identifying in which byte of the d descriptor or parameter list an error was detected.				
	bit 0. Th	It the drive scans from byte 0 bit 7 of a command or parameter list through to byte <i>n</i> e field and bit pointers are set to point to the most significant bit of the field that is in e the illegal field check and the parameter list check.				
	where th	e Key = 0 (NO SENSE) or 2 (NOT READY), this field represents the Progress Indication, e returned value is a numerator that has 65536 (10000h) as its denominator. This ne progress being made through the total operation.				
	The botto comman self-test fo	= 0, this field represents the Drive Error Code. The top byte of this field will be zero. on byte contains the drive error code associated with the failure of the previous d, or zero in the case of no failure and no appropriate error code. If the drive's power-on ailed then, in the absence of an error code associated with the most recent command, will be set to the error code generated by the failing test.				
	Note: Drive error codes are provided for information only; they are intended to assist in integration and fault diagnosis. The codes should <i>not</i> be relied on by "generic" host dri since these are specific to the product. For a list of codes, see Chapter 10 of the <i>Hardw Integration Guide</i> , Volume 1 of the HP LTO Ultrium Technical Reference Manual.					
CLN	0	The drive is OK.				
	1	The drive requires cleaning. The front panel LEDs will be displaying a "clean me" sequence or message. This bit is cleared to zero after a cleaning cartridge has been used.				

# Descriptor format

The Descriptor format of the returned data is as follows:

	7	6	5	4	3	2	1	0		
0	Valid	Valid Response Code								
1	Reserved(0) Sense Key									
2		Additional Sense Code								
3			Ac	lditional Sens	e Code Qualif	ier				
4–6	Reserved (0)									
7			A	dditional Ser	nse Length ( <i>n</i> –7	<b>'</b> )				
8	(MSB)			Sansa Data	Descriptor 0					
:				Sense Daia	Descripior 0			(LSB)		
				:						
:				Sense Data	Descriptor X					
n				Jense Dulu	Descripior X					

### Returned Sense data fields

Response Code	72h	The error is <i>current</i> , that is, it is associated with the command for which CHECK CONDITION status has been reported.					
	73h	The error is <i>deferred</i> . A deferred error occurs when there is a failure for an operation that has already been terminated with a GOOD status, or when failure occurs in "cleanup" activity following an operation that was terminated by BUS RELEASE. The command for which CHECK CONDITION status was reported is therefore unlikely to be the cause of the deferred error. It simply gives the drive the opportunity to report CHECK CONDITION status for an error that already exists.					
Additional Sense Length	The number Transfer Leng	of additional sense bytes to follow, ≤244. It is never truncated to reflect the actual gth.					
Additional Sense Code and Qualifier		Additional information about the cause of the CHECK CONDITION, or the current tape position when the REQUEST SENSE is unsolicited. See "Additional Sense codes" (page 207).					
Sense Data Descriptor	At least one on the natur	At least one descriptor is sent (Drive Error Code), the others may or may not be sent depending on the nature of the CHECK CONDITION.					

## Information Sense data descriptor

	7	6	5	4	3	2	1	0	
0	Descriptor Type (00h)								
1		Additional Length (OAh)							
2	Valid (1)	d (1) Reserved (0)							
3		Reserved (0)							
4		Information Bytes							
11				intorma	ion bytes				

# Sense Key Specific Sense data descriptor

Only one of these is reported: Field Pointer or Progress Indication.

### **Field Pointer**

The Sense Key is set to Illegal Request.

	7	6	5	4	3	2	1	0
0		Descriptor Type (02h)						
1		Additional Length (06h)						
2–3	Reserved (0)							
4	SKSV (1) C/D Reserved (0) BPV Bit Pointer				ointer			
5	5.110							
6	Field Pointer							
7		Reserved (0)						

### **Progress Indication**

The Sense Key is set to No Sense or Not Ready.

	7	6	5	4	3	2	1	0
0		Descriptor Type (02h)						
1		Additional Length (06h)						
2–3	Reserved (0)							
4	SKSV (1)	SKSV (1) Reserved (0)						
5				D				
6		Progress Indication						
7	Reserved (0)							

Process Indication	The percent complete indication in which the returned value is a numerator that has 65,536
	(10000h) as its denominator. The progress indication is based on the total operation.

# Stream Commands Sense data descriptor

	7	6	5	4	3	2	1	0
0	Descriptor Type (04h)							
1	Additional Length (02h)							
2–3	Reserved (0)							
4	Mark							

## Drive Error Code Sense data descriptor (Vendor Specific)

	7	6	5	4	3	2	1	0
0	Descriptor Type (80h)							
1	Additional Length (02h)							
2–3	Reserved (0)							
4	Mark EOM ILI Reserved (0)							
4	Drive Error Code							
11				Drive Er	ror Code			

## Cleaning Needed Sense data descriptor (Vendor Specific)

	7	6	5	4	3	2	1	0
0	Descriptor Type (81h)							
1	Additional Length (02h)							
2–3	Reserved (0) CLN (1)					CLN (1)		
4	Reserved (0)							

## Sense data management

The drive maintains three sets of sense data for every initiator that has logged in. For a single host the following sense data is maintained:

- Current sense
- UNIT ATTENTION sense
- DEFERRED ERROR sense

Unless otherwise stated, all the following descriptions apply to the sense data for a single host whose command is being executed.

#### Current sense

Current sense is the data that is returned in response to a REQUEST SENSE command. It is modified or updated in the following circumstances:

- It is cleared in response to the arrival of any command other than REQUEST SENSE or INQUIRY.
- It is cleared following execution of a REQUEST SENSE command.
- If the current command fails, sense is set according to the failure and CHECK CONDITION
  is reported to the host that sent the command.
- If the command fails its pre-execution check for Unit Attention, UNIT ATTENTION sense is copied to the Current sense, and CHECK CONDITION is reported to the host that sent the command.
- If the command fails its pre-execution check for Deferred Error, DEFERRED ERROR sense is copied to the Current sense, and CHECK CONDITION is reported to the host that sent the command.

#### Clearing current sense

Clearing the Current sense involves setting sense fields as follows:

```
Valid = 0
error code = 0x70
segment number = 0
ILI = 0
sense key = 0
information bytes = 0
command specific information = 0
fru code = 0
SKSV = 0
```

#### **UNIT ATTENTION sense**

UNIT ATTENTION sense is set when one of the following Unit Attention conditions occur:

- FC drives: Power On, Target Reset, Logical Unit Reset, Process Login (PRLI)
- SAS drives: Power On, SCSI Reset, (HARD\_RESET primitive), Logical Unit Reset
- Media inserted
- A load command executed by a third party
- Mode Sense parameters changed by another initiator
- Drive firmware has been updated

UNIT ATTENTION sense will persist for a host until the host sends a command that has Unit Attention as part of its pre-execution checks. When the Unit Attention pre-execution check fails, the UNIT ATTENTION sense is copied to the Current sense and CHECK CONDITION status is reported to

the host. The UNIT ATTENTION sense is cleared. The host is then expected to issue a REQUEST SENSE command to recover the UNIT ATTENTION sense (which is now the new Current sense).

It is possible for multiple UNIT ATTENTION conditions to arise (for example, after a power-on followed by a tape load), such that the initiator does not read one condition before the next occurs. In this case a prioritizing scheme is used. If a UNIT ATTENTION condition exists and a new one occurs, then the UNIT ATTENTION sense will be overwritten by the new sense only if the new sense has a higher priority.

The order of priority is as follows:

Power-on, Reset highest priority

Tape Loaded

Mode Parameters Changed

Microcode Downloaded lowest priority

UNIT ATTENTION sense that arises as a result of a command executing will not be posted to the sending initiator, but will be set for the other initiators.

### **DEFERRED ERROR sense**

DEFERRED ERROR sense is generated when an operation fails and CHECK CONDITION status cannot be reported to the host for one of the following reasons:

- The operation had immediate-report on (for example, REWIND with the Immed bit set, or LOAD).
- The operation was a write that was immediate-reported on after its data was successfully placed in the write-behind queue.
- The operation was abandoned without status (that is, an SAS or FC connection was closed)
  after what the drive perceived was a catastrophic error or when an error occurred following
  the drive's honoring of an ABORT message. Following the closure of the connection, the drive
  performed "cleanup" activity that failed. The Deferred Error refers to the reason for this failure.

When any one of the above occurs, the sense generated will be DEFERRED ERROR sense. This sense persists until the host sends a command that has Deferred Error as part of its pre-execution checks. When the Deferred Error pre-execution check fails, the DEFERRED ERROR sense is moved to the Current sense and CHECK CONDITION status is reported to the host. The host is then expected to issue a REQUEST SENSE command to recover the new Current sense data, otherwise the data will be lost.

#### Write-behind deferred errors

If the Buffered Mode field of the MODE SELECT parameter header is not zero, data buffering is enabled. If an error occurs in flushing the write-behind data, DEFERRED ERROR sense is set for all hosts that the drive thinks have write-behind data in the buffer. For each of these hosts, the following occurs when its next command is to be executed:

- If the command is WRITE or WRITE FILEMARKS the DEFERRED ERROR sense is copied to Current sense and the error is changed to a Current error (the Error Code field is set to 70h). The information bytes will contain residue information reflecting the size of the write-behind queue plus the transfer size of the current command. CHECK CONDITION is reported. When the host reads sense data with a REQUEST SENSE, it will see an error for the WRITE with residue information indicating data lost for that write and previous writes.
- If the command is not a write command and the Deferred Error check is performed as part of
  the pre-execution checks, CHECK CONDITION status is reported. The DEFERRED ERROR sense
  is copied to Current sense. The DEFERRED ERROR sense is cleared. The host is expected to
  retrieve the sense by sending a REQUEST SENSE, otherwise the data will be lost.

### Deferred errors reported after abandoned operations

If a read or write type of operation is abandoned before status is sent by the drive (for example, a SAS or FC connection was closed, or the initiator decided to abort the operation), it is possible that there may be data being transferred between the drive's buffers. This is order to update the logical position, which will be established on the BOP side of the block that was being transferred or received. If an error subsequently occurs while performing the internal data transfer, the sense generated is a DEFERRED ERROR. It is therefore possible to have DEFERRED ERROR sense flagged for a command without immediate report.

## Sense keys

The following table lists the sense keys that may be returned by HP LTO Ultrium drives. SCSI sense keys are 4-bit codes returned in the sense data. They indicate in what general area the problem that has just been experienced falls. For a clearer indication of the nature of the problem, refer to the additional sense code.

Code	Name	Description	ASC/Qs
Oh	NO SENSE	There is no real problem. The sense information is probably indicating some condition (such as encountering a filemark).	0000h, 0001h, 0002h, 0004h, 0016h, 0018h, 0019h, 001Ah, 5E01h, 8282h
1h	RECOVERED ERROR	Returned if a Mode Select parameter is truncated or if a TapeAlert event is being reported.	3700h, 5D00h, 5DFFh
2h	NOT READY	The drive is not in a state to be able to execute the request. See also the Media Access check.	0400h-0402h, 0404h, 0407h, 0409h, 040Ch, 0412h, 0B01h, 3003h, 3A00h,3A04h, 3E00h
3h	MEDIUM ERROR	The command failed, believed to be caused by a problem with the tape.	0002h, 0C00h, 1100h, 1112h, 1400h, 1403h, 3000h–3002h, 3004h, 3007h, 300Dh, 3100h, 3B00h, 5000h, 5200h, 5300h, 5304h
4h	HARDWARE ERROR	The command failed, believed to be caused by a problem with the drive hardware. The FRU in the sense data should indicate which part of the hardware is faulty.	40 <i>XX</i> h, 4400h, 5301h, 8283h
5h	ILLEGAL REQUEST	The last command sent to the drive or the data associated with the command violated conditions imposed by the drive on its acceptance. See also the Illegal Command, Illegal Field, Fixed Bit, Reservation and Parameter List pre-execution checks.	1A00h, 2000h, 2400h, 2500h, 2600h, 2604h, 2C00h, 2C0Bh, 3006h, 3B0Ch, 5302h–5504h, 5506h, 7421 h
6h	UNIT ATTENTION	Indicates some condition of which the host needs to be made aware. See also the Unit Attention check.	2800h, 2901h–2904h, 2907h, 2A01h–2A05h, 2A0Dh, 2A10h–2A12h, 2A15h, 2C07h–2C09h, 3F01h, 3F05h, 3F0Eh

Code	Name	Description	ASC/Qs
7h	DATA PROTECT	A request has been made to modify the media despite the media being write-protected. See also the Media Write check.	2601h, 2700h, 2708h, 2A13h, 3000h, 3005h, 300Ch, 300Dh, 3B1Ch, 7400h–7405h, 7409h, 740Ah, 740Bh, 7461h–7464h, 746Eh, 746Fh, 7480h
8h	BLANK CHECK	The drive tried to read unwritten tape.	0005h, 1403h
9h	VENDOR SPECIFIC	Never returned by HP tape drives	
Ah	COPY ABORTED	Never returned by HP tape drives	
Bh	ABORTED COMMAND	The SCSI command has terminated abnormally. This could be due to a problem related to the SCSI bus or Fibre Channel link. For example, it is reported if a target or LUN receives a second command from the same host before the previous command from that host has completed.	0800h, 2F00h, 3F0Fh, 4700h, 4701h, 4703h, 4800h, 4900h, 4A00h, 4B00h, 4B02h, 4B05h, 4B06h, 4D00h, 4E00h, 7408h
Ch	EQUAL	Never returned by HP tape drives	
Dh	VOLUME OVERFLOW	Data could not be written to tape because of insufficient space. See the WRITE and WRITE FILEMARKS commands.	0002h
Eh	MISCOMPARE	Never returned by HP tape drives	
Fh	RESERVED	Never returned by HP tape drives	

## Additional Sense codes

This section contains a list of all the additional sense codes that an HP LTO Ultrium drive can return, in numerical order. The Sense Keys under which each code could appear are also listed. The ASCQ bytes are present at bytes 12 and 13 of the sense data.

Code	Description	Explanation
00 00h	No additional sense	The drive has no additional sense information for the host. The flags in the sense data indicate the reason for failure.
00 01 h	Filemark detected	This indicates one of the following:
		A READ or SPACE command was terminated early because a filemark was encountered.
		Unsolicited Positional Sense has been set to indicate "at a filemark". The Mark bit in the sense data will be set.
00 02h	End of Tape detected	A media-access command (such as READ, SPACE, WRITE, WRITE FILEMARKS, and so on) found EOT unexpectedly, or the drive could not locate to the specified position on tape because it does not exist or the block count is too great.
		The EOM flag in the sense data will be set.
00 04h	Beginning of Tape detected	BOT was encountered during a space command.
00 05h	End of Data detected	A READ or SPACE command terminated early because it encountered EOD.
00 16h	Operation in progress	A command is in progress and has not yet completed. This could be
00 18h	Erase operation in progress	because another host initiated the command, or the command was sent in immediate mode. The Sense Key Specific Value field in the

Code	Description	Explanation
00 19h	Locate operation in progress	sense data will give some indication of how far the operation has
00 1Ah	Rewind operation in progress	progressed.
04 00h	LUN not ready, cause not reportable	This is set if an unload is executing with immediate report on, or initiated through the front panel, or a different host initiated the command. It is present for the duration of the unload or eject, after which the additional sense changes to 3A 00h (medium not present) or 0402h (logical unit not ready, initializing command required).
04 01h	LUN in process of becoming ready	A media access command has been received while a load is occurring with immediate report on, or initiated through the front panel, or a different host initiated the command.
04 02h	LUN not ready, Initializing command required	A cartridge is present in the drive but is not logically loaded. A LOAD command is required.
04 04h	LUN not ready, format in progress	A FORMAT MEDIUM command with the Immed bit set to one is currently executing.
04 07h	Command in progress	The tape drive is currently executing an immediate mode command (such as UNLOAD).
04 09h	LUN not ready, self-test in progress	The drive is currently in "maintenance" mode (such as running special diagnostic tests).
04 0Ch	LUN not accessible, port in unavailable state	The command is not available on the specified logical unit when sent to the drive through the specified port.
04 12h	Logical unit offline	The command cannot be executed because the specified logical unit has not yet been configured via the appropriate port.
08 00h	Logical unit communication failure	The ADT interface aborted a command due to a communication failure.
OB OOh	Warning	This is not generated by the drive, it is reported by the automation controller via the drive.
OB 01 h	Thermal limit exceeded	There has been a failure due to the drive temperature being outside the acceptable range.
0C 00h	Write error	The drive has failed to write data or filemarks to tape. This is probably due to bad media, but may be hardware-related. Residue information will normally be supplied.
0E 01 h	Information unit too short	There was an ADT protocol error.
0E 02h	Information unit too long	There was an ADT protocol error.
0E 03h	SK Illegal Request	FC drives: Invalid field In command information unit an FCP_CMD request with (rd,wr=11b) or (rd,wr=00b and FCP_DL!=0).
10 01 h	Logical block guard check failed	The drive has encountered a CRC error whilst reading, writing or verifying data.
11 00h	Unrecovered read error	A read operation failed. This is probably due to bad media but may be hardware related.
11 12h	Media Auxiliary Memory read error	An error has occurred while attempting to write to MAM. The cartridge should not be used for further backups but should be able to be used for restoring data.
14 00h	Recorded entity not found	A SPACE or LOCATE command failed because of the drive could not find the target of the operation because of a format violation.
14 03h	End of Data not found	A read-type operation failed because a format violation related to a missing EOD data set, or there was an attempt to read a brand new tape.

Code	Description	Explanation
1A 00h	Parameter list length error	The amount of data (such as mode page, or log page) sent by the initiator may not match the length specified in the CDB (or too much or not enough data was sent).
20 00h	Invalid command operation code	The drive does not recognize the opcode of the command it has received.
24 00h	Invalid field in Command Descriptor Block	The drive has detected an invalid field in a Command Descriptor Block.
25 00h	LUN not supported	The command was addressed to a logical unit number that does not exist.
26 00h	Invalid field in parameter list	The drive detected an invalid field in the command parameter data sent by the initiator.
26 01h	Parameter not supported	A mode parameter is not supported.
26 02h	Parameter value invalid	A mode parameter value is invalid (for example, a partition size in the Medium Partitions mode page).
26 04h	Invalid release of persistent reservation	The Persistent Reservation holder has tried to release the persistent reservation using the PERSISTENT RESERVE OUT command, but the Scope or Type supplied was invalid.
26 10h	Data decryption key fail limit reached	A SECURITY PROTOCOL OUT command has failed because an incorrect key was sent to the drive followed by a READ command, and this cycle has been repeated ten consecutive times.
26 80h	Invalid CA certificate	The certificate provided is not valid.
27 00h	Write-protected	This is set if a write operation (such as WRITE, WRITE FILEMARKS, ERASE, or SET CAPACITY) is requested for a write-protected cartridge.
27 08h	Too many logical objects on partition to support operation	At least one field in the command data is not large enough to represent its full value (for example, the current logical position may be larger that the maximum value of a 32-bit field).
28 00h	Not ready to ready transition, medium may have changed	A tape has been loaded successfully into the drive and is now ready to be accessed.
29 01h	Power-on reset	The drive has powered on since the host last accessed it.
29 02h	SCSI bus reset	The drive will set the interface data transfer parameters to default. Therefore renegotiation may be needed. Commands in progress will be aborted.
29 03h	Bus device reset	The drive will set the interface data transfer parameters to default. Therefore renegotiation may be needed. Commands in progress will be aborted. The initiator may choose to reset the drive on a per LUN basis.
29 04h	Internal firmware reboot	The drive has reset itself.
29 07h	I_T nexus loss occurred	The drive has lost the connection with the initiator (host server).
2A 01h	Mode parameters changed	The Mode parameters for the drive have been changed by a host other than the one issuing the command. UNIT ATTENTION is set for all hosts following a MODE SELECT command, apart from the host that issued the command. This code will only be returned in a multi-host environment.
2A 02h	Log parameters changed	The Log parameters for the drive have been changed by an initiator other than the one issuing the command.
2A 03h	Reservations pre-empted	A PERSISTENT RESERVE OUT command with the Clear service action removed all reservations and the persistent reservation.

Code	Description	Explanation
2A 04h	Reservations released	After PERSISTENT RESERVE OUT command was executed, the original persistent reservation has been replaced with another of a different type or has been removed completely.
2A 05h	Registrations pre-empted	After a PERSISTENT RESERVE OUT command was executed all registrations were removed.
2A 06h	Asymmetric access state changed	This is not generated by the drive, it is reported by the automation controller via the drive.
2A 07h	Asymmetric access state transition failed	This is not generated by the drive, it is reported by the automation controller via the drive.
2A 08h	Priority changed	This is not generated by the drive, it is reported by the automation controller via the drive.
2A 0Dh	Data encryption capabilities changed	There is a new external entity controlling when the encryption parameter may be changed (for example, a tape library may have given up the control of encryption parameters).
2A 10h	Timestamp changed	A SET TIMESTAMP command has been successful.
2A 11h	Data encryption parameters changed by another initiator	The encryption parameters that this initiator was using have been modified or removed by another initiator.
2A 12h	Data encryption parameters changed by a vendor-specific event	The encryption parameters that this initiator was using have been modified or deleted because of a vendor specific event (such as tape unload or reservation released).
2A 13h	Data Encryption Key Instance Counter has changed	The drive received a WRITE command from an initiator that had locked its encryption parameters to a specific Key Instance Counter, whose value has now changed.
2A 14h	SA creation capabilities data has changed	
2A 15h	Medium removal prevention pre-empted	The prevention of medium removal condition has been preempted. All initiators affected except the one that sent the command will be notified by means of this UNIT ATTENTION condition.
2A 80h	Security configuration changed	
2C 00h	Command sequence invalid	The sequence of SCSI commands is invalid.
		Example 1: The use of the echo buffer was in valid. A WRITE BUFFER command is necessary before a READ BUFFER command.
		Example 2: Another initiator has already started a firmware download process.
2C 07h	Previous busy status	This is not generated by the drive, it is reported by the automation controller via the drive.
2C 08h	Previous task set full status	This is not generated by the drive, it is reported by the automation controller via the drive.
2C 09h	Previous reservation conflict status	This is not generated by the drive, it is reported by the automation controller via the drive.
2C OBh	Not reserved	If the "Only If Reserved" bit is set in the Device Configuration mode page, and the drive does not hold a reservation or persistent reservation, some commands will not be allowed to execute. In other words, some commands can only be executed if the drive is reserved.
2F 00h	Commands cleared by another initiator	Another initiator has already started a firmware download sequence.
30 00h	Incompatible medium installed	A write-type operation could not be executed because it is not supported on the type of tape that is loaded.

Code	Description	Explanation
30 01h	Cannot read media, unknown format	A LOCATE or SPACE command has found the tape is in a format not supported by the drive.
30 02h	Cannot read media: incompatible format	A READ command could not be completed because the logical format is not correct.
30 03h	Cleaning cartridge installed	A medium-access command has been sent to the drive while a cleaning cartridge was loaded.
30 04h	Cannot write medium	The tape's Cartridge Memory is bad so that the tape is unusable.
30 05h	Cannot write medium, incompatible format	For example, a WRITE command was received but the LTO tape generation currently loaded cannot be written to.
30 06h	Cannot format, incompatible medium	A format operation was requested, but the tape inserted in the drive does not support this operation.
30 07h	Cleaning failure	A cleaning operation was attempted but could not be completed for some reason.
30 OCh	WORM medium—overwrite attempted	A write operation could not be executed because an overwrite has been attempted on a WORM cartridge. This may be because an overwrite backup was specified instead of an appended backup.
30 0Dh	WORM medium—integrity check failed	The drive has detected an inconsistency when performing an integrity check on a WORM cartridge. The cartridge may have been tampered with.
31 00h	Medium format corrupted	Data could not be read because the format on tape is not valid, although it is in a known format.
37 00h	Rounded parameter	The drive needs to round off the value of a parameter sent by MODE SELECT because it cannot store it to the degree of accuracy sent by the command.
3A 00h	Medium not present	A medium-access command has been received when no cartridge is in the drive.
3A 04h	Medium not present, Media Auxiliary Memory accessible	A media access command has been received when the tape has been loaded but not threaded. This will be reported if the hold bit of the LOAD CDB was set or the Autoload field in the Control mode page is non-zero.
3B 00h	Sequential positioning error	The drive has failed to read data off tape. There are two possibilities:
		The current command (such as READ, SPACE, REWIND, or WRITE) failed to complete successfully.
		The logical position has been lost.
3B OCh	Position past BOM	A SET CAPACITY command was received when the logical position was not BOT, a necessary condition for this command.
3B 1Ch	Too many logical objects on partition to support operation.	First Block Location field on READ POSITION Short Form Block ID is not large enough to be able to represent the current logical position.
3E 00h	Logical unit has not self-configured yet	This is set during power-up when it is not possible to send medium-access commands to the drive because mechanism tests are being executed. When the tests are complete, the additional sense changes to 3A 00h, 04 01h or 04 02h depending on whether a cartridge was present at power-on.
3F 01 h	Microcode has been changed	The firmware in the drive has just been changed by a WRITE BUFFER or MAINTENANCE OUT command, or a Firmware Update cartridge.
3F 03h	Inquiry data has changed	This is not generated by the drive, it is reported by the automation controller via the drive.
3F 05h	Device identifier changed	A SET DEVICE IDENTIFIER command has been successful.

Code	Description	Explanation
3F OEh	Reported LUNs data has changed	Reported LUNs data has changed.
3F OFh	Echo buffer overwritten	A READ BUFFER command has been received with Echo Buffer mode set, but the echo buffer has been overwritten by a different host.
40 <i>XX</i> h	Diagnostic failure on component XX	A self-test command has detected an error, or a command is prohibited from execution due to failure of a previous diagnostic. "XX" is a vendor-specific code indicating the failing component.
43 00h	Message error	A message could not be sent or received because of excessive transmission errors.
44 00h	Internal target failure	This code is used to report hardware and firmware related hard errors that occur when the drive encounters an "impossible" situation.
45 00h	Selection/reselection failure	An attempt to reselect an initiator in order to complete the command has failed.
47 00h	SCSI parity error	A command failed due to an excessive number of parity errors on the SCSI interface.
48 00h	Initiator Detected Error message received	An Initiator Detected Error primitive has been received from the host. This may indicate there was a CRC error on the data transmitted through the link.
49 00h	Invalid message	An invalid or unsupported Task Management Function has been received, or there has been an ADT service delivery failure.
4B 00h	Data phase error	The ACI received more raw data than expected.
4B 02h	Too much write data	The ADT interface received more SCSI data than permitted within a burst.
4B 03h	ACK/NAK timeout	There have been protocol issues on the FC or SAS link.
4B 04h	NAK received	There have been protocol issues on the FC or SAS link.
4B 05h	Data offset error	The ADT interface received data unexpectedly or with an offset outside the current burst.
4B 06h	Initiator response timeout	SAS only: The host has not responded to the request within the established time limit. Any SCSI command currently being executed will be aborted.
4D 00h	Tagged overlapped command	A host has selected and sent a new command to the drive even though the drive is already processing a command with the same tag from this host to the same LUN.
4E 00h	Overlapped commands	A host has selected and sent a new command to the drive even though the drive is already processing a command from this host to the same LUN.
50 00h	Write append error	A write-type command failed because the point at which to append data was unreadable. This was probably caused by a powerfail, or Fibre Channel/SAS link reset, preventing the drive from completing a write operation properly and appending an EOD.
52 00h	Cartridge fault	A command could not be completed because of a fault in the tape cartridge.
53 00h	Media load or eject failed	An attempt to load or eject the tape failed because of a problem with the tape.
53 01h	Unload tape failure	The tape unload failed because it cannot be physically completed at this time.
53 02h	Medium removal prevented	An unload command has failed to eject the tape because medium removal has been prevented.

Code	Description	Explanation
53 03h	Insufficient resources	The drive is unable to hold any more information specific to the command sent by the initiator. This may be because an internal memory buffer has reached its full capacity.
53 04h	Medium thread or unthread failure	The threading or unthreading operation failed.
55 04h	Insufficient registration resources	FC drives: FC interface only: Up to 32 initiators may register using the PERSISTENT RESERVE OUT command. A 33rd attempt to register is rejected.
		SAS drives: Not applicable
55 06h	Media Auxiliary Memory full	There is insufficient space in the Host Attribute area in MAM to fit attributes that need to be written.
5B 01h	Threshold condition met	This is not generated by the drive, it is reported by the automation controller via the drive.
5D 00h	Failure prediction threshold exceeded	Failure Prediction thresholds have been exceeded indicating that TapeAlert flags have been activated.
5D FFh	Failure prediction threshold exceeded (false)	The Informational Exceptions Mode page has been sent with the Test field set to 1 and the DExcpt field to 0, causing the drive to generate a false informational exception condition (a false device failure).
5E 01h	Idle condition activated by timer	The drive has entered power-saving mode. This code is only reported in response to a REQUEST SENSE command.
74 00h	Security error	Generic security (encryption/decryption) error. For example, the Decryption mode is set to RAW and the drive has been asked to read, but this Decryption mode is not allowed on the current block (as was specified when it was written to tape).
<i>7</i> 4 01 h	Unable to decrypt data	The drive encountered encrypted data while reading, but decryption mode is not enabled.
74 02h	Unencrypted data encountered while decrypting	The decryption mode is enabled but the drive encountered non-encrypted data while reading.
74 03h	Incorrect data encryption key	The drive read into a block of data which could not be decrypted with the current decryption key.
74 04h	Cryptographic integrity validation failed	The next block failed the integrity validation process while the drive was attempting to read it.
74 05h	Key-associated data descriptors changed.	The key-associated data descriptor values have changed compared with the values in the last recorded read.
<i>7</i> 4 08h	Digital signature validation failure	An attempt to download a new firmware image has failed because the image contains an incorrect digital signature. As a result, the firmware image could not be authenticated.
<i>7</i> 4 09h	Encryption mode mismatch on read	The drive tried to read a block written in EXTERNAL encryption mode, but the drive is set only to read blocks written in ENCRYPT encryption mode, or vice versa.
74 0Ah	Encrypted block not RAW read-enabled	The decryption mode is set to RAW but the block on tape is marked as disabled for reads in RAW mode.
74 OBh	Incorrect encryption parameters	Incorrect KAD descriptors were supplied (decryption mode set to RAW only)
<i>7</i> 4 21h	Data encryption configuration prevented	Encryption settings are controlled by an external device, such as a tape library, so encryption parameters cannot be currently changed.
74 40h	Authentication failed	The authentication data on the parameter data cannot be verified with any of the initiators' public keys that are stored in the drive.
<i>7</i> 4 61 h	External data encryption Key Manager access error	The external Key Manager experienced an unrecoverable error and could not provide the encryption key requested by the drive.

Code	Description	Explanation
74 62h	External data encryption Key Manager error	The external Key Manager experienced an error whilst trying to retrieve an encryption key after a requested from the drive.
74 63h	External data encryption management—key not found	The external Key Manager did not find the encryption key in the database after a request from the drive.
74 64h	External data encryption management—request not authorized	The external Key Manager did not provide the requested encryption key because authorization failed.
74 6Eh	External data encryption control time-out	The external Key Manager did not provide the encryption key requested by the drive within the specified time limit.
74 6Fh	External data encryption control unknown error	The external Key Manager experienced an unspecified error and could not provide the encryption key requested by the drive.
74 71h	Logical Unit access not authorized	The automation application did not provide a cryptographic key to the device within the specified period or the key manager did not provide a cryptographic key to the automation application, which terminated the command.
74 80h	KAD changed	An Encryption AAD, an Encryption UAD, or an Encryption Key Signature mismatch was detected while in RAW read mode.
74 82h	Crypto KAD in CM failure	
82 82h	Drive requires cleaning	The drive has detected that the heads need to be cleaned to maintain good operation.
82 83h	Bad microcode detected	The data transferred to the drive during a firmware upgrade is corrupt or incompatible with the drive hardware.

### Error codes

The error codes that can be reported in bytes 16 and 17 are listed in Chapter 10 of the *Hardware Integration Guide*, Volume 1 of the HP LTO Ultrium Technical Reference Manual.

# RESERVE UNIT 16h/56h

This command enables the host to reserve the drive. Reserving a device is a way of ensuring exclusive access to that device from a single initiator for the period of the reservation.

Once reserved, the drive will execute commands received from the reserving initiator or from the third-party initiator if the 3rd-Pty option has been selected. Commands from other initiators will have RESERVATION CONFLICT status reported for them, apart from INQUIRY, LOG SENSE, READ BLOCK LIMITS, READ MEDIA SERIAL NUMBER, RELEASE UNIT, REPORT DENSITY SUPPORT, REPORT DEVICE IDENTIFIER, REPORT LUNS, REPORT TARGET PORT GROUPS and REQUEST SENSE.

The INQUIRY, LOG SENSE, READ BLOCK LIMITS, READ MEDIA SERIAL NUMBER, RELEASE UNIT, REPORT DENSITY SUPPORT, REPORT LUNS, and REQUEST SENSE commands, and all commands with opcode A3h are immune to the effects of a reservation and will continue to execute for all hosts. The RELEASE UNIT command will have GOOD status reported for other hosts, but will have no effect on the reservation.

The 10-byte RESERVE UNIT command is supported by all drives. Its functionality is the same as for the 6-byte command, but it also supports third-party reservation.

The reservation will stay in effect until:

- The reserving host sends another RESERVE UNIT command.
- The reserving host sends a RELEASE UNIT command, clearing the reservation.
- A power-on, firmware upgrade or forced eject.

#### **Pre-execution checks**

Illegal Field

Deferred Error

**Unit Attention** 

If the drive is reserved by some other host then reservation conflict status is reported to the host.

### Command descriptor block (6-byte version)

	7	6	5	4	3	2	1	0	
0	Operation Code (16h)								
1		Reserved (0)		3rd Pty(0)	Third-Party Device ID (0) Rsvd(0)				
2									
4	Reserved (0)								
5	Control								

3rdPty	This is always zero because third-party reservation is not supported.
Third-Party Device ID	This is always zero because third-party reservation is not supported.

## Command descriptor block (10-byte version)

	7	6	5	4	3	2	1	0		
0	Operation Code (56h)									
1	Reserved (0) 3rd Pty (0) Reserved (0) LongID(0) Rsvd(0)									
2		Reserved (0)								
3	Third-Party Device ID (0)									
4–6	Reserved (0)									
7	(MSB)									
8		Parameter List Length (LSB)								
9				Со	ntrol					

3rd Pty	0	Third-party reservation is not requested. (Third-party reservation is only possible in pSCSI.)					
LongID	This is o	This is always zero because device IDs greater than 255 are not supported.					
Third-Party Device ID	Third-party reservation is only possible in pSCSI, so this field is set to 0.						

## REWIND 01h

REWIND causes the drive to write all buffered logical objects to tape and then positions the tape at BOP (beginning of partition). Once a rewind is started, it will complete even if the SCSI operation is aborted.

### **Pre-execution checks**

Illegal Field	Reservation	Deferred Error
Unit Attention	Media Access	Diagnostic Status

## Command descriptor block

	7	6	5	4	3	2	1	0		
0	Operation Code (01 h)									
1	Reserved (0)									
2–4	Reserved (0)									
5		Control								

#### **CDB** fields

Immed	0	Status is returned after the rewind has completed.
	1	The drive first writes any unwritten buffered data to tape. It then returns GOOD status to the host before beginning the actual rewind operation.

# **REWIND** specific status

If the rewind is successful, unsolicited positional sense will indicate that the tape is at BOM by the EOD bit being set and an additional sense code of 0004h (BOP).

## SECURITY PROTOCOL IN A2h

The SECURITY PROTOCOL IN command returns information about the security data for the I\_T nexus in the device server and on the tape.

### **Pre-execution checks**

Illegal Field Reservation Deferred Error Unit Attention

## Command descriptor block

	7 6 5 4 3 2 1								
0	Operation Code (A2h)								
1		Security Protocol							
2			c	`it. Du-t	C::::-				
3	Security Protocol Specific								
4	Inc 512 (0) Reserved (0)								
5	Reserved (0)								
6				Allocation	Langth				
9	Allocation Length								
10	Reserved (0)								
11				Contr	ol				

#### **CDB** fields

Security Protocol	00h	Security protocol information
	20h	Tape Data Encryption security protocol

Security Protocol Specific	The contents of this field depend on the protocol specified by the Security Protocol field. See below.
Allocation Length	The number of bytes allocated for the returned parameter data

# SECURITY PROTOCOL IN returned data

## Security protocol information

When the Security Protocol field is 00h, the only supported values for the Security Protocol Specific field are as follows:

Code	Description
0000h	Supported security protocol list
0001 h	Certificate data

### Supported security protocol list:

	7	6	5	4	3	2	1	0		
0–5	Reserved (0)									
6										
7		Supported Security Protocol List Length (02h)								
8		First Supported Security Protocol (00h)								
9	Last Supported Security Protocol (20h)									

### Certificate data:

	7	6	5	4	3	2	1	0		
0–1	Reserved (0)									
2										
3	Certificate length (n-3)									
4		Certificate								
n				Cert	ітісате					

If the device does not have a certificate installed, the device server does not have a certificate to transfer either, so the Certificate Length is set to 00h.

## Tape Data Encryption security protocol

When the Security Protocol field is 20h, the following table specifies the pages that are supported (specified in the Security Protocol Specific field). They must be requested individually.

Code	Description
0000h	Tape Data Encryption In Support page
0001h	Tape Data Encryption Out Support page
0010h	Data Encryption Capabilities page
0011h	Supported Key Formats page

Code	Description
0012h	Data Encryption Management Capabilities page
0020h	Data Encryption Status page
0021h	Next Block Encryption Status page
0031 h	Device Server Key Wrapping Public Key

# Tape Data Encryption In Support page

	7 6 5 4 3 2 1									
0	Page Code (0000h)									
1		rage Code (UUUUn)								
2		Page Length (10h)								
3				ruge ten	giii (1011)					
4		To	ne Data Enc	ryption In Supp	ort Page Code	(first) (0000	lh)			
5			ipe Daid Elic	ryphon in sopi	John ruge Coue	s (11131) (0000	11)			
6			Tane Data Fr	ncryption Out S	Support Page (	ode (0001 h	1			
7			Tape Dala El	тегурпоп оог с	oppon rage c	code (00011)				
8			Data Encr	yption Capabi	lities Page Coo	le (0010h)				
9			Daia Elici	урпоп сараы	illies rage coc	1001011)				
10		Supported Key Formats Page Code (0011 h)								
11				ica key ronna	is rage code					
12		Dat	a Encryption	Management (	Canabilities Pa	ae Code (00	12h)			
13		Dui	a Encryphon	Management	гаравініся та 	ge code (00	1211)			
14			Data F	ncryption Statu	s Page Code (1	0020h)				
15			Daia Li	neryphon siaio	s rage code (	002011)				
16			Nevt Bloc	k Encryption St	ratus Page Cod	ام (0021h)				
17		Next Block Encryption Status Page Code (0021h)								
18		D <sub>e</sub>	vice Server K	ey Wrapping	Public Key Pag	e Code (003				
19		De	VICE DELVEL IV	cy wrapping	Toblic Ney Tug	cooe (000	,			

# Tape Data Encryption Out Support page

	7	6	5	4	3	2	1	0		
0	Page Code (0001h)									
1	Page Code (0001h)									
2	B 1 (221)									
3	Page Length (O2h)									
4	Tape Data Encryption In Support Page Code (0010h)									
5			таре рата с	ncryphon in a	ирроп гаде С	.ode (OUTON)				

# Data Encryption Capabilities page

	7	6	5	4	3	2	1	0				
0		Page Code (0010h)										
1				ruge C	.ode (ooron	')						
2				Paga	anath (28h)							
3	Page Length (28h)											
4	Reserved (0) EXTDECC (10b) CFG_P											
5		Page 1 (O)										
19		Reserved (0)										
20				Algorith	m Index (01	h)						
21				Res	erved (0)							
22		Descriptor Length (0014h)										
23				Descripion	Lengin (00	1411)						
24	AVFMV	SDK_C (0)	MAC_C (1)	DELB_C (1)	Dec	crypt_C	Encry	ypt_C				
25	A۷	/FCLP	Nonce <sub>.</sub>	_C (1)	KADF_C (1)	VCELB_C (1)	UKADF (0)	AKADF (0)				
26			A A 1 I	a	V Ai-	uta d Davia: Di itaa	(20L)					
27			Maximum on	aumenncalea	Key-Associo	nted Data Bytes	(2011)					
28			Maximum	a Authorticata	d Koy Assoc	ciated Data Byte						
29			Maximon	n Aumenneue	u Key-Assoc	lidied Daid Byle	:5					
30				Kay S	ize (0020h)							
31				itey 5								
32	DKA	D_C (3)	EEMC_	_C (2)		RDMC_C (4)	)	EAREM (1)				
33				Res	erved (0)							
34				MSDI	<_Count (0)							
35				141301								
36				Ras	erved (0)							
39				Nes								
40	-		Security	Algorithm Co	de (AES-CG	M) (00010014h	)					
43	Security Algorithm Code (AES-CGM) (00010014h)											

EXTDECC	10b	The device is external data encryption capable.							
CFG_P	Configure	Configuration Prevented							
	01b Data encryption parameters can be established or changed.								
	10b	Data encryption parameters cannot be established or changed.							
AVFMV	Algorithm Valid For Mounted Volume. Set to 1 if there is a tape threaded and it is encryption-capablusing the supplied algorithm index.								
Decrypt_C	10b	The device can decrypt data using this algorithm in hardware.							

	_						
	11 b	The device can decrypt data using this algorithm but control of the data encryption parameters is prevented.					
Encrypt_C	10b	The device can encrypt data using this algorithm in hardware.					
	11 b	The device can encrypt data using this algorithm but control of the data encryption parameters is prevented.					
AVFCLP	Algorithm	Valid For Current Logical Position					
	00b	00b No tape loaded.					
	01b	b The specified encryption algorithm is not valid for writing at the current logical position.					
	10b	The specified encryption algorithm is valid for writing at the current logical position.					
Maximum	0Ch	A Generation 4 tape is mounted in the drive.					
Authenticated Key-Associated Data Bytes	3Ch	Otherwise.					
RDMC_C	The RAW	Decryption Mode Control Capabilities field is set to 04h to indicate that:					
	<ul> <li>Perforr</li> </ul>	ning read operations in RAW decryption mode is not allowed by default.					
		pplication may control future RAW reads via the RDMC field in the "Set Data Encryption page r Format = Plain-text key (00h)" (page 224).					
EAREM		ption Algorithm Records Encryption Mode bit is set to one if the encryption mode is recorded encrypted block.					
MSDK_Count	Maximum	Supplemental Decryption Key Count					

## Supported Key Formats page

	7	6	5	4	3	2	1	0			
0	Page Code (0011h)										
1	Page Code (0011h)										
2											
3	Page Length (O2h)										
4	Key Format — Plain-text (00h)										
5	Key Format — Wrapped (02h)										

See the "Set Data Encryption page for Key Format = Plain-text key (00h)" (page 224) of the SECURITY PROTOCOL OUT command for a description of Key Format of 00h.

## Data Encryption Management Capabilities page

	7	6	5	4	3	2	1	0					
0		Page Code (0012h)											
1				ra	ge Code (C	JO12N)							
2	Page Length (OCh)												
3				rc	ige tengin	(ocn)							
4				Reserve	ed (0)			LOCK_C (1)					
5	Reserved (0)         CKOD_C (1)         CKORP_(1)         CKORL_C (1)												
6					Reserved	(0)							

	7	6	5	4	3	2	1	0
7	Reserved (0)					AITN_C (1)	Local_C (1)	Public_C (1)
8					Danam radi	(0)		
15					Reserved	(U)		

# Data Encryption Status page

	7	6	5	4	3	2	1	0		
0				Page Cod	de (0020h)					
1				ruge coo	de (002011)					
2	Dona Legath (c. 2)									
3	Page Length (n-3)									
4	I_	T Nexus Scop	e	Reser	ved (0)		Key Scope			
5				Encrypti	on Mode					
6				Decrypt	on Mode					
7		Algorithm Index (01h)								
8				Koy Instan	ice Counter					
11				Key Ilisiai	ice Couniei					
12	Rsvd (0)	Pa	rameters Cont	rol	VCELB	CE	EMS	RDMD		
13			Enc	ryption Paran	neters KAD For	mat				
14				VSDK (	Count (0)					
15				A3DK_V						
16				Posor	ved (0)					
23				reser	veu (U)					
24			Kov	Associated D	ata Descriptors	e liet				
n			ixey-	-Associated D	ala Descripion	o riol				

Key Instance Counter	for each key event that se	This field is relative to the key indicated by the Key Scope field value. One key instance counter is kept for each key the device server is managing. It is cleared to zero only after a power-on condition. Any event that sets, clears or changes one of the parameters in a set of security parameters will increment this value. The counter can roll over.								
Parameters 001b Data encryption parameters are not exclusively controlled by external da control.										
	010b	010b Data encryption parameters are exclusively controlled by the SSC device server.								
	011 b	Data encryption parameters are exclusively controlled by the ADC device server.								
	100b	Data encryption parameters are exclusively controlled by a management interface.								
VCELB	The Volume Contains Encrypted Mogical Blocks field is set to one when a tape is loaded and conta at least one encrypted logical block. Otherwise set to zero.									
CEEMS										

RDMD	The RAW Decryption Mode Disabled bit is set to one if the drive is configured to mark each encrypted block as disabled for RAW read operations based on the RAW decryption mode disable parameter value saved for the I_T nexus on which the command was received.
Encryption Parameters KAD Format	The KAD_format value stored as part of the initiator's encryption parameters. : .
ASDK_Count	Available Supplemental Decryption Key Count

# Next Block Encryption Status page

This page will perform Media Access Checks.

	7	6	5	4	3	2	1	0			
0				D C	l- (0001l-)						
1				rage Co	de (0021h)						
2											
3		Page Length (n-3)									
4		Block Number									
11				BIOCK I	Number						
12		Compress	ion Status			Encrypt	ion Status				
13				Algorithm	Index (01 h)						
14			Reserve	ed (0)			EMES	RDMDS			
15		Next Block KAD Format									
16		Key-Associated Data Descriptors List									
n			ivey-	Associated D	did Descriptors	o LISI					

Compression Status	Only 0h	is supported.				
	Oh	Unable to determine if the block is compressed.				
Encryption Status	00h	Unable to determine if the block is encrypted.				
	01 h	Capable of determining if the block is encrypted, but not at this time (because of EOD, read error, or similar).				
	02h	The block number does not correspond to a logical block.				
	03h	he block is not encrypted.				
	04h	The block is encrypted but not by the encryption algorithm supported in the device. KAD descriptors are returned if available. The Algorithm Index field is ignored.				
	05h	The block is encrypted by a supported encryption algorithm. KAD descriptors are returned.				
O6h The block is encrypted by a supported encryption algorithm, but the drive the block, or does not have the correct key or nonce value.						
EMES	5h or 6h	ryption Mode External Status bit is set to one if the Encryption Status field is set to either it, and the next block is marked as having been written to the medium while the encryption as set to EXTERNAL. It is set to zero otherwise.				

	The RAW Decryption Mode Disabled Status bit is set to one if the Encryption Status field is set to either 5h or 6h, and the next block is marked as disabled for RAW decryption mode operations. It is set to zero otherwise.
Next Block KAD Format	The KAD_format value stored within the next logical block on tape.

## Device Server Key Wrapping Public Key page

	7 6 5 4 3 2 1 0										
0		Page Code (0031 h)									
1	rage Code (003111)										
2				D 1	ıl (500)						
3				rage Ler	ngth (522)						
4			D	oldi - Mara Tara	- (00000000	- \					
7			٢	ublic Key Typ	e (00000000h	1)					
8			D.	LI: - 1/ F	-+ (0000000	NL V					
11			PU	blic Key Form	at (0000000	n)					
12				Dulalia Mau	1 th (F10)						
13		Public Key Length (512)									
14		Public Key									
n				rubii	ic rey						

Public Key Type	0000000h, which represents the RSA 2048 algorithm.					
Public Key Format 00000000h for the RSA 2048 algorithm.						
Public Key	Bytes O through 255 of the Public Key field contain the modulus 'n'. Bytes 256 through 511 contain the public exponent 'e'.					

# SECURITY PROTOCOL OUT B5h

The SECURITY PROTOCOL OUT command is used to configure the data security parameters for the I\_T nexus in the device server and on the tape.

### **Pre-execution checks**

Deferred Error Illegal Field Reservation **Unit Attention** 

	7	6	5	4	3	2	1	0		
0	Operation Code (B5h)									
1				Security Prot	ocol					
2			۲.		C:(: .					
3			Sec	urity Protocol	Specific					
4	Inc 512 (0)	Inc 512 (0) Reserved (0)								
5		Reserved (0)								

	7	6	5	4	3	2	1	0			
6	Allocation longth										
9	Allocation Length										
10		Reserved (0)									
11				Control							

### CDB fields

Security Protocol	20h	Tape Data Encryption security protocol						
Security Protocol Specific	The cor below.	ntents of this field depend on the protocol specified by the Security Protocol field. See						
Allocation Length	The nur	nber of bytes allocated for the returned parameter data						

### SECURITY PROTOCOL OUT returned data

### Tape Data Encryption security protocol information

When the Security Protocol field is 20h, only the Set Data Encryption page (0010h) is supported, which must be specified in the Security Protocol Specific field.

**NOTE:** If the cartridge does not support encrypted data, an attempt to write when encryption is enabled or read when decryption (or RAW mode) is enabled will terminate with CHECK CONDITION status, with sense of DATA PROTECT and additional sense of 3000h (incompatible medium installed).

### Set Data Encryption page for Key Format = Plain-text key (00h)

	7	6	5	4	3	2	1	0			
0				Paga Cor	1° (0010P)						
1	Page Code (0010h)										
2		Page Length (n-3)									
3				rage ter	igiii ( <i>n</i> –3)						
4		Scope			Reserv	ed (0)		Lock			
5	CEEM	۱ [0]	RDMC	C [0]	SDK (0)	CKOD	CKORP	CKORL			
6				Encrypti	on Mode						
7				Decrypti	on Mode						
8				Algorithm	Index (01 h)						
9			Logical	Block Encryp	tion Key Formo	at (02h)					
10				KAD	Format						
11				Posor	ved (0)						
17				Keser	veu (U)						
18			Logical	Block Energy	tion Key Lengt	h (20h)					
19			Logical	ыоск спстур	mon key tengi	11 (2011)					
20			l	ogical Block	Encryption Key	,					

	7	6	5	4	3	2	1	0						
51														
52	V A ID. D III													
n			Key-	Associatea D	did Descriptors	S LIST	Key-Associated Data Descriptors List							

Scope	Oh	Public	All fields in the Set Data Encryption page other than Scope and Lock fields are ignored. The I_T nexus will use shared data encryption parameters. If no I_T nexuses are sharing data encryption parameters, the drive will use the default parameters.					
	1h	Local	Data Encryption parameters are not shared, but are unique to this I_T nexus.					
	2h	All I_T Nexus	Data encryption parameters will be shared with all I_T nexuses whose scope is Public.					
Lock	1	established a Key Instance	s will be associated (and locked) to the set of data encryption parameters fter processing the SECURITY PROTOCOL OUT command, and the current Counter. Only a hard reset or another SECURITY PROTOCOL OUT from nexus can clear this bit.					
		since the last commands) v PROTECTand	processes a Write command and the Key Instance Counter has changed time it was locked, the Write command (and any subsequent Write will be terminated with CHECK CONDITION, sense key of DATA additional sense of 2A13h (data encryption key instance counter has nly a hard reset or a SECURITY PROTOCOL OUT from the same I_T nexus condition.					
CEEM	mode is	set to DISABLE	tion Mode. If this field is set to either 10b or 11b, and the decryption E, SECURITY PROTOCOL OUT is terminated with CHECK CONDITION, set to 2600h (invalid field in parameter list).					
	00b	Same as 10b	).					
	01b	Do not check	Do not check the encryption mode used to write the block.					
	10b	Decryption M in EXTERNAL	On read and verify commands, check the encryption mode used to write the block. Decryption Mode is set to DECRYPT or MIXED. Report an error if the block was written in EXTERNAL mode. The sense key is set to DATA PROTECT with additional sense of 7409h (encryption mode mismatch on read).					
	11 b	On read and verify commands, check the encryption mode used to write the block. Decryption Mode is set to DECRYPT or MIXED. Report an error if the block was written in ENCRYPT mode. The sense key is set to DATA PROTECT with additional sense of 7409h (encryption mode mismatch on read).						
RDMC	block it	writes to tape o	e Control. This field specifies if the drive should mark each encrypted as disabled for read operations with the decryption mode set to RAW. he <b>Encryption Mode</b> field is not set to ENCRYPT.					
	00Ь		rks each encrypted block according to the RDMC_C flag setting on the ion Capabilities page (see page "Data Encryption Capabilities page"					
	01b	Reserved.						
	10b	The drive ma	rks each encrypted block it writes as enabled for RAW decryption mode					
	11 b	The drive ma	rks each encrypted block it writes as disabled for RAW decryption mode					
CKOD	Clear Ke	ey On Demoun	nt					
	1	Data Encrypt	ion parameters are switched to the default values upon tape unload.					
	1.		tion Pre-empted					

	1		ion parameters are switched to the default values upon pre-emption of ersistent reservation.				
CKORL	Clear Key On Reservation Loss						
	1	Data Encrypt	ion parameters are switched to the default values upon reservation loss.				
Encryption Mode	Oh	Disable	No data encryption will be performed.				
	1h	External	Data sent via WRITE commands has been already encrypted by a supported encryption algorithm.				
	2h	Encrypt	Data from WRITE commands will be encrypted with the specified key.				
Decryption Mode	Oh	Disable	The data on the tape is not encrypted, so no decryption will be performed.				
	1h	RAW	Data is encrypted on tape, but no decryption will be performed. The data is passed directly to the host.				
	2h	Decrypt	ecrypt Data is encrypted on tape and decryption will be performed.				
	3h	Mixed	There is both encrypted and non-encrypted data on tape. The device will decrypt or not accordingly.				
KAD Format	Identifies	the format of	the data stored in the U-KAD and/or A-KAD.				
	00h	Unspecified					
	01 h	Binary key no	ame				
	02h	ASCII key na	me				
	03–FFh Reserved						
Key-Associated Data Descriptors	Encrypt, encrypte	the drive will s d with the spe	or may not be sent by the application. If the <b>Encryption Mode</b> is set to save the KAD descriptors. They are associated with every block that is cified key. The descriptors are specified in increasing numeric order. See If the descriptors.				

# Key Descriptor format when Key Format field is 00h

	7 6 5 4 3 2 1 0									
0	Key Descriptor Type									
1		Reserved (0) Authenticated								
2				KDi-t-						
3				Key Descripto	or Length ( <i>n</i> –3)					
4	Key Descriptor									
n				Key De	escripior					

Key Descriptor Type	Oh	Unauthenticated key-associated data
	1h	Authenticated key-associated data
	2h	Nonce value (not supported)
	3h	Security meta-data key-associated data
Authenticated	Oh	Reserved. This is always the case if KAD descriptors are included.
	1 h	The descriptor is not covered by the authentication
	2h	No attempt has been made to authenticate the descriptor

In the Set Data Encryption page and in the Data Encryption Status page (SECURITY PROTOCOL IN), if KAD descriptors are included the Authenticated field is always reserved. In the Next Block Encryption Status page (SECURITY PROTOCOL IN), if KAD descriptors are included the Authenticated field will have the following values: 01h if U-KAD 02h if A-KAD 02h if S-KAD

## Set Data Encryption page for Key Format = Wrapped key (02h)

	7 6 5 4 3 2 1 0									
0				Paga Cor	4° (0010P)					
1	Page Code (0010h)									
2	Page Length ( <i>m</i> –3)									
3					giii ( <i>III</i> –3)					
4		Scope			Reserv	ed (0)		Lock		
5	CEEM	١ [0]	RDMC	C [0]	SDK (0)	CKOD	CKORP	CKORL		
6				Encrypti	on Mode					
7				Decrypti	ion Mode					
8				Algorithm	Index (01h)					
9			Logical	Block Encryp	tion Key Formo	at (00h)				
10				KAD	Format					
11				Posori	ved (0)					
17				Kesei	ved (O)					
18			logical	Block Encryp	tion Key Length	v (n=10)				
19			Logical	block Elleryp	non key tengii	1 (11–17)				
20			,	ogical Block	Encryption Ko	,				
n		Logical Block Encryption Key								
n+1			Vav	Associated D	ata Dosarintar	Liet				
m			ivey-	Associated D	ata Descriptors	LISI				

## Key field format when Key Format field is 02h

	7	6	5	4	3	2	1	0			
0	Percentage Set (O)										
1		Parameter Set (0)									
2	Label Length ( <i>n</i> –3)										
3				Laber Ler	igin ( <i>n</i> –3)						
4				ام	hal						
n	Label										
n+1			W	/rapped Key I	ength ( <i>m</i> –( <i>n</i> +2	2))		_			

	7	6	5	4	3	2	1	0			
n+2											
n+3											
m		Wrapped Key									
m+1				C:							
m+2				Signature Ler	ngth ( <i>z</i> -( <i>m</i> +2))						
m+3	C:										
Z	Signature										

Label	Is available, contains Wrapped Key descriptors. They contain public information associated with the logical block encryption key.
Wrapped Key	The logical block encryption key that has been encrypted with the device server's public key using an RSA 2048 algorithm.
Signature	If available, Signature is checked in order to verify that the key was wrapped and signed by a valid key management server. The signature is created by applying an RSA algorithm over the wrapped key using the wrapping entity's private key. This operation adds integrity to both the Label and the Key.

## Wrapped Key descriptors

	7 6 5 4 3 2 1 0								
0	Wrapped Key Descriptor Type								
1				Reser	ved (0)				
2			\A/	J K D	:	( 2)			
3			vvrap	pped Key Des	criptor Length	(n–3)			
4	Wrapped Key Descriptor								
n				vvrappea K	ey Descriptor				

Key Descriptor Type	Code	Name	Description		
	Oh	Device server identification	Contains the logical unit name for the device server (as returned in the Device Identifier Inquiry page)		
	1h	Key wrapping entity identification	The contents are ignored.		
	2h	Wrapped key information	The contents are ignored.		
	3h	Wrapped key identification	The contents are ignored.		
	4h	Wrapped key length	Length of the wrapped key in bytes.		

# SECURITY PROTOCOL OUT specific status

• If the drive processes a WRITE command and the Key Instance Counter has changed since the last time it was locked, the WRITE command (and any subsequent WRITE commands) will be terminated with CHECK CONDITION, a sense key of DATA PROTECT and additional sense of 2A13h (data encryption key instance counter changed). Only a hard reset or a SECURITY PROTOCOL OUT from the same I\_T nexus will clear this condition. If the CKOD bit

is set and there is no tape loaded, the command will be terminated with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).

- If the decryption mode is set to RAW and an attempt is made to read or verify an encrypted block that was disabled for RAW decryption mode operations, the drive terminates the command with CHECK CONDITION. The sense key is set to DATA PROTECT with additional sense of 740Ah (encrypted block not RAW read-enabled).
- If the CKOD bit is set and there is no tape loaded, the command will be terminated with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).
- If the CKORP bit is set and there is no persistent reservation in place for the I\_T nexus,, the command will be terminated with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).
- If the CKORL bit is set and there is no reservation in place for the I\_T nexus, the command will be terminated with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).
- If the Encryption Mode is set to Encrypt and the Key Length is zero, the command will terminate
  with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2600h
  (invalid field in parameter list).
- If the Decryption Mode is set to Decrypt or Mixed and the Key Length is zero, the command will terminate with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2600h (invalid field in parameter list).
- If the decryption mode is set to RAW and an attempt is made to read or verify an encrypted block that was disabled for raw decryption mode operations, the drive will terminate the command with CHECK CONDITION, a sense key of DATA PROTECT, and additional sense of 740Ah (encrypted block not RAW read-enabled).

# SEEK (CD-ROM mode) 2Bh

SEEK is executed for 2Bh when the drive is in CD-ROM mode. When out of CD-ROM, the LOCATE command, which shares the opcode, is executed.

Assuming the pre-execution checks are passed, GOOD status is always reported.

#### **Pre-execution checks**

Illegal Field Bad LUN Reservation Deferred Error
Unit Attention Media Access Diagnostic Status

	7	6	5	4	3	2	1	0			
0	Operation Code (2Bh)										
1	Log	ical Unit Num	ber			Reserved (0)					
2	(MSB)										
5		Logical Block Address									
6–8	Reserved (0)										
9	Control										

#### **CDB** fields

Logical Block Address	This field is ignored.

## SEND DIAGNOSTIC 1Dh

SEND DIAGNOSTIC tells the drive to perform either its standard self-test, or diagnostics specified in the parameter list on itself. The parameter list is transferred to the drive in a series of data-out phases; each 8-byte data-out phase specifies a diagnostic to be performed by the drive. It is not an error to set Self-Test = 0 and to have a zero-length parameter list.

The test results can be retrieved with the RECEIVE DIAGNOSTIC RESULTS command.

#### Pre-execution checks

Illegal Field Reservation Deferred Error Unit Attention

- If Self-Test = 0, the UntOffl bit is ignored.
- If Self-Test = 1, the Parameter List Length field must be zero. Otherwise CHECK CONDITION
  is reported. Sense data will be as described in Illegal Field Checks.
- It is not an error to set all fields in the CDB to zero, and to have a zero-length parameter list.

### Command descriptor block

	7	6	5	4	3	2	1	0				
0	Operation Code (1Dh)											
1	Reserved (0) PF (1) Rsvd(0) Self-Test DevOffL(0) UnitOffL											
2	Reserved (0)											
3	(MSB)			D		L						
4	Parameter List Length (LSB)											
5	Control											

### **CDB** fields

PF		Page Format. Specifies that the accompanying data follows the SCSI-3 Diagnostic Page format. It must be set to 1.						
Self-Test	0	Perform the diagnostics specified in the parameter list. The UnitOffL bit must be set, otherwise CHECK CONDITION is reported. The drive reports status when the command has been completed.						
	1	Perform the standard self-test depending on the value of UnitOffL (see above). The Parameter List Length must be 0 otherwise CHECK CONDITION is reported. The drive will report GOOD status following the pre-execution checks and before executing the command.						
DevOffl	Device	Offline bit. Must be cleared to zero.						
UnitOffL	Unit Offline bit							
	0	Indicates that the host is not prepared for the drive to perform tests that could affect logical position.						
Indicates that the host is prepared for the drive to perform tests that could affect to modify the tape or modify cartridge status. This bit must be set if the Self-Test be								
Parameter List Length		Indicates how many bytes of diagnostic parameter data are to be sent to the drive. The length of the data phase for SEND DIAGNOSTIC is limited to 4 bytes of header plus 34 parameters,						

each of which is 4 bytes long. This gives an upper limit for the parameter list length of 136 bytes.

# SEND DIAGNOSTIC data required

No data is required if the standard self-test is to be performed. Otherwise, a single diagnostic page must be provided as a parameter.

## SEND DIAGNOSTIC specific status

Any Send Diagnostic command received with a Enclosure Services page number (01h to 0Fh) will generate CHECK CONDITION with sense key of ILLEGAL REQUEST and additional sense of 3501h (unsupported enclosure function).

The drive reports GOOD status if the diagnostics pass. It will report CHECK CONDITION if the diagnostics fail, with a sense key of HARDWARE ERROR and additional sense of 4000h.

More detailed results can then be recovered using the Receive Diagnostic Results page.

## Standard self-test

With a tape inserted: If Self-Test = 1 and UntOffl = 0, a test is performed that does not affect the contents

of the tape. This test is a more extensive set of the tests carried out at power-on.

If UntOffl = 1, the tape contents can be overwritten and will be undefined after

the test. A user can re-use the tape after the test.

With no tape in the drive: The same self-test will be executed regardless of the setting of UntOffl.

The results of any self-test (power on or not) can be determined by reading the Self-Test diagnostic page before executing a diagnostic (which will overwrite the

result).

## SET CAPACITY OBh

This provides a means of changing the logical length of the currently-loaded media. The primary use envisaged is for testing purposes, although it may also be used in other circumstances where a shortened tape may be beneficial.

Note that all data currently on the media will be lost following successful execution of this command. The command is only accepted when the media is positioned at Beginning of Media (BOM).

With WORM cartridges, the command is only accepted and executed if the cartridge has not been initialized, that is, it has never been written to. Otherwise the cartridge is rejected with CHECK CONDITION, sense key of Data Protect and additional sense of 300Ch (WORM media—overwrite attempted). TapeAlert flags 3Ch (WORM media—overwrite attempted) and 09h (write-protect) are set.

The SET CAPACITY command will return the tape to a single partition of the size specified. If the command is used to limit the apparent size of the tape, then the capacity available to a future partition will also be limited until another SET CAPACITY command is executed to restore the original size.

#### Pre-execution checks

Illegal Field Reservation Deferred Error
Unit Attention Media Access Media Write

### Command descriptor block

	7	6	5	4	3	2	1	0				
0	Operation Code (OBh)											
1	Reserved (0) Imme											
2	Reserved (0)											
3	(MSB)			Community Dura	\/l							
4		Capacity Proportion Value										
5	Control											

#### **CDB** fields

Immed	0	Status will not be returned until the SET CAPACITY operation has completed.
	1	Status will be returned as soon as the CDB has been parsed.
Capacity Proportion Value	numerato	ion of the total volume capacity to be made available for use. The value given here is the or of a fraction with a denominator of 65,535. The resulting available capacity will be (total capacity proportion value)/65535.

Note that the LTO format enforces a minimum tape length. A value that would result in a tape length below this minimum will be silently rounded up to the minimum permitted length.

The following table gives the minimum acceptable Capacity Proportion Values and the approximate capacity they will give:

Cartridge	Min. capacity proportion value	Resultant approx. min. capacity	Max. capacity
LTO-5	OFDFh	92 GB	1500 GB
LTO-6	OFDFh	154 GB	2500 GB

**NOTE:** Capacities are approximate and can be affected by defects that reduce the actual capacity of the tape. Other factors, such as compression and block packing, may also affect capacity.

# SET DEVICE IDENTIFIER A4h (06h)

SET DEVICE IDENTIFIER allows a initiator to set the Device ID information to that supplied in the Parameter List. This information can be later retrieved by the REPORT DEVICE IDENTIFIER command.

Upon successful completion the command will post sense key UNIT ATTENTION with additional sense of 3F05h (device identifier changed) to all initiators except the one that issued the command. Once set the Device Identifier will only be cleared by a successful Set Device Identifier command or a drive reset.

#### Pre-execution checks

Illegal Field Reservation Deferred Error Unit Attention

	7	6	5	4	3	2	1	0			
0		Operation Code (A4h)									
1		Reserved (0)			Ser	vice Action (	06h)				

	7	6	5	4	3	2	1	0			
2–5	Reserved (0)										
6	(MSB)										
9		-	Parameter List Length								
10	Reserved (0)										
11			Control								

#### **CDB** fields

Parameter List Length	The length in bytes of the Device Identifier to be set. If the value exceeds 64, CHECH CONDITION is returned with additional sense of 2400h (invalid field in CDB).				
	0	Not an error, but clears any previously stored Device ID.			

### SET DEVICE IDENTIFIER returned data

The format of the Device Identifier supplied in the Parameter List is as follows:

	7	6	5	4	3	2	1	0
0	(MSB)			Ident	iliar		,	
n				ideni	iller			(LSB)

# SET IP CONFIGURATION A4h (1Fh)

The SET IP CONFIGURATION command requests the device server to set the Internet Protocol configurations held in non-volatile memory. The change will not take effect until the next hard reset. The command is a service action qualifier for the vendor-specific service action of the MAINTENANCE OUT command.

### **Pre-execution checks**

Illegal Field Reservation Deferred Error **Unit Attention** 

	7	6	5	4	3	2	1	0		
0	Operation Code (A4h)									
1	Ignored Service Action (1Fh)									
2				Service Action	Qualifier (12h)					
3–5	Reserved (0)									
6				Dayrayaa a ka y	1:-4 1					
9				Parameter	List Length					
10	Reserved (0)									
11	Control									

#### **CDB** fields

The length in bytes of the SET IP CONFIGURATION parameters that will be transferred from the application client to the device server. A value of zero means no data will be transferred,
and the IP configuration will remain unchanged.

### Parameter data

The format of the parameter data is the same as for "REPORT IP CONFIGURATION A3h (1Fh)" (page 176). The parameter data should contain one or more descriptors indicated by an 'X' in the Configuration Descriptor Type table, which need to be changed. The new values will take effect after the next hard reset.

# SET SNAPSHOT COMMANDS A4h (1Fh)

SET SNAPSHOT COMMANDS is used to change the default or User-Defined Snapshot Command Sset to the Command Set specified by this command.

### Pre-execution checks

Illegal Field	Reservation	Deferred Error	Unit Attention
---------------	-------------	----------------	----------------

	7	6	5	4	3	2	1	0			
0		Operation Code (A4h)									
1		Reserved (0)			Se	rvice Action (	1 Fh)				
2		Service Action Qualifier (0Ah)									
3			Reserved (0)			STB	SCS	RTD			
4–5				Reser	ved (0)						
6	(MSB)			Damana akan	. 1:-1 1						
7		Parameter List Length ——						(LSB)			
8–10	Reserved (0)										
11	Control										

Service Action	This mus	be 1Fh.					
Service Action Qualifier	This mus	This must be OAh.					
RTD	Reset To	Default					
	0	The User-Defined Command Set is set to the Command Set specified in the parameter list.					
	1	The User-Defined Command Set is restored to its manufacturing default configuration.					
		<ul> <li>If the RTD bit is set to one and the SCS bit set to zero the volatile User-Defined Command Set is restored to its manufacturing default value.</li> </ul>					
		<ul> <li>If the RTD bit is set to one and the SCS bit set to one the volatile and non-volatile User-Defined Command Set is restored to its manufacturing default value.</li> </ul>					
scs	Save Co	mmand Set					
	0	The specified Command Set is stored in volatile memory.					

		The volatile User-Defined Command Set is set to the manufacturing default setting after a reset condition.				
		The non-volatile User-Defined Command Set is set to the manufacturing default setting after successfully processing a SET STTF CONFIG command with the RMD bit set to one.				
	1	The specified Command Set is stored in non-volatile memory.				
STB	Switch T	race Banks				
	0	The Snapshot sub-system will not switch System ARM trace banks before executing the specified User-Defined Command Set.				
Parameter List Length	The leng	The length in bytes of the parameter list to be transferred.				

# SET SNAPSHOT COMMANDS specific status

- If tape drive is in the process of creating a Snapshot log the device server will terminate SET SNAPSHOT COMMANDS with CHECK-CONDITION, a sense key of NO SENSE and additional sense of 0016h (operation in progress).
- If tape drive is in the process of reading the Snapshot Command Set the device server will terminate SET SNAPSHOT COMMANDS with CHECK-CONDITION, a sense key of NO SENSE and additional sense of 0016h (operation in progress).
- If the RTD bit is set to one and the Parameter List Length field is not set to zero, the device server will terminate SET SNAPSHOT COMMANDS with CHECK-CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).
- If the SCS bit is set to one and the Parameter List Length field is set to zero and RTD bit is set to zero, the device server will terminate SET SNAPSHOT COMMANDS with CHECK-CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).
- If the STB bit is set to one and the Parameter List Length field is set to zero, the device server will terminate SET SNAPSHOT COMMANDS with CHECK-CONDITION, a sense key of ILLEGAL REQUEST and additional sense of 2400h (invalid field in CDB).

# SET SNAPSHOT COMMANDS parameter data

The format of the parameter data is as follows:

	7	6	5	4	3	2	1	0		
	Command Descriptor List									
0	Command Descriptor (first)									
:	· :									
n	Command Descriptor (last)									

The Command Descriptor list identifies the SCSI commands and the order in which they are executed when generating Snapshot logs.

### Command descriptor

	7	6	5	4	3	2	1	0			
0	Reserved (0)										
1		SCSI Data Length (n-49)									
2	(MSB)										

	7	6	5	4	3	2	1	0				
33		,			,		,	(LSB)				
34	(MSB)											
49			CDB -									
50	(MSB)		SCSI Data									
n				3C3	Dala			(LSB)				

DIV	Dataset	ldentifier Valid					
	0	The Dataset Identifier field is ignored and any SCSI data or status produced from the execution of the SCSI command defined in the CDB field is not recorded in any Snapshot log produced from the Snapshot command set specified by this command.					
	1	The Dataset Identifier field identifies any SCSI data and status in the Snapshot log produced when the command specified in the CDB field is executed.					
SCSI Data Length	The num	ber of bytes in the SCSI Data field.					
Dataset Identifier	The data	set identifier used to identify the Snapshot data produced when this command ed.					
CDB	generate	The SCSI command control block of the command to execute when the Snapshot log is generated. The contents of the CDB field are not validated until the command is executed when generating the Snapshot logs.					
SCSI Data	this field bytes an	data out bytes for the SCSI command specified in the CDB field. The length of is given by the value of the SCSI Data Length field. The number of SCSI Data d the contents are not validated with the CDB field contents until the command in the CDB field is executed.					

# SET SNAPSHOT COMMANDS specific status

Event	Status	Key	Additional Sense
The tape drive is in the process of creating a Snapshot log the device server.	CHECK CONDITION	no sense	0016h (operation in progress)
The tape drive is in the process of reading the Snapshot command set.	CHECK CONDITION	no sense	0016h (operation in progress)

# SET SNAPSHOT CONFIGURATION A4h (1Fh)

SET SNAPSHOT CONFIGURATION is used to configure the events that trigger the creation of Snapshot logs, to set the maximum size of Snapshot logs created, and to clear all Snapshot logs stored in the drive.

**NOTE:** The MMLL field is not supported in LTO-6 drives. With LTO-5 drives you could configure the size of snapshot logs in volatile memory with the MMLL field but not the size or number of (STTF) logs when they are stored in non-volatile memory. Changing the snapshot log length would therefore result in either truncated STTF logs or very inefficient use of the flash memory. To overcome this, LTO-6 drives allow the size of two sections of non-volatile memory to be configured to store drive health STTF logs (taken on every unload) and debug/combined STTF logs, which are five times larger, more efficiently. The size of snapshot logs in LTO-6 drives is the same as the size of the larger of the max STTF log size in the two configurable sections.

## **Pre-execution checks**

Illegal Field Deferred Error Reservation Unit Attention

## Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (A4h)								
1		Reserved (0) Service Action (1Fh)							
2	Service Action Qualifier (OBh)								
3–5	Reserved (0)								
6	(MSB)		г		ı ıl (0000l	,			
7		-	r	arameter List	Length (0008h	1)		(LSB)	
8–10	Reserved (0)								
11	Control								

Service Action This must be 1Fh.			
HP LTO VU MI Opcode	This must be OBh.		
Parameter List Length	The length in bytes of the parameter list to be transferred.		

# SET SNAPSHOT CONFIGURATION parameter data

The format of the parameter data is as follows:

	7	6	5	4	3	2	1	0
0	Reserved (0) SOU SOCC							socc
1–2	Reserved (0)							
3	(MSB)		Max Log Length (LSB)					
5		•						(LSB)
6–7		Reserved (0)						

SOU	Snapsh	ot On Unload				
	1	The drive initiates the creation of a new Snapshot log when the drive unloads media, except:  if the drive is already in the process of creating a Snapshot log, or  if the snapshot commands are in the process of being set.				
socc	Snapshot On Check Condition					
	1	The drive initiates the creation of a new Snapshot log after reporting CHECK CONDITION to a command that failed during execution for a media error or hardware error, except:				
		if the drive is already in the process of creating a Snapshot log, or				
		if the snapshot commands are in the process of being set.				
Maximum Log Length		The maximum length of Snapshot logs created by the drive. The field is ignored in s SET SNAPSHOT CONFIGURATION command.				

# SET Enhanced SNAPSHOT CONFIGURATION A4h (1Fh)

The SET Enhanced SNAPSHOT CONFIGURATION command is used to:

- configure the events that trigger the creation of Snapshot logs
- save traces to flash
- set the maximum size of Snapshot logs created
- clear all Snapshot logs stored in the drive

This command is supported in LTO-5 products onwards. It specifies trigger conditions for creating Snapshot logs and Save Trace To Flash (STTF) logs, which are Snapshot logs stored in non-volatile flash memory. However, the tape drive will not create a Snapshot log when a trigger condition occurs in any of the following circumstances:

- The tape drive is already in the process of creating a Snapshot log.
- If the snapshot commands are in the process of being set.
- A Snapshot log has been created within the last fifteen minutes.

#### Pre-execution checks

	erred Error Unit Attention
--	----------------------------

### Command descriptor block

	7	6	5	4	3	2	1	0
0		Operation Code (A4h)						
1	Ignored Service Action (1Fh)							
2	Service Action Qualifier (0Dh)							
3–5	Reserved (0)							
6								
7		Parameter List Length (000Ch)						
8–10	Reserved (0)							
11		Control						

#### CDB fields

Parameter List Length  The length in bytes of the parameter list to be transferred.	
---	--

#### Parameter data

	7	6	5	4	3	2	1	0
0	Reserved (0)		STP	STTF	SOSD	SODEC	SOU	SOCC
1–2		Reserved (0)						
3								
5	Maximum Log Length							
6		Reserved (0)						
7	Sense Key							
8	Additional Sense Code							

	7	6	5	4	3	2	1	0
9	Additional Sense Code Qualifier							
10	Drive Error Code							
11				Drive Err	or Code			

STP	Save Trigger	Parameters					
	0	The specified snapshot configuration is volatile and will return to the previous non-volatile snapshot configuration on a drive reset event.					
	1	The tape drive will save the SOCC, SOU, SODEC, SOSD, STTF, Sense Key, Additional Sense Code, Additional Sense Code Qualifier and Drive Error Code field values in non-volatile memory. Setting the STP bit to one overwrites the Manufacturing Default Configuration values.					
STTF	Save Trace To	Save Trace To Flash					
	0	The tape drive will not save Snapshot logs to non-volatile memory, even if the STTF bit is set to one in the FORCE SNAPSHOT command.					
	1	The tape drive will save Snapshot logs to non-volatile flash memory after they have been created in volatile memory following a Snapshot On trigger condition (SOCC, SOU, SODEC and SOSD), except in the following circumstances:					
		A Snapshot log in flash (STTF log) is being written to or read from.					
		The last Snapshot log saved to flash was created for the same error condition or a related error condition.					
		When STTF is set to 1, the FORCE SNAPSHOT command can save Snapshot logs to flash.					
SOSD	Snapshot On	Sense Data					
	0	The drive ignores the contents of the Sense Key, Additional Sense Code, and Additional Sense Code Qualifier fields.					
	1	The drive initiates creation of a new Snapshot log when a device server returns CHECK CONDITION status to a command, or an unload operation fails with the sense data specified in the Sense Key, Additional Sense Code, and Additional Sense Code Qualifier fields.					
SODEC	Snapshot On	Drive Error Code					
	0	The drive ignores the contents of the Drive Error Code field.					
	1	The drive initiates creation of a new Snapshot log when a device server returns CHECK CONDITION status to a command, or an unload operation fails with the sense data specified in the Drive Error Code field.					
SOU		ot on Unload bit is set to one the tape drive will initiate the creation of a new when the tape drive unloads media except in the following circumstances:					
	The tape of	drive is already in the process of creating a Snapshot log.					
	The snaps	hot commands are in the process of being set.					
SOCC	If the Snapshot on CHECK CONDITION bit is set to one the tape drive will initiate the creation of a new Snapshot log when the tape drive reported CHECK CONDITION status to a command that failed during execution for a media error or hardware error, except in the following circumstances:						
	The tape of	drive is already in the process of creating a Snapshot log.					
	The snaps	hot commands are in the process of being set.					
Max Log Length		maximum log length of Snapshot logs created by the drive. For the SET Enhanced CONFIGURATION command, it is ignored.					
	4						

# SET Enhanced SNAPSHOT CONFIGURATION specific status

- If the Sense Key, Additional Sense Code, and Additional Sense Code Qualifier fields are set to 00h, the device server will terminate the command with CHECK-CONDITION, a sense key of ILLEGAL REQUEST and additional sense 2400h (invalid field in CDB).
- If the Drive Error Code field is set to 00h, the device server will terminate the command with CHECK-CONDITION, a sense key of ILLEGAL REQUEST and additional sense 2400h (invalid field in CDB).

# SET STTF CONFIGURATION A4h (1Fh)

SET STTF CONFIGURATION is used to configure the events that trigger the creation of STTF logs, to set the maximum size and number of logs created and reset the Snapshot sub-system back to its manufacturing default configuration.

The command specifies the trigger conditions for creating Snapshot logs that are subsequently stored in non-volatile flash memory. However, Snapshot logs will not be created in any of the following circumstances:

- The Snapshot sub-system is already in the process of creating a snapshot log.
- The snapshot commands are in the process of being set.
- An STTF log has been created within the STTF Free Period.

#### Pre-execution checks

Illegal Field	Reservation	Deferred Error	Unit Attention
ilicgai i icia	NC3CI VAIIOII	Deletted Effor	

### Command descriptor block

	7	6	5	4	3	2	1	0
0		Operation Code (A4h)						
1	Reserved (0) Service Action (1Fh)							
2	Service Action Qualifier (0Eh)							
3–5	Reserved (0)							
6	(MSB)							
7		-	Parameter List Length (LSB)					(LSB)
8–10		Reserved (0)						
11		Control						

Parameter List Length	The length in bytes of the parameter list to be transferred.
-----------------------	--

# SET STTF CONFIGURATION parameter data

The format of the parameter data is as follows:

	7	1	0							
0										
1	Data Length (m-2)									
2	Reserved (0)							STP		
3	Reserved (0)									

	7	6	5	4	3	2	1	0			
	STTF Configuration List										
4	E. LETTE C. (r D										
n	First STTF Configuration Descriptor										
:	: :										
m	Last STTF Configuration Descriptor										

Data Length		th in bytes of the data available to be transferred (excluding the number of bytes ngth field). The field must be set to 0000h in a SET STTF CONFIGURATION comn							
STP	Save Trig	gger Parameters							
	0	The specified STTF configuration is volatile and will return to the previous non-vo configuration on a drive reset event.	latile						
	1	The drive saves the STTF configuration specified in the parameter list in non-volatile memory, overwriting the current STTF configuration.							
RMD	0	O The configuration contained in the STTF configuration list will be applied. The RMD bit must be set to zero in a REPORT STTF CONFIGURATION response.							
	1	1 If the STTF configuration list contains no descriptors, the STTF configuration will be reset to the manufacturing default values, including the default User-Defined Command Set.							
STTF Configuration Descriptor	condition non-vola user-con in non-vo The follo	Configuration list contains the descriptors that define the user configurable STTF in some for creating a snapshot log, the Command Set used to create the log and whet tile log can be overwritten. The SET STTF CONFIG command overwrites all pre-extingurable STTF trigger conditions stored in volatile memory and, if the STP bit is sepolatile memory as well.  Wing table shows which snapshot configuration descriptors are supported and the each descriptor can appear in the same parameter list. Details of each descriptor of the same parameter list.	ther the xisting to one, e number						
	Code	Description	Max						
	00h	STTF Control							
	01 h	STTF Flash Management	1						
	02h	STTF On Load Failure	1						
	03h	STTF On Unload Failure	1						
	04h	STTF On Forced Eject	1						
	05h	STTF On Unload	1						
	06h	STTF On Check Condition Status	1						
	07h	STTF On Reported Drive Error	4						
	08h	STTF On Reported Sense Data	4						
	09h	STTF On Fault Log Error Code	4						
	0Ah	STTF On Trace Point	4						
	OBh	STTF On ADT Reported Error	4						

### STTF Control descriptor

The STTF Control descriptor allows an application to modify snapshot sub-module features that are not specific to trigger events. The format is as follows:

	7	6	5	4	3	2	1	0		
0	Descriptor Type (00h)									
1	Descriptor Length (04h)									
2–3	Reserved (0)									
4		STTF Free Period								
5				SIIF Fre	e Period					

	The minimum period after an STTF Log has been saved before another can be saved, in seconds.
--	--

### STTF Flash Management descriptor

The STTF Flash Management descriptor allows an application to specify the size of two regions used to store STTF logs, how many STTF logs can be stored in each of the regions, and which section STTF logs are stored in.

STTF logs are stored in two equally-sized regions of flash that are not contiguous. A log cannot span across the two physical regions. The size of each of the two physical flash regions is defined by the system parameter STTF\_MAX\_SIZE. The two regions can be configured into two logical sections. The combined size of the two logical sections is limited by the amount of physical flash available (2 x STTF\_MAX\_SIZE), but one section can be larger than STTF\_MAX\_SIZE. Each of the logical flash sections can be independently sub-divided to store multiple STTF logs to allow one section to store STTF logs from a number of specified Command Sets, and the other section to store STTF logs from all other Command Sets. This allows for efficient use of the flash, because STTF logs created using the Drive Health Command Set are significantly smaller than those created using the Debug Command Set. If only one command set is used, or all STTF logs are expected to be of similar size, then the size of flash section 2 may be set to zero. Take care to ensure that the available flash space is used efficiently by defining the appropriate section sizes for the number of STTF logs in each section, because an STTF log cannot span both physical flash regions.

The format of the descriptor is as follows:

	7	6	5	4	3	2	1	0		
0	Descriptor Type (01 h)									
1	Descriptor Length (08h)									
2–3	Physical Flash Size									
4	Florit Continue 2 Cine									
5	Flash Section 2 Size									
6				Max STTF La	gs Section 1					
7				Max STTF La	gs Section 2					
8	Reserved (0) CCS DHCS DCS UDCS									
9				Reserv	red (0)					

The UDCS bit, DCS bit, DHCS bit, and CSS bit specify a mapping between the command set used to create snapshot logs and the logical flash section in which those logs will be saved.

Physical Flash Size	in a REP	ber of 65536 byte segments of physical flash space available for storing STTF logs ORT STTF CONFIGURATION command parameter list. The Physical Flash Size will 00h in a SET STTF CONFIGURATION command							
Flash Section 2 Size		of logical flash section 2, in 65536 byte segments. The value must be less than the Flash Size field value reported in a REPORT STTF CONFIGURATION command er list.							
Max STTF Logs Section n	maximur	e maximum number of STTF logs that may be stored in each logical flash section. The aximum sum total of STTF logs that may be stored in both flash sections is defined by the tem parameter NV_MAX_STTF_LOGS. The values must be multiples of 2.							
UDCS	User-Def	ined Command Set							
	0	Any subsequent STTF log created using the Default/User-Defined Command Set be stored in logical flash section 1.							
	1	Any subsequent STTF log created using the Default/User-Defined Command Se be stored in logical flash section 2.							
DCS	Debug Command Set								
	0	Any subsequent STTF log created using the Debug Command Set will be stored in logical flash section 1.							
	1	Any subsequent STTF log created using the Debug Command Set will be stored i logical flash section 2.							
DHCS	Drive Health Command Set								
	0	Any subsequent STTF log created using the Drive Health Command Set will be stored in logical flash section 1.							
	1	Any subsequent STTF log created using the Drive Health Command Set will be stored in logical flash section 2.							
ccs	Combine	ed Command Set							
	0	Any subsequent STTF log created using the Combined Command Set will be stored in logical flash section 1.							
	1	Any subsequent STTF log created using the Combined Command Set will be stored in logical flash section 2.							

# STTF On Load Failure descriptor

This descriptor defines the Command Set used to create the STTF log when the drive completes an unsuccessful load operation.

	7	6	5	4	3	2	1	0		
0	Descriptor Type (02h)									
1	Descriptor Length (02h)									
2	Protect AMPL ACT NSFP Command Set									
3		Reserved (0)								

	1	
Protect	0	STTF logs resulting from the trigger condition defined in this descriptor may be overwritten by another STTF log, or cleared.
	1	STTF logs resulting from the trigger condition defined in this descriptor will not be overwritten by another STTF log.
AMPL		Multiple Protected Logs. Determines whether the drive can store multiple protected STTF the trigger conditions specified in this descriptor.
	0	The drive may continue to create STTF logs but they will not be protected if the drive has already stored a protected STTF log for the trigger condition specified in this descriptor. The AMPL bit must be set to zero when the Protect bit is set to zero.
	1	The drive may continue to create protected STTF logs after one has already been stored for the trigger condition specified in this descriptor.
ACT		Consecutive Triggers. Determines whether the drive can create consecutive STTF logs same trigger condition specified in this descriptor.
	0	The drive cannot create consecutive STTF logs for the same trigger condition.
	1	The drive can create consecutive STTF logs for the same trigger condition.
NSFP		F Free Period. Determines whether the drive can create STTF logs for the trigger on specified in this descriptor during the STTF Free Period.
	0	The drive cannot create an STTF log for a trigger condition specified in this descriptor during the STTF Free Period
	1	The drive can create an STTF log for a trigger condition specified in this descriptor during the STTF Free Period.

# STTF On Unload Failure descriptor

This descriptor defines the Command Set used to create the STTF log when the drive completes an unsuccessful unload operation.

The format is as follows:

	7	6	5	4	3	2	1	0		
0	Descriptor Type (03h)									
1	Descriptor Length (02h)									
2	Protect AMPL ACT NSFP Command Set									
3		Reserved (0)								

The field are the same as in the "STTF On Load Failure descriptor" (page 243).

# STTF On Forced Eject descriptor

This descriptor defines the Command Set used to create the STTF log when the drive completes an Forced Eject operation.

	7	6	5	4	3	2	1	0		
0	Descriptor Type (04h)									
1	Descriptor Length (02h)									
2	Protect AMPL ACT NSFP Command Set									
3		Reserved (0)								

The field are the same as in the "STTF On Load Failure descriptor" (page 243).

### STTF On Unload descriptor

This descriptor defines the trigger conditions for creating STTF logs on successful unload events. It also defines the Command Set used to create the STTF log.

The format is as follows:

	7	6	5	4	3	2	1	0		
0	Descriptor Type (05h)									
1	Descriptor Length (02h)									
2	Reserv	red (0)	ACT	NSFP		Comm	and Set			
3	Reserved (0)							Partial Unload		

ACT and NSFP fields are the same as in the "STTF On Load Failure descriptor" (page 243).

Full Unload	0	When a full unload operation is successful, the drive does not create an STTF log.
	1	When a full unload operation is successful, the drive initiates the creation of an STTF log, using the Command Set specified in the Command Set field.
Partial Unload	0	When a partial unload operation is successful, the drive does not create an STTF log.
	1	When a partial unload operation is successful, the drive initiates the creation of an STTF log, using the Command Set specified in the Command Set field.

## STTF On Check Condition descriptor

This descriptor defines the Command Set used to create the STTF log when the drive terminates a command from a host on the primary port, with CHECK CONDITION status and a sense key of MEDIA ERROR (03h) or HARDWARE ERROR (04h).

The format is as follows:

	7	6	5	4	3	2	1	0
0		,		Descriptor	Type (06h)			
1		Descriptor Length (02h)						
2	Protect	Protect AMPL ACT NSFP Command Set						
3				Reserv	red (0)			

The fields are the same as in the "STTF On Load Failure descriptor" (page 243).

### STTF On Drive Error descriptor

This descriptor defines the Command Set used to create the STTF log when the drive terminates a command from a host on the primary port, with CHECK CONDITION status and the specified drive error code.

	7	6	5	4	3	2	1	0
0	Descriptor Type (07h)							
1		Descriptor Length (04h)						

	7	6	5	4	3	2	1	0
2	Protect	AMPL	ACT	NSFP		Comm	and Set	
3		Reserved (0)						
4		Drive Error Code						
5				Drive Err	or Code			

The Protect, AMPL, ACT, NSFP and Command Set fields are the same as in the "STTF On Load Failure descriptor" (page 243).

<b>Drive Error Code</b> The drive error code that will trigger the creation of a snapshot log when rep to a host on the primary port.	Drive Error Code
---	------------------

### STTF On Sense Data descriptor

This descriptor defines the Command Set used to create the STTF log when the drive terminates a command from a host on the primary port, with CHECK CONDITION status and the specified sense data.

The format is as follows:

	7	6	5	4	3	2	1	0
0		Descriptor Type (08h)						
1	Descriptor Length (04h)							
2	Protect	Protect AMPL ACT NSFP Command Set						
3				Sense	е Кеу			
4		Additional Sense Code						
5			A	dditional Sense	e Code Qualifi	er		

The Protect, AMPL, ACT, NSFP and Command Set fields are the same as in the "STTF On Load Failure descriptor" (page 243).

The Sense Key, Additional Sense Code, and Additional Sense Code Qualifier fields specify the sense data that will trigger the creation of a snapshot log when reported to a host on the primary port.

# STTF On Fault Log descriptor

This descriptor defines the Command Set used to create the STTF log when the drive adds the specified drive error code into the Fault log.

	7	6	5	4	3	2	1	0
0		Descriptor Type (09h)						
1				Descriptor L	ength (04h)			
2	Protect	Protect AMPL ACT NSFP Command Set						
3				Reserv	ed (0)			
4	Fault Error Code							
5				rault Err	or Code			

The Protect, AMPL, ACT, NSFP and Command Set fields are the same as in the "STTF On Load Failure descriptor" (page 243).

The short-form drive error code that will trigger the creation of an STTF log when
entered into the Fault log.

### STTF On Trace Point descriptor

This descriptor defines the Command Set used to create the STTF log when the drive adds the specified Trace Point identifier into the System ARM log.

The format is as follows:

	7	6	5	4	3	2	1	0
0		Descriptor Type (OAh)						
1	Descriptor Length (04h)							
2	Protect AMPL ACT NSFP Command Set							
3				Reserv	red (0)			
4	Trace Point ID							
5				irace i	לוו מוסי			

The Protect, AMPL, ACT, NSFP and Command Set fields are the same as in the "STTF On Load Failure descriptor" (page 243).

	The Trace Point identifier that will trigger the creation of an STTF log when entered
	into the System ARM log.

# STTF On ADT Reported Error descriptor

This descriptor defines the Command Set used to create the STTF log when the drive terminates a command from a host on the specified ADT port, with CHECK CONDITION status and the specified drive error code.

The format is as follows:

	7	6	5	4	3	2	1	0
0		Descriptor Type (OBh)						
1	Descriptor Length (04h)							
2	Protect AMPL ACT NSFP Command Set							
3		ADT Port Identifier						
4	Drive Error Code							
5				Duve cu	or Code			

The Protect, AMPL, ACT, NSFP and Command Set fields are the same as in the "STTF On Load Failure descriptor" (page 243).

ADT Port Identifier	00h	ADI port
	01 h	AMI port
	02h	DTI port

	03h	iADT port				
	04h	iAMI pot				
	05h	iADI-TLS port				
	06h	iAMI-TLS port				
	07h	iDTI-A port				
	08h	iDTI-B port				
	09h	iDTI-C port				
	0Ah–FFh	Reserved				
Drive Error Code	The drive error code to port specified in the A	The drive error code that will trigger the creation of a snapshot log when reported to the ADT port specified in the ADT Port Identifier field.				

### SET STTF CONFIGURATION specific status

- If the RMD bit is set to one, and one or more snapshot configuration descriptors are specified
  in the parameter data, the device serverwill terminate the SET STTF CONFIGURATION
  command with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense
  of 2600h (invalid field in parameter list).
- If the Physical Flash Size field in the STTF Flash Management descriptor is not set to 00h in a SET STTF CONFIGURATION command, the device server will terminate the command with CHECK CONDITION, a sense key of ILLEGAL REQUEST and additional sense data of 2600h (invalid field in parameter list).
- If the Flash Section 2 Size field in the STTF Flash Management descriptor is set to a value equal
  to or greater than the total amount of physical flash in a SET STTF CONFIGURATION command
  parameter list, the device server will terminate the command with CHECK CONDITION, a
  sense key of ILLEGAL REQUEST, and additional sense of 2600h (invalid field in parameter
  list).
- If the Max STTF Logs Section 2 field is set to a value greater than the Flash Section 2 Size field value, or is not a multiple of Flash Section 2 Size, the device server will terminate the command with CHECK CONDITION, a sense key of ILLEGAL REQUEST, and additional sense of 2600h (invalid field in parameter list).
- If the Max STTF Logs Section 1 field is set to a value greater than the number of 65536 byte segments in section 1, or is not a multiple of two, the device server will terminate the command with CHECK CONDITION, a sense key of ILLEGAL REQUEST, and additional sense of 2600h (invalid field in parameter list).
- In a SET STTF CONFIGURATION command parameter list, if Flash Section 2 Size is set to 00h and the Max STTF Logs Section 2, UDCS, DCS, DHCS and CCS fields are not set to 0, the device server will terminate the command with CHECK CONDITION, a sense key of ILLEGAL REQUES,T and additional sense of 2600h (invalid field in parameter list).
- In the STTF On Load Failure descriptor, if the Protect bit is set to zero and the AMPL bit is set to one, the device server will terminate with CHECK CONDITION, a sense key of ILLEGAL REQUEST, and additional sense of 2600h (invalid field in parameter list).

# SET TIMESTAMP A3h (1Fh)

The SET TIMESTAMP command requests the device server to initialize the timestamp, if the SCSIP bit is set to one or the TCMOS bit is set to one in the "Control Extension sub-page" (page 103). If the SCSIP bit is set to zero, the SET TIMESTAMP command will terminate with CHECK CONDITION, a sense key of ILLEGAL REQUEST, and additional sense of 2400h (invalid field in CDB).

When a SET TIMESTAMP command completes successfully, the device server will generate UNIT ATTENTION for the initiator port associated with every I\_T nexus except the I\_T nexus on which the SET TIMESTAMP command was received (see SAM-4), with additional sense of 2A10h (timestamp changed).

#### Pre-execution checks

Illeaal Field Reservation Deferred Error Unit Attention

#### Command descriptor block

	7	6	5	4	3	2	1	0				
0		Operation Code (A3h)										
1	Reserved (0) Service Action (0Fh)											
2–5	Reserved (0)											
6				Dawa atau	1:-4 1							
9				Parameter	List Length							
10		Reserved (0)										
11				Cor	ntrol							

#### **CDB** fields

Parameter List Length	The length in bytes of the parameters to be transferred from the application client to the device
	server. A length of zero indicates no data will be transferred, and the timestamp will remain
	unchanged.

# SET STTF CONFIGURATION A4h (1Fh)

The SET STTF CONFIGURATION command is used to configure the events that trigger the creation of STTF logs, to set the maximum size and number of logs created and reset the Snapshot sub-system back to its manufacturing default configuration.

The command specifies trigger conditions for creating Snapshot logs that are subsequently stored in non-volatile flash memory. The Snapshot sub-system will not create a snapshot logs when a trigger condition occurs in any of the following circumstances:

- The Snapshot sub-system is already in the process of creating a snapshot log.
- The snapshot commands are in the process of being set. 2.
- An STTF log has been created within the STTF Free Period.

The STTF Configuration list contains the descriptors that define the user configurable STTF trigger conditions for creating a Snapshot log, the Command Set used to create the log and whether the non-volatile log can be overwritten. The SET STTF CONFIGURATION command overwrites all pre-existing user configurable STTF trigger conditions stored in volatile memory and, if the STP bit is set to one, overwrites all pre-existing user configurable STTF trigger conditions stored in non-volatile memory.

#### Pre-execution checks

Illegal Field Reservation	Deterred Error	Unit Attention
---------------------------	----------------	----------------

# Command descriptor block

	7	6	5	4	3	2	1	0				
0		Operation Code (A4h)										
1		Reserved (0) Service Action (1Fh)										
2				Service Action	Qualifier (0Eh	)						
3–5				Reserv	red (0)							
6				Deve	1:-4 14h							
7				Parameter	List Length							
8–10		Reserved (0)										
11				Cor	ntrol							

Parameter List Length The length in bytes of the parameter list to be transferred.

# SET STTF CONFIGURATION parameter list data format

	7	6	5	4	3	2	1	0				
0	Data Length ( <i>m</i> –2)											
1				Data Len	igin ( <i>m</i> –2)							
2			Reserve	ed (0)			RMD	STP				
3				Reser	ved (0)							
				STTF Confi	guration List							
4			Eiro	+ STTE Confin	uration Descrip	otor						
n			1113	r 3111 Coning	ordifor Descrip	DIOI						
:					:							
		Last STTF Configuration Descriptor										
m			Lus	1 3111 Conlig	ordifori Descrip	ЛОІ						

Data Length		The length in bytes of the following data available to be transferred (not including the Data Length field). The field is set to 0000h in a SET STTF CONFIG command.							
RMD	0	The configuration contained in the STTF configuration list will be applied. The RMD bit is set to zero in a REPORT STTF CONFIGURATION response.							
	1	If the STTF configuration list contains no descriptors, the STTF configuration will be reset to the manufacturing default values, including the default User-Defined Command Set.							
		If the RMD bit is set to one and one or more Snapshot configuration descriptors are specified in the parameter data, the device server will terminate the command with CHECK CONDITION, sense key of ILLEGAL REQUEST, and additional sense of 2600h (invalid field in parameter list).							
STP	Save Trig	ger Parameters							
	0	The specified STTF configurationis volatile and returns to the previous non-volatile configuration on a drive reset event.							
	1	The drive will save the STTF configuration specified in the parameter list in non-volatile memory. Setting the STP bit to one overwrites the current STTF configuration and stores it in non-volatile memory.							

STTF Config Descriptor		ving table identifies Snapshot Configuration Descriptors supported and the n criptor may appear in the same parameter list.	number of times
	Code	Description	Max.
	00h	STTF Control	1
	01 h	STTF Flash Management	1
	02h	STTF On Load Failure	1
	03h	STTF On Unload Failure	1
	04h	STTF On Forced Eject	1
	06h	STTF On Unload	1
	07h	STTF On CHECK CONDITION Status	1
	08h	STTF On Reported Drive Error	4
	09h	STTF On Reported Sense Data	4
	0Ah	STTF On Fault Log Error Code	4
	OBh	STTF On Trace Point	4
		STTF On ADT Reported Error	4

# SPACE 11h/91h

SPACE provides a variety of positioning functions that are determined by Code and Count fields in the Command Descriptor Block. Both forward (towards EOM) and reverse (towards BOM) positioning are provided.

Any unwritten data in the buffer is flushed to tape before the space is started. The logical media position is then modified according to the Code and Count fields. Once the space has started, it will complete even if the SCSI operation is aborted for some reason (for example, the host selects and sends an abort message).

### **Pre-execution checks**

Illegal Field	Reservation	Deferred Error
Unit Attention	Media Access	Diagnostic Status

The Code field must be 0, 1 or 3. If it is not then CHECK CONDITION status is reported. Sense data will be as described in the Illegal Field Checks.

### Command descriptor block (6-byte version)

	7	6	5	4	3	2	1	0		
0	Operation Code (11 h)									
1	Reserved (0) Code									
2	(MSB)			-	. / .					
4		-	Count (n)							
5		Control								

### Command descriptor block (16-byte version)

	7	6	5	4	3	2	1	0			
0	Operation Code (91 h)										
1			Reserved (0)				Code				
2–3				Reser	ved (0)						
4	(MSB)			6	. / \						
11		-		Cou	nt ( <i>n</i> )			(LSB)			

	7	6	5	4	3	2	1	0				
12	(MSB)	,	Down start langula									
13			Parameter Length (LSB)									
14	Reserved (0)											
15				Со	ntrol							

### **CDB** fields

Code	The Code field indicates what is to be spaced to:		
	000	Blocks—The number of blocks crossed is dictated by Count.	
	001	Filemarks—The number of filemarks crossed is dictated by Count.	
	011	EOD—Space to the end of data in the current active partition.	
Count	<ul> <li>When spacing over blocks or filemarks this field indicates how many blocks or marks should be crossed. Spacing is forward (towards EOM) unless Count is negative (twos complement) when the spacing is towards BOM.</li> </ul>		
	When spacing to EOD the Count field is ignored.		
	<ul> <li>When not spacing to EOD, if Count is zero, the SPACE command is treated as a null operation. The logical position remains unchanged, and unwritten data is not flushed to tape.</li> </ul>		
Parameter Length	0	Explicit block mode is not supported.	

# SPACE specific status

If the drive fails to space either from a medium error or from some sort of non-fatal drive error, CHECK CONDITION status is reported. The sense key will be set to MEDIUM ERROR. Additional sense depends on the nature of the error. The two most common additional sense code and qualifiers in this case will be: 1100h (unrecovered read error) and 3B00h (sequential positioning error). The drive implements the following priority scheme when a tape position point is encountered:

Lowest priority	Blocks	
	Filemarks	If the drive meets a filemark while spacing to a block CHECK CONDITION is reported. The Mark bit in the sense data is set, and the sense key is NO SENSE. Additional sense is 0001h (filemark encountered). The final position will be before or after the filemark depending on whether the space was reverse or forward.
	EOD	If the drive meets EOD while spacing to a block or mark, CHECK CONDITION is reported. The EOM bit in the sense data is set. The sense key is BLANK CHECK and additional sense is 0005h (EOD encountered).
	вом	If the drive meets BOM while spacing, CHECK CONDITION is reported. The EOM bit and Valid bit in the sense data are set to 1 and the information bytes set to the total number of blocks or filemarks that remain to be spaced over (in other words, the requested number minus the number that have been spaced over). The sense key is NO SENSE and additional sense is 0004h (BOT detected).
Highest priority	EOM	If the drive meets EOM while spacing, CHECK CONDITION is reported. The EOM bit in the sense data is set. The sense key is MEDIUM ERROR and additional sense is 0002h (EOP/M detected).

• If "blank media" is encountered during a space (in other words, the drive attempted to space on an unformatted tape), the drive behaves as if EOD was at BOM. It will then respond with

GOOD status to a request to space to EOD, and with CHECK CONDITION to any other forward spacing request. Additional sense is set to 1403h (End of data not found).

- Early warning end of medium information is not reported.
- If a space records or space filemarks command fails then the sense data information bytes will be set to the absolute value of the difference between the requested number of marks/records and the actual number of marks/records spaced over and the Valid bit set. The residue for a prematurely terminated Space towards BOM will always be a positive value. NOTE: This value will only be accurate if the sense key is NO SENSE.
- If the format of the data on tape is corrupt then CHECK CONDITION status is reported. The sense key will be set to MEDIUM ERROR. Additional sense will be set to 3001h (unknown format).
- If the drive fails to read data from tape due to either a MEDIUM ERROR or some sort of non fatal drive error then CHECK CONDITION status is reported. The sense key will be set to HARDWARE ERROR Additional sense will be set to 3B00h (sequential positioning error).

## START/STOP (CD-ROM mode) 1Bh

START/STOP is executed for 1Bh when the drive is in CD-ROM mode. When out of CD-ROM mode, the LOAD/UNLOAD command, which shares the opcode, is executed.

Assuming that the pre-execution checks are passed, GOOD status is always reported.

#### **Pre-execution checks**

Illegal Field Bad LUN Reservation

Deferred Error Unit Attention

#### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (1Bh)								
1	Logical Unit Number Reserved (0)					red (0)		Immed	
2–3	Reserved (0)								
4	Reserved (0)					LoEj	Start		
5	Control								

#### **CDB** fields

Immed	This flag is ignored.					
LoEj	.oad/Eject. This flag is ignored.					
Start	This flag is ignored.					

## TEST UNIT READY OOH

TEST UNIT READY checks if the drive is ready for commands that access the tape. This is done by the pre-execution Media Access check; it is not a request for a self-test. If the drive has a tape loaded, the command returns a GOOD status. Otherwise, CHECK CONDITION is reported and the sense key is NOT READY.

#### Pre-execution checks

Illegal Field Reservation Deferred Error
Unit Attention Media Access Media Information

#### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (00h)								
1	D. LO								
4	Reserved (0)								
5	Control								

## TEST UNIT READY specific status

If all the pre-execution checks pass, GOOD status is reported.

### VERIFY 13h

VERIFY verifies one or more blocks beginning with the next block on the tape. The verification is media verification only. It reads data from the tape as it would for a read but then immediately discards it. No data is transferred between the host and drive.

The command is identical to the READ command in most respects. The pre-execution checks are identical. Sense data reporting on errors/exceptions is identical. The only differences are:

- No data phases occur during verification.
- The Verify command has no SILI bit. When an illegal length record is encountered, Verify behaves like READ with the SILI bit clear.

**NOTE:** Verify will not complete until all data has been read. It does not support the ANSI "byte compare" or "Immed" options (see the ANSI SCSI specification).

#### Pre-execution checks

Illegal Field Fixed Bit Reservation Deferred Error

Unit Attention Media Access Diagnostic Status

#### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (13h)								
1	Reserve	ed (0)	VTE (0)	VLBPM (0)	VBF (0)	Immed(0)	BCmp(0)	Fixed	
2	(MSB)								
4	Verification Length							(LSB)	
5	Control								

#### **CDB** fields

Immed	0	The Immediate Reporting option is not supported, so this bit must be 0.
ВСтр	0	The Byte compare option is not supported, so this bit must be 0.

Fixed	0	The Verification Length field specifies the length of the data to be verified in bytes.
	1	The Verification field specifies the length of the data to be verified in blocks. The size of each block (in bytes) is specified by the current block length specified in the Mode Parameter block descriptor.
Verification Length	0	No data is verified. This is not considered an error and the current logical position will be unchanged.
	>0	The amount of data to be verified, in bytes or blocks as specified by the Fixed field.

### WRITE OAh

Zero or more blocks of data are transferred from the host to tape starting at the current logical position.

It is recommended that the Buffered Mode field of the MODE SELECT Parameter is set to either 1 or 2 so that Immediate reporting is enabled; upon a write command the drive will report GOOD status once the data is successfully transferred to the data buffer (but not necessarily to tape).

Data held in the buffer is flushed to tape in the following circumstances:

A SCSI command is received that forces a flush:

ERASE LOAD LOCATE LOG SELECT MODE SELECT READ
REWIND SEND DIAGNOSTIC SPACE VERIFY WRITE BUFFER

- Buffered mode is not enabled. If buffered mode has not been set to 1 or 2, the buffer is flushed before the command completes.
- The write delay time is exceeded. This is defined by the Write Delay field of the Device Configuration Mode Select page. If the drive is idle for longer than this (no operations that access the tape have been performed), any data in the buffer is flushed to tape.

#### Pre-execution checks

Illegal Field	Fixed Bit	Reservation	Deferred Error
Unit Attention	Media Access	Media Write	Diagnostic Status

#### Command descriptor block

	7	6	5	4	3	2	1	0	
0	Operation Code (0Ah)								
1	Reserved (0)								
2	(MSB)		- ( , ,						
4		Transfer Length							
5	Control								

#### **CDB** fields

Fixed	0	The Transfer Length field specifies the length of the transfer in bytes.
	1	The Transfer Length field specifies the length of the transfer in blocks. The size of each block (in bytes) is determined by the current Block Length given in the Mode Select Parameter block descriptor.

Transfer Length	0	No data is transferred. The current logical position will be unchanged.
	>0	The amount of data to be transferred, in bytes or blocks as determined by the Fixed field.

## WRITE specific status

See also the "Additional Sense codes" (page 207) for a variety of possible hard errors.

An attempt to write to a write-protected cartridge will produce a CHECK CONDITION with a sense key of DATA PROTECT and additional sense of 2700h (write-protected).

An attempt to write to a cartridge whose Cartridge Memory has failed will produce a CHECK CONDITION with a sense key of MEDIUM ERROR and additional sense of 3004h (cannot write medium). If, however, the tape is not positioned at BOT, the drive will respond with sense data as if the tape is write-protected. The WP flag in the Mode Parameter Header will also be set.

If EOM (end of medium) is encountered during a write, CHECK CONDITION status is reported. The EOM flag will be set. The sense key will be set to VOLUME OVERFLOW with additional sense of 0002h (EOT). Residue information will be as below. The logical position will be EOD.

Subsequent Request Sense commands will, however, give tape position as EOP/M. It may still be possible to write a smaller quantity of information (such as filemarks or a smaller block). This is because logical position after failure to write a block returns to the start of the unwritten block.

Early Warning EOM information is reported only if a write operation is successful. This is done by reporting CHECK CONDITION status with a sense key of NO SENSE and additional sense of 0002h (EOT). Residue information is valid and indicates zero blocks/bytes.

#### Residue information

Residue information depends on two variables:

- Fixed or Variable block mode
- Immediate or Non-Immediate Report (Buffered mode)

Block Mode	Buffered Mode	Residue			
Variable	0	Number of unwritten bytes			
Fixed	0	Number of unwritten blocks			
Variable	not 0	Total number of unwritten bytes and marks (including those buffered before the command was received). The size can be greater than the command operation size.			
	specifically 1	Contains residues of all initiators with data in the buffer.			
Fixed	not 0	Total number of unwritten blocks and marks (including those buffered before the command was received). The size can be greater than the command operation size.			
	specifically 1	Contains residues of all initiators with data in the buffer.			

Residue information is set in the sense data byte, with the Valid bit set and the information bytes set to the residue.

## WRITE ATTRIBUTE 8Dh

The WRITE ATTRIBUTE command allows an application client to write attribute values to MAM (Medium Auxiliary Memory). Application clients should issue READ ATTRIBUTE commands before using this command to discover what support the device server has for MAM.

#### **Pre-execution checks**

Illegal Field Deferred Error Unit Attention Media Access

For this command to be executed, there must be a tape in the drive, even if it is only partially loaded.

### Command descriptor block

	7	6	5	4	3	2	1	0			
0		Operation Code (8Dh)									
1–4		Reserved (0)									
5		Volume Number (0)									
6	Reserved (0)										
7	Partition Number										
8–9	Reserved (0)										
10	(MSB)	(MSB)									
13	Parameter List Length (LSB)							(LSB)			
14	Reserved (0)										
15		Control									

#### **CDB** fields

Volume Number	The nur to that set to 0	mber of the volume within the MAM. The number of volumes of the MAM must be equal of the tape. In the case of LTO Ultrium, the only has a single volume, so this field is be ).					
Partition Number		he number of the partition within the MAM. The number of partitions of the MAM must be equal to that of the tape.					
Parameter List Length	The len	The length in bytes of the parameter list contained in the Data-Out buffer.					
	0	The Data-Out buffer is empty. This condition is not be considered an error.					
	n	The length in bytes of the parameter list contained in the Data-Out buffer.					

## WRITE ATTRIBUTE parameter list format

The parameter list has the following format. The attributes should be sent in ascending numerical order. For details of attribute data see "MAM attribute data" (page 142).

	7	6	5	4	3	2	1	0		
0	(MSB)									
3			Parameter Data Length (n-3) (LSB)							
4	Au 1 1									
а	Attribute 1									
:	:									
m	Aughten									
n		Attribute x								

Parameter Data Length	This is not mandatory and will be ignored by the device server because it duplicates the Parameter List Length.
-----------------------	---

If the parameter data contains an attribute with an Attribute Length of zero, one of the following actions will occur:

- If the attribute is read-only or unsupported, no attributes are changes. The command fails, returning CHECK CONDITION with ILLEGAL REQUEST sense and additional sense of 2600h (invalid field in parameter list).
- If the attribute can be written to, it is deleted and will not be returned after a subsequent READ ATTRIBUTE command.
- If the attribute does not exist, the command cannot affect it. This is not considered an error.

## WRITE ATTRIBUTE specific status

The command will be terminated and will return CHECK CONDITION under the following circumstances:

Description	Sense Key		Additional Sense
There is no cartridge present in the drive, not even partially loaded.	NOT READY	3A00h	(medium not present)
The Parameter List Length results in the truncation of an attribute.	ILLEGAL REQUEST	1A00h	(parameter list length error)
The combination of Volume Number and Partition Number is not valid.	ILLEGAL REQUEST	2400h	(invalid field in CDB)
The parameter data attempts to change a read-only attribute, that is, one that has the Read-Only bit (see "MAM attribute data" (page 142)) set to one when read with the READ ATTRIBUTE command. None of the attributes are changed.	ILLEGAL REQUEST	2600h	(invalid field in parameter list)
The parameter data contains an attribute with an incorrect Attribute Length field value. None of the attributes are changed.	ILLEGAL REQUEST	2600h	(invalid field in parameter list)
The parameter data contains an attribute with an unsupported Attribute Value field value. None of the attributes are changed.	ILLEGAL REQUEST	2600h	(invalid field in parameter list)
The attributes are not in ascending order in the Parameter List. None of the attributes are changed.	ILLEGAL REQUEST	2600h	(invalid field in parameter list)
There is not enough space to write all the attributes to the MAM. None of the attributes are changed.	ILLEGAL REQUEST	5506h	(MAM full)

## WRITE BUFFER 3Bh

Write Buffer is used to transfer data into memory on the drive for the purposes of diagnostics, tests or firmware upgrade. The data is placed into one of the drive buffers depending on the Mode and Buffer ID fields of the command.

**CAUTION:** Do not attempt to use the buffer modifying functions of this command unless you really know what you are doing. The buffer modifying functions are intended as a diagnostic aid to be used in conjunction with the READ BUFFER command. It is not possible to modify data in the buffer so that it subsequently written to media because all host data is flushed before executing the command.

The firmware download functions are intended for use by manufacturing and by customers using upgrade utilities supplied by HP.

### Pre-execution checks

Illegal Field Reservation Deferred Error Unit Attention

## Command descriptor block

	7	6	5	4	3	2	1	0
0	Operation Code (3Bh)							
1	Reserved (0) Mode							
2	Buffer ID							
3	(MSB)	Buffer Offset (LSB)						
5								(LSB)
6	(MSB)			D	. 1:-1 1 alb			
8		Parameter List Length (LSB)					(LSB)	
9		Control						

## CDB fields

Mode	This field car	n be set to one of the following values:
	OOh	The drive transfers a 4-byte header from the host (which should be set to zeros), followed by (allocation length $-4$ ) bytes of data. The data is written into the buffer identified by the Buffer ID, starting from offset zero in the buffer. The Buffer ID and Buffer Offset must both be zero. Allocation Length must not exceed (buffer size $+4$ ).
	02h	The drive transfers allocation length bytes of data from the host, bytes of data which is placed in the buffer indicated by Buffer ID, starting from Buffer Offset from the start of the buffer. No header is sent. The Buffer Offset and Allocation Length must be kept within the buffer size, and the Buffer ID must to set to one of the valid values.
	04h	This mode is used to transfer new firmware to the drive. The drive receives Allocation Length bytes of data from the host. The data is stored in the drive's buffer. The location in the buffer at which the data is written is determined by the firmware.
		The firmware image is divided into a number of blocks of data which are sent to the drive using multiple Write Buffer commands.
		All the firmware image data should be transferred using this mode. The Buffer ID and Buffer Offset are ignored.
	05h	This mode is used to indicate that the complete firmware image has been sent to the drive. This is the signal for entering the FLASH reprogramming stage of the firmware upgrade process.
		Once this command has been received, and the associated data stored in the buffer, the resident firmware checks the validity of the image that has been received. If this seems to be correct, the Firmware Upgrade operation will commence. If any faults are detected in the format of the image, the drive will report CHECK CONDITION to the host. The sense key is ABORTED COMMAND, and the additional sense is set to 2600h (invalid field in parameter list).
		CAUTION: Once this command has been sent and completed, the drive's power supply must not be interrupted until the drive has completed the firmware upgrade. The Buffer ID and Buffer Offset are ignored.
	OAh/1Ah	This mode is used to write to the Echo Buffer, which is 4096 bytes in size. The Buffer ID and Offset are ignored.
Buffer ID	Specifies wh	ich buffer to read.
	NOTE: Pro	cessor memory (Buffer ID 01h) is not accessible.

	00h	Main buffer (RAM) Offset Boundary: 1 byte				
	02h	FC burst buffer (RAM) Offset Boundary: 512 bytes, or SCSI burst buffer (RAM) Offset Boundary: 4 bytes				
	13h PCA EEPROM Offset Boundary: 1 byte					
	20h—3Fh	-3Fh Main buffer segments 0-31 (RAM) — see below for description				
Buffer Offset	Where in the buffer the data should be written. This must be smaller than the size of the buffer and must obey the specified offset boundary. When downloading new firmware, this field is ignored.					
Parameter List Length		The amount of data. This must be smaller than the difference between the Buffer Offset field and the size of the buffer.				

## Memory sizes

#### Main buffer memory

The Main Buffer memory is 512 MB.

Areas of the Main Buffer memory are used by the firmware. These should not be written to and should not be expected to retain values that are written to them. Any Write and Read Buffer tests should be performed while the drive is idle. If the drive is reading or writing, the data being written or read can be corrupted.

Since the drive has more than 16 MB of Main Buffer memory, additional buffer IDs have been defined to allow the whole buffer to be accessed in 16 MB segments. These are defined as follows:

Buffer ID	Address				
20h	0000000h + Buffer Offset (same as Buffer ID 00h)				
21 h	01000000h + Buffer Offset (that is, +16 MB)				
22h	02000000h + Buffer Offset (that is, +32 MB)				
23h	0300000h + Buffer Offset (that is, +48 MB)				
24h	0400000h + Buffer Offset (that is, +64 MB)				
25h	05000000h + Buffer Offset (that is, +80 MB)				
26h	06000000h + Buffer Offset (that is, +96 MB)				
27h	07000000h + Buffer Offset (that is, +112 MB)				
28h	08000000h + Buffer Offset (that is, +128 MB))				
29h	0900000h + Buffer Offset (that is, +144 MB)				
2Ah	0A000000h + Buffer Offset (that is, +160 MB)				
2Bh	OBO00000h + Buffer Offset (that is, +176 MB)				
2Ch	OC000000h + Buffer Offset (that is, +192 MB)				
2Dh	ODO00000h + Buffer Offset (that is, +208 MB)				
2Eh	OEOOOOOOh + Buffer Offset (that is, +224 MB)				
2Fh	OFOOOOOOh + Buffer Offset (that is, +240 MB)				
30h	10000000h + Buffer Offset (that is, +256 MB)				
31 h	11000000h + Buffer Offset (that is, +272 MB)				
32h	12000000h + Buffer Offset (that is, +288 MB)				
33h	13000000h + Buffer Offset (that is, +304 MB)				

Buffer ID	Address
34h	14000000h + Buffer Offset (that is, +320 MB)
35h	15000000h + Buffer Offset (that is, +336 MB)
36h	16000000h + Buffer Offset (that is, +352 MB)
37h	17000000h + Buffer Offset (that is, +368 MB)
38h	18000000h + Buffer Offset (that is, +384 MB))
39h	19000000h + Buffer Offset (that is, +400 MB)
3Ah	1A000000h + Buffer Offset (that is, +416 MB)
3Bh	1B000000h + Buffer Offset (that is, +432 MB)
3Ch	1C000000h + Buffer Offset (that is, +448 MB)
3Dh	1D0000000h + Buffer Offset (that is, +464 MB)
3Eh	1E000000h + Buffer Offset (that is, +480 MB)
3Fh	1F000000h + Buffer Offset (that is, +496 MB)

#### SCSI burst buffer

200000h bytes.

#### PCA EEPROM

The write range is limited to 400h bytes, starting at 60h (TapeTools area).

### WRITE FILEMARKS 10h

WRITE FILEMARKS causes the specified number of filemarks to be written beginning at the current logical position on tape.

If the Immed bit is set, GOOD status may be reported and the marks left in the data buffer. Otherwise, all buffered data and marks are written before status is reported.

If zero filemarks are to be written, the Immed bit must be zero. The drive writes any buffered data and marks to tape before reporting. This is the recommended way for a host to flush the buffer.

#### **Pre-execution checks**

Illegal Field	Reservation	Deferred Error	Unit Attention
Media Access	Media Write	Diagnostic Status	

#### Command descriptor block

	7	6	5	4	3	2	1	0
0	Operation Code (10h)							
1	Reserved (0) WSmk Immed							
2	(MSB)		N. I. CELL					
4		•	Number of Filemarks (LSB)					(LSB)
5		Control						

### CDB fields

Immed	0	Status will not be returned until the operation is complete.
	1	The drive returns GOOD status following the pre-execution checks (that is, before the command starts executing).
WSmk	0	This bit is not supported and must be set to zero.
Number of	0	Zero is valid only when immediate report is disabled.
Marks	>0	This number of filemarks is to be written.

## WRITE FILEMARKS specific status

Write Filemark sense is identical to status for the Write command.

# 6 Support and other resources

#### Related documents

The following documents provide additional information:

## Documents specific to HP LTO Ultrium drives

- Hardware Integration Guide, volume 1 of the HP LTO Ultrium Technical Reference Manual
- Software Integration Guide, volume 2 of the HP LTO Ultrium Technical Reference Manual
- Specifications, volume 4 of the HP LTO Ultrium Technical Reference Manual
- UNIX, Linux and OpenVMS Configuration Guide, volume 5 of the HP LTO Ultrium Technical Reference Manual

Please contact your HP supplier for copies.

- The features and benefits of HP LTO Ultrium drives are discussed in the HP LTO Ultrium Technology White Paper.
- For a general background to LTO technology and licensing, go to <a href="http://">http://</a> www.lto-technology.com.

## Documentation map

The following will help you locate information in the Technical Reference Manual. A reference like "1 HW Integration: ch. 7" means Volume 1, Hardware Integration Guide, of the HP LTO Ultrium Technical Reference Manual, chapter 7.

#### Drives—general

Connectors	1 HW Integration: ch. 4
Front panel LEDs	1 HW Integration: ch. 3
Specifications	4 Specifications

## Installation and configuration

Connectors	1 HW Integration: ch. 4
Determining the configuration	2 SW Integration: ch. 2
Installation	1 HW Integration: ch. 7
Linux configuration	5 UNIX, Linux, OpenVMS Configuration
Modes of usage	n/a
OpenVMS configuration	5 UNIX, Linux, OpenVMS Configuration
Optimizing performance	1 HW Integration: ch. 6
	2 SW Integration: ch. 4
UNIX configuration	5 UNIX, Linux, OpenVMS Configuration

## Operation

Operation	1 HW Integration: ch. 8

## Cartridges

Cartridge Memory (LTO-CM)	2 SW Integration: ch. 5
Cartridges	1 HW Integration: ch. 5
Managing the use of cartridges	2 SW Integration: ch. 1
Use of cartridges	2 SW Integration: ch. 3

### Interface

FC and SAS host interface guide	3 Host Interface
Commands	3 Host Interface: ch. 5
Error codes	1 HW Integration: ch. 11
Implementation	3 Host Interface: ch. 1
Interpreting sense data	2 SW Integration: ch. 6
Messages	3 Host Interface: ch. 2
Mode pages —see the MODE SENSE command	3 Host Interface: ch. 5
Pre-execution checks	3 Host Interface: ch. 4
Responding to sense keys and ASC/Q	2 SW Integration: ch. 6
Response frames	3 Host Interface: ch. 3
Sense keys and ASC/Q —see REQUEST SENSE command	3 Host Interface: ch. 5
Task management functions	3 Host Interface: ch. 3

## Maintenance and troubleshooting

Cleaning	2 SW Integration: <i>ch. 1</i> 2 SW Integration: <i>ch. 5</i>
Troubleshooting	1 HW Integration: ch. 9
Monitoring drive and tape condition	2 SW Integration: ch. 7
Software troubleshooting techniques	2 SW Integration: ch. 1

## Dealing with errors

Error codes	1 HW Integration: ch. 11
Exception handling	2 SW Integration: ch. 7
Logs—see the LOG SENSE command	3 Host Interface: ch. 5
TapeAlert log	2 SW Integration: ch. 7

## LTO Ultrium features

Autoload	1 HW Integration: <i>ch. 10</i>
Automation Control Interface (ACI)	1 HW Integration: <i>ch. 10</i>
Cartridge Memory (LTO-CM)	1 HW Integration: ch. 5

	2 SW Integration: ch. 5
Data compression, managing	2 SW Integration: ch. 5
OBDR and CD-ROM emulation	2 SW Integration: ch. 7
Performance optimization	1 HW Integration: ch. 6
	2 SW Integration: ch. 1
Performance, factors affecting	2 SW Integration: ch. 4
Software design	2 SW Integration: ch. 1
Supporting LTO Ultrium features	2 SW Integration: ch. 5

## General documents and standardization

See <a href="http://www.t10.org/t10\_main.htm">http://www.t10.org/t10\_main.htm</a> for INCITS SCSI Primary Commands—4 (SPC-4), SCSI Streaming Commands (SSC-4) and other specifications

Copies of documents of other standards bodies can be obtained from:

INCITS 11 West 42nd Street New York, NY 10036-8002 USA

ISO CP 56

CH-1211 Geneva 20 Switzerland

ECMA 114 Rue du Rhône

CH-1204 Geneva Switzerland

Global Engineering 2805 McGaw Documents Irvine, CA 92714

**USA** 

Tel: +41 22 849 6000

Web URL: http://www.ecma.ch

Tel: 800 854 7179 or 714 261 1455

# Glossary

**algorithm** A rigorous set of rules for a procedure. In the context of data compression, the rules are for

transforming the way data is represented.

ANSI American National Standards Institute, which sets standards for, amongst other things, SCSI and

the safety of electrical devices.

**BOM** Beginning Of Media. The first point on the tape that can be accessed by the drive.

**checksum** The sum of a series of bytes written to the tape, which can be checked against the sum of the

same series of bytes when the tape is read in order to identify errors.

**compression** A procedure in which data is transformed by the removal of redundant information in order to

reduce the number of bits required to represent the data.

compression ratio A measure of how much compression has occurred, defined as the ratio of the amount of

uncompressed data to the amount of compressed data into which it is transformed. The LTO-DC algorithm can typically achieve a compression ratio of between 2:1 and 4:1 depending on the

nature of the data.

data set A fixed-size block of compressed host information.

**decompression**A procedure in which the original data is generated from compressed data. **DSIT**Data Set Information Table. Part of the data set that describes its contents.

European Computer Manufacturers Association. The European equivalent of ANSI.

enhanced SCSI commands that are vendor-unique and not part of the common SCSI set.

commands

**EOD** 

End Of Data. An area that signifies the end of the valid data. If new data is written over a larger

quantity of old data, it is possible for data to exist after EOD, but because it is after EOD, this

old data is no longer valid.

**EOM** End Of Media format. The last usable point on the tape.

**EW-EOM** Early Warning End Of Media. A physical mark or a device-computed position on the tape that

tells the drive that it is approaching EOM.

**filemark count** The number of filemarks written since the beginning of the current tape up to and including the

current group.

filemark A mark written by the host. It does not necessarily separate files; it is up to the host to assign a

meaning to the mark.

**FRU** Field Replaceable Unit, an assembly or group of components that is replaced in its entirety by

Service Engineers when it contains a fault.

**host** The host computer system acting as controller for the drive.

immediate mode A mode of responding to SCSI commands where the drive or other peripheral does not wait until

the command has finished before returning status information back to the host. For writing filemarks, Immediate mode can significantly improve the performance of systems that do not set the Immediate bit when sending a SCSI Write Filemarks command. On the other hand, data is not flushed to

tape in response to a filemark command.

**load** The process in which the drive takes in an inserted cartridge and goes online.

**LUN** Logical Unit Number, by which different logical units within a particular device can be addressed

individually. Each logical unit contains a device server. The drive provides a SSC device server, typically at LUN 0, and an ADC device server, typically at LUN 7. Both may be reassigned, for example the ADI automation controller may reassign the ADC LUN by using the ADC Device Server configuration mode sub-page. Finally, the drive also provides optional SMC LUN(s), which may be assigned by an ADI automation controller at the time of enablement, typically at LUN 1.

**RAW** see read-after-write

read-after-write RAW improves data integrity by reading data immediately after it is written and writing the data

again if an error is found.

reserved Not generally available for use with the drive. A reserved field should contain all zero bits.

sense data Data returned after the execution of a SCSI command, telling the host whether the transaction

was successful, and if not, what went wrong.

sequential access Sequential access devices store data sequentially in the order in which it is received. Tape devices

are the most common sequential access devices. Devices such as disk drives are direct access devices, where data is stored in blocks, not necessarily sequentially. Direct access allows for

speed of retrieval, but is significantly more costly.

**spacing** Spacing is moving along the tape over a specified number of blocks or filemarks, or to EOD, in

order to find data quickly.

**sub-data set**One sixteenth of a data set.

**TapeAlert** A set of 64 flags is held in the TapeAlert log that indicate faults or predicted faults with the drive

or the media. By reading this log, host software can inform the user of existing or impending

conditions, and can, for example, advise the user to change the tape.

**vendor-unique** The addition of commands to SCSI that are not included in the standard.

# Index

	READ CAPACITY command, 154
A	READ TOC command, 167
abort handling, 13	SEEK command, 229
Aborted Command, 207	START/STOP command, 253
additional sense codes, 200, 202, 207	CDB, 27
addressing, fibre channel, 15	CHECK CONDITION, 18, 19
algorithms, 266	checksum, 266
compression, 105	cleaning, 201, 211
decompression, 105	cleaning cartridge, 211
ANSI, 263, 265, 266	Cleaning Needed sense data descriptor, 203
append error, 212	CLEAR PROTECTED STTF LOG command, 29
ASC/Q, 207	clearing logs, 58
attribute data, 142	CLN bit, 201
attributes	command descriptor block, 27
ID values, 143	commands, 29
standard device types, 145	CLEAR PROTECTED STTF LOG, 29
standard host type, 147	ENABLE TRANSPORT LAYER RETRIES, 29
standard medium type, 147	enhanced, 266
states, 143	Enhanced FIRMWARE UPGRADE DOWNLOAD
writing, 256	FIRMWARE SEGMENT, 31
g, ===	Enhanced FIRMWARE UPGRADE REBOOT, 32
В	Enhanced FIRMWARE UPGRADE REPORT IMAGE INFO,
bit pointer, 201	32
BLANK CHECK, 207	ERASE, 30
blank media, met during read, 137	FORCE SNAPSHOT, 35
blocks, spacing over, 252	FORCED EJECT, 34
BOM, 200, 266	FORMAT MEDIUM, 36
detected, 207	INQUIRY, 37
met during space, 252	LOAD/UNLOAD, 55
BOP, met during space, 252	LOCATE, 57
BPV bit, 201	LOG SELECT, 58
brackets, round, square, 98	LOG SENSE, 59
buffer	MANAGEMENT ARM SELF-TEST, 95
echo, 150, 259	MODE SELECT, 97
reading, 150	MOVE MEDIUM, 134
writing, 256, 258	overlapping, 212
buffered data, flushed to tape, 255	PERSISTENT RESERVE IN, 127
burst size, 103	PERSISTENT RESERVE OUT, 130
bus device reset, 13, 204	READ, 135
bus inactivity limit, 102	READ, 133 READ 10, 17, 138
BUSY status, 18, 19	READ 10, 17, 130
DO31 SIGIOS, 10, 17	READ 0, 17, 137 READ ATTRIBUTE, 139
C	READ BLOCK LIMITS, 149
	READ BUFFER, 150
capacity data, 155	
cartridge memory	READ CAPACITY, 17, 154
accessible in hold position, 56, 103	READ FIRMWARE TRACE LOG, 155
failed, 56, 256	READ LOGGED-IN HOST TABLE, 157
size, 153	READ MEDIA SERIAL NUMBER, 159
cartridges	READ SNAPSHOT LOG, 163
faulty, 212	READ STTF LOG, 166
removal prevented, 212	READ TOC, 17, 167
CD-ROM emulation, 17	RECEIVE DIAGNOSTIC RESULTS, 168
CD-ROM Emulation mode page, 124	RELEASE UNIT, 170
CD-ROM mode	REPORT DENSITY SUPPORT, 171
READ 10 command, 138	REPORT DEVICE IDENTIFIER, 175
READ 6 command, 137	

REPORT Enhanced SNAPSHOT CONFIGURATION,	log, 90
186	data decompression algorithm, 105
REPORT IP CONFIGURATION, 176	Data Decompression Enable bit, 105
REPORT LUNS, 180	data phase error, 212
REPORT NETWORK STATISTICS, 181	DATA PROTECT, 207
REPORT SNAPSHOT COMMANDS, 184	DCC bit, 105
REPORT SNAPSHOT CONFIGURATION, 185	DCE bit, 105
REPORT SNAPSHOTS AVAILABLE, 186	DDE bit, 105
REPORT STIF CONFIGURATION 101	decompression, 266
REPORT STIF CONFIGURATION, 191	algorithm, 105
REPORT SUPPORTED OPCODES, 191	Deferred Error check, 25
REPORT SUPPORTED TASK MANAGEMENT	DEFERRED ERROR sense, 205
FUNCTIONS, 194	deferred errors, 200, 202
REPORT TARGET GROUPS, 195	deferred errors after abandoned operations, 206
report timestamp, 197	descriptor format sense data, 201
REQUEST SENSE, 198	Device Configuration page, 105
RESERVE UNIT, 214	Device Statistics log page, 77
REWIND, 215	Device Status log, 93
SECURITY PROTOCOL IN, 216	Device Time mode page, 122
SECURITY PROTOCOL OUT, 223	Device Wellness log, 90
	Diagnostic Status check, 25
SEEK, 17, 229	
SEND DIAGNOSTIC, 230	diagnostics, 168
SET CAPACITY, 231	failure, 212
SET DEVICE IDENTIFIER, 232	sending, 230
SET Enhanced SNAPSHOT CONFIGURATION, 238	Disconnect-Reconnect Mode page, 102
SET IP CONFIGURATION, 233	documents, related, 263
SET SNAPSHOT COMMANDS, 234	Drive Error Code sense data descriptor, 203
SET SNAPSHOT CONFIGURATION, 236	drive error codes, 201, 214
SET STTF CONFIGURATION, 240, 249	DSIT, 266
SET TIMESTAMP, 248	DT device ADC data encryption control status, 68
SPACE, 251	DT Device Error log, 92
START/STOP, 17, 253	DTD primary status log parameters, 69
supported, 12	DTD Status Log page, 66
	DID Sidios Log page, 00
VERIFY, 254	E
WRITE, 255	<del>-</del>
WRITE ATTRIBUTE, 256	echo buffer, 150, 259
WRITE BUFFER, 258	ECMA, 265, 266
WRITE FILEMARKS, 261	ejection failure, 212
compatibility, 211	ENABLE TRANSPORT LAYER RETRIES command, 29
compression, 266	enhanced commands, 266
algorithm, 105	Enhanced FIRMWARE UPGRADE DOWNLOAD
ratio, 266	FIRMWARE SEGMENT command, 31
configuration	Enhanced FIRMWARE UPGRADE REBOOT command, 32
STTF, 191, 249	Enhanced FIRMWARE UPGRADE REPORT IMAGE INFO
control field, 28	command, 32
Control Mode page, 103	Enhanced PHY Control mode sub-page, 117
·	
current sense, 204	EOD, 266
clearing, 204	detected, 207
	met during locate, 58
D	met during read, 137
Data Compression	met during space, 252
Capable bit, 105	not found, 208
Enable bit, 105	spacing to, 252
log, 86	EOM, 200, 266
Mode page, 105	detected, 207
SDCA, 106	met during locate, 58
data compression, 266	met during read, 137
algorithm, 105	met during space, 252
Data Compression (HP-only)	EOP, met during space, 252

ERASE command, 30	Host, 266
error codes, 200, 214	
drive, 201	
errors	ILI bit, 200
counters, 63, 64	Illegal Command check, 25
data phase, 212	Illegal Field check, 25
deferred, 200, 202	ILLEGAL REQUEST, 206
deferred after abandoned operations, 206	immediate mode, 266
read, unrecovered, 208	during writing, 255
sequential positioning, 211	INCITS, 265
write, 208	Information Exceptions Control mode page, 119
write append, 212	Information sense data descriptor, 202
write-behind deferred, 205	INQUIRY
EVPD bit, 37	automation device serial number page, 51
EW-EOM, 266	command, 37
met during locate, 58	data pages, 38
Extended Reset mode page, 124	data transfer element address page, 52
1 3 '	Defined Identifiers page, 43
F	device capabilities page, 53
failed cartridge memory, 56, 256	Device Identification page, 42
FC, 11	drive component revision levels pages, 52
fibre channel	extended INQUIRY data VPD page, 46
addressing, 15	HP alternative inquiry page, 53
names, 15	HP unique inquiry page, 54
Fibre Channel Logical Unit Control mode page, 112	Management Network Address page, 45
fibre channel operation, 15	Manufacturer-assigned Serial number page, 50
Fibre Channel Port Control mode page, 113	Mode Page Policy VPD page, 46
field pointer, 201	Protocol-Specific Logical Unit Information VPD page, 49
field replaceable units, 17	SCSI Ports VPD page, 48
field, invalid, 209	sequential access device capabilities page, 50
filemark count, 266	TapeAlert supported flags page, 51
filemarks, 200, 266	Unit Serial Number page, 42
detected, 207	interface
	FC, 11
met during read, 136	•
met during space, 252	SAS, 12
spacing over, 252	interface implementation, 11
writing, 261	IP configuration, 176, 233
Firmware Trace log, 155	ISO, 265
Fixed bit, 136, 255	K
Fixed Bit check, 25	
fixed format sense data, 199	key management error data, 69
flush, buffered data, 255	T. Committee of the Com
FORCE SNAPSHOT command, 35	
FORCED EJECT command, 34	libraries, fibre channel addressing, 16
FORMAT MEDIUM command, 36	Load bit, 56
format, corrupt, 211	LOAD/UNLOAD command, 55
frames, response, 19	Load/Unload Specific Status, 56
FRUs, 17, 266	loading, 266
	failure, 212
G	tape, 56
GOOD status, 18, 19	localization identifiers, 149
group code, 28	LOCATE command, 57
	LOG SELECT command, 58
H	LOG SENSE, 59
HARD_RESET primitive, 204	Data Compression (HP-only) Log page, 90
HARDWARE ERROR, 206	Data Compression Log page, 86
heads, cleaning, 201	Device Statistics log page, 77
hold bit, 55	Device Status Log page, 93
hold position, 56, 103	Device Wellness Log page, 90

DI Device Error Log page, 92	messages, 18	
DTD Status Log page, 66	microcode download, 211, 212	
parameter pages, 61	Mode Page Policy VPD Inquiry page, 46	
Performance Data Log page, 91	Mode Parameter pages, 98	
Protocol-Specific Port Log page, 85	MODE SELECT	
Read Error Counters Log page, 64	CD-ROM Emulation mode page, 124	
Requested Recovery Log page, 76	command, 97	
Sequential Access Device Log page, 64	Control Data Protection sub-page, 104	
Service Buffers Information Log page, 79	Control Extension sub-page, 103	
Supported Log Pages page, 62	Control Mode page, 103	
Tape Capacity Log page, 89	Data Compression page, 105	
Tape Diagnostic log page, 80	Device Configuration page, 105	
Tape Usage Log page, 89	Device Time mode page, 122	
TapeAlert Log page, 87	Disconnect-Reconnect page, 102	
TapeAlert Response log page, 75	Extended Reset mode page, 124	
Temperature Log page, 65	Fibre Channel Logical Unit Control mode page, 112	
Volume Statistics Log page, 82	Fibre Channel Port Control mode page, 113	
Write Error Counters Log pages, 63	Information Exceptions Control mode page, 119	
Logical Unit Information VPD Inquiry page, 49	Medium Configuration mode page, 121	
logical unit reset, 204	Medium Partitions page, 108	
logs	Mode Parameter header, 99	
clearing, 58	Mode Parameter pages, 98	
Data Compression, 86	Read-Write Error Recovery page, 101	
Data Compression (HP-only), 90	SAS Logical Unit Control mode page, 112	
Device Status, 93	SAS Port Control Mode page, 114	
DT Device Error, 92	Serial Number Override mode page, 121	
Firmware Trace, 155	monitoring condition, 76, 267	
parameter pages, 61	MOVE MEDIUM command, 134	
Pertormance Data, 91	multi-initiator support, 14	
reading, 59	NI.	
Requested Recovery, 76	N 61 1 1 15	
Snapshot, 163	names, fibre channel, 15	
STTF, 166	network statistics, 181	
supported, 62	NO SENSE, 206	
Tape Capacity, 89	NOT READY, 206	
Tape Diagnostic, 80		
Tape Usage, 89	0	
TapeAlert, 267	OBDR, 17	
LUN, 266	one-button disaster recovery, 17	
becoming ready, 208	opcode, 28	
not ready, 208	unrecognized, 209	
not self-configured, 211	overlapping commands, 212	
not supported, 209	D	
LUN check, 24	P	
A.4	Parameter List check, 27	
M	parameter list, invalid field, 209	
MAM	parameter rounding, 211	
attribute data, 142	Performance Data log, 91	
reading, 139	PERSISTENT RESERVE IN command, 127	
write error, 208	PERSISTENT RESERVE OUT command, 130	
writing, 256	Physical Control and Discover mode sub-page, 115	
MANAGEMENT ARM SELF-TEST command, 95	polling delay, 68	
Mark bit, 200	power-on, 204	
Media Access check, 26	pre-execution checks, 24	
Media Information check, 26	Deferred Error, 25	
Media Write check, 26	Diagnostic Status, 25	
Medium Configuration mode page, 121	Fixed Bit, 25	
MEDIUM ERROR, 206	Illegal Command, 25	
Medium Partitions Mode page, 108	Illegal Field, 25	

LUN, 24	command, 198
Media Access, 26	data, 199
Media Information, 26	Requested Recovery Log page, 76
Media Write, 26	Reservation check, 27
Parameter List, 27	RESERVATION CONFLICT status, 18, 20
Reservation, 27	reservations, releasing, 170
Unit Attention, 27	RESERVE UNIT command, 214
prevent media removal, 212	reserved field, 266
PREVENT/ALLOW MEDIUM REMOVAL, 134	reset, 204
Protocol-Specific Logical Unit Information VPD Inquiry	
· · · · · · · · · · · · · · · · · · ·	strategy, 13
page, 49	response frames, 19
Protocol-Specific Port Log page, 85	REWIND command, 215
R	rounding, 211
RAW, 266	S
READ 10 command, 17, 138	SAS, 11, 12
READ 6 command, 17, 137	ENABLE TRANSPORT LAYER RETRIES command, 29
READ ATTRIBUTE command, 139	Port Log page, 85
READ BLOCK LIMITS command, 149	supported task management functions, 12
READ BUFFER command, 150	task management functions, 20
READ CAPACITY command, 17, 154	SAS Logical Unit Control mode page, 112
READ command, 135	SAS Port Control mode page, 114
Read Error Counters Log page, 64	SCSI, 11
READ FIRMWARE TRACE LOG command, 155	commands, 29
Read Keys service action, 127	reset, 204
READ LOGGED-IN HOST TABLE command, 157	SCSI Ports VPD Inquiry page, 48
READ MEDIA SERIAL NUMBER command, 159	SCSI-2, support, 13
Read Reservation service action, 128	SECURITY PROTOCOL IN command, 216
READ SNAPSHOT LOG command, 163	SECURITY PROTOCOL OUT command, 223
READ STTF LOG command, 166	SEEK command, 17, 229
READ TOC command, 17, 167	self-test, 168, 230
Read-Write Error Recovery Mode page, 101	management ARM, 95
reading	SEND DIAGNOSTIC command, 230
error, 208	sense
failure, 58, 137	DEFERRED ERROR, 205
logs, 59	UNIT ATTENTION, 204
reading snapshot data buffer, 154	sense data, 267
RECEIVE DIAGNOSTIC RESULTS command, 168	descriptor format, 201
recovery procedures, 76	fixed format, 199
RELEASE UNIT command, 170	management, 204
Report Capabilities service action, 129	sense data descriptors
REPORT DENSITY SUPPORT command, 171	Cleaning Needed, 203
	Drive Error Code, 203
REPORT DEVICE IDENTIFIER command, 175	· · · · · · · · · · · · · · · · · · ·
REPORT Enhanced SNAPSHOT CONFIGURATION	Information, 202
command, 186	Sense Key Specific, 202
REPORT IP CONFIGURATION command, 176	Stream Commands, 203
REPORT LUNS command, 180	Sense Key Specific sense data descriptor, 202
REPORT NETWORK STATISTICS command, 181	sense keys, 200, 206
REPORT SNAPSHOT COMMANDS command, 184	specific bytes, 200
REPORT SNAPSHOT CONFIGURATION command, 185	sequential access, 267
REPORT SNAPSHOTS AVAILABLE command, 186	Sequential Access command set, 12
REPORT STTF AVAILABLE command, 188	Sequential Access Device Log page, 64
REPORT STTF CONFIGURATION command, 191	sequential positioning error, 211
REPORT SUPPORTED OPCODES command, 191	Serial Attached SCSI see SAS
REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS	Serial Number Override mode page, 121
command, 194	service actions, 140
REPORT TARGET GROUPS command, 195	Read Keys, 127
REPORT TIMESTAMP command, 197	Read Reservation, 128
REQUEST SENSE	Report Capabilities, 129

Service Buffers Information Log page, 79 SET CAPACITY command, 231 SET DEVICE IDENTIFIER command, 232 SET Enhanced SNAPSHOT CONFIGURATION command,	timestamp reporting, 197 setting, 248 TOC data, 168
238 SET IP CONFIGURATION command, 233 SET SNAPSHOT COMMANDS command, 234 SET SNAPSHOT CONFIGURATION command, 236 SET STTF CONFIGURATION command, 240, 249 SET TIMESTAMP command, 248	U Unit Attention check, 27 UNIT ATTENTION sense, 204, 206 UNLOAD command, 55 unloading tape, 56
Share Port Control mode sub-page, 117	V
SILI, 136 bit, 136	Vendor-Unique, 267
error, 136	VERIFY command, 254
SKSV bit, 200	very high frequency data, 66
snapshot	very high frequency polling delay, 68
available, 186	VHF, 66
commands, 234 configuration, 185, 186, 236, 238	Volume Overflow, 207
forcing, 35	Volume Statistics Log page, 82 VU extended VHF data, 73
log, 163	VU failover status, 75
report commands, 184	VU key management error data, 73
snapshot data buffer, reading, 154 SPACE command, 251	VU multi-initiator conflict warning, 74
spacing, 267	W
START/STOP command, 17, 253	WORM cartridges, 106
status	write
BUSY, 18, 19 byte, 18, 19	append error, 212 error, 208
CHECK CONDITION, 18, 19	WRITE ATTRIBUTE command, 256
GOOD, 18, 19	WRITE BUFFER command, 258
reservation conflict, 18, 20	WRITE command, 255
Stream Commands sense data descriptor, 203	Write Error Counters Log page, 63
STTF configuration, 191, 249	WRITE FILEMARKS command, 261
STTF log, 166	write-behind deferred errors, 205
supported commands, 12 Supported Log Pages page, 62	write-protection, 209
Supported tog rages page, 62	WSmk bit, 262
T	
tape	
faulty, 212	
incompatible, 211 loaded, 204	
loading, 56	
removal prevented, 212	
unloading, 56	
Tape Capacity log, 89	
Tape Diagnostic log page, 80	
Tape Usage log, 89	
TapeAlert	
Response log page, 75 supported flags, 51	
TapeAlert log, 267	
TapeAlert Log page, 87	
task management functions, 19	
task management functions, supported, 12	
Temperature Log page, 65	
text localization identifiers, 149	
third-party, reserving for, 170	