
## WINDOW FLASHING DETAIL

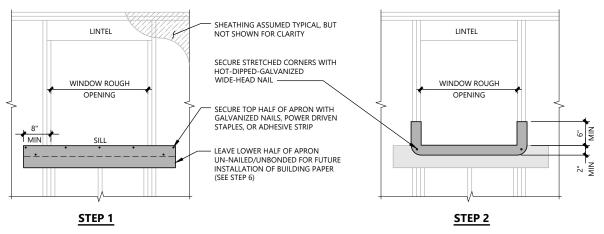







INSTALL TOP EDGE OF APRON LEVEL WITH THE ROUGH SILL - EXTEND THE APRON AT LEAST 8" BEYOND BOTH EDGES OF ROUGH OPENING

PLACE AN ADHESIVE SILL STRIP ONTO TOP OF THE SILL PLATE, AND 6" UP THE STUDS -STRETCH AROUND THE CORNER AND EXTEND 2" MINIMUM ONTO THE APRON

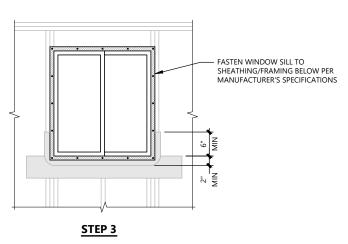

INSTALL WINDOW INTO ROUGH OPENING -CAULK UNDER TOP AND SIDE WINDOW FLANGES - DO **NOT** CAULK UNDER BOTTOM FLANGE

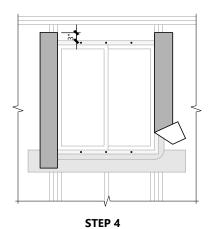


INSTALL SIDE ADHESIVE FLASHING STRIPS OVER WINDOW FLANGE - EXTEND 3" MINIMUM ABOVE TOP OF WINDOW FLANGE

## WINDOW FLASHING DETAIL



THIS DRAWING DEPICTS MINIMUM CODE REQUIREMENTS PER THE 2022 CALIFORNIA CODE CYCLE - INFORMATION IS FOR REFERENCE ONLY AND IS NOT A SUBSTITUTE FOR ACCURATE DRAWINGS PREPARED FOR EACH PROPOSED CONSTRUCTION PROJECT

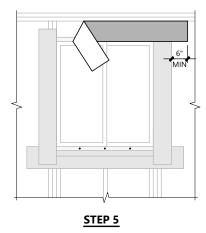

INSTALL HEADER ADHESIVE FLASHING STRIP OVER TOP WINDOW FLANGE - EXTEND 6" MINIMUM BEYOND SIDE FLASHING

