Sensor Stream Pipe

Generated by Doxygen 1.8.17

THIS BRANCH

source path-helpers-ubuntu20.sh

Checkout the Sensor Stream Pipe gitbook for full documentation

What is Sensor Stream Pipe?

Moetsi's Sensor Stream Pipe (SSP) is the first open-source C++ modular kit-of-parts that compresses, streams, and processes sensor data (RGB-D). It does this by efficiently compressing raw data streams, allowing developers to send multiple video types over the network in real time. Frame data can be sent in its raw form (JPG/PNG frames), or compressed using a myriad of codecs, leveraged on FFmpeg/LibAV and NV Codec to considerably reduce bandwidth strain.

SSP is designed to help overcome the limitations of on-device sensor data processing. By taking data processing off device, you will be able to run far more powerful computations on your sensor data and make the most of the tools at your disposal.

The Moetsi Sensor Stream Pipe is designed to overcome the limitations of on-device sensor data processing. It does this by encoding and compressing your device's color or depth frames, and transmitting them to a remote server where they can be decoded and processed at scale.

Currently, Moetsi's Sensor Stream Pipe supports:

- · .mkv (matroska) RGB-D recordings
- Azure Kinect DK RGB-D camera
- seminal computer vision/spatial computing datasets (e.g. BundleFusion, MS RGB-D 7 scenes and VSFS)
- iOS ARKit data (streams ARFrame data)

We're planning to support other cameras and devices (e.g. Kinect v2 and Structure Core) in the near future. At the same time, we've made the Moetsi SSP totally open source so that anyone can build out support for any device.

```
Checkout the Sensor Stream Pipe gitbook for full documentation
```

Features include:

2 THIS BRANCH

- · Synchronized streaming of color, depth and IR frames
- Support for Azure Kinect DK (live and recorded video streaming) and image datasets (e.g. Bundle← Fusion, MS RGB-D 7 scenes and VSFS) and .mkv (matroska) files
- Hardware-accelerated encoding (e.g. Nvidia codec), providing you with the lowest possible latency and bandwidth without compromising on quality
- Interoperability with Libav and FFmpeg creates a hyperflexible framework for all the use cases you brilliant developers can come up with!
- Access to the calibration data for each of the sensors on the Kinect, enabling you to build a point cloud from the color and depth images, perform body tracking, etc.

But why though ...?

- If you have 4 sensor streams and want to do an environment reconstruction using their data feeds
- If you have a couple of sensors and want to find where they are relative to each other
- You want to run pose detection algorithms on a dozen sensors and synthesize the results into a single 3D model
- · Basically if you want to do any spatial computing/computer vision on multiple incoming data streams

You can use Sensor Stream Server to send compressed sensor data to reduce bandwidth requirements and Sensor Stream Client to receive these streams as an ingestion step for a computer vision/spatial computing pipeline.

If you want to synthesize RGB-D+ data from multiple feeds in real-time, you will probably need something like Sensor Stream Pipe.

Component parts

Checkout the Sensor Stream Pipe gitbook for full documentation

Sensor Stream Server

The ssp_server is the frame encoder and sender.

"Frames" are a sample of data from a frame source. For example, the Azure Kinect collects: RGB (color), depth, and IR data. If we want to stream RGB-D and IR, we sample our frame source (the Azure Kinect), and create 3 frames, one for each frame type: 1 for color data, 1 for depth data, and 1 for ir data. We then package these 3 frames as a zmq message and send through a zmq socket.

Sensor Stream Server reads its configurations from a yaml file (examples in /configs). The config file provides Sensor Stream Server: a destination for its frames, the frame source (video, Azure Kinect, or dataset), and how each frame type should be encoded.

Sensor Stream Client

The ssp_clients are the frame receiver and decoder. They run on the remote processing server and receive the frames from the ssp_server for further processing.

There are a few templates for how you can use Sensor Stream Client in

Sensor Stream Client with OpenCV processing If you run Sensor Stream Client with OpenCV visualization:

You can see it's receiving real-time data from a Kinect DK and rendering it for on-screen display. In this scenario we achieved a substantial 20x data compression, reducing the stream size from 400 Mbps to just 20 Mbps, along with a PSNR of \sim 39 dB and a processing overhead of \sim 10-15 ms .

Sensor Stream Client is built so it can be an ingestion step for a spatial computing/computer vision pipeline.

Sensor Stream Tester

A reproducible tester for measuring SSP compression and quality. You can use this to measure how different encodings and settings affect bandwidth/compression.

Getting started

We recommend going through Streaming a Video from our Gitbook

to get up to speed quickly. You will stream using Sensor Stream Server and receive on Sensor Stream Client a pre-recorded RGB-D+ stream to get a quick feel of what Sensor Stream Pipe does.

Sensor Stream Pipe Development

Feedback

Moetsi's Sensor Stream Pipe is currently in alpha. Features will probably change, bugs will probably be found. It's a work in progress after all! That said, we welcome both feedback and pull requests.

We would also love to hear more about how you plan to use the Moetsi Sensor Stream Pipe! So if you have any problems, questions, feature requests, or ideas for improvement, please feel free to reach out at olenka@moetsi. ← com.

The better we understand how you're using the Moetsi SSP, the better we can plan future developments!

About Moetsi

At Moetsi we are super excited about the idea of digitizing reality. Creating a seamless interface between the world as we know it, and a world augmented, improved and expressed through new technologies is plain cool. But we think there's a problem. On-device computation is limited, platform-specific frameworks are restrictive, and sorting raw depth data is seriously challenging.

To address the first problem, we've created the Moetsi Sensor Stream Pipe; to make it easier to process off-device without throttling bandwidth. It means you are no longer confined to the computational limits of your local device, and you don't have to make a massive trade-off on time-to-computation because our pipeline is super fast (latency is less than 30 ms for Kinect data).

But it doesn't end here.

Our pipeline is just one of the first pieces of the puzzle. To develop a robust enough infrastructure to support a true digital twin of the physical world, a lot more needs to be done. This includes creating algorithms that can turn this raw depth data into real, usable applications.

4 THIS BRANCH

How to Contribute

We're always excited to work with like-minded people, and invite you to experiment with our pipeline however you like! If you enjoy our work and think you can help take this project to the next level, feel free to drop us a message on olenka@moetsi.com to get involved.

If you happen to discover any bugs in our code, we'd really appreciate knowing about them. Please just create an issue here on GitHub.

In terms of related projects that fall outside of this repo's scope, we'd be super excited to see, and think the community could benefit from development on:

- **More devices** Working with the Kinect v2, and other sensors such as the Structure Core sensor.
- **Integrations** Any other sort of output that you can imagine!
- **Encoding** Improve encoding performance on AMD/Intel graphic cards, by using the AMD Media Codec/Intel Quick Sync Video instead of relying on libav (VAAPI or OpenCK) for hardware accelerated encoding. Feel free to do the same for Intel cards using Intel Quick Sync Video too!

Moetsi's Permissive License

Moetsi's Sensor Stream Pipe is licensed under the MIT license. That means that we don't require attribution, but we'd really like to know what cool things you're using our pipe for. Drop us a message on olenka@moetsi.com or post on our forum to tell us all about it!

Support Moetsi!

Our Sensor Stream Pipe is always going to be free, but it has taken a lot of blood, sweat and tears to get to this point. If you love what we've made, please consider reaching out to olenka@moetsi.com.

Authors

- André Mourão amourao
- Olenka Polak olenkapolak
- $\bullet \ \, \textbf{Adam Polak} \, \cdot \ \, \textbf{adammpolak} \\$

Sensor Stream Pipe Instalation

Linux instructions
Windows instructions

Linux

To get our Sensor Stream Pipe up and running, you will require the following:

The following steps were tested on Ubuntu 18.04. Installing on other recent Linux distributions should be pretty similar, but please check the installation instructions for OpenCV and Kinect DK on your respective platform first. Installation instructions for Windows should be ready soon. If you encounter any problems or have any suggestions, please let us know by emailing <code>contact@moetsi.com</code> or post on our <code>forum</code>.

Dependencies

To get our Sensor Stream Pipe up and running, you will require the following:

- OpenCV 3.2.0 (tested on version available on Ubuntu 18.04 repo) is used for image processing.
- libav 3.4.6 (tested on version available on Ubuntu 18.04 repo) encodes, decodes and processes image frames.
- Cereal 1.2.2 (headers only) serializes data for network transmission.
- ZeroMQ and cppzmq (libzmq3 4.3.1, cppzmq 4.3.0) perform network and low-level I/O operations.
- spdlog 1.4.1 Logging library.
- yaml-cpp 0.6.0 reads server configuration files.
- Zdepth: compresses depth data.
- NvPipe (optional, but recommended if you have an NVidia GPU) encodes and decodes frames. This is optional, but recommended for users with Nvidia GPUs.
- Azure Kinect SDK 1.3 (to support the Azure Kinect Body Tracking SDK), 1.4 otherwise (optional) accesses Kinect DK data.
- Azure Kinect Body Tracking SDK 1.0 (optional) SSP Body Tracking client.

Download and install repo libraries

OpenCV 3.2.0

```
sudo apt install libopency-dev libopency-core-dev uuid-dev
```

Libav 3.4.6

sudo apt install libavformat-dev libavutil-dev libavcodec-dev libavfilter-dev

Download and extract "out-of-repo" libraries

First, create a folder where local libs are to be installed:

```
mkdir ~/libs
mkdir ~/libs/srcOriginal
```

Cereal 1.2.2

```
cd ~/libs/srcOriginal
wget https://codeload.github.com/USCiLab/cereal/tar.gz/v1.2.2
tar xf v1.2.2
cp -r cereal-1.2.2/include ~/libs
```

ZeroMQ

If you want to take advantage of ZMQ pulling support to check for new frames, compile ZMQ and CPPZMQ with the draft API support. Replace the cmake line with:

```
cmake .. -DENABLE_DRAFTS=ON -DCMAKE_INSTALL_PREFIX=~/libs
```

Also, you must set SSP_WITH_ZMQ_POLLING at SSP build time.

```
cppzmq 4.3.0 cd ~/libs/srcOriginal
wget https://github.com/zeromq/cppzmq/archive/v4.3.0.tar.gz
tar xf v4.3.0.tar.gz
cd cppzmq-4.3.0
cp *.hpp ~/libs/include
```

yaml-cpp 0.6.0

```
cd ~/libs/srcOriginal
wget https://github.com/jbeder/yaml-cpp/archive/yaml-cpp-0.6.0.tar.gz
tar xf yaml-cpp-0.6.0.tar.gz
cd yaml-cpp-yaml-cpp-0.6.0
mkdir build
cd build
cmake .. -DCMAKE_INSTALL_PREFIX=~/libs
make install
```

Zdepth

```
cd ~/libs/srcOriginal
git clone https://github.com/catid/Zdepth.git
cd Zdepth
mkdir build
cd build
cmake .. -DCMAKE_INSTALL_PREFIX=~/libs
make install
cp libzdepth.a ~/libs/lib/
cp zstd/libzstd.a ~/libs/lib/
```

spdlog

```
cd ~/libs/srcOriginal
wget https://github.com/gabime/spdlog/archive/v1.4.1.tar.gz
tar xf v1.4.1.tar.gz
cd spdlog-1.4.1 && mkdir build && cd build
cmake .. -DCMAKE_INSTALL_PREFIX=~/libs
make -j
make install
```

NVPipe (optional, recommended for users with Nvidia GPU) cd ~/libs/srcOriginal

```
git clone https://github.com/NVIDIA/NvPipe.git
cd NvPipe/
mkdir build && cd build
cmake .. -DCMAKE_INSTALL_PREFIX=~/libs
make
make install
```

Azure Kinect SDK 1.3/4 (optional) Note: to avoid getting a password prompt, run any command as sudo before starting this section of the tutorial

1) Add the Linux Software Repository for Microsoft Products.

```
curl https://packages.microsoft.com/keys/microsoft.asc | sudo apt-key add - sudo apt-add-repository https://packages.microsoft.com/ubuntu/18.04/prod sudo apt-get update
```

2) Install Azure Kinect SDK 1.3 (change 1.3 to 1.4 if you do not need body tracking)

sudo apt install libk4a1.3 libk4a1.3-dev

3) To be able to use the Kinect as non-root, please run the following:

wget https://raw.githubusercontent.com/microsoft/Azure-Kinect-Sensor-SDK/develop/scripts/99-k4a.rules sudo cp 99-k4a.rules /etc/udev/rules.d/

4 a) If using 1.4, in the current package, the link to the canonical version of the depth lib is missing. You can create it by running the following command:

```
sudo ln -s /usr/lib/x86_64-linux-gnu/libk4a1.4/libdepthengine.so.2.0 /usr/lib/x86_64-linux-gnu/libdepthengine.so
```

4 a) If using 1.3, the depth engine is missing from the package. Microsoft is aware of the problem, but it only corrected it in 1.4.

 $\verb|https://github.com/microsoft/Azure-Kinect-Sensor-SDK/blob/develop/docs/depthengine. \leftarrow \verb|md| \\$

You can get the libdepthengine.so.2.0 file from the package at https://packages.microsoft. ← com/ubuntu/18.04/prod/pool/main/libk/libk4a1.4/libk4a1.4_1.4.1_amd64.deb.

Open with Archive Manager (or equivalent), the file is in (data/./usr/lib/x86_64-linux-gnu/libk4a1.4/), and extract it to \sim /libs/lib. You can then perform an equivalent command as above.

```
ln -s libdepthengine.so.2.0 libdepthengine.so
```

Azure Kinect Body Tracking SDK (optional) Check instructions above to add the Linux Software Repository for Microsoft Products and then do:

```
sudo apt install libk4abt1.0-dev
```

Building Sensor Stream Pipe

Download and build the project (the ssp_server, ssp_client and ssp_tester):

```
git clone git@github.com:moetsi/Sensor-Stream-Pipe.git
cd Sensor-Stream-Pipe
mkdir build
cd build
cmake .. -DSSP_WITH_KINECT_SUPPORT=OFF -DSSP_WITH_K4A_BODYTRACK=OFF -DSSP_WITH_NVPIPE_SUPPORT=OFF
make
```

You can turn on Kinect, Bodytrack and NVPipe support by adding the following to the cmake . . line respectively:

```
-DSSP_WITH_KINECT_SUPPORT=ON
-DSSP_WITH_K4A_BODYTRACK=ON
-DSSP_WITH_NVPIPE_SUPPORT=ON
```

Windows

Windows installation process was performed using vcpkg to install most dependencies. Tested on Windows 10 Build 19041, Visual Studio 2019 Community Edition (VS).

This process may also work for Linux, but this was not tested.

Install vcpkg

Follow vcpkg installation instructions available here

Install dependencies available on vcpkg

Install dependencies using vcpkg.

vcpkg install azure-kinect-sensor-sdk:x64-windows cereal:x64-windows cppzmq:x64-windows ffmpeg:x64-windows opencv3:x64-windows spdlog:x64-windows yaml-cpp:x64-windows zeromq:x64-windows

Build and install remaining dependecies

Prepare a directory to place the remaining dependecies lib and include files (refered henceforth as \$LIBS). This directory should have a lib and include subfolders with the corresponding .lib and headers respectively.

Zdepth

Clone Zdepth repo

git clone https://github.com/catid/Zdepth.git

Open CMakeLists file in VS and build according to your desired profile (x86 or x64; Debug or Release).

If you did not specify an install dir during the CMake configuration, copy the ${\tt Zdepth \setminus include}$ and output lib folders (e.g. ${\tt ZDepth \setminus out \setminus *}$) to ${\tt SLIBS}$.

Azure Kinect Body Tracking SDK (optional)

Install Azure Body Tracker SDK from the instructions available here.

Copy the SDK include and lib files from the SDK install list to \$LIBS, or add the SDK path to SSP CMakeLists (see below)

Building Sensor Stream Pipe

Clone the SSP repo

git clone git@github.com:moetsi/Sensor-Stream-Pipe.git

Due to the diferences in the build process, the Windows CMake file is named CMakeListsWindows.txt at the root of the SSP repo.

Thus, you should delete CMakeLists.txt and rename CMakeListsWindows.txt to CMakeLists.txt.

Open CMakeLists.txt in VS.

Replace/Add the include ("C://Users//Andre//source//repos//vcpkg//installed//x64-windows//include") and link paths ("C://Users//Andre//source//repos//vcpkg//installed//x64-windows//lib") at the top of the file with your \$LIBS paths include_directories("C://Users//Andre//source//repos//vcpkg//installed//x64-windows//include") link_directories("C://Users//Andre//source//repos//vcpkg//installed//x64-windows//lib")

You can also add your vcpkg//installed// dir to the include and link paths.

After replacing the paths, set the desired compile options (SSP_WITH_KINECT_SUPPORT, SSP_WITH_K4A_B → ODYTRACK, ...), regenerate CMakeCache and build the project.

Linking errors?

if you have linking errors (missing .lib files), try replacing the short lib name with the full lib path in CMake: "libzmq" -> "C:/Users/Andre/source/repos/vcpkg/installed/x64-windows/lib/libzmq.lib"

Namespace Index

3.1 Namespace List

Here is a list of all documented namespaces with brief descriptions:

moetsi		
	Moetsi creations	??
moetsi:		
	ensor Stream Pipe	??

12 Namespace Index

Hierarchical Index

4.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

_custom_k4abt_body_t
<arsessiondelegate></arsessiondelegate>
SessionDelegate???
moetsi::ssp::AVCodecContextDeleter
moetsi::ssp::AVCodecDeleter
moetsi::ssp::AVCodecParametersDeleter
moetsi::ssp::AVCodecParametersNullDeleter
moetsi::ssp::AVFormatContextDeleter
moetsi::ssp::AVFrameDeleter
moetsi::ssp::AVIOContextDeleter
moetsi::ssp::AVPacketDeleter
BodyTracker
moetsi::ssp::buffer_data
moetsi::ssp::CameraCalibrationStruct
moetsi::ssp::CodecParamsStruct
color_point_t
moetsi::ssp::ExtendedAzureConfig
moetsi::ssp::FrameStruct
moetsi::ssp::IDecoder
moetsi::ssp::LibAvDecoder
moetsi::ssp::NvDecoder
moetsi::ssp::ZDepthDecoder
moetsi::ssp::IEncoder
moetsi::ssp::LibAvEncoder
moetsi::ssp::NullEncoder
moetsi::ssp::NvEncoder
moetsi::ssp::ZDepthEncoder
moetsi::ssp::ImageDecoder
moetsi::ssp::iPhoneReaderImpl
moetsi::ssp::IReader ??
moetsi::ssp::DummyBodyReader
moetsi::ssp::ImageReader
moetsi::ssp::iPhoneReader
moetsi::ssp::KinectReader
moetsi::ssp::MultilmageReader

14 Hierarchical Index

moetsi::ssp::OakdXlinkReader	
oetsi::ssp::NetworkReader	??
SObject	
SessionDelegate	??
oetsi::ssp::NVPipeDeleter	??
oetsi::ssp::object_human_t	??
oetsi::ssp::SwsContextDeleter	??
nityXRNativeSessionPtr	??

Class Index

5.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

_custom_k4abt_body_t	
moetsi::ssp::AVCodecContextDeleter	 . ??
moetsi::ssp::AVCodecDeleter	 . ??
moetsi::ssp::AVCodecParametersDeleter	 . ??
moetsi::ssp::AVCodecParametersNullDeleter	 . ??
moetsi::ssp::AVFormatContextDeleter	
moetsi::ssp::AVFrameDeleter	
moetsi::ssp::AVIOContextDeleter	
moetsi::ssp::AVPacketDeleter	 . ??
BodyTracker	 . ??
moetsi::ssp::buffer_data	 . ??
moetsi::ssp::CameraCalibrationStruct	
Camera calibration data	 . ??
moetsi::ssp::CodecParamsStruct	
Codec parameters	
color_point_t	
moetsi::ssp::DummyBodyReader	 . ??
moetsi::ssp::ExtendedAzureConfig	
Azure Kinect configuration	 . ??
moetsi::ssp::FrameStruct	
Frame struct: SSP frame	 . ??
moetsi::ssp::IDecoder	
IDecoder abstract decoder interface	 . ??
moetsi::ssp::IEncoder	
IEncoder abstract encoder class	 . ??
moetsi::ssp::ImageDecoder	
Decode image to AV frame	
moetsi::ssp::ImageReader	
moetsi::ssp::iPhoneReader	
moetsi::ssp::iPhoneReaderImpl	 . ??
moetsi::ssp::IReader	
SSP reader interface - abstract class	
moetsi::ssp::KinectReader	 . ??
moetsi::ssp::LibAvDecoder	
AV (Jpeg/Mpeg) decoder	 . ??

16 Class Index

noetsi::ssp::LibAvEncoder	
LibAV encoder for Jpeg/Mpeg	
noetsi::ssp::MultilmageReader	. ??
noetsi::ssp::NetworkReader	
Network reader	. ??
noetsi::ssp::NullEncoder	
Nullencoder Straight pipe encoder	. ??
noetsi::ssp::NvDecoder	
NvPipe decoder	. ??
noetsi::ssp::NvEncoder	
NvPipe encoder	. ??
noetsi::ssp::NVPipeDeleter	. ??
noetsi::ssp::OakdXlinkReader	. ??
noetsi::ssp::object_human_t	. ??
SessionDelegate	
noetsi::ssp::SwsContextDeleter	
JnityXRNativeSessionPtr	
noetsi::ssp::VideoFileReader	
noetsi::ssp::ZDepthDecoder	
ZDepthDecoder ZDepth format decoder	. ??
noetsi::ssp::ZDepthEncoder	
ZDepth encoder	. ??

File Index

6.1 File List

Here is a list of all documented files with brief descriptions:

include/structs/body_struct.h	
Body struct definition. "Body" frame data type	??
structs/body_struct.h	
Body struct definition. "Body" frame data type	??
dummy_body_reader.cc	
Dumy Body Reader	??
dummy_body_reader.h	
Dumy Body Reader	??
include/structs/frame_struct.h	
Frame struct definition. "Universal" frame data type	??
structs/frame_struct.h	
Frame struct definition. "Universal" frame data type	??
idecoder.cc	
IDecoder factory	??
decoders/idecoder.h	
Frame decoder interface	??
include/decoders/idecoder.h	
Frame decoder interface	??
iencoder.cc	~
IEncoder factory	??
encoders/iencoder.h	??
IEncoder definition: frame encoder	11
include/encoders/iencoder.h	??
IEncoder factory	•
image_converter.cc	??
Image converter from frame struct to opency image	
include/utils/image_converter.h Image converter from frame struct to opency	??
utils/image converter.h	
Image converter from frame struct to opency	??
image decoder.cc	
Mpeg/jpeg image decoder	??
image decoder.h	• •
AV Image decoder	??
image_reader.cc	• •
	~

18 File Index

image_reader.h	
Image reader	??
iphone_reader.h IPhone driver	??
iphone reader.mm	
IPhone driver	??
ireader.cc	
IReader factory	??
Reader interface to SSP	??
readers/ireader.h Reader interface to SSP	??
kinect_reader.cc	
Kinect driver	??
kinect_reader.h Kinect driver	??
kinect_utils.cc Utils for Kinect RT integration	??
kinect_utils.h	00
Utils for Kinect RT integration	??
libav_decoder.cc Jpeg/Mpeg decoder	??
libav_decoder.h	00
Jpeg/Mpeg decoder	??
	??
libav_encoder.h	
Jpeg/Mpeg encoder	??
libav_types.h	??
Logger header	??
multi_image_reader.cc	00
Multi image reader	??
multi_image_reader.h Multi image reader	??
network reader.cc	
Network reader	??
network_reader.h Network reader	??
null_encoder.cc	
Straight pipe encoder	??
null_encoder.h	??
nv_decoder.cc NvPipe decoder	??
nv_decoder.h	
NvPipe decoder	??
nv_encoder.cc NvPipe encoder	??
nv encoder.h	
NvPipe encoder	??
nvpipe_types.h	<u> </u>
Types for NvPipe support	??
oakd_xlink_reader.h	??
similarity_measures.h Similarity measures	??
include/ssp.h	??
ssp.h	??
50p.ii	

6.1 File List

ssp_client_k4a.cc	
SSP client with lib k4a	??
ssp_client_opencv.cc	
OpenCV based ssp client client	??
ssp_client_template.cc	
Template for an SSP client	??
ssp_server.cc	
SSP, server side	??
ssp_tester.cc	
SSP test program	??
include/utils/utils.h	
Utilities	??
utils/utils.h	
Utilities	??
video_file_reader.cc	
Video file reader	??
video_file_reader.h	
Video file reader support	??
video_utils.h	
Video utilities	??
zdepth_decoder.cc	
ZDepth decoder	??
zdepth_decoder.h	
ZDepth decoder	??
zdepth_encoder.cc	
ZDepth encoder	??
zdepth_encoder.h	
Encoder	??

20 File Index

Namespace Documentation

7.1 moetsi Namespace Reference

Moetsi creations.

Namespaces

• ssp

Sensor Stream Pipe.

7.1.1 Detailed Description

Moetsi creations.

7.2 moetsi::ssp Namespace Reference

Sensor Stream Pipe.

Classes

- struct AVCodecContextDeleter
- struct AVCodecDeleter
- struct AVCodecParametersDeleter
- struct AVCodecParametersNullDeleter
- struct AVFormatContextDeleter
- struct AVFrameDeleter
- struct AVIOContextDeleter
- struct AVPacketDeleter
- struct buffer_data
- struct CameraCalibrationStruct

Camera calibration data.

• struct CodecParamsStruct

Codec parameters.

- class DummyBodyReader
- · struct ExtendedAzureConfig

Azure Kinect configuration.

struct FrameStruct

Frame struct: SSP frame.

class IDecoder

IDecoder abstract decoder interface.

class IEncoder

IEncoder abstract encoder class.

· class ImageDecoder

Decode image to AV frame.

- class ImageReader
- class iPhoneReader
- · class iPhoneReaderImpl
- class IReader

SSP reader interface - abstract class.

- class KinectReader
- · class LibAvDecoder

AV (Jpeg/Mpeg) decoder.

· class LibAvEncoder

LibAV encoder for Jpeg/Mpeg.

- · class MultiImageReader
- class NetworkReader

Network reader.

· class NullEncoder

Nullencoder Straight pipe encoder.

class NvDecoder

NvPipe decoder.

class NvEncoder

NvPipe encoder.

- struct NVPipeDeleter
- class OakdXlinkReader
- struct object_human_t
- struct SwsContextDeleter
- · class VideoFileReader
- class ZDepthDecoder

ZDepthDecoder ZDepth format decoder.

· class ZDepthEncoder

ZDepth encoder.

Typedefs

- typedef std::unique_ptr< AVFrame, AVFrameDeleter > AVFrameSafeP
- typedef std::shared ptr< AVFrame > AVFrameSharedP
- typedef std::unique ptr< AVCodecContext, AVCodecContextDeleter > AVCodecContextSafeP
- typedef std::unique ptr< AVPacket, AVPacketDeleter > AVPacketSafeP
- typedef std::shared_ptr< AVPacket > AVPacketSharedP
- typedef std::unique ptr< AVCodecParameters, AVCodecParametersDeleter > AVCodecParametersSafeP
- typedef std::unique_ptr< AVCodecParameters, AVCodecParametersNullDeleter > AVCodecParameters ← SafePNullDelete
- typedef std::unique_ptr< struct SwsContext, SwsContextDeleter > SwsContextSafeP
- typedef std::unique ptr< AVFormatContext, AVFormatContextDeleter > AVFormatContextSafeP
- typedef std::unique ptr< AVCodec, AVCodecDeleter > AVCodecSafeP
- $\bullet \ \ typedef \ std::unique_ptr< AVIOContext, \ \underline{AVIOContextDeleter} > \underline{AVIOContextSafeP} \\$
- typedef std::unique_ptr< NvPipe, NVPipeDeleter > NvPipeSafeP

Enumerations

```
    enum CameraCalibrationType : short { CameraCalibrationType::CameraCalibrationTypeDefault = -1,

 CameraCalibrationType::CameraCalibrationTypeKinect = 0, CameraCalibrationType::CameraCalibrationTypeDefault
 = -1, CameraCalibrationType::CameraCalibrationTypeKinect = 0 }
    Camera calibration type i.e. the kind of sensor calibration data present.
enum FrameType : short {
 FrameType::FrameTypeColor = 0, FrameType::FrameTypeDepth = 1, FrameTypeI:FrameTypeIR = 2,
 FrameTypeConfidence = 3,
 FrameType::FrameTypeHumanPose = 4, FrameType::FrameTypeColor = 0, FrameType::FrameTypeDepth =
 1, FrameType::FrameTypeIR = 2,
 FrameType::FrameTypeConfidence = 3, FrameType::FrameTypeHumanPose = 4 }
    Frame type: color, depth, IR as well as confidence matrices.

    enum CodecParamsType : short {

 CodecParamsType::CodecParamsTypeDefault = -1, CodecParamsType::CodecParamsTypeAv = 0,
 CodecParamsType::CodecParamsTypeNvPipe = 1, CodecParamsType::CodecParamsTypeZDepth = 2,
 CodecParamsType::CodecParamsTypeDefault = -1, CodecParamsType::CodecParamsTypeAv =
 CodecParamsType::CodecParamsTypeNvPipe = 1, CodecParamsType::CodecParamsTypeZDepth = 2}
    Codec parameters type.

    enum SSPMessageType: short { SSPMessageType::MessageTypeDefault = 0, SSPMessageType::MessageTypeDefault

 = 0
    SSP Message type.
enum FrameDataType : short {
 FrameDataType::FrameDataTypeIbavPackets = 0, FrameDataType::FrameDataTypeLibavPackets = 1,
 FrameDataType::FrameDataTypeRawRGBA = 2, FrameDataType::FrameDataTypeGRAY16LE = 3,
 FrameDataType::FrameDataTypeRaw32FC1 = 5,
 FrameDataType::FrameDataTypeYUV = 6, FrameDataType::FrameDataTypeU8C1 = 7,
 FrameDataTypeObjectHumanData = 8, FrameDataType::FrameDataTypeImageFrame = 0, FrameDataType::FrameDataTypeL
 = 1, FrameDataType::FrameDataTypeRawRGBA = 2,
 FrameDataType::FrameDataTypeGRAY16LE = 3, FrameDataType::FrameDataTypeNvPipePacket = 4,
 FrameDataType::FrameDataTypeRaw32FC1 = 5, FrameDataType::FrameDataTypeYUV = 6,
 FrameDataType::FrameDataTypeU8C1 = 7, FrameDataType::FrameDataTypeObjectHumanData = 8,
 FrameDataType::FrameDataTypeCvMat = 9 }
    Frame data type. This is a precise binary format information.
enum SensorType : short {
 SensorType::SensorTypeColor = 0, SensorType::SensorTypeDepth = 1, SensorType::SensorTypeIR = 2,
 SensorType::SensorTypeConfidence = 3,
 SensorType::SensorTypeColor = 0, SensorType::SensorTypeDepth = 1, SensorType::SensorTypeIR = 2,
 SensorType::SensorTypeConfidence = 3 }
    Sensor type: color or depth.
enum video_reader_k4a_depth_mode_t {
 VIDEO_READER_K4A_DEPTH_MODE_OFF, VIDEO_READER_K4A_DEPTH_MODE_NFOV_2X2BINNED,
 VIDEO READER K4A DEPTH MODE NFOV UNBINNED, VIDEO READER K4A DEPTH MODE WFOV 2X2BINNED,
 VIDEO_READER_K4A_DEPTH_MODE_WFOV_UNBINNED, VIDEO_READER_K4A_DEPTH_MODE_PASSIVE_IR

    enum video reader k4a color resolution t {

 VIDEO READER K4A COLOR RESOLUTION OFF, VIDEO READER K4A COLOR RESOLUTION 720P,
 VIDEO READER K4A COLOR RESOLUTION 1080P, VIDEO READER K4A COLOR RESOLUTION 1440P,
 VIDEO_READER_K4A_COLOR_RESOLUTION_1536P, VIDEO_READER_K4A_COLOR_RESOLUTION_2160P,
 VIDEO READER K4A COLOR RESOLUTION 3072P }
• enum CameraCalibrationType : short { CameraCalibrationType::CameraCalibrationTypeDefault = -1,
 CameraCalibrationType::CameraCalibrationTypeKinect = 0, CameraCalibrationType::CameraCalibrationTypeDefault
 = -1, CameraCalibrationType::CameraCalibrationTypeKinect = 0 }
```

Camera calibration type i.e. the kind of sensor calibration data present.

```
enum FrameType : short {
 FrameType::FrameTypeColor = 0, FrameType::FrameTypeDepth = 1, FrameType::FrameTypeIR = 2,
 FrameType::FrameTypeConfidence = 3,
 FrameType::FrameTypeHumanPose = 4, FrameType::FrameTypeColor = 0, FrameType::FrameTypeDepth =
 1, FrameType::FrameTypeIR = 2,
 FrameType::FrameTypeConfidence = 3, FrameType::FrameTypeHumanPose = 4}
    Frame type: color, depth, IR as well as confidence matrices.

    enum CodecParamsType : short {

 CodecParamsType::CodecParamsTypeDefault = -1, CodecParamsType::CodecParamsTypeAv = 0,
 CodecParamsType::CodecParamsTypeNvPipe = 1, CodecParamsType::CodecParamsTypeZDepth = 2,
 CodecParamsType::CodecParamsTypeDefault = -1, CodecParamsType::CodecParamsTypeAv =
 CodecParamsType::CodecParamsTypeNvPipe = 1, CodecParamsType::CodecParamsTypeZDepth = 2}
    Codec parameters type.

    enum SSPMessageType: short { SSPMessageType::MessageTypeDefault = 0, SSPMessageType::MessageTypeDefault

 = 0
    SSP Message type.
enum FrameDataType : short {
 FrameDataType::FrameDataTypeImageFrame = 0, FrameDataType::FrameDataTypeLibavPackets = 1,
 FrameDataType::FrameDataTypeRawRGBA = 2, FrameDataType::FrameDataTypeGRAY16LE = 3,
 FrameDataType::FrameDataTypeRaw32FC1 = 5,
 FrameDataType::FrameDataTypeVUV = 6, FrameDataType::FrameDataTypeU8C1 = 7,
 FrameDataTypeObjectHumanData = 8, FrameDataType::FrameDataTypeImageFrame = 0, FrameDataType::FrameDataTypeL
 = 1, FrameDataType::FrameDataTypeRawRGBA = 2,
 FrameDataType::FrameDataTypeGRAY16LE = 3, FrameDataType::FrameDataTypeNvPipePacket = 4,
 FrameDataType::FrameDataTypeRaw32FC1 = 5, FrameDataType::FrameDataTypeYUV = 6,
 FrameDataType::FrameDataTypeU8C1 = 7, FrameDataType::FrameDataTypeObjectHumanData = 8,
 FrameDataType::FrameDataTypeCvMat = 9 }
    Frame data type. This is a precise binary format information.
enum SensorType : short {
 SensorType::SensorTypeColor = 0, SensorType::SensorTypeDepth = 1, SensorType::SensorTypeIR = 2,
 SensorType::SensorTypeConfidence = 3,
 SensorType::SensorTypeColor = 0, SensorType::SensorTypeDepth = 1, SensorType::SensorTypeIR = 2,
 SensorType::SensorTypeConfidence = 3 }
    Sensor type: color or depth.
```

Functions

std::shared_ptr< IDecoder > IDecoderFactory (const std::string &config)

IDecoder factory.

std::unordered_map< FrameType, std::shared_ptr< IEncoder >> IEncoderFactory (const std::string &config, const std::vector< FrameType > &types)

IEncoder factory.

void SetupLogging (const std::string &level, const std::string &file)

Setup logging.

std::shared_ptr< IReader > IReaderFactory (const std::string &config)

IReader factory.

- void inplace_hton (uint32_t &h)
- void inplace_hton (int32_t &h)
- void inplace_ntoh (uint32_t &h)
- void inplace_ntoh (int32_t &h)
- bool FrameStructToMat (FrameStruct &f, cv::Mat &img, std::unordered_map< std::string, std::shared_ptr
 IDecoder >> &decoders)

Convert frame struct to opency matrix.

uint64_t CurrentTimeMs ()

Get current time in ms.

uint64_t CurrentTimeUs ()

Get current time in usec/microseconds.

• uint64 t CurrentTimeNs ()

Get current time in ns/nanosecconds.

std::string RandomString (size_t length)

Build a random string.

void SetupLogging (YAML::Node &general_parameters)

Setup SSP logging.

· void SetupLogging (std::string &level, std::string &file)

Setup SSP logging.

- std::atomic_bool exiting (false)
- · unsigned long elapsed (unsigned long start, unsigned long end)
- ExtendedAzureConfig BuildKinectConfigFromYAML (YAML::Node config)

Build Kinect configuration from YAML configuration.

void FrameStructToK4A (std::vector< FrameStruct > &f, k4a::capture &sensor_capture, std::unordered_
 map< std::string, std::shared_ptr< IDecoder >> &decoders)

Transform frame structure to K4A format Update decoder dictionary.

• double GetMSE (const Mat &I1, const Mat &I2)

Get Mean Square Error (distance) between images.

• double GetPSNR (const Mat &I1, const Mat &I2, double max_value)

Get Peak Signal to Noise Ration similarity.

Scalar GetMSSIM (const Mat &i1, const Mat &i2)

Get Structural Similarity between 2 images cf. for instance http://amroamroamro.github.←io/mexopencv/opencv/image_similarity_demo.html for a simple SSIM introduction.

void AVFrameToMatYUV (AVFrameSharedP &frame, cv::Mat &image)

Convert an AVFrame to YUV image.

• void AVFrameToMatGray (AVFrameSharedP &frame, cv::Mat &image)

Convert an AVFrame to grayscale image.

AVCodecParameters * getParams (FrameStruct &frame_struct)

Get AVCodec parameters from a FrameStruct.

• template<typename T >

void MinMaxFilter (cv::Mat &in mat, cv::Mat &out mat, double min, double max)

Variables

· std::atomic bool exiting

7.2.1 Detailed Description

Sensor Stream Pipe.

Video utilities.

Types for libav support.

MOETSI_RAAS

Namespace libav_types.h

Namespace video_utils.cc

7.2.2 Enumeration Type Documentation

7.2.2.1 CameraCalibrationType [1/2]

```
enum moetsi::ssp::CameraCalibrationType : short [strong]
```

Camera calibration type i.e. the kind of sensor calibration data present.

Enumerator

CameraCalibrationTypeDefault	Default camera calibration type.
CameraCalibrationTypeKinect	Kinect format calibration type
CameraCalibrationTypeDefault	Default camera calibration type.
CameraCalibrationTypeKinect	Kinect format calibration type

7.2.2.2 CameraCalibrationType [2/2]

```
enum moetsi::ssp::CameraCalibrationType : short [strong]
```

Camera calibration type i.e. the kind of sensor calibration data present.

Enumerator

CameraCalibrationTypeDefault	Default camera calibration type.
CameraCalibrationTypeKinect	Kinect format calibration type
CameraCalibrationTypeDefault	Default camera calibration type.
CameraCalibrationTypeKinect	Kinect format calibration type

7.2.2.3 CodecParamsType [1/2]

```
enum moetsi::ssp::CodecParamsType : short [strong]
```

Codec parameters type.

CodecParamsTypeDefault	Default type
CodecParamsTypeAv	Libav codec configuration

Enumerator

CodecParamsTypeNvPipe	NvPipe configuration	
CodecParamsTypeZDepth	ZDepth compression configuration	
CodecParamsTypeDefault	Default type	
CodecParamsTypeAv	Libav codec configuration	
CodecParamsTypeNvPipe	NvPipe configuration	
CodecParamsTypeZDepth	ZDepth compression configuration	

7.2.2.4 CodecParamsType [2/2]

```
enum moetsi::ssp::CodecParamsType : short [strong]
```

Codec parameters type.

Enumerator

CodecParamsTypeDefault	Default type
CodecParamsTypeAv	Libav codec configuration
CodecParamsTypeNvPipe	NvPipe configuration
CodecParamsTypeZDepth	ZDepth compression configuration
CodecParamsTypeDefault	Default type
CodecParamsTypeAv	Libav codec configuration
CodecParamsTypeNvPipe	NvPipe configuration
CodecParamsTypeZDepth	ZDepth compression configuration

7.2.2.5 FrameDataType [1/2]

```
enum moetsi::ssp::FrameDataType : short [strong]
```

Frame data type. This is a precise binary format information.

FrameDataTypeImageFrame	Image frame
FrameDataTypeLibavPackets	Libav packets
FrameDataTypeRawRGBA	Raw RGBA data
FrameDataTypeGRAY16LE	GRAY16LE data
FrameDataTypeNvPipePacket	NvPipe packet
FrameDataTypeRaw32FC1	Raw 32FC1 data
FrameDataTypeYUV	YUV data

Enumerator

FrameDataTypeU8C1	U8C1 data
FrameDataTypeImageFrame	Image frame
FrameDataTypeLibavPackets	Libav packets
FrameDataTypeRawRGBA	Raw RGBA data
FrameDataTypeGRAY16LE	GRAY16LE data
FrameDataTypeNvPipePacket	NvPipe packet
FrameDataTypeRaw32FC1	Raw 32FC1 data
FrameDataTypeYUV	YUV data
FrameDataTypeU8C1	U8C1 data
FrameDataTypeObjectHumanData	Human Data
FrameDataTypeCvMat	OAKD cv::Mat

7.2.2.6 FrameDataType [2/2]

```
enum moetsi::ssp::FrameDataType : short [strong]
```

Frame data type. This is a precise binary format information.

FrameDataTypeImageFrame	Image frame
FrameDataTypeLibavPackets	Libav packets
FrameDataTypeRawRGBA	Raw RGBA data
FrameDataTypeGRAY16LE	GRAY16LE data
FrameDataTypeNvPipePacket	NvPipe packet
FrameDataTypeRaw32FC1	Raw 32FC1 data
FrameDataTypeYUV	YUV data
FrameDataTypeU8C1	U8C1 data
FrameDataTypeImageFrame	Image frame
FrameDataTypeLibavPackets	Libav packets
FrameDataTypeRawRGBA	Raw RGBA data
FrameDataTypeGRAY16LE	GRAY16LE data
FrameDataTypeNvPipePacket	NvPipe packet
FrameDataTypeRaw32FC1	Raw 32FC1 data
FrameDataTypeYUV	YUV data
FrameDataTypeU8C1	U8C1 data
FrameDataTypeObjectHumanData	Human Data
FrameDataTypeCvMat	OAKD cv::Mat

7.2.2.7 FrameType [1/2]

```
enum moetsi::ssp::FrameType : short [strong]
```

Frame type: color, depth, IR as well as confidence matrices.

Enumerator

FrameTypeColor	Color/BGR frame type
FrameTypeDepth	Int16 depth type in mm
FrameTypeIR	IR sensor frame type
FrameTypeConfidence	Confidence levels
FrameTypeHumanPose	Human pose
FrameTypeColor	Color/BGR frame type
FrameTypeDepth	Int16 depth type in mm
FrameTypeIR	IR sensor frame type
FrameTypeConfidence	Confidence levels
FrameTypeHumanPose	Human pose

7.2.2.8 FrameType [2/2]

```
enum moetsi::ssp::FrameType : short [strong]
```

Frame type: color, depth, IR as well as confidence matrices.

Enumerator

FrameTypeColor	Color/BGR frame type
FrameTypeDepth	Int16 depth type in mm
FrameTypeIR	IR sensor frame type
FrameTypeConfidence	Confidence levels
FrameTypeHumanPose	Human pose
FrameTypeColor	Color/BGR frame type
FrameTypeDepth	Int16 depth type in mm
FrameTypeIR	IR sensor frame type
FrameTypeConfidence	Confidence levels
FrameTypeHumanPose	Human pose

7.2.2.9 SensorType [1/2]

```
enum moetsi::ssp::SensorType : short [strong]
```

Sensor type: color or depth.

Enumerator

SensorTypeColor	Color sensor
SensorTypeDepth	Depth sensor
SensorTypeIR	IR sensor
SensorTypeConfidence	Confidence
SensorTypeColor	Color sensor
SensorTypeDepth	Depth sensor
SensorTypeIR	IR sensor
SensorTypeConfidence	Confidence

7.2.2.10 SensorType [2/2]

enum moetsi::ssp::SensorType : short [strong]

Sensor type: color or depth.

Enumerator

SensorTypeColor	Color sensor
SensorTypeDepth	Depth sensor
SensorTypeIR	IR sensor
SensorTypeConfidence	Confidence
SensorTypeColor	Color sensor
SensorTypeDepth	Depth sensor
SensorTypeIR	IR sensor
SensorTypeConfidence	Confidence

7.2.2.11 SSPMessageType [1/2]

enum moetsi::ssp::SSPMessageType : short [strong]

SSP Message type.

MessageTypeDefault	Default only
MessageTypeDefault	Default only

7.2.2.12 SSPMessageType [2/2]

enum moetsi::ssp::SSPMessageType : short [strong]

SSP Message type.

Enumerator

MessageTypeDefault	Default only
MessageTypeDefault	Default only

7.2.2.13 video_reader_k4a_color_resolution_t

enum moetsi::ssp::video_reader_k4a_color_resolution_t

Enumerator

VIDEO_READER_K4A_COLOR_RESOLUTION_OFF	Color camera will be turned off with this setting
VIDEO_READER_K4A_COLOR_RESOLUTION_720P	1280 * 720 16:9
VIDEO_READER_K4A_COLOR_RESOLUTION_1080P	1920 * 1080 16:9
VIDEO_READER_K4A_COLOR_RESOLUTION_1440P	2560 * 1440 16:9
VIDEO_READER_K4A_COLOR_RESOLUTION_1536P	2048 * 1536 4:3
VIDEO_READER_K4A_COLOR_RESOLUTION_2160P	3840 * 2160 16:9
VIDEO_READER_K4A_COLOR_RESOLUTION_3072P	4096 * 3072 4:3

7.2.2.14 video_reader_k4a_depth_mode_t

enum moetsi::ssp::video_reader_k4a_depth_mode_t

VIDEO_READER_K4A_DEPTH_MODE_OFF	Depth sensor will be turned off with this setting.
VIDEO_READER_K4A_DEPTH_MODE_NFOV_2↔ X2BINNED	Depth captured at 320x288. Passive IR is also captured at 320x288.
VIDEO_READER_K4A_DEPTH_MODE_NFOV_U↔ NBINNED	Depth captured at 640x576. Passive IR is also captured at 640x576.
VIDEO_READER_K4A_DEPTH_MODE_WFOV_2↔ X2BINNED	Depth captured at 512x512. Passive IR is also captured at 512x512.
VIDEO_READER_K4A_DEPTH_MODE_WFOV_U↔ NBINNED	Depth captured at 1024x1024. Passive IR is also captured at 1024x1024.
VIDEO_READER_K4A_DEPTH_MODE_PASSIVE↔ _IR	Passive IR only, captured at 1024x1024.

7.2.3 Function Documentation

7.2.3.1 AVFrameToMatGray()

Convert an AVFrame to grayscale image.

Parameters

frame	AVFrame
image	dest opency image

7.2.3.2 AVFrameToMatYUV()

Convert an AVFrame to YUV image.

Parameters

frame	AVFrame
image	dest opency image

7.2.3.3 BuildKinectConfigFromYAML()

Build Kinect configuration from YAML configuration.

Parameters

config	yaml confirguration

Returns

Azure Kinect configuration

7.2.3.4 CurrentTimeMs()

```
uint64_t moetsi::ssp::CurrentTimeMs ( )
```

Get current time in ms.

Returns

ms since UTC epoch

7.2.3.5 CurrentTimeNs()

```
uint64_t moetsi::ssp::CurrentTimeNs ( )
```

Get current time in ns/nanosecconds.

Returns

nsec since UTC epoch

7.2.3.6 CurrentTimeUs()

```
uint64_t moetsi::ssp::CurrentTimeUs ( )
```

Get current time in usec/microseconds.

Returns

usec since UTC epoch

7.2.3.7 FrameStructToK4A()

Transform frame structure to K4A format Update decoder dictionary.

Parameters

f	source frame structure
sensor_capture	destination "capture" structure
decoders	decoders map - updated

7.2.3.8 FrameStructToMat()

Convert frame struct to opency matrix.

Parameters

f	Frame struct
img	Target opency image
decoders	decoder dictionary

7.2.3.9 GetMSE()

Get Mean Square Error (distance) between images.

Parameters

11	image 1
12	image 2

Returns

MSE between these 2 images

7.2.3.10 GetMSSIM()

Get Structural Similarity between 2 images cf. for instance $http://amroamro.github. \leftarrow io/mexopencv/opencv/image_similarity_demo.html for a simple SSIM introduction.$

Parameters

11	image 1
12	image 2

Returns

3 channel similarity measure

7.2.3.11 getParams()

Get AVCodec parameters from a FrameStruct.

Parameters

```
frame_struct | frame struct
```

Returns

AVCodec parameters

7.2.3.12 GetPSNR()

Get Peak Signal to Noise Ration similarity.

Parameters

l1	image 1
12	image 2
max_value	max value in the PSNR formula

Returns

PSNR image similarity

7.2.3.13 IDecoderFactory()

IDecoder factory.

Parameters

config	configuration
--------	---------------

Returns

IDecoder instance

7.2.3.14 IEncoderFactory()

IEncoder factory.

Parameters

config	configuration
types	type to support

Returns

IEncoder instances

7.2.3.15 IReaderFactory()

IReader factory.

Parameters

config	configuration
--------	---------------

Returns

an IReader instance

7.2.3.16 SetupLogging() [1/3]

Setup logging.

Parameters

level	logging level
file	logging file

7.2.3.17 SetupLogging() [2/3]

Setup SSP logging.

Parameters

level	logging level
file	log file

7.2.3.18 SetupLogging() [3/3]

Setup SSP logging.

Parameters

general_parameters | configuration

Chapter 8

Class Documentation

8.1 _custom_k4abt_body_t Struct Reference

Public Attributes

- int32 t ld
- float pelvis_x
- float pelvis_y
- float pelvis z
- float pelvis_QX
- · float pelvis_QY
- float pelvis_QZ
- float pelvis_QW
- uint8_t pelvis_conf
- float spine_navel_x
- float spine_navel_y
- float spine_navel_z
- float spine_navel_QX
- float spine_navel_QY
- float spine_navel_QZ
- float spine_navel_QW
- uint8_t spine_navel_conf
- float spine_chest_x
- float spine_chest_y
- float spine_chest_z
- float spine_chest_QXfloat spine_chest_QY
- float spine_chest_QZ
- float spine_chest_QW
- uint8_t spine_chest_conf
- float neck_x
- float neck_y
- float neck_z
- float neck_QX
- · float neck_QY
- float neck_QZ
- float neck QW
- uint8_t neck_conf

- · float clavicle_left_x
- float clavicle_left_y
- float clavicle_left_z
- · float clavicle_left_QX
- · float clavicle_left_QY
- float clavicle_left_QZ
- · float clavicle left QW
- uint8_t clavicle_left_conf
- float shoulder_left_x
- · float shoulder left y
- · float shoulder left z
- · float shoulder left QX
- float shoulder_left_QY
- float shoulder_left_QZ
- float shoulder_left_QW
- · uint8 t shoulder_left_conf
- float elbow left x
- · float elbow left y
- float elbow_left_z
- float elbow_left_QX
- float elbow_left_QY
- float elbow_left_QZ
- · float elbow left QW
- · uint8_t elbow_left_conf
- · float wrist left x
- float wrist_left_y
- float wrist_left_z
- float wrist_left_QX
- · float wrist left QY
- float wrist_left_QZ
- float wrist_left_QW
- · uint8 t wrist left conf
- float hand_left_x
- float hand_left_y
- float hand_left_z
- float hand_left_QX
- float hand_left_QY
- float hand left QZ
- · float hand_left_QW
- uint8_t hand_left_conf
- float handtip left x
- float handtip_left_y
- float handtip_left_z
- float handtip_left_QX
- float handtip_left_QY
- float handtip_left_QZ
- float handtip_left_QW
- uint8_t handtip_left_conf
- float thumb_left_x
- float thumb_left_y
- float thumb left z
- float thumb_left_QX
- float thumb_left_QY
- float thumb_left_QZfloat thumb_left_QW

- uint8_t thumb_left_conf
- · float clavicle_right_x
- float clavicle_right_y
- float clavicle_right_z
- · float clavicle right QX
- float clavicle_right_QY
- · float clavicle right QZ
- · float clavicle_right_QW
- uint8_t clavicle_right_conf
- · float shoulder_right_x
- · float shoulder_right_y
- float shoulder_right_z
- float shoulder_right_QX
- float shoulder right QY
- float shoulder_right_QZ
- · float shoulder right QW
- uint8_t shoulder_right_conf
- float elbow_right_x
- float elbow_right_y
- float elbow_right_z
- · float elbow_right_QX
- float elbow_right_QY
- · float elbow right QZ
- float elbow_right_QW
- uint8_t elbow_right_conf
- float wrist_right_x
- · float wrist_right_y
- float wrist_right_z
- float wrist_right_QX
- float wrist_right_QY
- float wrist_right_QZ
- float wrist_right_QW
- uint8_t wrist_right_conf
- float hand_right_x
- float hand_right_y
- float hand_right_z
- float hand_right_QX
- float hand_right_QY
- float hand_right_QZ
- float hand_right_QW
- · uint8 t hand right conf
- float handtip_right_x
- float handtip_right_y
- float handtip_right_z
- float handtip_right_QX
- float handtip_right_QY
- float handtip_right_QZ
- float handtip_right_QW
- uint8_t handtip_right_conf
- float thumb_right_x
- · float thumb right y
- float thumb_right_z
- float thumb_right_QX
- float thumb_right_QY
- float thumb_right_QZ

- · float thumb_right_QW
- uint8_t thumb_right_conf
- float hip_left_x
- · float hip_left_y
- float hip_left_z
- float hip_left_QX
- · float hip left QY
- float hip_left_QZ
- float hip_left_QW
- uint8 t hip left conf
- float knee_left_x
- float knee left y
- float knee_left_z
- · float knee left QX
- float knee_left_QY
- float knee left QZ
- float knee_left_QW
- uint8 t knee left conf
- float ankle_left_x
- float ankle_left_y
- float ankle_left_z
- float ankle_left_QX
- · float ankle left QY
- float ankle_left_QZ
- · float ankle_left_QW
- uint8_t ankle_left_conf
- float foot_left_x
- float foot_left_y
- float foot left z
- float foot_left_QX
- · float foot_left_QY
- float foot left QZ
- float foot_left_QW
- uint8_t foot_left_conf
- float hip_right_x
- float hip_right_y
- float hip_right_z
- float hip_right_QX
- float hip_right_QY
- float hip_right_QZ
- float hip_right_QW
- uint8_t hip_right_conf
- float knee_right_x
- float knee_right_y
- float knee_right_z
- float knee_right_QX
- float knee_right_QY
- float knee_right_QZ
- float knee_right_QW
- uint8_t knee_right_conf
- float ankle_right_x
- · float ankle_right_y
- float ankle_right_z
- float ankle_right_QX
- · float ankle_right_QY

- float ankle_right_QZ
- · float ankle_right_QW
- · uint8_t ankle_right_conf
- float foot_right_x
- float foot_right_y
- float foot_right_z
- float foot_right_QX
- float foot_right_QY
- float foot_right_QZ
- float foot right QW
- uint8_t foot_right_conf
- float head x
- · float head_y
- float head z
- · float head_QX
- float head_QY
- float head QZ
- · float head_QW
- uint8_t head_conf
- float nose_x
- · float nose_y
- float nose_z
- float nose QX
- · float nose_QY
- · float nose QZ
- · float nose_QW
- uint8_t nose_conf
- float eye_left_x
- float eye_left_y
- float eye_left_z
- float eye_left_QX
- float eye_left_QY
- float eye_left_QZ
- float eye_left_QW
- uint8_t eye_left_conf
- float ear_left_x
- float ear_left_y
- float ear_left_z
- float ear_left_QX
- · float ear_left_QY
- float ear left QZ
- float ear_left_QW
- uint8_t ear_left_conf
- float eye_right_x
- float eye_right_y
- float eye_right_z
- float eye_right_QX
- float eye_right_QY
- float eye_right_QZ
- float eye_right_QW
- uint8_t eye_right_conf
- float ear_right_x
- float ear_right_y
- float ear_right_z
- float ear_right_QX

- float ear_right_QY
- float ear_right_QZ
- · float ear_right_QW
- · uint8_t ear_right_conf

The documentation for this struct was generated from the following file:

· ssp_client_k4a.cc

8.2 moetsi::ssp::AVCodecContextDeleter Struct Reference

Public Member Functions

void operator() (AVCodecContext *ptr) const

The documentation for this struct was generated from the following file:

· libav_types.h

8.3 moetsi::ssp::AVCodecDeleter Struct Reference

Public Member Functions

void operator() (AVCodec *ptr) const

The documentation for this struct was generated from the following file:

· libav_types.h

8.4 moetsi::ssp::AVCodecParametersDeleter Struct Reference

Public Member Functions

• void operator() (AVCodecParameters *ptr) const

The documentation for this struct was generated from the following file:

libav_types.h

8.5 moetsi::ssp::AVCodecParametersNullDeleter Struct Reference

Public Member Functions

• void operator() (AVCodecParameters *ptr) const

The documentation for this struct was generated from the following file:

· libav_types.h

8.6 moetsi::ssp::AVFormatContextDeleter Struct Reference

Public Member Functions

• void operator() (AVFormatContext *ptr) const

The documentation for this struct was generated from the following file:

· libav_types.h

8.7 moetsi::ssp::AVFrameDeleter Struct Reference

Public Member Functions

• void operator() (AVFrame *ptr) const

The documentation for this struct was generated from the following file:

· libav_types.h

8.8 moetsi::ssp::AVIOContextDeleter Struct Reference

Public Member Functions

• void operator() (AVIOContext *ptr) const

The documentation for this struct was generated from the following file:

libav_types.h

8.9 moetsi::ssp::AVPacketDeleter Struct Reference

Public Member Functions

• void operator() (AVPacket *ptr) const

The documentation for this struct was generated from the following file:

· libav_types.h

8.10 BodyTracker Class Reference

Public Member Functions

- BodyTracker (int port)
- int update ()
- int getBodyCount () const
- int getBodiesStruct (k4abt_body_t *pBodies, int n) const
- custom_k4abt_body_t getCustomBodiesStruct (int n) const
- int getBodies (k4abt_skeleton_t *pSkeletons, int *plds, int n) const

The documentation for this class was generated from the following file:

• ssp_client_k4a.cc

8.11 moetsi::ssp::buffer_data Struct Reference

Public Attributes

- uint8_t * ptr
- · size t size

size left in the buffer

The documentation for this struct was generated from the following file:

image_decoder.cc

8.12 moetsi::ssp::CameraCalibrationStruct Struct Reference

Camera calibration data.

#include <frame_struct.h>

Public Member Functions

- CameraCalibrationStruct ()
- CameraCalibrationStruct (CameraCalibrationType t, std::vector< unsigned char > d, std::vector< unsigned char > ed)
- template<class Archive > void serialize (Archive &ar)
- CameraCalibrationStruct ()
- CameraCalibrationStruct (CameraCalibrationType t, std::vector< unsigned char > d, std::vector< unsigned char > ed)
- template < class Archive > void serialize (Archive & ar)

Public Attributes

- CameraCalibrationType type = CameraCalibrationType::CameraCalibrationTypeDefault
- std::vector< unsigned char > data
- std::vector< unsigned char > extra_data

8.12.1 Detailed Description

Camera calibration data.

8.12.2 Constructor & Destructor Documentation

8.12.2.1 CameraCalibrationStruct() [1/4]

```
\verb|moetsi::ssp::CameraCalibrationStruct::CameraCalibrationStruct () | [inline]|
```

Default constructor

8.12.2.2 CameraCalibrationStruct() [2/4]

Structure constructor

Parameters

t	camera calibration type
d	opaque data blob #1
ed	opaque data blob #2

8.12.2.3 CameraCalibrationStruct() [3/4]

```
moetsi::ssp::CameraCalibrationStruct::CameraCalibrationStruct ( ) [inline]
```

Default constructor

8.12.2.4 CameraCalibrationStruct() [4/4]

Structure constructor

Parameters

t	camera calibration type
d	opaque data blob #1
ed	opaque data blob #2

8.12.3 Member Data Documentation

8.12.3.1 data

```
\verb|std::vector<| unsigned char| > \verb|moetsi::ssp::CameraCalibrationStruct::data| \\
```

Opaque data blob #1

8.12.3.2 extra_data

```
std::vector< unsigned char > moetsi::ssp::CameraCalibrationStruct::extra_data
```

Opaque data blob #2

8.12.3.3 type

CameraCalibrationType moetsi::ssp::CameraCalibrationStruct::type = CameraCalibrationType::CameraCalibrationType

Camera calibration type

The documentation for this struct was generated from the following file:

include/structs/frame_struct.h

8.13 moetsi::ssp::CodecParamsStruct Struct Reference

Codec parameters.

```
#include <frame_struct.h>
```

Public Member Functions

- CodecParamsStruct ()
- CodecParamsStruct (CodecParamsType t, std::vector< unsigned char > d, std::vector< unsigned char > ed)
- template < class Archive > void serialize (Archive & ar)
- CodecParamsStruct ()
- CodecParamsStruct (CodecParamsType t, std::vector< unsigned char > d, std::vector< unsigned char > ed)
- template < class Archive > void serialize (Archive & ar)

Public Attributes

- CodecParamsType type = CodecParamsType::CodecParamsTypeDefault
- std::vector< unsigned char > data
- std::vector< unsigned char > extra_data

8.13.1 Detailed Description

Codec parameters.

8.13.2 Constructor & Destructor Documentation

8.13.2.1 CodecParamsStruct() [1/4]

```
moetsi::ssp::CodecParamsStruct::CodecParamsStruct ( ) [inline]
```

Default constructor

8.13.2.2 CodecParamsStruct() [2/4]

Structural constructor

Parameters

t	codec type
d	opaque data blob #1
ed	opaque data blob #2

8.13.2.3 CodecParamsStruct() [3/4]

```
moetsi::ssp::CodecParamsStruct::CodecParamsStruct ( ) [inline]
```

Default constructor

8.13.2.4 CodecParamsStruct() [4/4]

Structural constructor

Parameters

t	codec type
d	opaque data blob #1
ed	opaque data blob #2

8.13.3 Member Data Documentation

8.13.3.1 data

```
std::vector< unsigned char > moetsi::ssp::CodecParamsStruct::data
```

Opaque data blob #1

8.13.3.2 extra_data

```
std::vector< unsigned char > moetsi::ssp::CodecParamsStruct::extra_data
```

Opaque data blob #2

8.13.3.3 type

CodecParamsType moetsi::ssp::CodecParamsStruct::type = CodecParamsType::CodecParamsTypeDefault

Codec parameters type

The documentation for this struct was generated from the following file:

• include/structs/frame_struct.h

8.14 color_point_t Struct Reference

Public Attributes

- int16_t xyz [3]
- uint8_t rgb [3]

The documentation for this struct was generated from the following file:

• ssp_client_pointcloud.cc

8.15 moetsi::ssp::DummyBodyReader Class Reference

Inheritance diagram for moetsi::ssp::DummyBodyReader:

Collaboration diagram for moetsi::ssp::DummyBodyReader:

Public Member Functions

```
    virtual std::vector< std::shared_ptr< FrameStruct >> GetCurrentFrame ()
```

Get current frame data.

virtual std::vector< FrameType > GetType ()

Get frame types.

virtual bool HasNextFrame ()

Check if there is a next frame.

• virtual void NextFrame ()

Go to next frame.

virtual void Reset ()

Reset this reader.

virtual void GoToFrame (unsigned int frame_id)

Go to a given frame.

virtual unsigned int GetCurrentFrameId ()

Get current frame number.

• virtual unsigned int GetFps ()

Get indicative FPS in frame per second.

8.15.1 Member Function Documentation

8.15.1.1 GetCurrentFrameId()

```
unsigned int moetsi::ssp::DummyBodyReader::GetCurrentFrameId ( ) [virtual]
```

Get current frame number.

Returns

current frame number.

Implements moetsi::ssp::IReader.

8.15.1.2 GetFps()

```
unsigned int moetsi::ssp::DummyBodyReader::GetFps ( ) [virtual]
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implements moetsi::ssp::IReader.

8.15.1.3 GetType()

```
std::vector< FrameType > moetsi::ssp::DummyBodyReader::GetType ( ) [virtual]
```

Get frame types.

Returns

a vector of FrameType, listing available data types

Implements moetsi::ssp::IReader.

8.15.1.4 GoToFrame()

Go to a given frame.

Parameters

frame←	target frame number
_id	

Implements moetsi::ssp::IReader.

8.15.1.5 HasNextFrame()

```
bool moetsi::ssp::DummyBodyReader::HasNextFrame ( ) [virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implements moetsi::ssp::IReader.

The documentation for this class was generated from the following files:

- dummy_body_reader.h
- dummy_body_reader.cc

8.16 moetsi::ssp::ExtendedAzureConfig Struct Reference

Azure Kinect configuration.

```
#include <kinect_utils.h>
```

Public Attributes

- k4a_device_configuration_t device_config
- · bool stream color
- · bool stream_depth
- bool stream_ir
- int absolute_exposure_value

8.16.1 Detailed Description

Azure Kinect configuration.

8.16.2 Member Data Documentation

8.16.2.1 absolute_exposure_value

int moetsi::ssp::ExtendedAzureConfig::absolute_exposure_value

Absolute exposure value

8.16.2.2 device_config

 $\verb+k4a_device_configuration_t moetsi::ssp::ExtendedAzureConfig::device_configuration_t moetsi::ssp::ExtendedAzureConfiguration_t moetsi::ssp::ExtendedAzure$

Device configuration

8.16.2.3 stream_color

bool moetsi::ssp::ExtendedAzureConfig::stream_color

If true, stream color frames

8.16.2.4 stream_depth

bool moetsi::ssp::ExtendedAzureConfig::stream_depth

If true, stream depth frames

8.16.2.5 stream_ir

bool moetsi::ssp::ExtendedAzureConfig::stream_ir

If true, stream infrared frames

The documentation for this struct was generated from the following file:

· kinect utils.h

8.17 moetsi::ssp::FrameStruct Struct Reference

Frame struct: SSP frame.

#include <frame_struct.h>

Collaboration diagram for moetsi::ssp::FrameStruct:

Public Member Functions

- template < class Archive > void serialize (Archive & ar)
- template < class Archive > void serialize (Archive & ar)

Public Attributes

- SSPMessageType message_type
- FrameType frame_type
- FrameDataType frame_data_type
- · std::string stream id
- std::vector< unsigned char > frame
- CodecParamsStruct codec data
- CameraCalibrationStruct camera_calibration_data
- std::string scene_desc
- · unsigned int sensor_id
- unsigned int device id
- · unsigned int frame_id
- std::vector< uint64_t > timestamps

8.17.1 Detailed Description

Frame struct: SSP frame.

8.17.2 Member Data Documentation

8.17.2.1 camera_calibration_data

CameraCalibrationStruct moetsi::ssp::FrameStruct::camera_calibration_data

Codec info for video frames, null for image frames

8.17.2.2 codec_data

CodecParamsStruct moetsi::ssp::FrameStruct::codec_data

Codec info for video frames, null for image frames Video decoder needs to know about the last receive frame Requires to know the codec as well as additional parameters

8.17.2.3 device_id

unsigned int moetsi::ssp::FrameStruct::device_id

Integer device id: distingish between devices in the same scene Can be set by user.

8.17.2.4 frame

 $\verb|std::vector<| unsigned char| > \verb|moetsi::ssp::FrameStruct::frame| \\$

Frame binary data We use a vector to know the size, basically a vector of bytes to store binary data

8.17.2.5 frame_data_type

FrameDataType moetsi::ssp::FrameStruct::frame_data_type

Frame data type

8.17.2.6 frame_id

```
unsigned int moetsi::ssp::FrameStruct::frame_id
```

Current frame number (increases over time) Increases by 1 for each frame automatically when SSP server starts

8.17.2.7 frame_type

FrameType moetsi::ssp::FrameStruct::frame_type

Frame type

8.17.2.8 message_type

SSPMessageType moetsi::ssp::FrameStruct::message_type

SSP message type

8.17.2.9 scene_desc

 $\verb|std::string| moetsi::ssp::FrameStruct::scene_desc|$

Optional: scene description

8.17.2.10 sensor_id

unsigned int moetsi::ssp::FrameStruct::sensor_id

Sensor id

8.17.2.11 stream id

std::string moetsi::ssp::FrameStruct::stream_id

Random 16 char string that uniquely ids the frame stream. Some decoders (like video) are stateful and so must keep track of streams. This is automatically generated.

8.17.2.12 timestamps

```
std::vector< uint64_t > moetsi::ssp::FrameStruct::timestamps
```

Use for logging and timing to understand processing speeds. Times are in ns

The documentation for this struct was generated from the following file:

• include/structs/frame_struct.h

8.18 moetsi::ssp::IDecoder Class Reference

IDecoder abstract decoder interface.

```
#include <idecoder.h>
```

Inheritance diagram for moetsi::ssp::IDecoder:

Public Member Functions

virtual ∼IDecoder ()

Virtual destructor.

virtual cv::Mat Decode (FrameStruct &data)=0

Extract an opency image from a FrameStruct.

virtual ∼IDecoder ()

Virtual destructor.

• virtual cv::Mat Decode (FrameStruct &data)=0

Extract an opency image from a FrameStruct.

8.18.1 Detailed Description

IDecoder abstract decoder interface.

8.18.2 Member Function Documentation

8.18.2.1 Decode() [1/2]

Extract an opency image from a FrameStruct.

Parameters

data	FrameStruct
------	-------------

Returns

OpenCV matrix/image

 $Implemented\ in\ moetsi::ssp::LibAvDecoder,\ moetsi::ssp::NvDecoder,\ and\ moetsi::ssp::ZDepthDecoder.$

8.18.2.2 Decode() [2/2]

Extract an opency image from a FrameStruct.

Parameters



Returns

OpenCV matrix/image

Implemented in moetsi::ssp::LibAvDecoder, moetsi::ssp::NvDecoder, and moetsi::ssp::ZDepthDecoder.

The documentation for this class was generated from the following file:

· decoders/idecoder.h

8.19 moetsi::ssp::lEncoder Class Reference

IEncoder abstract encoder class.

```
#include <iencoder.h>
```

Inheritance diagram for moetsi::ssp::IEncoder:

Public Member Functions

virtual ∼IEncoder ()

Virtual destructor.

virtual void AddFrameStruct (std::shared_ptr< FrameStruct > &frame_struct)=0

Add a frame struct.

virtual void NextPacket ()=0

Go to next packet.

virtual bool HasNextPacket ()=0

Check if there is a next packet.

virtual std::shared_ptr< FrameStruct > CurrentFrameEncoded ()=0

Get current encoded frame.

virtual std::shared ptr< FrameStruct > CurrentFrameOriginal ()=0

Get current frame in its original format.

virtual std::shared_ptr< CodecParamsStruct > GetCodecParamsStruct ()=0

Get codec parameters.

• virtual unsigned int GetFps ()=0

Get FPS.

virtual ∼IEncoder ()

Virtual destructor.

virtual void AddFrameStruct (std::shared_ptr< FrameStruct > &frame_struct)=0

Add a frame struct.

virtual void NextPacket ()=0

Go to next packet.

virtual bool HasNextPacket ()=0

Check if there is a next packet.

• virtual std::shared_ptr< FrameStruct > CurrentFrameEncoded ()=0

Get current encoded frame.

virtual std::shared_ptr< FrameStruct > CurrentFrameOriginal ()=0

Get current frame in its original format.

virtual std::shared_ptr< CodecParamsStruct > GetCodecParamsStruct ()=0

Get codec parameters.

• virtual unsigned int GetFps ()=0

Get FPS.

8.19.1 Detailed Description

IEncoder abstract encoder class.

8.19.2 Member Function Documentation

8.19.2.1 AddFrameStruct() [1/2]

Add a frame struct.

Parameters

```
frame_struct | FrameStruct to add
```

Implemented in moetsi::ssp::NvEncoder, moetsi::ssp::LibAvEncoder, moetsi::ssp::ZDepthEncoder, and moetsi::ssp::NullEncoder.

8.19.2.2 AddFrameStruct() [2/2]

Add a frame struct.

Parameters

```
frame_struct | FrameStruct to add
```

Implemented in moetsi::ssp::NvEncoder, moetsi::ssp::LibAvEncoder, moetsi::ssp::ZDepthEncoder, and moetsi::ssp::NullEncoder.

8.19.2.3 CurrentFrameEncoded() [1/2]

```
virtual std::shared_ptr<FrameStruct> moetsi::ssp::IEncoder::CurrentFrameEncoded ( ) [pure
virtual]
```

Get current encoded frame.

Returns

current encoded frame

 $Implemented \ in \ moetsi::ssp::LibAvEncoder, \ moetsi::ssp::NvEncoder, \ moetsi::ssp::ZDepthEncoder, \ and \ moetsi::ssp::NullEncoder.$

8.19.2.4 CurrentFrameEncoded() [2/2]

```
virtual std::shared_ptr<FrameStruct> moetsi::ssp::IEncoder::CurrentFrameEncoded ( ) [pure
virtual]
```

Get current encoded frame.

Returns

current encoded frame

Implemented in moetsi::ssp::LibAvEncoder, moetsi::ssp::NvEncoder, moetsi::ssp::ZDepthEncoder, and moetsi::ssp::NullEncoder.

8.19.2.5 CurrentFrameOriginal() [1/2]

virtual std::shared_ptr<FrameStruct> moetsi::ssp::IEncoder::CurrentFrameOriginal () [pure virtual]

Get current frame in its original format.

Returns

current frame in its original format

Implemented in moetsi::ssp::LibAvEncoder, moetsi::ssp::NvEncoder, moetsi::ssp::ZDepthEncoder, and moetsi::ssp::NullEncoder.

8.19.2.6 CurrentFrameOriginal() [2/2]

```
virtual std::shared_ptr<FrameStruct> moetsi::ssp::IEncoder::CurrentFrameOriginal ( ) [pure
virtual]
```

Get current frame in its original format.

Returns

current frame in its original format

 $Implemented \ in \ moetsi::ssp::LibAvEncoder, \ moetsi::ssp::NvEncoder, \ moetsi::ssp::ZDepthEncoder, \ and \ moetsi::ssp::NullEncoder.$

8.19.2.7 GetCodecParamsStruct() [1/2]

```
virtual std::shared_ptr<CodecParamsStruct> moetsi::ssp::IEncoder::GetCodecParamsStruct ( )
[pure virtual]
```

Get codec parameters.

Returns

codec parameters

 $Implemented \ in \ moetsi::ssp::LibAvEncoder, \ moetsi::ssp::NvEncoder, \ moetsi::ssp::ZDepthEncoder, \ and \ moetsi::ssp::NullEncoder.$

8.19.2.8 GetCodecParamsStruct() [2/2]

```
virtual std::shared_ptr<CodecParamsStruct> moetsi::ssp::IEncoder::GetCodecParamsStruct ( )
[pure virtual]
```

Get codec parameters.

Returns

codec parameters

Implemented in moetsi::ssp::LibAvEncoder, moetsi::ssp::NvEncoder, moetsi::ssp::ZDepthEncoder, and moetsi::ssp::NullEncoder.

8.19.2.9 GetFps() [1/2]

```
\label{lem:coder::GetFps} \mbox{ ( ) } \mbox{ [pure virtual]}
```

Get FPS.

Returns

FPS in frame per second

Implemented in moetsi::ssp::LibAvEncoder, moetsi::ssp::NvEncoder, moetsi::ssp::ZDepthEncoder, and moetsi::ssp::NullEncoder.

8.19.2.10 GetFps() [2/2]

```
virtual unsigned int moetsi::ssp::IEncoder::GetFps ( ) [pure virtual]
```

Get FPS.

Returns

FPS in frame per second

Implemented in moetsi::ssp::LibAvEncoder, moetsi::ssp::NvEncoder, moetsi::ssp::ZDepthEncoder, and moetsi::ssp::NullEncoder.

8.19.2.11 HasNextPacket() [1/2]

```
virtual bool moetsi::ssp::IEncoder::HasNextPacket ( ) [pure virtual]
```

Check if there is a next packet.

Returns

true if there is a next packet

Implemented in moetsi::ssp::LibAvEncoder, moetsi::ssp::NvEncoder, moetsi::ssp::ZDepthEncoder, and moetsi::ssp::NullEncoder.

8.19.2.12 HasNextPacket() [2/2]

```
virtual bool moetsi::ssp::IEncoder::HasNextPacket ( ) [pure virtual]
```

Check if there is a next packet.

Returns

true if there is a next packet

 $Implemented \ in \ moetsi::ssp::LibAvEncoder, \ moetsi::ssp::NvEncoder, \ moetsi::ssp::ZDepthEncoder, \ and \ moetsi::ssp::NullEncoder.$

The documentation for this class was generated from the following file:

· encoders/iencoder.h

8.20 moetsi::ssp::ImageDecoder Class Reference

Decode image to AV frame.

```
#include <image_decoder.h>
```

Public Member Functions

• ImageDecoder ()

Contructor.

∼ImageDecoder ()

Destructor.

• void ImageBufferToAVFrame (std::shared_ptr< FrameStruct > &fs, AVFrameSharedP pFrame)

Read frame structs to AVFrame.s.

8.20.1 Detailed Description

Decode image to AV frame.

8.20.2 Member Function Documentation

8.20.2.1 ImageBufferToAVFrame()

Read frame structs to AVFrame.s.

Parameters

fs	frame structs
pFrame	destination AVFrame

The documentation for this class was generated from the following files:

- image_decoder.h
- image_decoder.cc

8.21 moetsi::ssp::ImageReader Class Reference

Inheritance diagram for moetsi::ssp::ImageReader:

Collaboration diagram for moetsi::ssp::ImageReader:

Public Member Functions

- ImageReader (std::string filename)
- virtual std::vector< std::shared_ptr< FrameStruct >> GetCurrentFrame ()

Get current frame data.

virtual std::vector< FrameType > GetType ()

Get frame types.

virtual bool HasNextFrame ()

Check if there is a next frame.

• virtual void NextFrame ()

Go to next frame.

· virtual void Reset ()

Reset this reader.

• virtual void GoToFrame (unsigned int frame_id)

Go to a given frame.

• virtual unsigned int GetCurrentFrameId ()

Get current frame number.

virtual unsigned int GetFps ()

Get indicative FPS in frame per second.

8.21.1 Member Function Documentation

8.21.1.1 GetCurrentFrameId()

unsigned int moetsi::ssp::ImageReader::GetCurrentFrameId () [virtual]

Get current frame number.

Returns

current frame number.

Implements moetsi::ssp::IReader.

8.21.1.2 GetFps()

```
unsigned int moetsi::ssp::ImageReader::GetFps ( ) [virtual]
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implements moetsi::ssp::IReader.

8.21.1.3 GetType()

```
std::vector< FrameType > moetsi::ssp::ImageReader::GetType ( ) [virtual]
```

Get frame types.

Returns

a vector of FrameType, listing available data types


Implements moetsi::ssp::IReader.

8.21.1.4 GoToFrame()

```
void moetsi::ssp::ImageReader::GoToFrame (
          unsigned int frame_id ) [virtual]
```

Go to a given frame.

Parameters

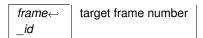

Implements moetsi::ssp::IReader.

8.21.1.5 HasNextFrame()

```
bool moetsi::ssp::ImageReader::HasNextFrame ( ) [virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implements moetsi::ssp::IReader.

The documentation for this class was generated from the following files:

- image_reader.h
- · image_reader.cc

8.22 moetsi::ssp::iPhoneReader Class Reference

Inheritance diagram for moetsi::ssp::iPhoneReader:

Collaboration diagram for moetsi::ssp::iPhoneReader:

Public Member Functions

· void Reset () override

Reset this reader.

• bool HasNextFrame () override

Check if there is a next frame.

void NextFrame () override

Go to next frame.

• std::vector< std::shared_ptr< FrameStruct > > GetCurrentFrame () override

Get current frame data.

· unsigned int GetCurrentFrameId () override

Get current frame number.

· void GoToFrame (unsigned int frame_id) override

Go to a given frame.

• unsigned int GetFps () override

Get indicative FPS in frame per second.

std::vector< FrameType > GetType () override

Get frame types.

8.22.1 Member Function Documentation

8.22.1.1 GetCurrentFrameId()

unsigned int moetsi::ssp::iPhoneReader::GetCurrentFrameId () [override], [virtual]

Get current frame number.

Returns

current frame number.

Implements moetsi::ssp::IReader.

8.22.1.2 GetFps()

```
unsigned int moetsi::ssp::iPhoneReader::GetFps ( ) [override], [virtual]
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implements moetsi::ssp::IReader.

8.22.1.3 GetType()

```
vector< FrameType > moetsi::ssp::iPhoneReader::GetType ( ) [override], [virtual]
```

Get frame types.

Returns

a vector of FrameType, listing available data types

Implements moetsi::ssp::IReader.

8.22.1.4 GoToFrame()

```
void moetsi::ssp::iPhoneReader::GoToFrame (
          unsigned int frame_id ) [override], [virtual]
```

Go to a given frame.

Parameters

```
frame

_id target frame number
```

Implements moetsi::ssp::IReader.

8.22.1.5 HasNextFrame()

```
bool moetsi::ssp::iPhoneReader::HasNextFrame ( ) [override], [virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implements moetsi::ssp::IReader.

The documentation for this class was generated from the following files:

- · iphone_reader.h
- iphone_reader.mm

8.23 moetsi::ssp::iPhoneReaderImpl Class Reference

Collaboration diagram for moetsi::ssp::iPhoneReaderImpl:

Public Attributes

- ARSession * session
- SessionDelegate * delegate
- unsigned int fps
- std::shared_ptr< FrameStruct > image
- std::shared_ptr< FrameStruct > depth
- std::shared_ptr< FrameStruct > confidence

The documentation for this class was generated from the following file:

• iphone_reader.mm

8.24 moetsi::ssp::IReader Class Reference

SSP reader interface - abstract class.

#include <ireader.h>

Inheritance diagram for moetsi::ssp::IReader:

Public Member Functions

virtual ∼IReader ()

Destructor.

virtual std::vector< std::shared_ptr< FrameStruct >> GetCurrentFrame ()=0

Get current frame data.

virtual std::vector< FrameType > GetType ()=0

Get frame types.

- std::vector< FrameType > GetFrameType ()
- virtual bool HasNextFrame ()=0

Check if there is a next frame.

• virtual void NextFrame ()=0

Go to next frame.

• virtual void Reset ()=0

Reset this reader.

• virtual void GoToFrame (unsigned int frame_id)=0

Go to a given frame.

• virtual unsigned int GetCurrentFrameId ()=0

Get current frame number.

• virtual unsigned int GetFps ()=0

Get indicative FPS in frame per second.

virtual ∼IReader ()

Destructor.

virtual std::vector< std::shared ptr< FrameStruct > > GetCurrentFrame ()=0

Get current frame data.

virtual std::vector< FrameType > GetType ()=0

Get frame types.

- std::vector< FrameType > GetFrameType ()
- virtual bool HasNextFrame ()=0

Check if there is a next frame.

virtual void NextFrame ()=0

Go to next frame.

• virtual void Reset ()=0

Reset this reader.

• virtual void GoToFrame (unsigned int frame_id)=0

Go to a given frame.

• virtual unsigned int GetCurrentFrameId ()=0

Get current frame number.

• virtual unsigned int GetFps ()=0

Get indicative FPS in frame per second.

8.24.1 Detailed Description

SSP reader interface - abstract class.

8.24.2 Member Function Documentation

8.24.2.1 GetCurrentFrameId() [1/2]

virtual unsigned int moetsi::ssp::IReader::GetCurrentFrameId () [pure virtual]

Get current frame number.

Returns

current frame number.

Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::KinectReader, moetsi::ssp::VideoFileReader, moetsi::ssp::OakdXlinkReade moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultilmageReader.

8.24.2.2 GetCurrentFrameId() [2/2]

virtual unsigned int moetsi::ssp::IReader::GetCurrentFrameId () [pure virtual]

Get current frame number.

Returns

current frame number.

Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::KinectReader, moetsi::ssp::VideoFileReader, moetsi::ssp::OakdXlinkReader, moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultilmageReader.

8.24.2.3 GetFps() [1/2]

```
\label{lem:continuous} \mbox{virtual unsigned int moetsi::ssp::IReader::GetFps ( ) } \mbox{ [pure virtual]}
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::KinectReader, moetsi::ssp::VideoFileReader, moetsi::ssp::OakdXlinkReader, moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultilmageReader.

8.24.2.4 GetFps() [2/2]

```
virtual unsigned int moetsi::ssp::IReader::GetFps ( ) [pure virtual]
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::KinectReader, moetsi::ssp::VideoFileReader, moetsi::ssp::OakdXlinkReade moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultiImageReader.

8.24.2.5 GetType() [1/2]

```
virtual std::vector<FrameType> moetsi::ssp::IReader::GetType ( ) [pure virtual]
```

Get frame types.

Returns

a vector of FrameType, listing available data types

 $Implemented\ in\ moetsi::ssp::IhoneReader,\ moetsi::ssp::VideoFileReader,\ moetsi::ssp::VideoFileReader,\ moetsi::ssp::ImageReader,\ moetsi::ssp::DummyBodyReader,\ and\ moetsi::ssp::MultiImageReader.$

8.24.2.6 GetType() [2/2]

```
virtual std::vector<FrameType> moetsi::ssp::IReader::GetType ( ) [pure virtual]
```

Get frame types.

Returns

a vector of FrameType, listing available data types

Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::OakdXlinkReader, moetsi::ssp::KinectReader, moetsi::ssp::VideoFileReader moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultilmageReader.

8.24.2.7 GoToFrame() [1/2]

Go to a given frame.

Parameters

frame←	target frame number
_id	

Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::KinectReader, moetsi::ssp::VideoFileReader, moetsi::ssp::OakdXlinkReade moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultilmageReader.

8.24.2.8 GoToFrame() [2/2]

Go to a given frame.

Parameters



Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::KinectReader, moetsi::ssp::VideoFileReader, moetsi::ssp::OakdXlinkReade moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultiImageReader.

8.24.2.9 HasNextFrame() [1/2]

```
virtual bool moetsi::ssp::IReader::HasNextFrame ( ) [pure virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::KinectReader, moetsi::ssp::OakdXlinkReader, moetsi::ssp::VideoFileReade moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultilmageReader.

8.24.2.10 HasNextFrame() [2/2]

```
virtual bool moetsi::ssp::IReader::HasNextFrame ( ) [pure virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implemented in moetsi::ssp::iPhoneReader, moetsi::ssp::KinectReader, moetsi::ssp::OakdXlinkReader, moetsi::ssp::VideoFileReade moetsi::ssp::ImageReader, moetsi::ssp::DummyBodyReader, and moetsi::ssp::MultilmageReader.

The documentation for this class was generated from the following file:

· include/readers/ireader.h

8.25 moetsi::ssp::KinectReader Class Reference

Inheritance diagram for moetsi::ssp::KinectReader:

Collaboration diagram for moetsi::ssp::KinectReader:

Public Member Functions

- KinectReader (uint8_t device_index, ExtendedAzureConfig device_config)
- virtual std::vector< std::shared_ptr< FrameStruct >> GetCurrentFrame ()

Get current frame data.

virtual std::vector< FrameType > GetType ()

Get frame types.

• virtual bool HasNextFrame ()

Check if there is a next frame.

• virtual void NextFrame ()

Go to next frame.

· virtual void Reset ()

Reset this reader.

virtual void GoToFrame (unsigned int frame_id)

Go to a given frame.

virtual unsigned int GetCurrentFrameId ()

Get current frame number.

virtual unsigned int GetFps ()

Get indicative FPS in frame per second.

8.25.1 Member Function Documentation

8.25.1.1 GetCurrentFrameId()

```
unsigned \ int \ moetsi::ssp::KinectReader::GetCurrentFrameId \ (\ ) \quad [virtual]
```

Get current frame number.

Returns

current frame number.

Implements moetsi::ssp::IReader.

8.25.1.2 GetFps()

```
unsigned int moetsi::ssp::KinectReader::GetFps ( ) [virtual]
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implements moetsi::ssp::IReader.

8.25.1.3 GetType()

```
std::vector< FrameType > moetsi::ssp::KinectReader::GetType ( ) [virtual]
```

Get frame types.

Returns

a vector of FrameType, listing available data types

Implements moetsi::ssp::IReader.

8.25.1.4 GoToFrame()

```
void moetsi::ssp::KinectReader::GoToFrame (
          unsigned int frame_id ) [virtual]
```

Go to a given frame.

Parameters

frame←	target frame number
_id	

Implements moetsi::ssp::IReader.

8.25.1.5 HasNextFrame()

```
bool moetsi::ssp::KinectReader::HasNextFrame ( ) [virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implements moetsi::ssp::IReader.

The documentation for this class was generated from the following files:

- · kinect_reader.h
- · kinect_reader.cc

8.26 moetsi::ssp::LibAvDecoder Class Reference

AV (Jpeg/Mpeg) decoder.

```
#include <libav_decoder.h>
```

Inheritance diagram for moetsi::ssp::LibAvDecoder:

Collaboration diagram for moetsi::ssp::LibAvDecoder:

Public Member Functions

• LibAvDecoder ()

constructor

∼LibAvDecoder ()

destructor

void Init (AVCodecParameters *codec_parameters)

Initialize.

• cv::Mat Decode (FrameStruct &frame_struct)

Extract an opency image from a FrameStruct.

• AVFrameSharedP DecodeFrame (FrameStruct &frame_struct)

Decode frame to libav AVFrame structure.

8.26.1 Detailed Description

AV (Jpeg/Mpeg) decoder.

8.26.2 Member Function Documentation

8.26.2.1 Decode()

Extract an opency image from a FrameStruct.

Parameters

data	FrameStruct

Returns

OpenCV matrix/image

Implements moetsi::ssp::IDecoder.

8.26.2.2 DecodeFrame()

Decode frame to libav AVFrame structure.

Parameters

```
frame_struct | SSP FrameStruct
```

Returns

Libav AVFrame structure

8.26.2.3 Init()

Initialize.

Parameters

```
codec_parameters parameters
```

The documentation for this class was generated from the following files:

- · libav_decoder.h
- libav_decoder.cc

8.27 moetsi::ssp::LibAvEncoder Class Reference

LibAV encoder for Jpeg/Mpeg.

```
#include <libav_encoder.h>
```

Inheritance diagram for moetsi::ssp::LibAvEncoder:

Collaboration diagram for moetsi::ssp::LibAvEncoder:

Public Member Functions

• LibAvEncoder (std::string codec_parameters_file, unsigned int fps)

Constructor.

LibAvEncoder (YAML::Node &_codec_parameters, unsigned int fps)

Constructor.

virtual ~LibAvEncoder ()

Destructor.

virtual void AddFrameStruct (std::shared_ptr< FrameStruct > &frame_struct)

Add a frame struct.

virtual void NextPacket ()

Go to next packet.

• virtual bool HasNextPacket ()

Check if there is a next packet.

virtual std::shared_ptr< FrameStruct > CurrentFrameEncoded ()

Get current encoded frame.

virtual std::shared_ptr< FrameStruct > CurrentFrameOriginal ()

Get current frame in its original format.

virtual std::shared_ptr< CodecParamsStruct > GetCodecParamsStruct ()

Get codec parameters.

• virtual unsigned int GetFps ()

Get FPS.

8.27.1 Detailed Description

LibAV encoder for Jpeg/Mpeg.

8.27.2 Constructor & Destructor Documentation

8.27.2.1 LibAvEncoder() [1/2]

Constructor.

Parameters

codec_parameters_file	File with codec parameters
fps	Frame per second

8.27.2.2 LibAvEncoder() [2/2]

Constructor.

Parameters

_codec_parameters	Yaml codec parameters
fps	Frame per second

8.27.3 Member Function Documentation

8.27.3.1 AddFrameStruct()

Add a frame struct.

Parameters

frame_struct | FrameStruct to add

Implements moetsi::ssp::IEncoder.

8.27.3.2 CurrentFrameEncoded()

```
std::shared_ptr< FrameStruct > moetsi::ssp::LibAvEncoder::CurrentFrameEncoded ( ) [virtual]
```

Get current encoded frame.

Returns

current encoded frame

Implements moetsi::ssp::IEncoder.

8.27.3.3 CurrentFrameOriginal()

```
std::shared_ptr< FrameStruct > moetsi::ssp::LibAvEncoder::CurrentFrameOriginal ( ) [virtual]
```

Get current frame in its original format.

Returns

current frame in its original format

Implements moetsi::ssp::IEncoder.

8.27.3.4 GetCodecParamsStruct()

```
std::shared_ptr< CodecParamsStruct > moetsi::ssp::LibAvEncoder::GetCodecParamsStruct ( )
[virtual]
```

Get codec parameters.

Returns

codec parameters

Implements moetsi::ssp::IEncoder.

8.27.3.5 GetFps()

```
unsigned int moetsi::ssp::LibAvEncoder::GetFps ( ) [virtual]
```

Get FPS.

Returns

FPS in frame per second

Implements moetsi::ssp::IEncoder.

8.27.3.6 HasNextPacket()

```
bool moetsi::ssp::LibAvEncoder::HasNextPacket ( ) [virtual]
```

Check if there is a next packet.

Returns

true if there is a next packet

Implements moetsi::ssp::IEncoder.

The documentation for this class was generated from the following files:

- · libav_encoder.h
- · libav encoder.cc

8.28 moetsi::ssp::MultilmageReader Class Reference

Inheritance diagram for moetsi::ssp::MultiImageReader:

Collaboration diagram for moetsi::ssp::MultiImageReader:

Public Member Functions

- MultilmageReader (std::vector< std::string > filename)
- virtual std::vector< std::shared_ptr< FrameStruct > > GetCurrentFrame ()

Get current frame data.

virtual std::vector< FrameType > GetType ()

Get frame types.

virtual bool HasNextFrame ()

Check if there is a next frame.

virtual void NextFrame ()

Go to next frame.

virtual void Reset ()

Reset this reader.

virtual void GoToFrame (unsigned int frame_id)

Go to a given frame.

• virtual unsigned int GetCurrentFrameId ()

Get current frame number.

· virtual unsigned int GetFps ()

Get indicative FPS in frame per second.

8.28.1 Member Function Documentation

8.28.1.1 GetCurrentFrameId()

```
unsigned int moetsi::ssp::MultiImageReader::GetCurrentFrameId ( ) [virtual]
```

Get current frame number.

Returns

current frame number.

Implements moetsi::ssp::IReader.

8.28.1.2 GetFps()

```
unsigned int moetsi::ssp::MultiImageReader::GetFps ( ) [virtual]
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implements moetsi::ssp::IReader.

8.28.1.3 GetType()

```
std::vector< FrameType > moetsi::ssp::MultiImageReader::GetType ( ) [virtual]
```

Get frame types.

Returns

a vector of FrameType, listing available data types

Implements moetsi::ssp::IReader.

8.28.1.4 GoToFrame()

Go to a given frame.

Parameters

frame←	target frame number
_id	

Implements moetsi::ssp::IReader.

8.28.1.5 HasNextFrame()

```
bool moetsi::ssp::MultiImageReader::HasNextFrame () [virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implements moetsi::ssp::IReader.

The documentation for this class was generated from the following files:

- multi_image_reader.h
- multi_image_reader.cc

8.29 moetsi::ssp::NetworkReader Class Reference

Network reader.

```
#include <network_reader.h>
```

Public Member Functions

- · NetworkReader (int port)
- · void init ()
- bool HasNextFrame ()
- void NextFrame ()
- std::vector< FrameStruct > GetCurrentFrame ()
- unsigned int GetCurrentFrameId ()

8.29.1 Detailed Description

Network reader.

The documentation for this class was generated from the following files:

- network_reader.h
- network_reader.cc

8.30 moetsi::ssp::NullEncoder Class Reference

```
Nullencoder Straight pipe encoder.
```

```
#include <null_encoder.h>
```

Inheritance diagram for moetsi::ssp::NullEncoder:

Collaboration diagram for moetsi::ssp::NullEncoder:

Public Member Functions

NullEncoder (int _fps)

Constructor.

virtual ∼NullEncoder ()

Destructor.

virtual void AddFrameStruct (std::shared_ptr< FrameStruct > &frame_struct)

Add a frame struct.

virtual void NextPacket ()

Go to next packet.

• virtual bool HasNextPacket ()

Check if there is a next packet.

virtual std::shared_ptr< FrameStruct > CurrentFrameEncoded ()

Get current encoded frame.

 $\bullet \ \ virtual \ std::shared_ptr < FrameStruct > CurrentFrameOriginal \ () \\$

Get current frame in its original format.

virtual std::shared_ptr< CodecParamsStruct > GetCodecParamsStruct ()

Get codec parameters.

• virtual unsigned int GetFps ()

Get FPS.

8.30.1 Detailed Description

Nullencoder Straight pipe encoder.

8.30.2 Constructor & Destructor Documentation

8.30.2.1 NullEncoder()

Constructor.

Parameters

_fps | frame per seconds

8.30.3 Member Function Documentation

8.30.3.1 AddFrameStruct()

Add a frame struct.

Parameters

frame_struct | FrameStruct to add

Implements moetsi::ssp::IEncoder.

8.30.3.2 CurrentFrameEncoded()

```
std::shared_ptr< FrameStruct > moetsi::ssp::NullEncoder::CurrentFrameEncoded ( ) [virtual]
```

Get current encoded frame.

Returns

current encoded frame

Implements moetsi::ssp::IEncoder.

8.30.3.3 CurrentFrameOriginal()

```
std::shared_ptr< FrameStruct > moetsi::ssp::NullEncoder::CurrentFrameOriginal ( ) [virtual]
```

Get current frame in its original format.

Returns

current frame in its original format

Implements moetsi::ssp::IEncoder.

8.30.3.4 GetCodecParamsStruct()

8.30.3.5 GetFps()

```
unsigned int moetsi::ssp::NullEncoder::GetFps ( ) [virtual]
```

Get FPS.

Returns

FPS in frame per second

Implements moetsi::ssp::IEncoder.

8.30.3.6 HasNextPacket()

```
bool moetsi::ssp::NullEncoder::HasNextPacket ( ) [virtual]
```

Check if there is a next packet.

Returns

true if there is a next packet

Implements moetsi::ssp::IEncoder.

The documentation for this class was generated from the following files:

- null_encoder.h
- null_encoder.cc

8.31 moetsi::ssp::NvDecoder Class Reference

NvPipe decoder.

```
#include <nv_decoder.h>
```

Inheritance diagram for moetsi::ssp::NvDecoder:

Collaboration diagram for moetsi::ssp::NvDecoder:

Public Member Functions

• NvDecoder ()

Constructor.

∼NvDecoder ()

Destructor.

void Init (std::vector< unsigned char > parameter_data)

• cv::Mat Decode (FrameStruct &frame)

Extract an opency image from a FrameStruct.

8.31.1 Detailed Description

NvPipe decoder.

8.31.2 Member Function Documentation

8.31.2.1 Decode()

Extract an opency image from a FrameStruct.

Parameters

data	FrameStruct

Returns

OpenCV matrix/image

Implements moetsi::ssp::IDecoder.

8.31.2.2 Init()

parameter data parameters

The documentation for this class was generated from the following files:

- · nv decoder.h
- nv_decoder.cc

8.32 moetsi::ssp::NvEncoder Class Reference

```
NvPipe encoder.
```

```
#include <nv_encoder.h>
```

Inheritance diagram for moetsi::ssp::NvEncoder:

Collaboration diagram for moetsi::ssp::NvEncoder:

Public Member Functions

• NvEncoder (YAML::Node _codec_parameters, unsigned int _fps)

Constructor.

∼NvEncoder ()

Destructor.

• virtual void AddFrameStruct (std::shared_ptr< FrameStruct > &frame_struct)=0

Add a frame struct.

virtual void NextPacket ()

Go to next packet.

virtual bool HasNextPacket ()

Check if there is a next packet.

virtual std::shared_ptr< FrameStruct > CurrentFrameEncoded ()

Get current encoded frame.

virtual std::shared ptr< FrameStruct > CurrentFrameOriginal ()

Get current frame in its original format.

virtual std::shared_ptr< CodecParamsStruct > GetCodecParamsStruct ()

Get codec parameters.

virtual unsigned int GetFps ()

Get FPS.

8.32.1 Detailed Description

NvPipe encoder.

8.32.2 Constructor & Destructor Documentation

8.32.2.1 NvEncoder()

Constructor.

Parameters

_codec_parameters	Yaml parameters
_fps	Frame per second

8.32.3 Member Function Documentation

8.32.3.1 AddFrameStruct()

Add a frame struct.

Parameters

```
frame_struct | FrameStruct to add
```

Implements moetsi::ssp::IEncoder.

8.32.3.2 CurrentFrameEncoded()

```
std::shared_ptr< FrameStruct > moetsi::ssp::NvEncoder::CurrentFrameEncoded ( ) [virtual]
```

Get current encoded frame.

Returns

current encoded frame

Implements moetsi::ssp::IEncoder.

8.32.3.3 CurrentFrameOriginal()

```
std::shared_ptr< FrameStruct > moetsi::ssp::NvEncoder::CurrentFrameOriginal ( ) [virtual]
```

Get current frame in its original format.

Returns

current frame in its original format

Implements moetsi::ssp::IEncoder.

8.32.3.4 GetCodecParamsStruct()

```
std::shared_ptr< CodecParamsStruct > moetsi::ssp::NvEncoder::GetCodecParamsStruct ( ) [virtual]
```

Get codec parameters.

Returns

codec parameters

Implements moetsi::ssp::IEncoder.

8.32.3.5 GetFps()

```
unsigned\ int\ moetsi::ssp::NvEncoder::GetFps\ (\ )\quad [virtual]
```

Get FPS.

Returns

FPS in frame per second

Implements moetsi::ssp::IEncoder.

8.32.3.6 HasNextPacket()

```
bool moetsi::ssp::NvEncoder::HasNextPacket ( ) [virtual]
```

Check if there is a next packet.

Returns

true if there is a next packet

Implements moetsi::ssp::IEncoder.

The documentation for this class was generated from the following files:

- · nv encoder.h
- nv_encoder.cc

8.33 moetsi::ssp::NVPipeDeleter Struct Reference

Public Member Functions

• void operator() (NvPipe *ptr) const

The documentation for this struct was generated from the following file:

nvpipe_types.h

8.34 moetsi::ssp::OakdXlinkReader Class Reference

Inheritance diagram for moetsi::ssp::OakdXlinkReader:

Collaboration diagram for moetsi::ssp::OakdXlinkReader:

Public Member Functions

- · OakdXlinkReader (YAML::Node config)
- · void Reset ()

Reset this reader.

• bool HasNextFrame ()

Check if there is a next frame.

• void NextFrame ()

Go to next frame.

std::vector< std::shared_ptr< FrameStruct >> GetCurrentFrame ()

Get current frame data.

• unsigned int GetCurrentFrameId ()

Get current frame number.

• virtual void GoToFrame (unsigned int frame_id)

Go to a given frame.

• unsigned int GetFps ()

Get indicative FPS in frame per second.

std::vector< FrameType > GetType ()

Get frame types.

8.34.1 Member Function Documentation

8.34.1.1 GetCurrentFrameId()

```
unsigned int moetsi::ssp::OakdXlinkReader::GetCurrentFrameId ( ) [virtual]
```

Get current frame number.

Returns

current frame number.

Implements moetsi::ssp::IReader.

8.34.1.2 GetFps()

```
unsigned int moetsi::ssp::OakdXlinkReader::GetFps ( ) [virtual]
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implements moetsi::ssp::IReader.

8.34.1.3 GetType()

```
std::vector< FrameType > moetsi::ssp::OakdXlinkReader::GetType ( ) [virtual]
```

Get frame types.

Returns

a vector of FrameType, listing available data types

Implements moetsi::ssp::IReader.

8.34.1.4 GoToFrame()

Go to a given frame.

Parameters

frame←	target frame number
_id	

Implements moetsi::ssp::IReader.

8.34.1.5 HasNextFrame()

```
bool moetsi::ssp::OakdXlinkReader::HasNextFrame ( ) [virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implements moetsi::ssp::IReader.

The documentation for this class was generated from the following files:

- · oakd_xlink_reader.h
- · oakd_xlink_reader.cc

8.35 moetsi::ssp::object_human_t Struct Reference

Public Member Functions

- void ntoh ()
- void hton ()
- template < class Archive > void serialize (Archive & ar)
- · void ntoh ()
- · void hton ()
- template < class Archive > void serialize (Archive & ar)

Public Attributes

- int32 t ld
- float pelvis_x
- float pelvis y
- float pelvis z
- float pelvis_QX
- float pelvis_QY
- float pelvis_QZ
- · float pelvis_QW
- uint8_t pelvis_conf
- float spine_navel_x
- float spine_navel_y
- float $spine_navel_z$
- float spine_navel_QX
- float spine_navel_QY
- float spine_navel_QZ
- float spine_navel_QW
- uint8_t spine_navel_conf
- float spine_chest_x
- float spine_chest_y
- float spine_chest_z
- float spine_chest_QX
- float spine_chest_QY
- float spine_chest_QZ
- float spine_chest_QW
- uint8_t spine_chest_conf
- · float neck x
- · float neck y
- float neck_z
- float neck_QX
- · float neck_QY
- float neck_QZ
- float neck_QW
- uint8_t neck_conffloat clavicle_left_x
- float clavicle_left_y
- float clavicle_left_z
- float clavicle_left_QX
- float clavicle_left_QY
- float clavicle_left_QZ
- float clavicle_left_QW
- uint8 t clavicle left conf
- float shoulder_left_x
- float shoulder_left_y
- float shoulder_left_z
- float shoulder_left_QX
- float shoulder_left_QY
- float shoulder_left_QZ
- float shoulder_left_QW
- uint8_t shoulder_left_conf
- float elbow_left_x
- float elbow_left_y
- float elbow_left_z
- float elbow_left_QX

- float elbow_left_QY
- float elbow_left_QZ
- float elbow_left_QW
- uint8_t elbow_left_conf
- · float wrist left x
- · float wrist_left_y
- · float wrist left z
- float wrist_left_QX
- · float wrist_left_QY
- float wrist left QZ
- · float wrist_left_QW
- uint8 t wrist left conf
- float hand_left_x
- float hand left y
- float hand_left_z
- · float hand left QX
- · float hand left QY
- · float hand left QZ
- float hand_left_QW
- uint8_t hand_left_conf
- float handtip_left_x
- · float handtip_left_y
- float handtip left z
- float handtip_left_QX
- · float handtip_left_QY
- float handtip_left_QZ
- · float handtip_left_QW
- uint8_t handtip_left_conf
- float thumb_left_x
- float thumb_left_y
- float thumb_left_z
- float thumb left QX
- float thumb_left_QY
- float thumb_left_QZ
- float thumb_left_QW
- uint8_t thumb_left_conf
- float clavicle_right_x
- float clavicle_right_y
- float clavicle_right_zfloat clavicle_right_QX
- · float clavicle right QY
- float clavicle_right_QZ
- · float clavicle_right_QW
- uint8_t clavicle_right_conf
- float shoulder_right_x
- float shoulder_right_y
- float shoulder_right_z
- float shoulder_right_QX
- float shoulder_right_QY
- float shoulder_right_QZfloat shoulder_right_QW
- uint8_t shoulder_right_conf
- float elbow_right_x
- float elbow_right_y
- float elbow_right_z

- · float elbow_right_QX
- · float elbow_right_QY
- float elbow_right_QZ
- · float elbow_right_QW
- · uint8 telbow right conf
- float wrist_right_x
- float wrist_right_y
- float wrist_right_z
- float wrist_right_QX
- · float wrist right QY
- float wrist_right_QZ
- float wrist right QW
- uint8_t wrist_right_conf
- float hand right x
- · float hand_right_y
- float hand right z
- · float hand right QX
- float hand_right_QY
- float hand_right_QZ
- float hand_right_QW
- uint8_t hand_right_conf
- float handtip_right_x
- float handtip_right_y
- float handtip_right_z
- float handtip_right_QX
- float handtip_right_QY
- float handtip_right_QZ
- float handtip_right_QW
- uint8_t handtip_right_conf
- float thumb_right_x
- float thumb_right_y
- float thumb right z
- float thumb_right_QX
- · float thumb_right_QY
- float thumb_right_QZ
- float thumb_right_QW
- uint8_t thumb_right_conf
- float hip_left_x
- float hip_left_y
- float hip_left_z
- float hip left QX
- float hip_left_QY
- float hip_left_QZ
- float hip_left_QW
- uint8_t hip_left_conf
- float knee left v
- float knee_left_x
- float knee_left_y
- float knee_left_z
- float knee_left_QX
- float knee_left_QYfloat knee_left_QZ
- · float knee left QW
- uint8_t knee_left_conf
- float ankle_left_x
- · float ankle_left_y

- float ankle_left_z
- float ankle_left_QX
- float ankle_left_QY
- float ankle_left_QZ
- · float ankle left QW
- uint8_t ankle_left_conf
- float foot_left_x
- float foot_left_y
- float foot_left_z
- float foot left QX
- float foot_left_QY
- float foot left QZ
- float foot_left_QW
- uint8_t foot_left_conf
- float hip_right_x
- float hip_right_y
- float hip_right_z
- float hip_right_QX
- float hip_right_QY
- float hip_right_QZ
- · float hip_right_QW
- uint8_t hip_right_conf
- float knee_right_x
- · float knee_right_y
- float knee_right_z
- float knee_right_QX
- float knee_right_QY
- float knee_right_QZ
- float knee_right_QW
- uint8_t knee_right_conf
- float ankle_right_x
- float ankle_right_y
- float ankle_right_z
- float ankle_right_QX
- float ankle_right_QY
- float ankle_right_QZ
- float ankle_right_QW
- uint8_t ankle_right_conf
- float foot_right_x
- float foot_right_y
- float foot_right_z
- float foot_right_QX
- float foot_right_QY
- float foot_right_QZ
- float foot_right_QW
- uint8_t foot_right_conf
- float head_x
- · float head_y
- float head_z
- float head_QX
- float head QY
- float head_QZ
- float head_QW
- uint8_t head_conffloat nose_x

- · float nose_y
- float nose_z
- float nose_QX
- float nose_QY
- float nose_QZ
- float nose_QW
- uint8_t nose_conf
- · float eye_left_x
- · float eye_left_y
- float eye_left_z
- float eye_left_QX
- float eye_left_QY
- float eye_left_QZ
- · float eye_left_QW
- uint8_t eye_left_conf
- float ear_left_x
- float ear_left_y
- float ear_left_z
- float ear_left_QX
- float ear_left_QY
- float ear_left_QZ
- float ear_left_QW
- uint8_t ear_left_conf
- float eye_right_x
- float eye_right_y
- float eye_right_z
- float eye_right_QX
- float eye_right_QY
- float eye_right_QZ
- float eye_right_QW
- uint8_t eye_right_conf
- float ear_right_x
- float ear_right_y
- float ear_right_z
- float ear_right_QX
- float ear_right_QY
- float ear_right_QZ
- · float ear_right_QW
- uint8_t ear_right_conf

The documentation for this struct was generated from the following file:

• include/structs/body_struct.h

8.36 SessionDelegate Class Reference

Inheritance diagram for SessionDelegate:

Collaboration diagram for SessionDelegate:

Public Attributes

- · semaphore_t _semaphore
- pthread_mutex_t _mutex
- CVPixelBufferRef _pixelBuffer
- CVPixelBufferRef _depthBuffer
- CVPixelBufferRef confidenceBuffer
- unsigned long _timestamp

The documentation for this class was generated from the following file:

· iphone_reader.mm

8.37 moetsi::ssp::SwsContextDeleter Struct Reference

Public Member Functions

• void operator() (SwsContext *ptr) const

The documentation for this struct was generated from the following file:

· libav_types.h

8.38 UnityXRNativeSessionPtr Struct Reference

Public Attributes

- int version
- void * session

The documentation for this struct was generated from the following file:

• iphone_reader.mm

8.39 moetsi::ssp::VideoFileReader Class Reference

Inheritance diagram for moetsi::ssp::VideoFileReader:

Collaboration diagram for moetsi::ssp::VideoFileReader:

Public Member Functions

- VideoFileReader (std::string &filename)
- VideoFileReader (std::string &filename, std::vector< unsigned int > &video_stream_indexes)
- virtual std::vector< std::shared_ptr< FrameStruct >> GetCurrentFrame ()

Get current frame data.

virtual std::vector< FrameType > GetType ()

Get frame types.

virtual bool HasNextFrame ()

Check if there is a next frame.

virtual void NextFrame ()

Go to next frame.

· virtual void Reset ()

Reset this reader.

• virtual void GoToFrame (unsigned int frame id)

Go to a given frame.

virtual unsigned int GetCurrentFrameId ()

Get current frame number.

• virtual unsigned int GetFps ()

Get indicative FPS in frame per second.

8.39.1 Member Function Documentation

8.39.1.1 GetCurrentFrameId()

```
unsigned int moetsi::ssp::VideoFileReader::GetCurrentFrameId ( ) [virtual]
```

Get current frame number.

Returns

current frame number.

Implements moetsi::ssp::IReader.

8.39.1.2 GetFps()

```
unsigned int moetsi::ssp::VideoFileReader::GetFps ( ) [virtual]
```

Get indicative FPS in frame per second.

Returns

the FPS number

Implements moetsi::ssp::IReader.

8.39.1.3 GetType()

```
std::vector< FrameType > moetsi::ssp::VideoFileReader::GetType ( ) [virtual]
```

Get frame types.

Returns


a vector of FrameType, listing available data types

Implements moetsi::ssp::IReader.

8.39.1.4 GoToFrame()

Go to a given frame.

Parameters



Implements moetsi::ssp::IReader.

8.39.1.5 HasNextFrame()

```
bool moetsi::ssp::VideoFileReader::HasNextFrame ( ) [virtual]
```

Check if there is a next frame.

Returns

true if there is a next frame

Implements moetsi::ssp::IReader.

The documentation for this class was generated from the following files:

- · video_file_reader.h
- video_file_reader.cc

8.40 moetsi::ssp::ZDepthDecoder Class Reference

ZDepthDecoder ZDepth format decoder.

```
#include <zdepth_decoder.h>
```

Inheritance diagram for moetsi::ssp::ZDepthDecoder:

Collaboration diagram for moetsi::ssp::ZDepthDecoder:

Public Member Functions

• ZDepthDecoder ()

Constructor.

~ZDepthDecoder ()

Destructor.

void Init (std::vector< unsigned char > parameter_data)

• cv::Mat Decode (FrameStruct &frame)

Extract an opency image from a FrameStruct.

8.40.1 Detailed Description

ZDepthDecoder ZDepth format decoder.

8.40.2 Member Function Documentation

8.40.2.1 Decode()

Extract an opency image from a FrameStruct.

Parameters

data	FrameStruct

Returns

OpenCV matrix/image

Implements moetsi::ssp::IDecoder.

8.40.2.2 Init()

The documentation for this class was generated from the following files:

- · zdepth_decoder.h
- · zdepth_decoder.cc

8.41 moetsi::ssp::ZDepthEncoder Class Reference

```
ZDepth encoder.
```

```
#include <zdepth_encoder.h>
```

Inheritance diagram for moetsi::ssp::ZDepthEncoder:

Collaboration diagram for moetsi::ssp::ZDepthEncoder:

Public Member Functions

```
    ZDepthEncoder (YAML::Node &_codec_parameters, int _fps)
```

Constructor.

• ~ZDepthEncoder ()

Destructor.

virtual void AddFrameStruct (std::shared_ptr< FrameStruct > &frame_struct)

Add a frame struct.

virtual void NextPacket ()

Go to next packet.

virtual bool HasNextPacket ()

Check if there is a next packet.

virtual std::shared_ptr< FrameStruct > CurrentFrameEncoded ()

Get current encoded frame.

virtual std::shared ptr< FrameStruct > CurrentFrameOriginal ()

Get current frame in its original format.

virtual std::shared_ptr< CodecParamsStruct > GetCodecParamsStruct ()

Get codec parameters.

• virtual unsigned int GetFps ()

Get FPS.

8.41.1 Detailed Description

ZDepth encoder.

8.41.2 Constructor & Destructor Documentation

8.41.2.1 ZDepthEncoder()

Constructor.

Parameters

_codec_parameters	
_fps	Frame per second

8.41.3 Member Function Documentation

8.41.3.1 AddFrameStruct()

Add a frame struct.

Parameters

```
frame_struct | FrameStruct to add
```

Implements moetsi::ssp::IEncoder.

8.41.3.2 CurrentFrameEncoded()

```
std::shared_ptr< FrameStruct > moetsi::ssp::ZDepthEncoder::CurrentFrameEncoded ( ) [virtual]
```

Get current encoded frame.

Returns

current encoded frame

Implements moetsi::ssp::IEncoder.

8.41.3.3 CurrentFrameOriginal()

```
\verb|std::shared_ptr<|FrameStruct|> moetsi::ssp::ZDepthEncoder::CurrentFrameOriginal () | [virtual]|
```

Get current frame in its original format.

Returns

current frame in its original format

Implements moetsi::ssp::IEncoder.

8.41.3.4 GetCodecParamsStruct()

```
std::shared_ptr< CodecParamsStruct > moetsi::ssp::ZDepthEncoder::GetCodecParamsStruct ( )
[virtual]
```

Get codec parameters.

Returns

codec parameters

Implements moetsi::ssp::IEncoder.

8.41.3.5 GetFps()

```
unsigned int moetsi::ssp::ZDepthEncoder::GetFps ( ) [virtual]
```

Get FPS.

Returns

FPS in frame per second

Implements moetsi::ssp::IEncoder.

8.41.3.6 HasNextPacket()

```
bool moetsi::ssp::ZDepthEncoder::HasNextPacket ( ) [virtual]
```

Check if there is a next packet.

Returns

true if there is a next packet

Implements moetsi::ssp::IEncoder.

The documentation for this class was generated from the following files:

- zdepth_encoder.h
- · zdepth_encoder.cc

Chapter 9

File Documentation

9.1 body_struct.h File Reference

body struct definition. "Body" frame data type.

```
#include <iterator>
#include <vector>
#include <cstdint>
#include <cereal/archives/binary.hpp>
#include <cereal/cereal.hpp>
#include <cereal/types/base_class.hpp>
#include <cereal/types/memory.hpp>
#include <cereal/types/vector.hpp>
Include dependency graph for include/structs/body struct.h:
```

9.2 body_struct.h File Reference

body struct definition. "Body" frame data type.

```
#include <iterator>
#include <vector>
#include <cstdint>
#include <cereal/archives/binary.hpp>
#include <cereal/cereal.hpp>
#include <cereal/types/base_class.hpp>
#include <cereal/types/memory.hpp>
#include <cereal/types/vector.hpp>
```

Include dependency graph for structs/body_struct.h: This graph shows which files directly or indirectly include this file:

Classes

• struct moetsi::ssp::object_human_t

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

Functions

- void moetsi::ssp::inplace_hton (uint32_t &h)
- void moetsi::ssp::inplace_hton (int32_t &h)
- void moetsi::ssp::inplace_ntoh (uint32 t &h)
- void moetsi::ssp::inplace_ntoh (int32_t &h)

9.2.1 Detailed Description

body struct definition. "Body" frame data type.

9.3 dummy body reader.cc File Reference

Dumy Body Reader.

```
#include "dummy_body_reader.h"
Include dependency graph for dummy_body_reader.cc:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

9.3.1 Detailed Description

Dumy Body Reader.

9.4 dummy_body_reader.h File Reference

Dumy Body Reader.

```
#include <atomic>
#include <fstream>
#include <iostream>
#include <vector>
#include "../utils/logger.h"
#include "../structs/frame_struct.h"
#include "../utils/image_decoder.h"
#include "../structs/body_struct.h"
#include "../utils/video_utils.h"
#include "ireader.h"
```

Include dependency graph for dummy_body_reader.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::DummyBodyReader

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.4.1 Detailed Description

Dumy Body Reader.

9.5 frame_struct.h File Reference

Frame struct definition. "Universal" frame data type.

```
#include <vector>
#include <iterator>
#include <cereal/archives/binary.hpp>
#include <cereal/cereal.hpp>
#include <cereal/types/base_class.hpp>
#include <cereal/types/memory.hpp>
#include <cereal/types/vector.hpp>
#include "../utils/utils.h"
```

Include dependency graph for include/structs/frame_struct.h: This graph shows which files directly or indirectly include this file:

Classes

• struct moetsi::ssp::CameraCalibrationStruct

Camera calibration data.

• struct moetsi::ssp::CodecParamsStruct

Codec parameters.

• struct moetsi::ssp::FrameStruct

Frame struct: SSP frame.

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Enumerations

```
    enum moetsi::ssp::CameraCalibrationType: short { moetsi::ssp::CameraCalibrationType::CameraCalibrationTypeDefault

    = -1, moetsi::ssp::CameraCalibrationType::CameraCalibrationTypeKinect = 0, moetsi::ssp::CameraCalibrationType::CameraCal
    = -1, moetsi::ssp::CameraCalibrationType::CameraCalibrationTypeKinect = 0 }
           Camera calibration type i.e. the kind of sensor calibration data present.
enum moetsi::ssp::FrameType : short {
    moetsi::ssp::FrameType::FrameTypeColor = 0, moetsi::ssp::FrameTypeDepth = 1, moetsi::ssp::FrameType::FrameType
    = 2, moetsi::ssp::FrameType::FrameTypeConfidence = 3,
    moetsi::ssp::FrameType::FrameTypeHumanPose = 4, moetsi::ssp::FrameType::FrameTypeColor = 0,
    moetsi::ssp::FrameType::FrameTypeDepth = 1, moetsi::ssp::FrameType::FrameTypeIR = 2,
    moetsi::ssp::FrameType::FrameTypeConfidence = 3, moetsi::ssp::FrameType::FrameTypeHumanPose = 4}
           Frame type: color, depth, IR as well as confidence matrices.
enum moetsi::ssp::CodecParamsType : short {
    moetsi::ssp::CodecParamsType::CodecParamsTypeDefault = -1, moetsi::ssp::CodecParamsType::CodecParamsTypeAv
    = 0, moetsi::ssp::CodecParamsType::CodecParamsTypeNvPipe = 1, moetsi::ssp::CodecParamsType::CodecParamsTypeZDept
    = 2,
    moetsi::ssp::CodecParamsType::CodecParamsTypeDefault = -1, moetsi::ssp::CodecParamsType::CodecParamsTypeAv
    = 0, moetsi::ssp::CodecParamsType::CodecParamsTypeNvPipe = 1, moetsi::ssp::CodecParamsType::CodecParamsTypeZDept
           Codec parameters type.

    enum moetsi::ssp::SSPMessageType: short { moetsi::ssp::SSPMessageType::MessageTypeDefault = 0,

    moetsi::ssp::SSPMessageType::MessageTypeDefault = 0 }
           SSP Message type.
enum moetsi::ssp::FrameDataType : short {
    moetsi::ssp::FrameDataType::FrameDataTypelmageFrame = 0, moetsi::ssp::FrameDataType::FrameDataTypeLibavPackets
    = 1, moetsi::ssp::FrameDataType::FrameDataTypeRawRGBA = 2, moetsi::ssp::FrameDataType::FrameDataTypeGRAY16LE
    moetsi::ssp::FrameDataType::FrameDataTypeRaw32FC1
    = 5, moetsi::ssp::FrameDataType::FrameDataTypeYUV = 6, moetsi::ssp::FrameDataType::FrameDataTypeU8C1
    = 7.
    FrameDataTypeObjectHumanData = 8, moetsi::ssp::FrameDataType::FrameDataTypeImageFrame = 0,
    moetsi::ssp::FrameDataType::FrameDataTypeHibavPackets = 1, moetsi::ssp::FrameDataType::FrameDataTypeRawRGBA
    moetsi::ssp::FrameDataType::FrameDataTypeGRAY16LE = 3, moetsi::ssp::FrameDataType::FrameDataTypeNvPipePacket
    = 4, moetsi::ssp::FrameDataType::FrameDataTypeRaw32FC1 = 5, moetsi::ssp::FrameDataType::FrameDataTypeYUV
    moetsi::ssp::FrameDataType::FrameDataTypeU8C1 = 7, moetsi::ssp::FrameDataType::FrameDataTypeObjectHumanData
    = 8, moetsi::ssp::FrameDataType::FrameDataTypeCvMat = 9 }
           Frame data type. This is a precise binary format information.
enum moetsi::ssp::SensorType : short {
    moetsi::ssp::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::Senso
    = 2, moetsi::ssp::SensorType::SensorTypeConfidence = 3,
    moetsi::ssp::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::SensorType::Sen
    = 2, moetsi::ssp::SensorType::SensorTypeConfidence = 3 }
           Sensor type: color or depth.
```

9.5.1 Detailed Description

Frame struct definition. "Universal" frame data type.

9.6 frame struct.h File Reference

Frame struct definition. "Universal" frame data type.

```
#include <vector>
#include <iterator>
#include <cereal/archives/binary.hpp>
#include <cereal/cereal.hpp>
#include <cereal/types/base_class.hpp>
#include <cereal/types/memory.hpp>
#include <cereal/types/vector.hpp>
#include "../utils/utils.h"
```

Include dependency graph for structs/frame_struct.h: This graph shows which files directly or indirectly include this file:

Classes

· struct moetsi::ssp::CameraCalibrationStruct

Camera calibration data.

struct moetsi::ssp::CodecParamsStruct

Codec parameters.

struct moetsi::ssp::FrameStruct

Frame struct: SSP frame.

Namespaces

moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Enumerations

```
    enum moetsi::ssp::CameraCalibrationType: short { moetsi::ssp::CameraCalibrationType::CameraCalibrationTypeDefault

              = -1, moetsi::ssp::CameraCalibrationType::CameraCalibrationTypeKinect = 0, moetsi::ssp::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::CameraCalibrationType::Cam
              = -1, moetsi::ssp::CameraCalibrationType::CameraCalibrationTypeKinect = 0 }
```

Camera calibration type i.e. the kind of sensor calibration data present.

```
enum moetsi::ssp::FrameType : short {
 moetsi::ssp::FrameType::FrameTypeColor = 0, moetsi::ssp::FrameType::FrameTypeDepth = 1, moetsi::ssp::FrameType::FrameType:
 = 2, moetsi::ssp::FrameType::FrameTypeConfidence = 3,
 moetsi::ssp::FrameType::FrameTypeHumanPose = 4, moetsi::ssp::FrameType::FrameTypeColor = 0,
 moetsi::ssp::FrameType::FrameTypeDepth = 1, moetsi::ssp::FrameType::FrameTypeIR = 2,
 moetsi::ssp::FrameType::FrameTypeConfidence = 3, moetsi::ssp::FrameType::FrameTypeHumanPose = 4}
```

Frame type: color, depth, IR as well as confidence matrices.

```
enum moetsi::ssp::CodecParamsType : short {
 moetsi::ssp::CodecParamsType::CodecParamsTypeDefault = -1, moetsi::ssp::CodecParamsType::CodecParamsTypeAv
 = 0, moetsi::ssp::CodecParamsType::CodecParamsTypeNvPipe = 1, moetsi::ssp::CodecParamsType::CodecParamsTypeZDept
 moetsi::ssp::CodecParamsType::CodecParamsTypeDefault = -1, moetsi::ssp::CodecParamsType::CodecParamsTypeAv
 = 0, moetsi::ssp::CodecParamsType::CodecParamsTypeNvPipe = 1, moetsi::ssp::CodecParamsType::CodecParamsTypeZDept
```

= 2 }

Codec parameters type.

 enum moetsi::ssp::SSPMessageType : short { moetsi::ssp::SSPMessageType::MessageTypeDefault = 0, moetsi::ssp::SSPMessageType::MessageTypeDefault = 0 }

SSP Message type.

enum moetsi::ssp::FrameDataType : short {

moetsi::ssp::FrameDataType::FrameDataTypeImageFrame = 0, moetsi::ssp::FrameDataType::FrameDataTypeLibavPackets = 1, moetsi::ssp::FrameDataType::FrameDataTypeGRAY16LE = 3.

moetsi::ssp::FrameDataType::FrameDataTypeNvPipePacket = 4, moetsi::ssp::FrameDataType::FrameDataTypeRaw32FC1 = 5, moetsi::ssp::FrameDataType::FrameDataTypeU8C1 = 7

FrameDataTypeObjectHumanData = 8, moetsi::ssp::FrameDataType::FrameDataTypeImageFrame = 0, moetsi::ssp::FrameDataType::FrameDataType::FrameDataType::FrameDataTypeRawRGBA = 2.

moetsi::ssp::FrameDataType::FrameDataTypeGRAY16LE = 3, moetsi::ssp::FrameDataType::FrameDataTypeNvPipePacket = 4, moetsi::ssp::FrameDataType::FrameDataTypeYUV = 6,

moetsi::ssp::FrameDataType::FrameDataTypeU8C1 = 7, moetsi::ssp::FrameDataType::FrameDataTypeObjectHumanData = 8, moetsi::ssp::FrameDataType::FrameDataTypeCvMat = 9 }

Frame data type. This is a precise binary format information.

enum moetsi::ssp::SensorType : short {
 moetsi::ssp::SensorType::SensorTypeColor = 0, moetsi::ssp::SensorType::SensorTypeDepth = 1, moetsi::ssp::SensorType::SensorType::SensorTypeDepth = 1, moetsi::ssp::SensorType::SensorType::SensorTypeDepth = 1, moetsi::ssp::SensorType::SensorType::SensorTypeDepth = 1, moetsi::ssp::SensorType::SensorTypeDepth = 1, moetsi::ssp::SensorType::SensorTypeDepth = 1, moetsi::ssp::SensorType::SensorTypeDepth = 1, moetsi::ssp::SensorType::SensorTypeDepth = 1, moetsi::ssp::SensorTypeDepth = 1, moetsi

= 2, moetsi::ssp::SensorType::SensorTypeConfidence = 3,

 $moetsi::ssp::SensorType::SensorTypeColor = 0, moetsi::ssp::SensorTypeDepth = 1, moetsi::ssp::SensorType::SensorType::SensorType::SensorTypeConfidence = 3 \}$

Sensor type: color or depth.

9.6.1 Detailed Description

Frame struct definition. "Universal" frame data type.

9.7 idecoder.cc File Reference

IDecoder factory.

#include "idecoder.h"
Include dependency graph for idecoder.cc:

Namespaces

moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Functions

std::shared_ptr< IDecoder > moetsi::ssp::IDecoderFactory (const std::string &config)
 IDecoder factory.

9.7.1 Detailed Description

IDecoder factory.

9.8 idecoder.h File Reference

Frame decoder interface.

```
#include "../structs/frame_struct.h"
#include <opencv2/core/mat.hpp>
```

Include dependency graph for decoders/idecoder.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::IDecoder

IDecoder abstract decoder interface.

Namespaces

moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Functions

std::shared_ptr< IDecoder > moetsi::ssp::IDecoderFactory (const std::string &config)
 IDecoder factory.

9.8.1 Detailed Description

Frame decoder interface.

9.9 idecoder.h File Reference

Frame decoder interface.

```
#include "../structs/frame_struct.h"
#include <opencv2/core/mat.hpp>
```

Include dependency graph for include/decoders/idecoder.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::IDecoder

IDecoder abstract decoder interface.

Namespaces

moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

Functions

std::shared_ptr< IDecoder > moetsi::ssp::IDecoderFactory (const std::string &config)
 IDecoder factory.

9.9.1 Detailed Description

Frame decoder interface.

9.10 iencoder.cc File Reference

IEncoder factory.

```
#include "iencoder.h"
#include "../utils/logger.h"
#include <ctime>
#include <iostream>
#include <stdlib.h>
#include <string>
#include <thread>
#include <yaml-cpp/yaml.h>
#include <zmq.hpp>
#include "../encoders/libav_encoder.h"
#include "../encoders/null_encoder.h"
#include "../encoders/zdepth_encoder.h"
#include "../encoders/video_file_reader.h"
#include "../readers/wulti_image_reader.h"
Include dependency graph for iencoder.cc:
```

Namespaces

moetsi

Moetsi creations.

· moetsi::ssp

Functions

• std::unordered_map< FrameType, std::shared_ptr< IEncoder > > moetsi::ssp::IEncoderFactory (const std::string &config, const std::vector< FrameType > &types)

IEncoder factory.

9.10.1 Detailed Description

IEncoder factory.

9.11 iencoder.h File Reference

IEncoder definition: frame encoder.

```
#include "../structs/frame_struct.h"
#include <unordered_map>
```

Include dependency graph for encoders/iencoder.h: This graph shows which files directly or indirectly include this file:

Classes

• class moetsi::ssp::IEncoder

IEncoder abstract encoder class.

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Functions

• std::unordered_map< FrameType, std::shared_ptr< IEncoder > > moetsi::ssp::IEncoderFactory (const std::string &config, const std::vector< FrameType > &types)

IEncoder factory.

9.11.1 Detailed Description

IEncoder definition: frame encoder.

9.12 iencoder.h File Reference

IEncoder factory.

```
#include "../structs/frame_struct.h"
#include <unordered_map>
```

Include dependency graph for include/encoders/iencoder.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::IEncoder

IEncoder abstract encoder class.

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

Functions

• std::unordered_map< FrameType, std::shared_ptr< IEncoder > > moetsi::ssp::IEncoderFactory (const std::string &config, const std::vector< FrameType > &types)

IEncoder factory.

9.12.1 Detailed Description

IEncoder factory.

IEncoder definition: frame encoder.

9.13 image_converter.cc File Reference

Image converter from frame struct to opency image.

```
#include "image_converter.h"
#include "../decoders/libav_decoder.h"
#include "../decoders/zdepth_decoder.h"
#include <opencv2/imgproc.hpp>
Include dependency graph for image_converter.cc:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Functions

bool moetsi::ssp::FrameStructToMat (FrameStruct &f, cv::Mat &img, std::unordered_map< std::string, std
 ::shared_ptr< IDecoder >> &decoders)

Convert frame struct to opency matrix.

9.13.1 Detailed Description

Image converter from frame struct to opency image.

9.14 image_converter.h File Reference

Image converter from frame struct to opency.

```
#include "../decoders/idecoder.h"
#include "../structs/frame_struct.h"
#include "../structs/body_struct.h"
#include <opencv2/core/mat.hpp>
```

Include dependency graph for include/utils/image_converter.h: This graph shows which files directly or indirectly include this file:

Namespaces

moetsi

Moetsi creations.

• moetsi::ssp

Sensor Stream Pipe.

Functions

bool moetsi::ssp::FrameStructToMat (FrameStruct &f, cv::Mat &img, std::unordered_map< std::string, std
 ::shared_ptr< IDecoder >> &decoders)

Convert frame struct to opency matrix.

9.14.1 Detailed Description

Image converter from frame struct to opency.

9.15 image_converter.h File Reference

Image converter from frame struct to opency.

```
#include "../decoders/idecoder.h"
#include "../structs/frame_struct.h"
#include "../structs/body_struct.h"
#include <opencv2/core/mat.hpp>
```

Include dependency graph for utils/image_converter.h: This graph shows which files directly or indirectly include this file:

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

Functions

Convert frame struct to opency matrix.

9.15.1 Detailed Description

Image converter from frame struct to opency.

9.16 image_decoder.cc File Reference

```
mpeg/jpeg image decoder
```

```
#include "image_decoder.h"
Include dependency graph for image_decoder.cc:
```

Classes

· struct moetsi::ssp::buffer_data

Namespaces

moetsi

Moetsi creations.

· moetsi::ssp

9.16.1 Detailed Description

mpeg/jpeg image decoder

9.17 image_decoder.h File Reference

AV Image decoder.

```
#include <fstream>
#include <iostream>
#include <vector>
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavformat/avio.h>
#include <libavutil/file.h>
#include "../structs/frame_struct.h"
#include "libav_types.h"
#include "utils.h"
```

Include dependency graph for image_decoder.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::ImageDecoder

Decode image to AV frame.

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.17.1 Detailed Description

AV Image decoder.

9.18 image_reader.cc File Reference

Image reader.

```
#include "image_reader.h"
Include dependency graph for image_reader.cc:
```

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.18.1 Detailed Description

Image reader.

9.19 image_reader.h File Reference

Image reader.

```
#include <fstream>
#include <iostream>
#include <vector>
#include "../structs/frame_struct.h"
#include "../utils/image_decoder.h"
#include "ireader.h"
```

Include dependency graph for image_reader.h: This graph shows which files directly or indirectly include this file:

Classes

• class moetsi::ssp::ImageReader

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

9.19.1 Detailed Description

Image reader.

9.20 iphone_reader.h File Reference

iPhone driver

```
#include <vector>
#include "../structs/frame_struct.h"
#include "ireader.h"
```

Include dependency graph for iphone_reader.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::iPhoneReader

Namespaces

· moetsi

Moetsi creations.

• moetsi::ssp

Sensor Stream Pipe.

9.20.1 Detailed Description

iPhone driver

9.21 iphone_reader.mm File Reference

iPhone driver

```
#include "iphone_reader.h"
#include <opencv2/imgproc.hpp>
#import <ARKit/ARKit.h>
#include <mach/mach_init.h>
#include <mach/mach_error.h>
#include <mach/semaphore.h>
#include <mach/task.h>
Include dependency graph for iphone_reader.mm:
```

Classes

- class SessionDelegate
- struct UnityXRNativeSessionPtr
- · class moetsi::ssp::iPhoneReaderImpl

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Functions

void use_session (void *session)

9.21.1 Detailed Description

iPhone driver

9.22 ireader.cc File Reference

IReader factory.

```
#include "ireader.h"
#include "../utils/logger.h"
#include <ctime>
#include <iostream>
#include <stdlib.h>
#include <string>
#include <thread>
#include <yaml-cpp/yaml.h>
#include <zmq.hpp>
#include "../encoders/libav_encoder.h"
#include "../encoders/null_encoder.h"
#include "../encoders/zdepth_encoder.h"
#include "../readers/video_file_reader.h"
#include "../readers/multi_image_reader.h"
#include "../readers/dummy_body_reader.h"
Include dependency graph for ireader.cc:
```

Namespaces

moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

Functions

std::shared_ptr< IReader > moetsi::ssp::IReaderFactory (const std::string &config)
 IReader factory.

9.22.1 Detailed Description

IReader factory.

9.23 ireader.h File Reference

Reader interface to SSP.

```
#include "../structs/frame_struct.h"
```

Include dependency graph for include/readers/ireader.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::IReader

SSP reader interface - abstract class.

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Functions

void moetsi::ssp::SetupLogging (const std::string &level, const std::string &file)
 Setup logging.

std::shared_ptr< IReader > moetsi::ssp::IReaderFactory (const std::string &config)
 IReader factory.

9.23.1 Detailed Description

Reader interface to SSP.

9.24 ireader.h File Reference

Reader interface to SSP.

```
#include "../structs/frame_struct.h"
```

Include dependency graph for readers/ireader.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::IReader

SSP reader interface - abstract class.

Namespaces

moetsi

Moetsi creations.

moetsi::ssp

Functions

- void moetsi::ssp::SetupLogging (const std::string &level, const std::string &file)
 Setup logging.
- std::shared_ptr< IReader > moetsi::ssp::IReaderFactory (const std::string &config)
 IReader factory.

9.24.1 Detailed Description

Reader interface to SSP.

9.25 kinect_reader.cc File Reference

```
Kinect driver.
```

```
#include "kinect_reader.h"
Include dependency graph for kinect_reader.cc:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Functions

• std::atomic_bool moetsi::ssp::exiting (false)

9.25.1 Detailed Description

Kinect driver.

9.26 kinect_reader.h File Reference

Kinect driver.

```
#include <atomic>
#include <fstream>
#include <iostream>
#include <vector>
#include "../utils/logger.h"
#include <k4a/k4a.h>
#include <cereal/archives/binary.hpp>
#include "../structs/frame_struct.h"
#include "../utils/image_decoder.h"
#include "../utils/kinect_utils.h"
#include "../utils/video_utils.h"
#include "ireader.h"
```

Include dependency graph for kinect_reader.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::KinectReader

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Macros

• #define CHECK(x, device)

Variables

• std::atomic_bool moetsi::ssp::exiting

9.26.1 Detailed Description

Kinect driver.

9.26.2 Macro Definition Documentation

9.26.2.1 CHECK

9.27 kinect_utils.cc File Reference

Utils for Kinect RT integration.

```
#include "kinect_utils.h"
Include dependency graph for kinect_utils.cc:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Functions

ExtendedAzureConfig moetsi::ssp::BuildKinectConfigFromYAML (YAML::Node config)

Build Kinect configuration from YAML configuration.

void moetsi::ssp::FrameStructToK4A (std::vector< FrameStruct > &f, k4a::capture &sensor_capture, std
 ::unordered_map< std::string, std::shared_ptr< IDecoder >> &decoders)

Transform frame structure to K4A format Update decoder dictionary.

9.27.1 Detailed Description

Utils for Kinect RT integration.

9.28 kinect utils.h File Reference

Utils for Kinect RT integration.

```
#include <iostream>
#include <k4a/k4a.hpp>
#include <yaml-cpp/yaml.h>
#include "../decoders/idecoder.h"
#include "../decoders/libav_decoder.h"
#include "../structs/frame_struct.h"
#include "logger.h"
```

Include dependency graph for kinect_utils.h: This graph shows which files directly or indirectly include this file:

Classes

· struct moetsi::ssp::ExtendedAzureConfig

Azure Kinect configuration.

Namespaces

moetsi

Moetsi creations.

moetsi::ssp

Functions

- ExtendedAzureConfig moetsi::ssp::BuildKinectConfigFromYAML (YAML::Node config)
 - Build Kinect configuration from YAML configuration.
- void moetsi::ssp::FrameStructToK4A (std::vector< FrameStruct > &f, k4a::capture &sensor_capture, std
 ::unordered_map< std::string, std::shared_ptr< IDecoder >> &decoders)

Transform frame structure to K4A format Update decoder dictionary.

9.28.1 Detailed Description

Utils for Kinect RT integration.

9.29 libav decoder.cc File Reference

```
Jpeg/Mpeg decoder.
```

```
#include "libav_decoder.h"
Include dependency graph for libav_decoder.cc:
```

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.29.1 Detailed Description

Jpeg/Mpeg decoder.

9.30 libav_decoder.h File Reference

Jpeg/Mpeg decoder.

```
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavutil/avutil.h>
#include <libavutil/pixdesc.h>
#include <libswscale/swscale.h>
#include "../utils/logger.h"
#include <iostream>
#include <opencv2/core/mat.hpp>
#include "../utils/video_utils.h"
#include "../utils/libav_types.h"
#include "idecoder.h"
```

Include dependency graph for libav_decoder.h: This graph shows which files directly or indirectly include this file:

Classes

• class moetsi::ssp::LibAvDecoder

AV (Jpeg/Mpeg) decoder.

Namespaces

· moetsi

Moetsi creations.

• moetsi::ssp

Sensor Stream Pipe.

9.30.1 Detailed Description

Jpeg/Mpeg decoder.

9.31 libav_encoder.cc File Reference

Jpef/Mpeg encoder.

```
#include "libav_encoder.h"
Include dependency graph for libav_encoder.cc:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

9.31.1 Detailed Description

Jpef/Mpeg encoder.

9.32 libav encoder.h File Reference

Jpeg/Mpeg encoder.

```
#include <fstream>
#include <iostream>
#include <queue>
#include <vector>
#include <yaml-cpp/yaml.h>
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavutil/avutil.h>
#include <libavutil/imgutils.h>
#include <libavutil/opt.h>
#include <libavutil/pixdesc.h>
#include <libswscale/swscale.h>
#include "../readers/image_reader.h"
#include "../structs/frame_struct.h"
#include "../utils/image_decoder.h"
#include "../utils/video_utils.h"
#include "iencoder.h"
#include "../decoders/libav_decoder.h"
#include "../utils/logger.h"
```

Include dependency graph for libav_encoder.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::LibAvEncoder

LibAV encoder for Jpeg/Mpeg.

Namespaces

· moetsi

Moetsi creations.

• moetsi::ssp

Sensor Stream Pipe.

9.32.1 Detailed Description

Jpeg/Mpeg encoder.

9.33 logger.h File Reference

Logger header.

```
#include <spdlog/spdlog.h>
```

Include dependency graph for logger.h: This graph shows which files directly or indirectly include this file:

9.33.1 Detailed Description

Logger header.

9.34 multi_image_reader.cc File Reference

```
Multi image reader.
```

```
#include "multi_image_reader.h"
Include dependency graph for multi_image_reader.cc:
```

Namespaces

moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

9.34.1 Detailed Description

Multi image reader.

9.35 multi_image_reader.h File Reference

Multi image reader.

```
#include <fstream>
#include <iostream>
#include <vector>
#include "../structs/frame_struct.h"
#include "../utils/image_decoder.h"
#include "image_reader.h"
#include "ireader.h"
```

Include dependency graph for multi_image_reader.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::MultiImageReader

Namespaces

moetsi

Moetsi creations.

· moetsi::ssp

9.35.1 Detailed Description

Multi image reader.

9.36 network_reader.cc File Reference

Network reader.

```
#include "network_reader.h"
#include "../utils/video_utils.h"
Include dependency graph for network_reader.cc:
```

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

Functions

• unsigned long moetsi::ssp::elapsed (unsigned long start, unsigned long end)

9.36.1 Detailed Description

Network reader.

9.37 network_reader.h File Reference

Network reader.

```
#include <zmq.hpp>
#include "../structs/frame_struct.h"
#include "ireader.h"
```

Include dependency graph for network_reader.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::NetworkReader

Network reader.

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Macros

• #define POLL_TIMEOUT_MS 500

9.37.1 Detailed Description

Network reader.

9.38 null_encoder.cc File Reference

Straight pipe encoder.

```
#include "null_encoder.h"
Include dependency graph for null_encoder.cc:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

9.38.1 Detailed Description

Straight pipe encoder.

9.39 null_encoder.h File Reference

```
#include "iencoder.h"
```

Include dependency graph for null_encoder.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::NullEncoder

Nullencoder Straight pipe encoder.

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.39.1 Detailed Description

@breif Straight pipe encoder

9.40 nv_decoder.cc File Reference

```
NvPipe decoder.
```

```
#include "nv_decoder.h"
Include dependency graph for nv_decoder.cc:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

9.40.1 Detailed Description

NvPipe decoder.

9.41 nv_decoder.h File Reference

NvPipe decoder.

```
#include <NvPipe.h>
#include <iostream>
#include <opencv2/core/mat.hpp>
#include "../utils/nvpipe_types.h"
#include "../utils/video_utils.h"
#include "idecoder.h"
```

Include dependency graph for nv_decoder.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::NvDecoder

NvPipe decoder.

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.41.1 Detailed Description

NvPipe decoder.

9.42 nv_encoder.cc File Reference

NvPipe encoder.

```
#include <unistd.h>
#include "../utils/logger.h"
#include <ctime>
#include <iostream>
#include <stdlib.h>
#include <string>
#include <thread>
#include <opencv2/imgproc.hpp>
#include <yaml-cpp/yaml.h>
#include "nv_encoder.h"
Include dependency graph for nv_encoder.cc:
```

Namespaces

· moetsi

Moetsi creations.

• moetsi::ssp

Sensor Stream Pipe.

9.42.1 Detailed Description

NvPipe encoder.

9.43 nv_encoder.h File Reference

NvPipe encoder.

```
#include <NvPipe.h>
#include <yaml-cpp/yaml.h>
#include "../decoders/libav_decoder.h"
#include "../utils/image_decoder.h"
#include "iencoder.h"
#include "../structs/frame_struct.h"
#include "../utils/utils.h"
```

Include dependency graph for nv_encoder.h: This graph shows which files directly or indirectly include this file:

Classes

class moetsi::ssp::NvEncoder

NvPipe encoder.

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.43.1 Detailed Description

NvPipe encoder.

9.44 nvpipe_types.h File Reference

Types for NvPipe support.

```
#include <NvPipe.h>
#include <memory>
```

Include dependency graph for nvpipe_types.h: This graph shows which files directly or indirectly include this file:

Classes

• struct moetsi::ssp::NVPipeDeleter

Namespaces

• moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Typedefs

• typedef std::unique_ptr< NvPipe, NVPipeDeleter > moetsi::ssp::NvPipeSafeP

9.44.1 Detailed Description

Types for NvPipe support.

9.45 similarity_measures.h File Reference

Similarity measures.

```
#include <opencv2/core/mat.hpp>
#include <opencv2/highgui.hpp>
```

Include dependency graph for similarity_measures.h: This graph shows which files directly or indirectly include this file:

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

Functions

• double moetsi::ssp::GetPSNR (const Mat &I1, const Mat &I2, double max_value)

Get Peak Signal to Noise Ration similarity.

double moetsi::ssp::GetMSE (const Mat &I1, const Mat &I2)

Get Mean Square Error (distance) between images.

• Scalar moetsi::ssp::GetMSSIM (const Mat &i1, const Mat &i2)

Get Structural Similarity between 2 images cf. for instance $http://amroamro.github. \leftarrow io/mexopencv/opencv/image_similarity_demo.html for a simple SSIM introduction.$

9.45.1 Detailed Description

Similarity measures.

9.46 ssp.h File Reference

```
#include "structs/frame_struct.h"
#include "structs/body_struct.h"
#include "encoders/iencoder.h"
#include "decoders/idecoder.h"
#include "readers/ireader.h"
#include "utils/image_converter.h"
Include dependency graph for include/ssp.h:
```

Namespaces

moetsi

Moetsi creations.

moetsi::ssp

9.46.1 Detailed Description

SSP main include file

9.47 ssp.h File Reference

```
#include "structs/frame_struct.h"
#include "structs/body_struct.h"
#include "encoders/iencoder.h"
#include "decoders/idecoder.h"
#include "readers/ireader.h"
#include "utils/image_converter.h"
Include dependency graph for ssp.h:
```

Namespaces

moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.47.1 Detailed Description

SSP main include file

9.48 ssp client k4a.cc File Reference

SSP client with lib k4a.

```
#include <chrono>
#include <iostream>
#include <mutex>
#include <thread>
#include <unistd.h>
#include <k4a/k4a.h>
#include <opencv2/imgproc.hpp>
#include <zmq.hpp>
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavutil/avutil.h>
#include <libavutil/pixdesc.h>
#include <libswscale/swscale.h>
#include "../utils/logger.h"
#include "../readers/network_reader.h"
#include "../utils/kinect_utils.h"
Include dependency graph for ssp_client_k4a.cc:
```

Classes

- · struct custom k4abt body t
- class BodyTracker

Typedefs

typedef struct _custom_k4abt_body_t custom_k4abt_body_t

Functions

- SSP EXPORT int open_k4a (int port)
- SSP EXPORT int close k4a ()
- void update ()
- · SSP EXPORT int start_k4a (int port)
- SSP_EXPORT int stop_k4a ()
- SSP_EXPORT int update_k4a ()
- SSP EXPORT int getBodyCount ()
- SSP_EXPORT int getBodiesStruct (k4abt_body_t *pBodies, int n)
- SSP_EXPORT custom_k4abt_body_t getCustomBodiesStruct (int n)
- SSP EXPORT int **getBodies** (k4abt skeleton t *pSkeletons, int *plds, int n)
- void PrintBodyInformation (k4abt body t body)
- void PrintBodyIndexMapMiddleLine (k4a::image body_index_map)
- int main (int argc, char *argv[])

Variables

- BodyTracker * gTracker = NULL
- std::thread gUpdateThread
- bool gStop = false

9.48.1 Detailed Description

SSP client with lib k4a.

9.49 ssp_client_opencv.cc File Reference

OpenCV based ssp client client.

```
#include <chrono>
#include <iostream>
#include <thread>
#include <unistd.h>
#include <opencv2/imgproc.hpp>
#include <zmq.hpp>
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavutil/avutil.h>
#include <libavutil/pixdesc.h>
#include <libswscale/swscale.h>
#include "../utils/logger.h"
#include "../readers/network_reader.h"
#include "../utils/video_utils.h"
#include "../utils/image_converter.h"
Include dependency graph for ssp_client_opencv.cc:
```

Macros

- #define SSP EXPORT
- #define HAS IMSHOW 1

Functions

- SSP_EXPORT int ssp_client_opencv (int port)
- int main (int argc, char *argv[])

9.49.1 Detailed Description

OpenCV based ssp client client.

9.50 ssp_client_template.cc File Reference

Template for an SSP client.

```
#include <chrono>
#include <iostream>
#include <thread>
#include <unistd.h>
#include <opencv2/imgproc.hpp>
#include <zmq.hpp>
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavutil/avutil.h>
#include <libavutil/pixdesc.h>
#include <libswscale/swscale.h>
#include "../utils/logger.h"
#include "../readers/network_reader.h"
#include "../utils/video_utils.h"
#include "../utils/image_converter.h"
Include dependency graph for ssp_client_template.cc:
```

Functions

- SSP_EXPORT int ssp_client_template (int port)
- int main (int argc, char *argv[])

9.50.1 Detailed Description

Template for an SSP client.

9.51 ssp server.cc File Reference

SSP, server side.

```
#include <unistd.h>
#include "../utils/logger.h"
#include <ctime>
#include <iostream>
#include <stdlib.h>
#include <string>
#include <thread>
#include <yaml-cpp/yaml.h>
#include <zmq.hpp>
#include "../encoders/libav encoder.h"
#include "../encoders/null_encoder.h"
#include "../encoders/zdepth_encoder.h"
#include "../readers/video_file_reader.h"
#include "../readers/multi_image_reader.h"
#include "../readers/dummy_body_reader.h"
Include dependency graph for ssp server.cc:
```

Functions

- SSP_EXPORT int **ssp_server** (const char *filename)
- int main (int argc, char *argv[])

9.51.1 Detailed Description

SSP, server side.

9.52 ssp_tester.cc File Reference

SSP test program.

```
#include <chrono>
#include <iostream>
#include <thread>
#include <unistd.h>
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavutil/avutil.h>
#include <libavutil/log.h>
#include <libavutil/pixdesc.h>
#include <libswscale/swscale.h>
#include "../encoders/libav_encoder.h"
#include "../structs/frame_struct.h"
#include "../decoders/idecoder.h"
#include "../decoders/libav_decoder.h"
#include "../encoders/null_encoder.h"
#include "../encoders/zdepth encoder.h"
#include "../readers/video file reader.h"
#include "../readers/multi_image_reader.h"
#include "../utils/image_converter.h"
#include "../utils/similarity_measures.h"
#include "../utils/utils.h"
#include "../utils/video_utils.h"
Include dependency graph for ssp_tester.cc:
```

9.53 utils.h File Reference 141

Functions

• int main (int argc, char *argv[])

9.52.1 Detailed Description

SSP test program.

9.53 utils.h File Reference

Utilities.

```
#include <algorithm>
#include <chrono>
#include <fstream>
#include <iostream>
#include <vector>
#include "logger.h"
#include "spdlog/sinks/basic_file_sink.h"
#include <yaml-cpp/yaml.h>
```

Include dependency graph for include/utils/utils.h: This graph shows which files directly or indirectly include this file:

Namespaces

· moetsi

Moetsi creations.

• moetsi::ssp

Sensor Stream Pipe.

Macros

#define _av_err2str(errnum)

Functions

```
    uint64_t moetsi::ssp::CurrentTimeMs ()
```

Get current time in ms.

• uint64 t moetsi::ssp::CurrentTimeUs ()

Get current time in usec/microseconds.

uint64_t moetsi::ssp::CurrentTimeNs ()

Get current time in ns/nanosecconds.

std::string moetsi::ssp::RandomString (size_t length)

Build a random string.

• void moetsi::ssp::SetupLogging (YAML::Node &general_parameters)

Setup SSP logging.

• void moetsi::ssp::SetupLogging (std::string &level, std::string &file)

Setup SSP logging.

9.53.1 Detailed Description

Utilities.

9.53.2 Macro Definition Documentation

9.54 utils.h File Reference

Utilities.

```
#include <algorithm>
#include <chrono>
#include <fstream>
#include <iostream>
#include <vector>
#include "logger.h"
#include "spdlog/sinks/basic_file_sink.h"
#include <yaml-cpp/yaml.h>
```

Include dependency graph for utils/utils.h: This graph shows which files directly or indirectly include this file:

Namespaces

moetsi

Moetsi creations.

• moetsi::ssp

Sensor Stream Pipe.

Macros

#define _av_err2str(errnum)

Functions

```
• uint64_t moetsi::ssp::CurrentTimeMs ()
```

Get current time in ms.

uint64_t moetsi::ssp::CurrentTimeUs ()

Get current time in usec/microseconds.

uint64_t moetsi::ssp::CurrentTimeNs ()

Get current time in ns/nanosecconds.

std::string moetsi::ssp::RandomString (size_t length)

Build a random string.

void moetsi::ssp::SetupLogging (YAML::Node &general_parameters)

Setup SSP logging.

• void moetsi::ssp::SetupLogging (std::string &level, std::string &file)

Setup SSP logging.

9.54.1 Detailed Description

Utilities.

9.54.2 Macro Definition Documentation

9.54.2.1 _av_err2str

Value:

9.55 video_file_reader.cc File Reference

Video file reader.

```
#include "video_file_reader.h"
Include dependency graph for video_file_reader.cc:
```

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Enumerations

enum moetsi::ssp::video_reader_k4a_depth_mode_t {
 moetsi::ssp::VIDEO_READER_K4A_DEPTH_MODE_OFF, moetsi::ssp::VIDEO_READER_K4A_DEPTH_MODE_NFOV_2X2!
 moetsi::ssp::VIDEO_READER_K4A_DEPTH_MODE_NFOV_UNBINNED, moetsi::ssp::VIDEO_READER_K4A_DEPTH_MODE
 moetsi::ssp::VIDEO_READER_K4A_DEPTH_MODE_WFOV_UNBINNED, moetsi::ssp::VIDEO_READER_K4A_DEPTH_MODE
 }

enum moetsi::ssp::video_reader_k4a_color_resolution_t {
 moetsi::ssp::VIDEO_READER_K4A_COLOR_RESOLUTION_OFF, moetsi::ssp::VIDEO_READER_K4A_COLOR_RESOLUTI
 moetsi::ssp::VIDEO_READER_K4A_COLOR_RESOLUTION_1080P, moetsi::ssp::VIDEO_READER_K4A_COLOR_RESOLU
 moetsi::ssp::VIDEO_READER_K4A_COLOR_RESOLUTION_1536P, moetsi::ssp::VIDEO_READER_K4A_COLOR_RESOLU
 moetsi::ssp::VIDEO_READER_K4A_COLOR_RESOLUTION_3072P }

9.55.1 Detailed Description

Video file reader.

9.56 video_file_reader.h File Reference

Video file reader support.

```
#include <fstream>
#include <iostream>
#include <vector>
#include "../utils/logger.h"
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavutil/avutil.h>
#include <libavutil/pixdesc.h>
#include <libswscale/swscale.h>
#include "../structs/frame_struct.h"
#include "../utils/utils.h"
#include "ireader.h"
```

Include dependency graph for video_file_reader.h: This graph shows which files directly or indirectly include this file:

Classes

· class moetsi::ssp::VideoFileReader

Namespaces

moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.56.1 Detailed Description

Video file reader support.

9.57 video utils.h File Reference

Video utilities.

```
#include <ctime>
#include <iostream>
#include <stdlib.h>
#include <string>
#include <thread>
#include <unistd.h>
#include <libavcodec/avcodec.h>
#include <libavformat/avformat.h>
#include <libavutil/avutil.h>
#include <libavutil/pixdesc.h>
#include <libswscale/swscale.h>
#include <opencv2/core/mat.hpp>
#include <opencv2/highgui.hpp>
#include "../decoders/idecoder.h"
#include "../decoders/zdepth_decoder.h"
#include "../structs/frame_struct.h"
#include "../utils/libav_types.h"
Include dependency graph for video utils.h: This graph shows which files directly or indirectly include this file:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

Macros

- #define MAX_DEPTH_VALUE_16_BITS 65536
- #define MAX_DEPTH_VALUE_14_BITS 16384
- #define MAX_DEPTH_VALUE_13_BITS 8192
- #define MAX_DEPTH_VALUE_12_BITS 4096
- #define MAX_DEPTH_VALUE_11_BITS 2048
- #define MAX_DEPTH_VALUE_8_BITS 256

Functions

- void moetsi::ssp::AVFrameToMatYUV (AVFrameSharedP &frame, cv::Mat &image)
 - Convert an AVFrame to YUV image.
- void moetsi::ssp::AVFrameToMatGray (AVFrameSharedP &frame, cv::Mat &image)

Convert an AVFrame to grayscale image.

- AVCodecParameters * moetsi::ssp::getParams (FrameStruct &frame_struct)
 - Get AVCodec parameters from a FrameStruct.
- template<typename T >

void moetsi::ssp::MinMaxFilter (cv::Mat &in_mat, cv::Mat &out_mat, double min, double max)

9.57.1 Detailed Description

Video utilities.

9.58 zdepth_decoder.cc File Reference

ZDepth decoder.

```
#include "zdepth_decoder.h"
Include dependency graph for zdepth_decoder.cc:
```

Namespaces

· moetsi

Moetsi creations.

· moetsi::ssp

Sensor Stream Pipe.

9.58.1 Detailed Description

ZDepth decoder.

9.59 zdepth_decoder.h File Reference

ZDepth decoder.

```
#include "idecoder.h"
#include "zdepth.hpp"
```

Include dependency graph for zdepth_decoder.h: This graph shows which files directly or indirectly include this file:

Classes

class moetsi::ssp::ZDepthDecoder
 ZDepthDecoder ZDepth format decoder.

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

9.59.1 Detailed Description

ZDepth decoder.

9.60 zdepth_encoder.cc File Reference

```
ZDepth encoder.
```

```
#include "zdepth_encoder.h"
Include dependency graph for zdepth_encoder.cc:
```

Namespaces

· moetsi

Moetsi creations.

moetsi::ssp

Sensor Stream Pipe.

9.60.1 Detailed Description

ZDepth encoder.

9.61 zdepth_encoder.h File Reference

encoder

```
#include "zdepth.hpp"
#include <yaml-cpp/yaml.h>
#include <opencv2/imgproc.hpp>
#include "iencoder.h"
#include "../decoders/libav_decoder.h"
#include "../utils/image_decoder.h"
```

Include dependency graph for zdepth_encoder.h: This graph shows which files directly or indirectly include this file:

Classes

class moetsi::ssp::ZDepthEncoder
 ZDepth encoder.

Namespaces

moetsi

Moetsi creations.

• moetsi::ssp

Sensor Stream Pipe.

9.61.1 Detailed Description

encoder

ZDepth