

MY FOOD

Hub Guide

connect the desktop Hub, with pictures

The **MY FOOD Hub** is a Windows program that runs the restaurant on one PC inside the restaurant. Tills, kitchen screens, printers and the customer display then **keep working when the internet is down**.

You need:


- One Windows 10/11 PC that stays **on during opening hours**, connected **by cable** to the router
- Internet for the first setup
- The owner or a manager signed in to MY FOOD on their phone or laptop
- A manager's PIN (to connect tills in the Hub window)
- Tills, screens and printers on the **same Wi-Fi / network** as the Hub PC

Test it before a busy service. The Hub has been tested in software but not yet on the restaurant's own PCs.

Red boxes and arrows show exactly what to press. Pictures are from the MY FOOD test system: names, numbers and addresses on your screens will be different.

BEFORE YOU START

How it fits together

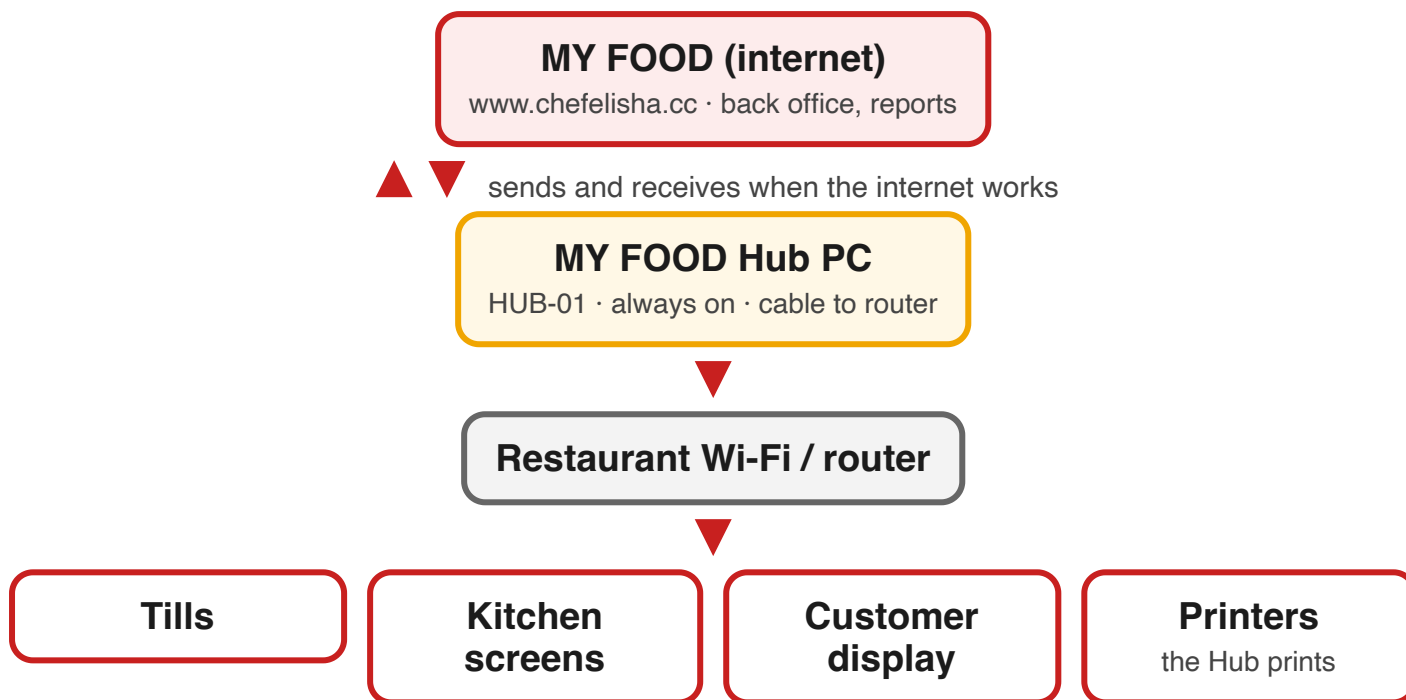

With the Hub, tills open **the Hub's address** (for example **<http://192.168.1.20:8080>**) instead of www.chefelisha.cc. MY FOOD Printing is **not needed**: the Hub prints.

PART 1 · INSTALL THE HUB

1

Add the Hub in MY FOOD

On the manager's phone or laptop: **Devices & printing** → **Add device**.
Name **HUB-01**, Type **MY FOOD Hub** → **Add device**.

Chefelisha Restaurant (test) Main

OPERATIONS

- Dashboard
- POS
- Orders
- Cash register
- Customers
- Kitchen
- Supervisor
- Customer display

INVENTORY

- Stock
- Stock taking

MENU & SETUP

- Menu & recipes
- Stations & routing
- Floor & tables
- Devices & printing**

PAstry-PRINTER-02 Printer • Not sent — 192.168.1.55:9100 2 waiting Test print Edit Turn off

RECEIPT-PRINTER-01 Printer • Not sent — 192.168.1.60:9100 2 waiting Test print Edit Turn off

PRINT-AGENT-01 Print agent • Not sent — not paired Enter code from device Create code Rename

CUSTOMER-DISPLAY-01 Customer display • Offline 9:33:55 PM paired Enter code from device Create code Rename Rev

2 Type: MY FOOD Hub

Add device

Name (e.g. PASTRY-KDS-01) Type Station (KDS) Printer connected by

HUB-01 MY FOOD Hub — —

Printer IP address or Windows printer name for USB Printer driven by agent Receipt printer (POS)

— —

3 Add device Add device

1 Name: HUB-01

Print jobs not yet printed ● Live

ORDER	PRINTER	KIND	STATUS	ATTEMPTS	LAST ERROR
#5001	DRINKS-PRINTER-01	kitchen ticket	• Not sent	0	
#5002	DRINKS-PRINTER-01	kitchen ticket	• Not sent	0	
#5003	DRINKS-PRINTER-01	kitchen ticket	• Not sent	0	
#5004	DRINKS-PRINTER-01	kitchen ticket	• Not sent	0	

2

On the Hub PC: download MY FOOD Hub

On the Hub PC, sign in to MY FOOD → **Devices & printing** → **MY FOOD Hub for Windows** → **Download for Windows**. Download the file **MY-FOOD-Hub-Setup-...-production.exe**.


Chefelisha Restaurant (test)
Main

OPERATIONS
Dashboard
POS
Orders
Cash register
Customers
Kitchen
Supervisor
Customer display

INVENTORY
Stock
Stock taking

MENU & SETUP
Menu & recipes
Stations & routing
Floor & tables
Devices & printing

#5013	PASTRY-PRINTER-02	kitchen ticket	• Not sent	0
#5013	KITCHEN-PRINTER-01	kitchen ticket	• Not sent	0
#5013	PASTRY-PRINTER-01	kitchen ticket	• Not sent	0

MY FOOD Hub for Windows

Optional. Install it on one always-on Windows PC in the restaurant: your tills, kitchen screens, printers and customer display then keep working when the internet is down, and everything is sent to MY FOOD when it returns. The web POS keeps working without it.

Download the file named **MY-FOOD-Hub-Setup-...-production.exe**. Windows may warn that the app is from an unknown publisher (it is not code-signed yet): choose More Info, then Run anyway.

Download for Windows

1 Download MY FOOD Hub
(on the Hub PC)

Manual and checklists

How to install, pair devices, set up printing and run the restaurant day to day.

Installer Guide with pictures
PDF · step by step, easy to share
Download

Installation & Operations Manual
PDF · full manual
Download


Quick Reference
PDF · one page for every till
Download

Installer Checklist
PDF · two pages, with sign-off
Download

Device Register
Excel · list of devices and printers
Download

3 Install it (Windows warning)

Open the downloaded file. Windows may show a blue warning. Click **More info**. A **Run anyway** button then appears: click it.

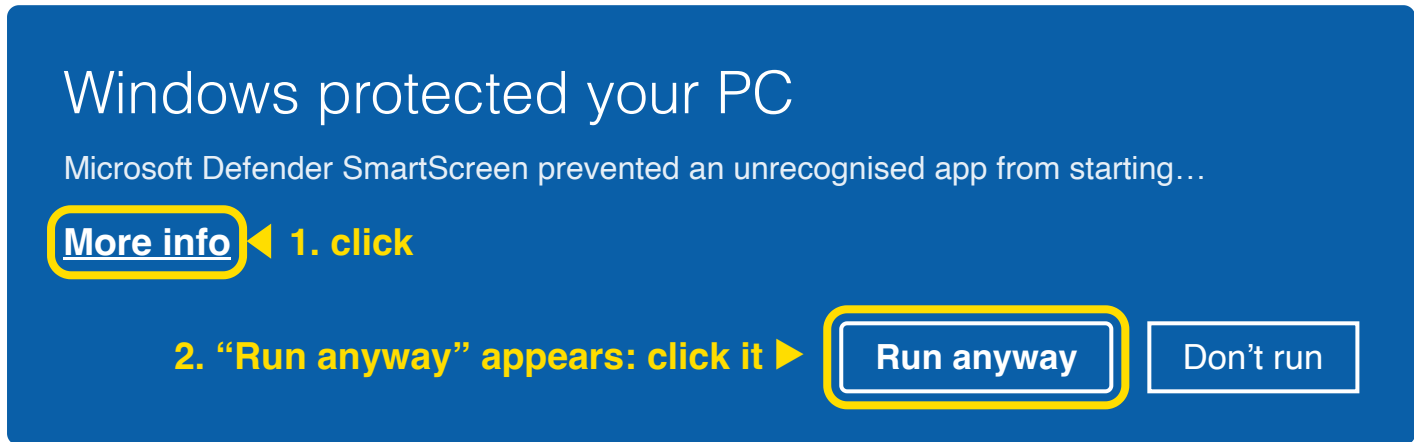


Drawing: the real window may look a little different.

MY FOOD Hub then opens by itself and **starts with Windows** every day. Closing its window keeps it running (icon next to the clock).

4

The Hub window shows a code

The first time, the Hub window says **Connect this hub to MY FOOD** and shows a code.

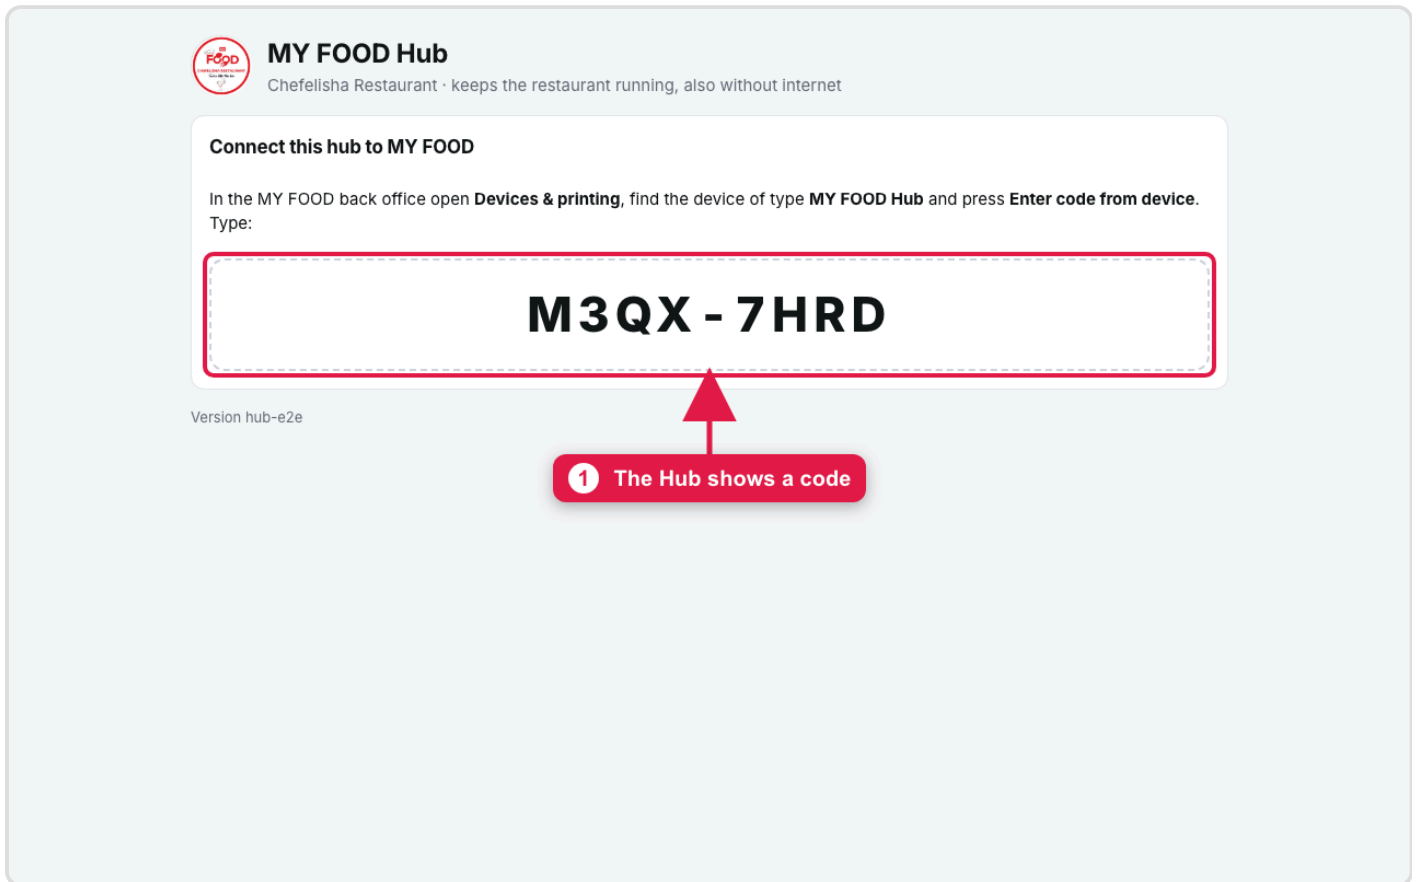

PART 2 · CONNECT THE HUB

5

Enter that code **ONLY** on the HUB-01 row

On the manager's phone: **Devices & printing** → the **HUB-01** row → **Enter code from device** → type the code → **Pair device**.

1 Only the HUB-01 row

2 Type the Hub's code here

NAME	TYPE	STATUS	IP ADDRESS	WAITING	ACTIONS
KITCHEN-PRINTER-01	Printer	Not sent	192.168.1.51:9100	3 waiting	Test print Edit Turn off
PASTRY-PRINTER-01	Printer	Not sent	192.168.1.53:9100	3 waiting	Test print Edit Turn off
PASTRY-PRINTER-02	Printer	Not sent	192.168.1.55:9100	2 waiting	Test print Edit Turn off
RECEIPT-PRINTER-01	Printer	Not sent	192.168.1.60:9100	2 waiting	Test print Edit Turn off
CUSTOMER DISPLAY-01	Customer display	Offline	9:33:55 PM	paired	Enter code from device Create code Rename Revoke
HUB-01	MY FOOD Hub	Online	11:16:13 PM	All sent · reported 11:16 PM	Enter code from device Create code Rename Run branch from hub Revoke

Add device

Name (e.g. PASTRY-KDS-01) Type Station (KDS) Printer connected by Printer IP address, or Windows printer name for USB

Printer driven by agent Receipt printer (POS) Add device

Print jobs not yet printed Live

ORDER	PRINTER	KIND	STATUS	ATTEMPTS	LAST ERROR
#5001	DRINKS-PRINTER-01	kitchen ticket	Not sent	0	

Never enter the Hub's code on a till's row. MY FOOD refuses it, and nothing changes.

6

Let the Hub run the restaurant

On the same **HUB-01** row press **Run branch from hub** and confirm. Finish all open orders on the tills first.

Chefelisha Restaurant (test)
Main

OPERATIONS

- Dashboard
- POS
- Orders
- Cash register
- Customers
- Kitchen
- Supervisor
- Customer display

INVENTORY

- Stock
- Stock taking

MENU & SETUP

- Menu & recipes
- Stations & routing
- Floor & tables
- Devices & printing**

KITCHEN-PRINTER-01	Printer	Not sent	—	192.168.1.51:9100 3 waiting	Test print	Edit	Turn off
PASTRY-PRINTER-01	Printer	Not sent	—	192.168.1.53:9100 3 waiting	Test print	Edit	Turn off
PASTRY-PRINTER-02	Printer	Not sent	—	192.168.1.55:9100 2 waiting	Test print	Edit	Turn off
RECEIPT-PRINTER-01	Printer	Not sent	—	192.168.1.60:9100 2 waiting	Test print	Edit	Turn off
PRINT-AGENT-01	Print agent	Not sent	—	not paired	Enter code from device	Create code	
CUSTOMER-DISPLAY-01	Customer display	Offline	9:33:55 PM	paired	Enter code from device	Create code	Rename Revoke
HUB-01	MY FOOD Hub	Online	11:16:13 PM	All sent · reported 11:16 PM	Enter code from device	Create code	Rename Run branch from hub Revoke

1 Then press Run branch from hub

Add device

Name (e.g. PASTRY-KDS-01)
 Type
 Station (KDS)
 Printer connected by
 Printer IP address, or Windows printer name for USB

Printer driven by agent
 Receipt printer (POS)
 Add device

Print jobs not yet printed
Live

ORDER	PRINTER	KIND	STATUS	ATTEMPTS	LAST ERROR
#5001	DRINKS-PRINTER-01	Drink-Station	Not sent	0	

7 Check the Hub window

The Hub window now shows **Connected**, **All sent** and **Runs this branch: Yes**.

MY FOOD Hub
Chefelisha Restaurant · keeps the restaurant running, also without internet

Internet and MY FOOD cloud
Connected
Last sync 10:58 PM

Sent to the cloud
All sent

Runs this branch
Yes

Open MY FOOD on tills and screens

On each **1 Connected** the customer display, open this address in Chrome or Edge **2 Runs this branch: Yes**

- <http://192.168.1.20:8080>

The device then shows a code. Approve it below.

Devices

DEVICE	TYPE	STATUS	
POS-01	Till	• Not connected	Enter code from device
DRINKS-KDS-01	Kitchen screen	• Not connected	Enter code from device
GRILL-KDS-01	Kitchen screen	• Not connected	Enter code from device
KITCHEN-KDS-01	Kitchen screen	• Not connected	Enter code from device
PASTRY-KDS-01	Kitchen screen	• Not connected	Enter code from device

8

Write down the Hub's address

The Hub window shows the address the tills must open (for example **http://192.168.1.20:8080**). Write it down.

MY FOOD Hub
Chefelisha Restaurant · keeps the restaurant running, also without internet

Internet and MY FOOD cloud
Connected
Last sync 10:58 PM

Sent to the cloud
All sent

Runs this branch
Yes

Open MY FOOD on tills and screens

On each till, kitchen screen and the customer display, open this address in Chrome or Edge:

- **http://192.168.1.20:8080**

The device then shows a code. Approve it below.

1 Write this address down

Devices


DEVICE	TYPE	STATUS	
POS-01	Till	• Not connected	Enter code from device
DRINKS-KDS-01	Kitchen screen	• Not connected	Enter code from device
GRILL-KDS-01	Kitchen screen	• Not connected	Enter code from device
KITCHEN-KDS-01	Kitchen screen	• Not connected	Enter code from device
PASTRY-KDS-01	Kitchen screen	• Not connected	Enter code from device

Ask whoever manages the router to **reserve** this address for the Hub PC, so it never changes.

9

On the till: open the Hub's address

On each till, open Chrome and type the Hub's address followed by **/pair** (for example **http://192.168.1.20:8080/pair**). The till shows a code.

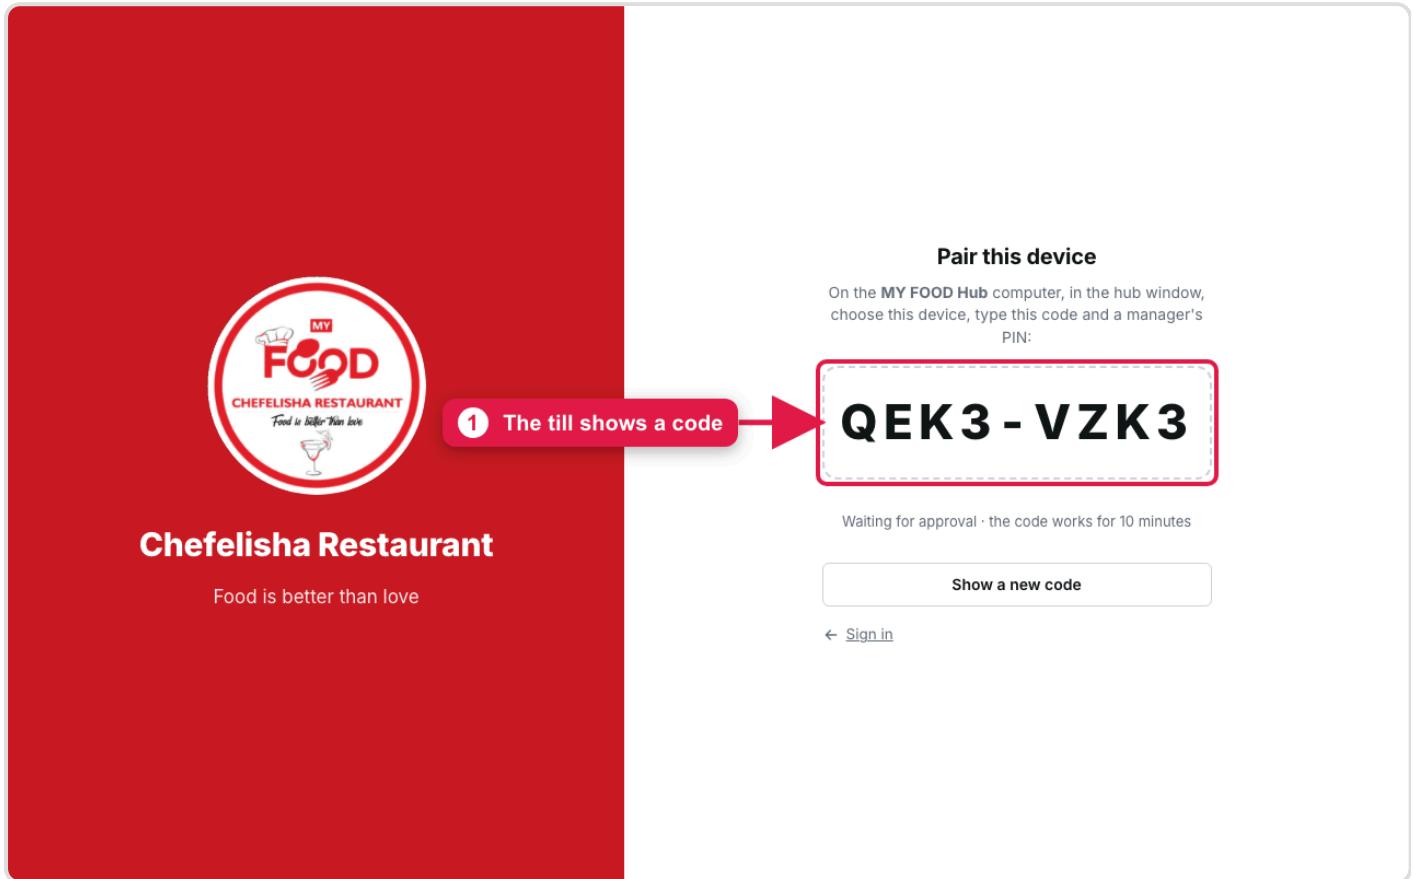

10 In the Hub window: find the till

On the **Hub PC**, in the Hub window, find the till's name under **Devices** and press **Enter code from device**.

MY FOOD Hub
Chefelisha Restaurant · keeps the restaurant running, also without internet

Internet and MY FOOD cloud
Connected
Last sync 10:58 PM

Sent to the cloud
All sent

Runs this branch
Yes

Open MY FOOD on tills and screens

On each till, kitchen screen and the customer display, open this address in Chrome or Edge:

- **http://192.168.1.20:8080**

The device then shows a code. Approve it below.


Devices

DEVICE	TYPE	STATUS	
POS-01	Till	Connected	2 Enter code from device → Enter code from device
DRINKS-KDS-01	Kitchen screen	• Not connected	Enter code from device
GRILL-KDS-01	Kitchen screen	• Not connected	Enter code from device
KITCHEN-KDS-01	Kitchen screen	• Not connected	Enter code from device
PASTRY-KDS-01	Kitchen screen	• Not connected	Enter code from device

1 The till's name

11 Code + manager PIN → Connect device


Type the code from the till and a **manager's PIN**, then press **Connect device**.

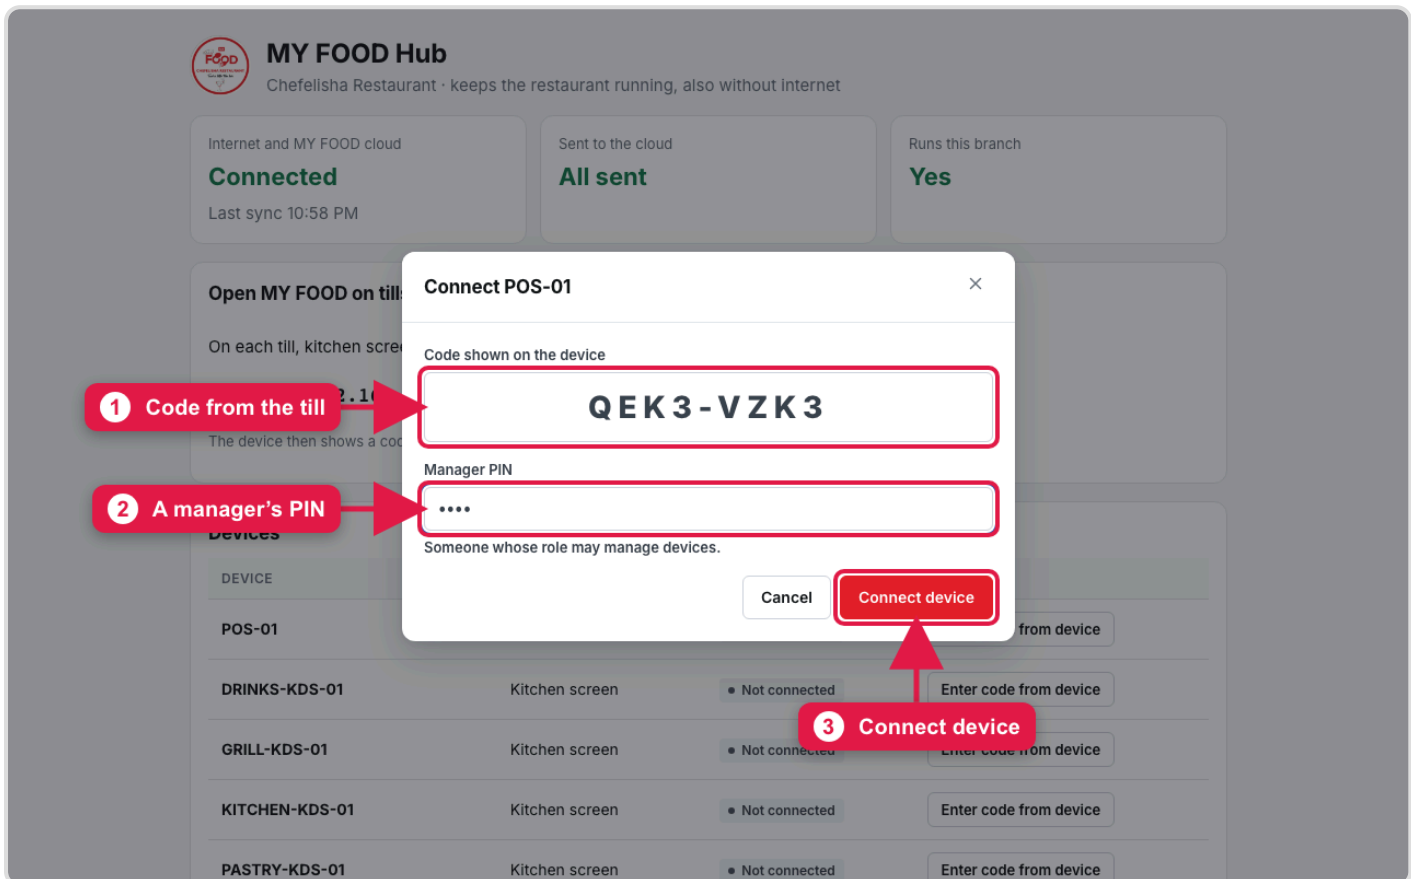

Nobody else should watch while the PIN is typed.

12 Done: the till works through the Hub


The till continues by itself to **Enter your staff PIN**. Repeat for every till, kitchen screen and the customer display.

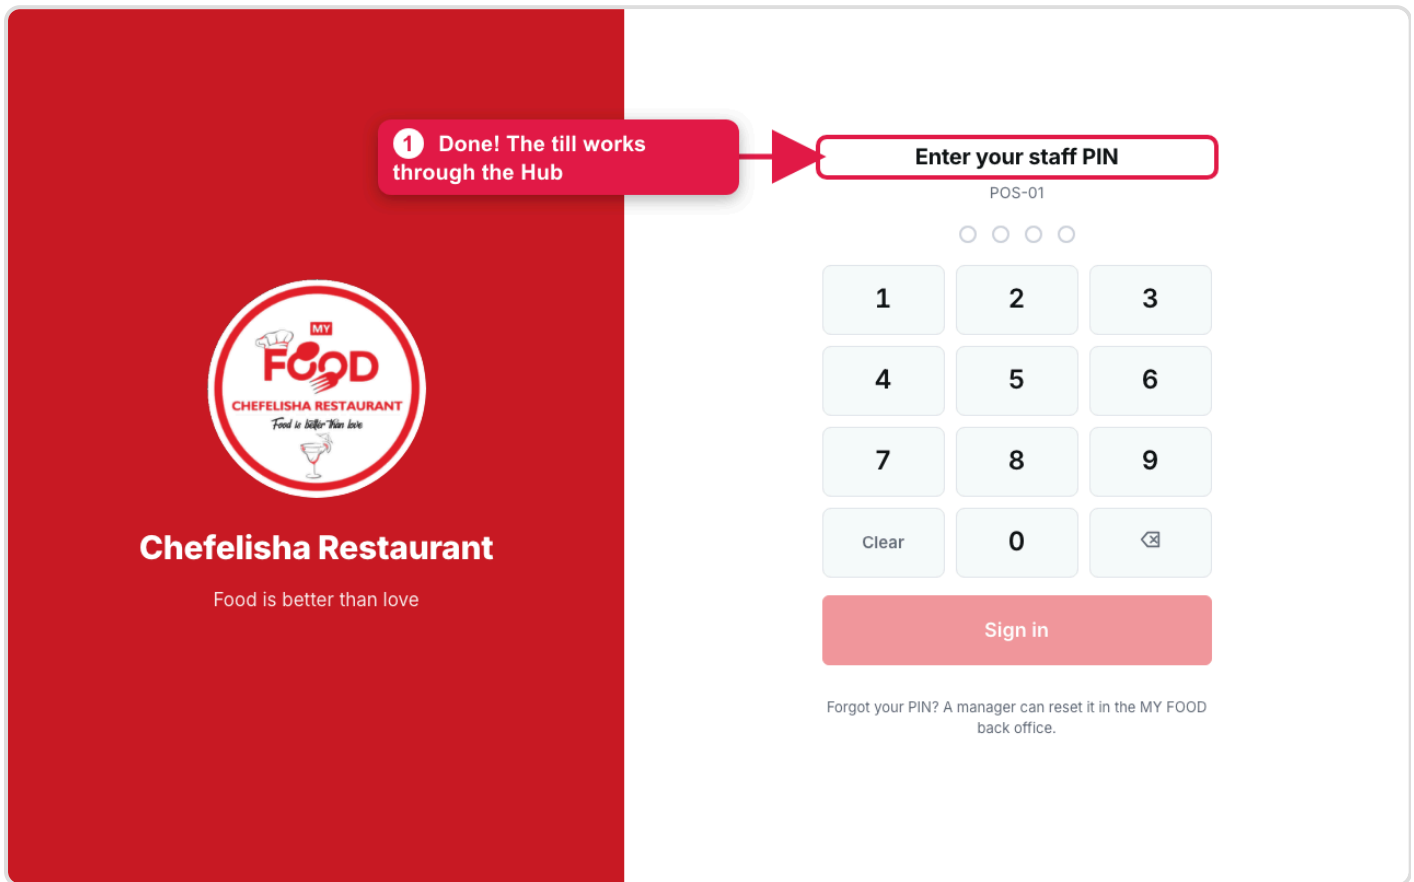

Printers: set them up in **Devices & printing** as in the Installer Guide, with **Printed by = HUB-01**.

13 Unplug the internet: the till keeps working

Unplug the internet cable from the router (not the Hub's cable). The till shows a yellow line **Offline · everything keeps working and is saved on the hub**. Make a test order: it still works and prints.

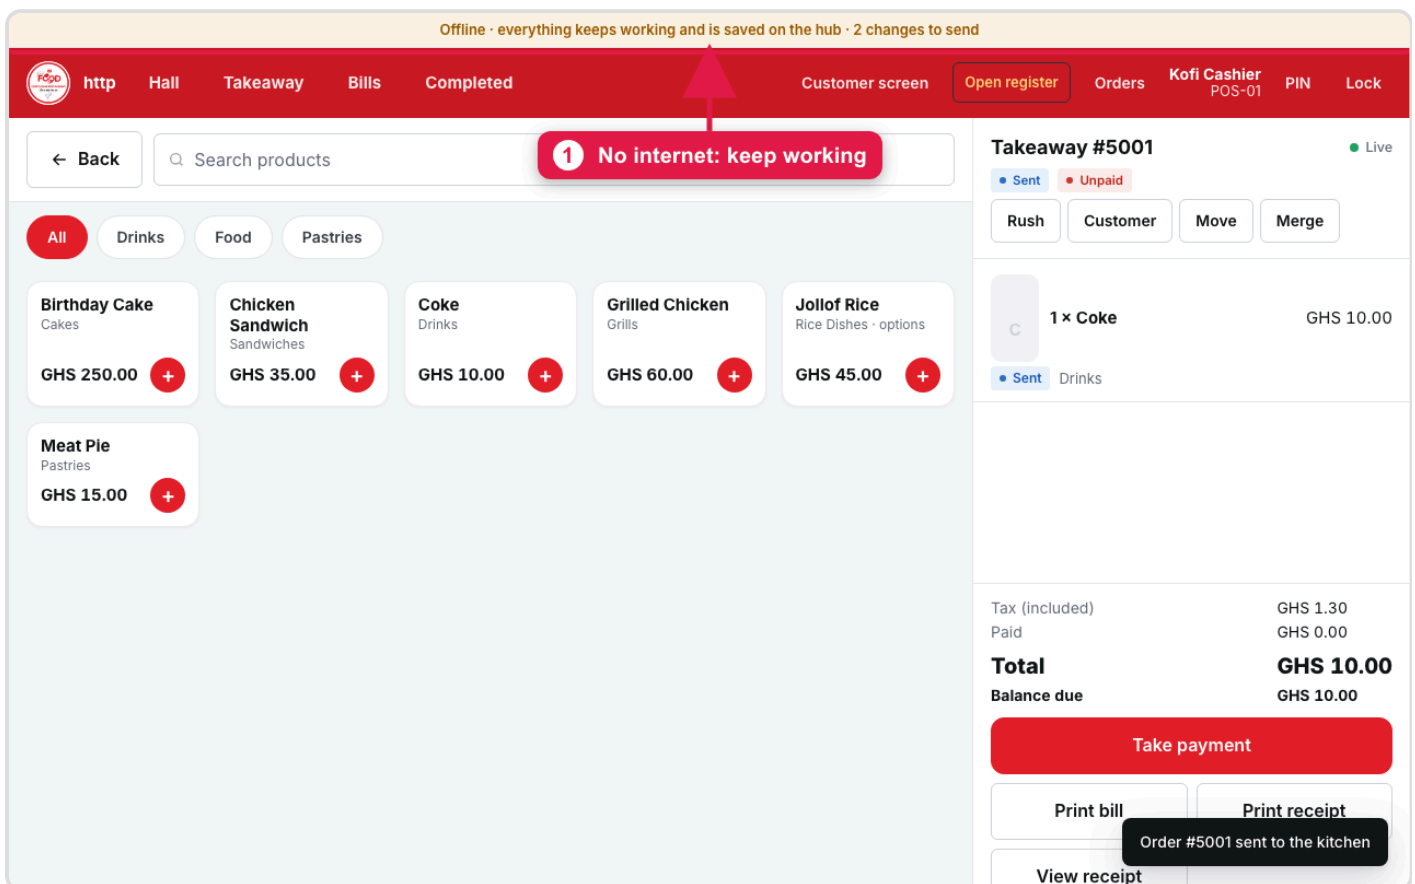

14 The Hub window while offline

The Hub window shows **Offline** and the number of changes **waiting**. This is normal.

MY FOOD Hub
Chefelisha Restaurant · keeps the restaurant running, also without internet

Internet and MY FOOD cloud

Offline

Last sync 10:58 PM

Tills keep working. Everything is sent when the internet is back.

Sent to the cloud

12 waiting

Oldest from 10:58 PM

Runs this branch

Yes

Open MY FOOD tills and screens

On **1 Internet is down** custom **2 Waiting to send: normal** Edge:

- http://192.168.1.20:8080**

The device then shows a code. Approve it below.

Devices

DEVICE	TYPE	STATUS	
POS-01	Till	• Connected	Connect again
DRINKS-KDS-01	Kitchen screen	• Not connected	Enter code from device
GRILL-KDS-01	Kitchen screen	• Not connected	Enter code from device
KITCHEN-KDS-01	Kitchen screen	• Not connected	Enter code from device

15 Plug the internet back in

Within a minute the Hub sends everything and shows **All sent**. The order appears in MY FOOD's reports. Nothing is sent twice.

MY FOOD Hub
Chefelisha Restaurant · keeps the restaurant running, also without internet

Internet and MY FOOD cloud
Connected
Last sync 10:58 PM

Sent to the cloud
All sent

Runs this branch
Yes

Open MY FOOD on tills and screens

On each till, kitchen screen and the customer display, open the app and connect to the Hub. The connection address is:

- **http://192.168.1.20:8080**

The device then shows a code. Approve it below.

1 Internet back: everything sent

Devices

DEVICE	TYPE	STATUS	
POS-01	Till	• Connected	Connect again
DRINKS-KDS-01	Kitchen screen	• Not connected	Enter code from device
GRILL-KDS-01	Kitchen screen	• Not connected	Enter code from device
KITCHEN-KDS-01	Kitchen screen	• Not connected	Enter code from device
PASTRY-KDS-01	Kitchen screen	• Not connected	Enter code from device

REMEMBER

Hub rules

✓ DO

- Keep the Hub PC **on** and plugged in by cable (a UPS battery is best)
- Restart it with Windows **Restart**: everything reconnects by itself
- Staff sign in once on the Hub **while online**, so their PIN also works offline
- Check the Hub window says **All sent** before closing for the day

✗ DON'T

- Don't choose **Quit (tills stop working)** in the tray menu during service
- Don't turn the Hub PC off while the restaurant is open
- Don't delete anything if it says **Needs attention**: call support
- Don't enter the Hub's code on any row except **HUB-01**

Tray menu (icon next to the clock): **Open MY FOOD Hub · Open a till on this computer · Quit (tills stop working).**

In the Hub's own window: **F1** = point of sale, **F2** = Hub status and devices.

Quick fixes

You see	Do this
A till can't open the Hub's address	Is the Hub PC on? Is the till on the same Wi-Fi ? Check the address in the Hub window (it may have changed).
Windows asks to allow MY FOOD Hub on the network	Choose Allow (private networks).
Hub window: Offline	Only the internet is down. Keep working; it sends everything later.
Hub window: Needs attention	Don't delete anything. Take a photo and call support.
Staff PIN not accepted while offline	That person has not signed in on the Hub before while online. A manager signs them in when the internet is back.
The Hub PC is broken during service	If the internet works: manager's phone → Devices & printing → HUB-01 row → Stop running branch . Tills then open www.chefelisha.cc again.
"Port 8080 is used by another program"	Close the other program, or call support.

Still stuck? Take a photo of the screen (no PINs) and call:

MY FOOD support: _____ Manager: _____
