




BMW Parts and Accessories Installation Instructions

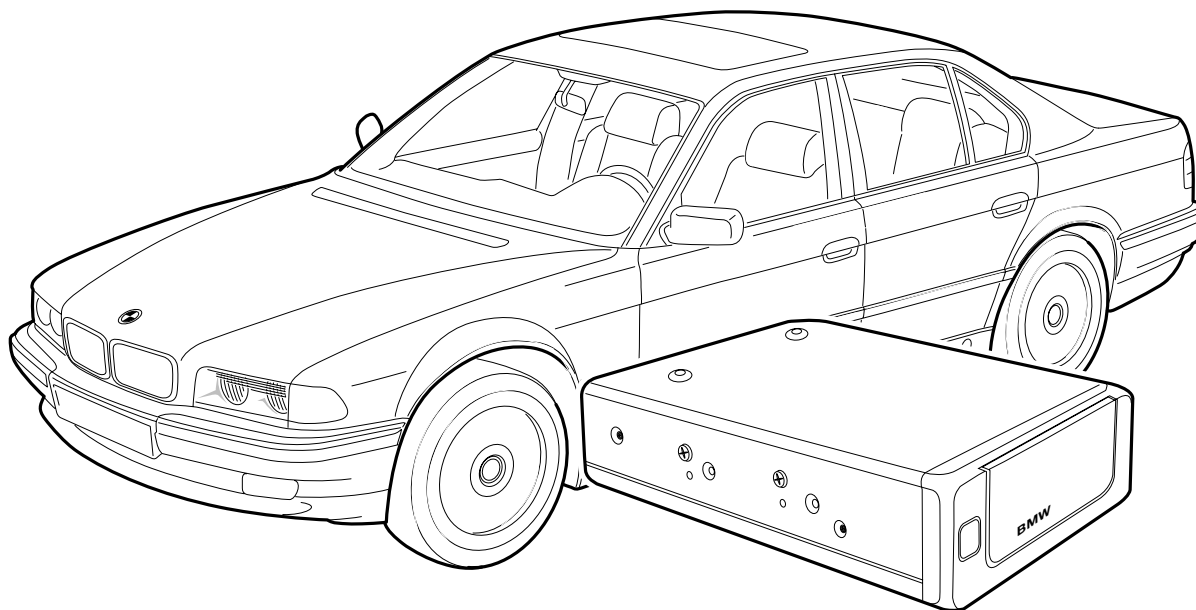

038 0070 B

BMW CD changer installation kit BMW 7 Series (E38)

Technical and electrical knowledge required

The installation time is 0.5 -4.0 hours but this may vary depending on the condition of the car and the equipment in it.

Retrofit / Installation kit No. 65 12 0 137 910
 65 12 0 137 911
 65 12 0 137 920
 65 12 0 137 921
 65 12 0 139 330

Contents

Section	Page
1. Important information on installing the CD changer in the E38	3
2. Preparations	4
3. Parts list for cars with a production date prior to 09/98	5
4. Parts list for cars with a production date after 09/98	6
5. Power supply cable A connection diagram for cars with a production date prior to 09/98	7
6. CD changer B, C and D connection cable connection diagram for cars with a production date prior to 09/98	8
7. Power supply cable E connection diagram for cars with a production date after 09/98	9
8. CD changer D, F and G connection cable connection diagram for cars with a production date after 09/98	10
9. Installation and cabling diagram (for cars with a production date prior to 09/98 with an on-board monitor radio only)	11
10. Installation and cabling diagram (for cars with a production date prior to 09/98 without an on-board monitor radio only)	12
11. Installation and cabling diagram (for cars with a production date after 09/98 with an on-board monitor radio only) . .	13
12. Installation and cabling diagram (for cars with a production date after 09/98 without an on-board monitor radio only)	14
13. To install the CD changer (cars with a production date prior to 09/98 and with an on-board monitor only) . . .	15
14. To install the CD changer (cars with a production date prior to 09/98 and without an on-board monitor only) .	19
15. To install the CD changer (cars with a production date after 09/98 and with an on-board monitor without a DSP amplifier only)	23
16. To install the CD changer (cars with a production date after 09/98 and without an on-board monitor and without a DSP amplifier only)	26
17. To install the CD changer (cars with a production date after 09/98 with a DSP amplifier only)	30
18. Coding and concluding work and function	33
19. Circuit diagram (cars with a production date prior to 09/98 only)	34
20. Circuit diagram (cars with a production date after 09/98 only)	35

1. Important information on installing the CD changer in the E38

Only for use in the BMW dealer organisation.

The CD changer may only be installed by a specialist workshop that has the required special tools and manuals (servicing, repair, diagnostics, etc.).



On cars without a navigation computer and/or without CD changer preparation in the boot the boot trim on the left must be ordered separately using the Electronic Parts Catalogue (EPC). ◀



Before installing the power supply cable and the CD changer connection cable, check whether the required black 3-pin socket casing or the white 3-pin socket casing for the power supply and the black 6-pin socket casing or the black 10-pin socket casing for the CD changer connection cable are tied back on the left-hand side of the boot. ◀



In cars with an on-board monitor radio the CD changer connection cable is only installed in the boot. ◀

When installing cables/leads ensure that they are not kinked or damaged.

Additional cables/leads that you install must be secured with cable ties.

If the specified PIN chambers are occupied, bridges, double crimps or twin-lead terminals must be used.

Subject to technical modifications

Required tools and equipment


Set of flat screwdrivers
Set of Philips screwdrivers
Angle cutter
1/4 inch socket set
Cable lamp

Set of Allen keys
1/2 inch socket set
Set of Torx sockets
BMW disconnection tool

2. Preparations

	TIS instruction No.
Print out error memory	----
Disconnect the battery	12 00 ...
Remove the left boot trim	51 47 151
Preparations required for cars without an on-board monitor radio only	
Remove the C pillar trim	51 43 251
Remove the rear window shelf	51 46 000
Remove the front left seat	52 13 000
Remove the door sill strips at the front and rear left.	51 47 000
	51 47 030
Remove the B pillar trim on the left	51 43 150
Remove the rear seat bench and rear seat backrest	52 24 005
Remove the front left centre console	51 16 201
Remove the components in the centre console (radio, cassette, heating/air conditioning control) to release the centre console and push it back a little (to install the cables)	65 11 030
	64 11 200
	64 11 205
	64 11 206
Preparations required for cars with an on-board monitor radio only	
Remove the video module	65 50 510
Remove the video module holder if necessary to make it easier to install the CD changer holder	---
Check the cabling work	---


3. Parts list for cars with a production date prior to 09/98

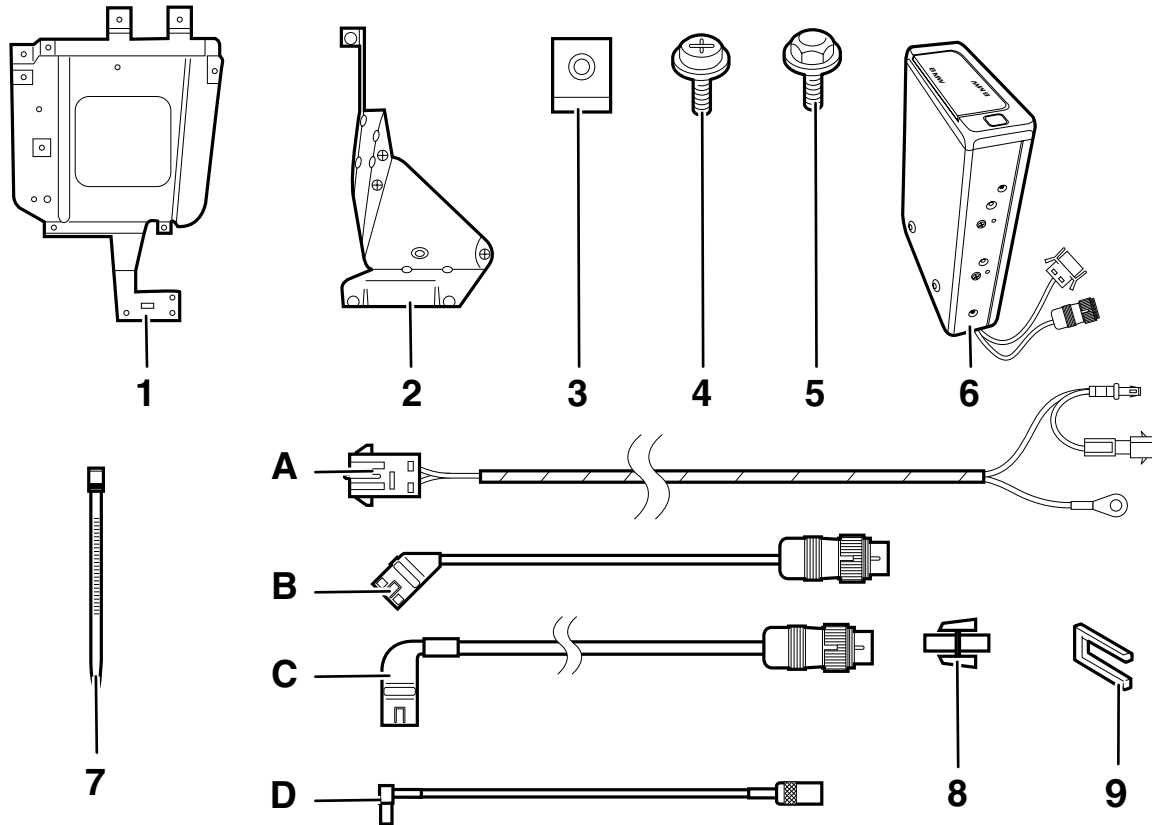

038 0071 B

- A Power supply cable
- B CD changer/On-board monitor radio connection cable
- C CD changer/Radio connection cable
- D DSP amplifier coaxial cable
- 1 Base holder
(only required for cars without an audio amplifier and/or without a navigation computer)
- 2 CD changer holder
- 3 Speed nut M5 (7x)
- 4 Fillister head Philips screw with washer M4x8 (4x)
- 5 Hexagonal screw with washer M5x14 (7x)
- 6 CD changer
- 7 Cable tie (15x)
- 8 Black 1-pin socket casing
- 9 Retaining clip


4. Parts list for cars with a production date after 09/98

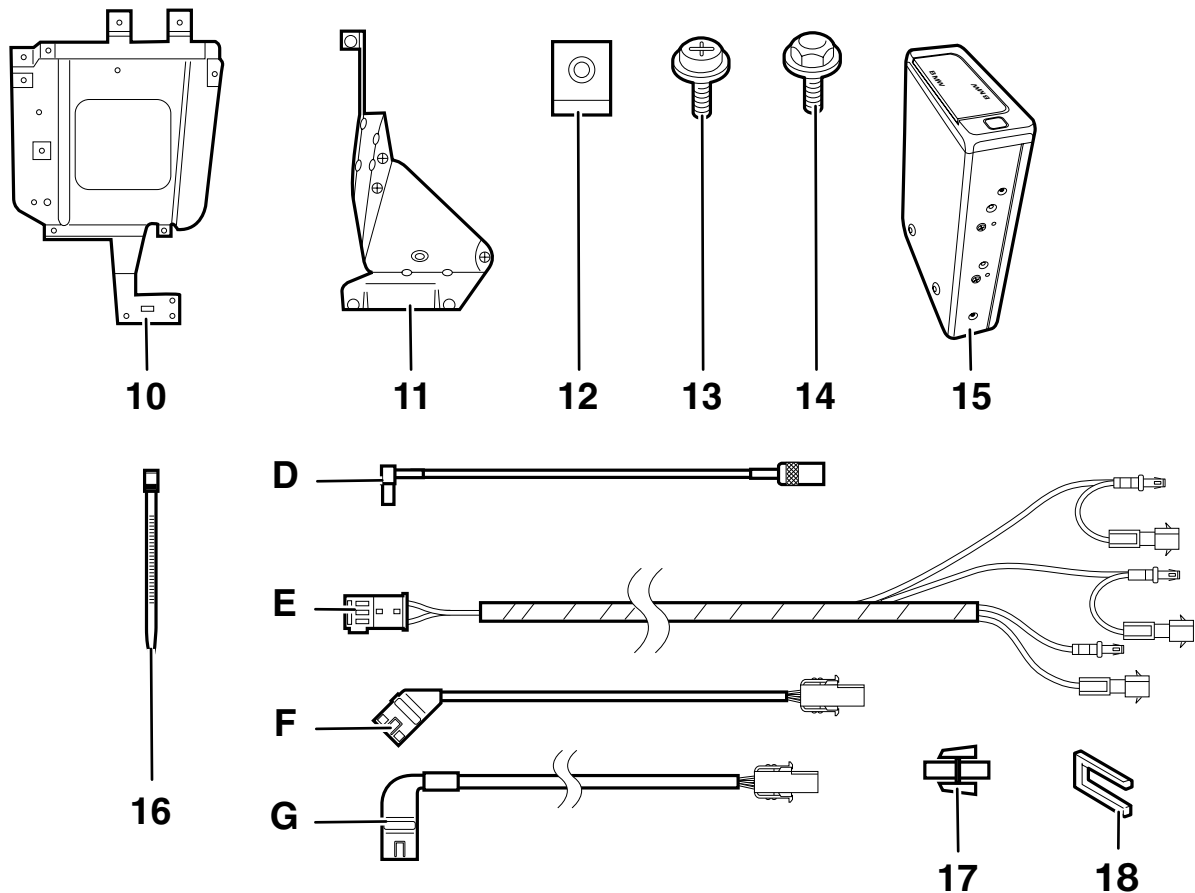

038 0072 B

- D DSP amplifier coaxial cable
- E Power supply cable
- F CD changer/On-board monitor radio connection cable
- G CD changer/Radio connection cable
- 10 Base holder
(only required for cars without an audio amplifier and/or without a navigation computer)
- 11 CD changer holder
- 12 Speed nut M5 (6x)
- 13 Fillister head Philips screw with washer M4x8 (4x)
- 14 Hexagonal screw with washer M5x12 (6x)
- 15 CD changer
- 16 Cable tie (15x)
- 17 Black 1-pin socket casing
- 18 Retaining clip

5. Power supply cable A connection diagram for cars with a production date prior to 09/98

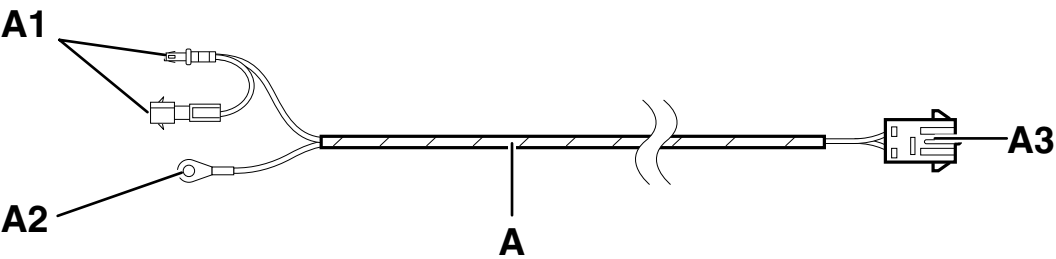


038 0073 B

Power supply cable **A** is only required if the white 3-pin socket casing on the CD changer power supply is not tied back on the audio wiring harness on the left-hand side of the boot.

Item	Description	Cable colour	Connection location in the car
A	Power supply cable	---	---
A1	Black 1-pin plug casing, socket contact: terminal 30	red/green	To retrofit telephone plug X400 , white 12-pin socket casing, PIN2 near the left tail light, red/green cable
A2	Cable eyelet, 6 mm in diameter	brown	Screw to audio module holder
A3	White 3-pin plug casing	---	Power supply connection X18180 on CD changer


6. CD changer B, C and D connection cable connection diagram for cars with a production date prior to 09/98

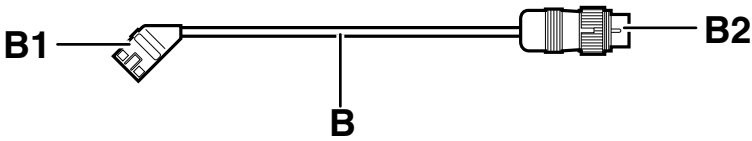

038 0074 B

The CD changer connection cable **B** is only required on cars with an on-board monitor radio if the black 6-pin socket casing on the CD changer connection cable is not tied back on the audio wiring harness.


Item	Description	Cable colour	Connection location in the car
B	CD changer/On-board monitor radio connection cable	---	---
B1	10-pin socket casing	---	To on-board monitor radio connection plug X18126 on the left-hand side of the boot
B2	Black 10-pin plug casing	---	To the CD changer in the boot on the left

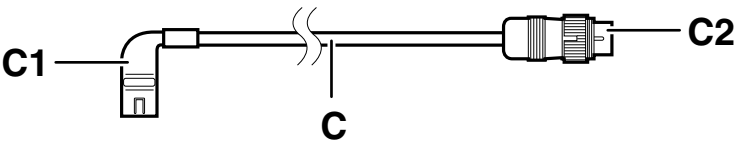

038 0075 B

The CD changer connection cable **C** is only required on cars without an on-board monitor radio if the black 6-pin socket casing on the CD changer connection cable is not tied back on the audio wiring harness.

Item	Description	Cable colour	Connection location in the car
C	CD changer/Radio connection cable	---	---
C1	10-pin socket casing	---	To existing radio connection plug X18126
C2	Black 10-pin plug casing	---	To the CD changer in the boot on the left

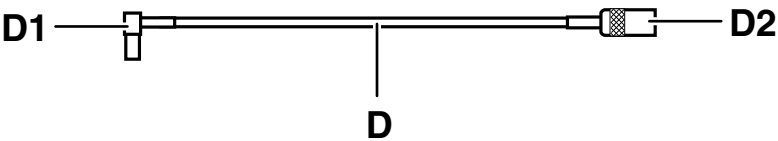


038 0076 B

The coaxial cable **D** is only required for cars with a Professional DSP amplifier

Item	Description	Cable colour	Connection location in the car
D	Coaxial cable	---	---
D1	Angle connection plug	---	To the Professional DSP amplifier in the boot on the left
D2	Straight connection plug	---	To the CD changer in the boot on the left

7. Power supply cable E connection diagram for cars with a production date after 09/98

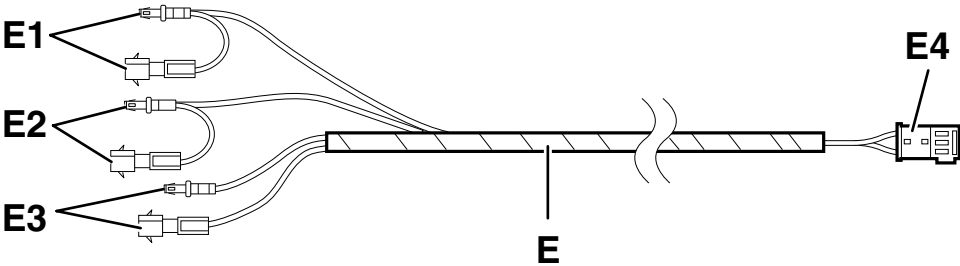


038 0077 B

Power supply cable **E** is only required if the black 3-pin socket casing on the CD changer power supply is not tied back on the audio wiring harness on the left-hand side of the boot.

Item	Description	Cable colour	Connection location in the car
E	Power supply cable	---	---
E1	Black 1-pin plug casing, socket contact: I bus	white/red/yellow	To retrofit audio system plug X322 , black 12-pin socket casing, PIN4 on the left of the boot, white/red/yellow cable
E2	Black 1-pin plug casing, socket contact: Terminal 30	red/green	To retrofit audio system plug X322 , black 12-pin socket casing, PIN1 on the left of the boot, red/green cable
E3	Black 1-pin plug casing, socket contact: Terminal 31	brown	To retrofit audio system plug X322 , black 12-pin socket casing, PIN7 on the left of the boot, brown cable
E4	Black 3-pin socket casing	---	Power supply connection X18180 on CD changer


8. CD changer D, F and G connection cable connection diagram for cars with a production date after 09/98

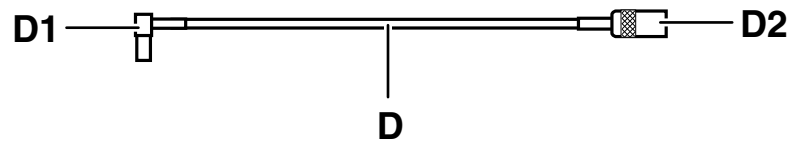

038 0078 B

The coaxial cable **D** is only required for cars with a Professional DSP amplifier.


Item	Description	Cable colour	Connection location in the car
D	Coaxial cable	---	---
D1	Angle connection plug	---	To the Professional DSP amplifier in the boot on the left
D2	Straight connection plug	---	To the CD changer in the boot on the left

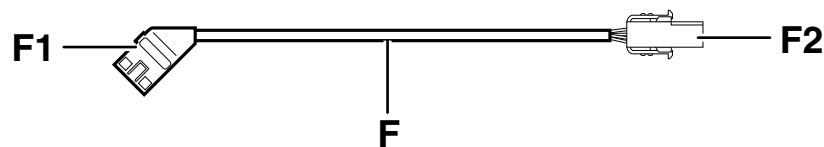

038 0079 B

The CD changer connection cable **F** is only required on cars with an on-board monitor radio if the black 6-pin socket casing on the CD changer connection cable is not tied back on the audio wiring harness.

Item	Description	Cable colour	Connection location in the car
F	CD changer/On-board monitor radio connection cable	---	---
F1	10-pin socket casing	---	To on-board monitor radio connection plug X18126 on the left-hand side of the boot
F2	Black 6-pin socket casing	---	To the CD changer in the boot on the left

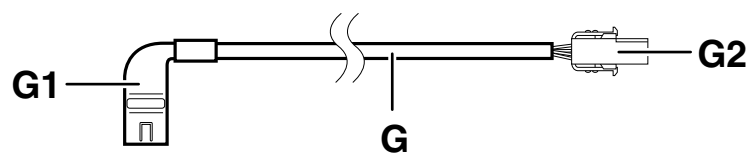


038 0080 B

The CD changer connection cable **G** is only required on cars without an on-board monitor radio if the black 6-pin socket casing on the CD changer connection cable is not tied back on the audio wiring harness.

Item	Description	Cable colour	Connection location in the car
G	CD changer/Radio connection cable	---	---
G1	10-pin socket casing	---	To existing radio connection plug X18126
G2	Black 6-pin socket casing	---	To the CD changer in the boot on the left

9. Installation and cabling diagram (for cars with a production date prior to 09/98 with an on-board monitor radio only)

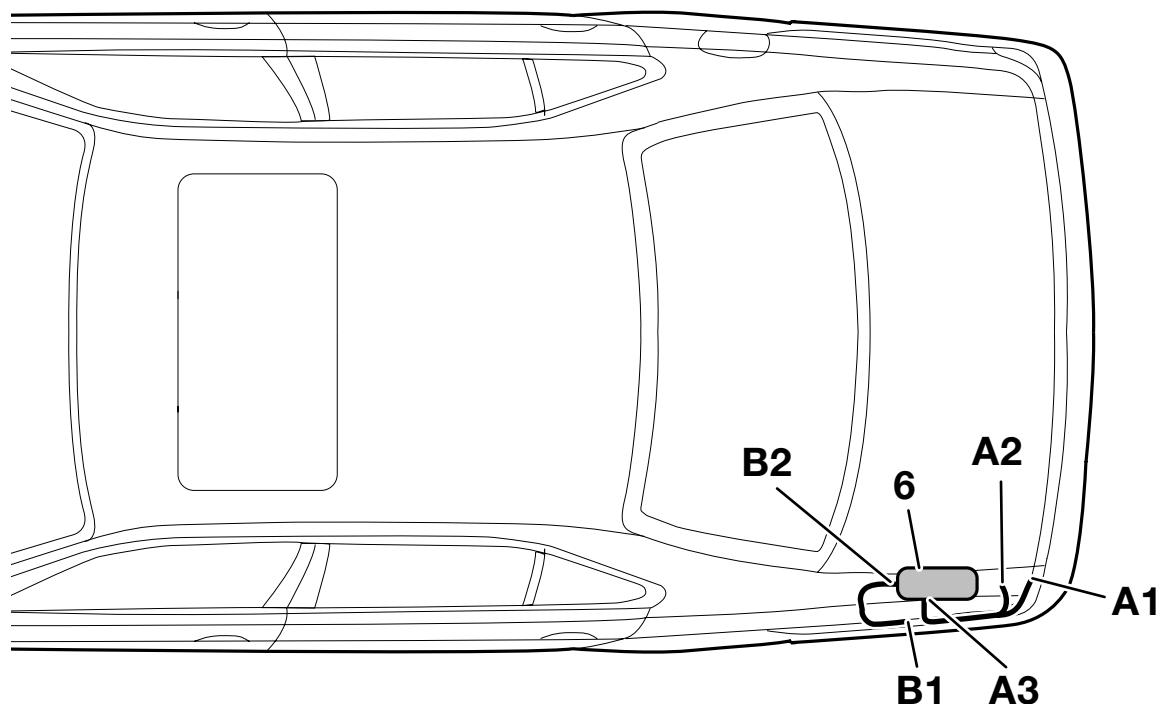

038 0081 B

Install the power supply cable **A** and the CD changer connection cable **B** as shown in the figure and secure them with cable ties.

Branch **A1** to plug connector **X400** near the left tail light


Branch **A2** to the audio module holder

Branch **A3** to the CD changer's power supply connector **X18180** on the left-hand side of the boot

Branch **B1** to the on-board monitor radio's connection plug **X18126** on the left-hand side of the boot

Branch **B2** to the CD changer (6) on the left-hand side of the boot

10. Installation and cabling diagram (for cars with a production date prior to 09/98 without an on-board monitor radio only)

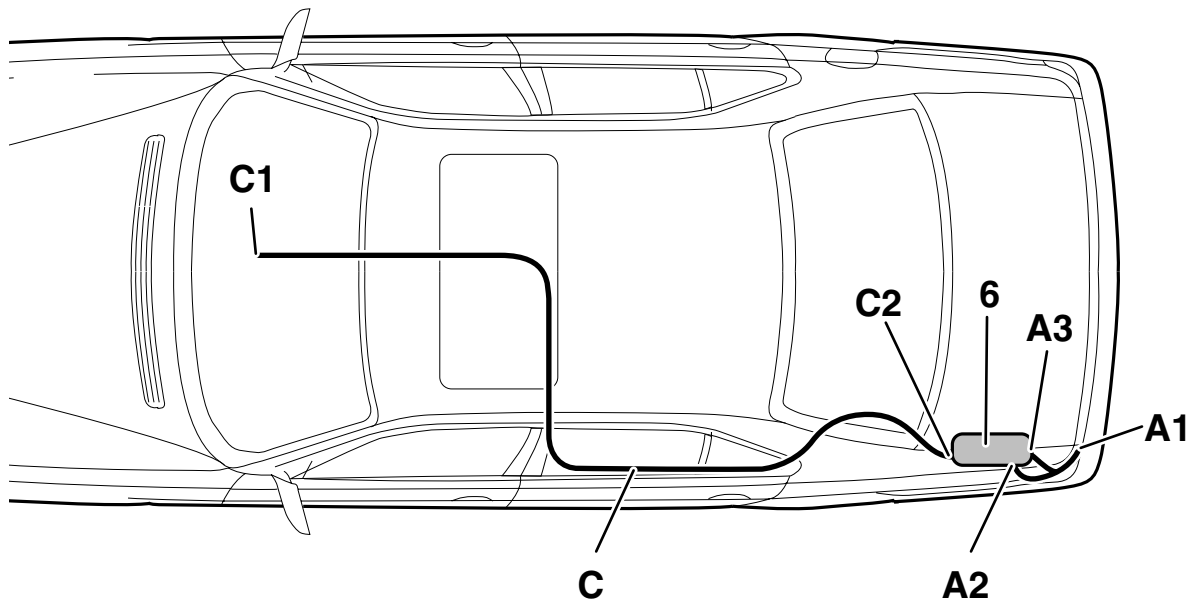

038 0082 B

Install the power supply cable **A** and the CD changer connection cable **B** as shown in the figure and secure them with cable ties.

Branch **A1** to plug connector **X400** near the left tail light


Branch **A2** to the audio module holder

Branch **A3** to the CD changer's power supply connector **X18180** on the left-hand side of the boot

Branch **C1** to connection plug **X18126** at the front

Branch **C2** to the CD changer (6) on the left-hand side of the boot

11. Installation and cabling diagram (for cars with a production date after 09/98 with an on-board monitor radio only)

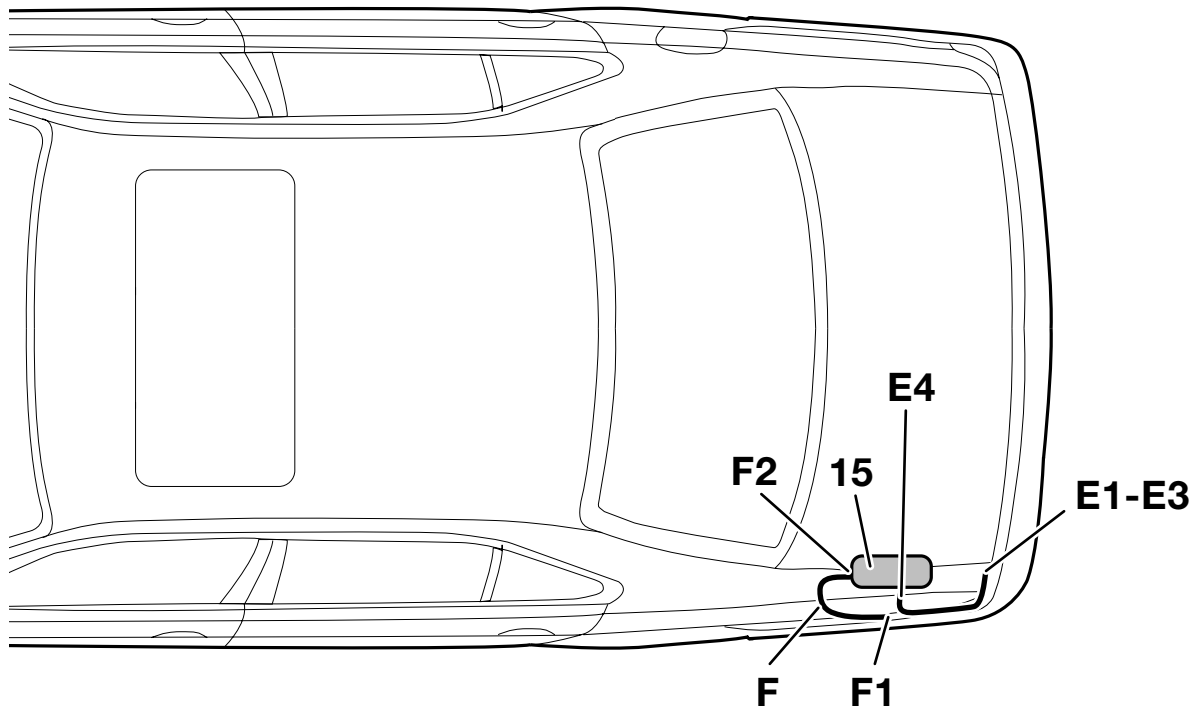

038 0083 B


Install the power supply cable **E** and the CD changer connection cable **F** as shown in the figure and secure them with cable ties.

Branches **E1-E3** to the audio system plug connector **X322** on the left-hand side of the boot
Branch **E4** to the CD changer's power supply connector **X18180** on the left-hand side of the boot

Branch **F1** to the on-board monitor radio's connection plug **X18126** on the left-hand side of the boot

Branch **F2** to the CD changer (15) on the left-hand side of the boot

12. Installation and cabling diagram (for cars with a production date after 09/98 without an on-board monitor radio only)

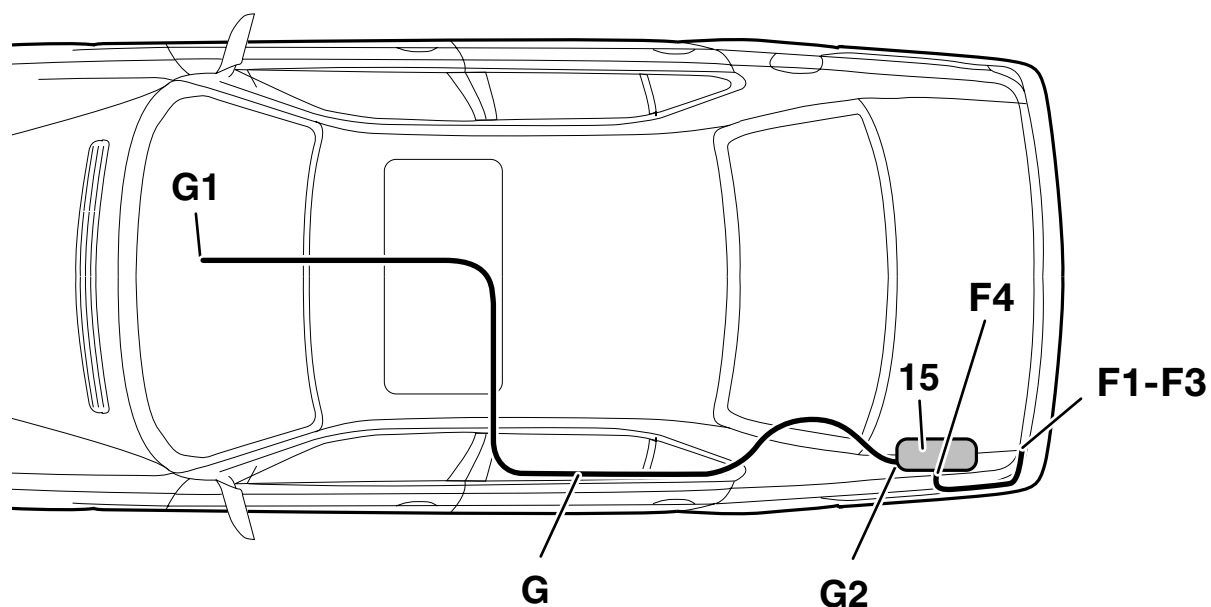


038 0084 B

Install the power supply cable **F** and the CD changer connection cable **G** as shown in the figure and secure them with cable ties.


Branches **F1-F3** to the audio system plug connector **X322** on the left-hand side of the boot
Branch **F4** to the CD changer's power supply connector **X18180** on the left-hand side of the boot

Branch **G1** to connection plug **X18126** at the front
Branch **G2** to the CD changer (15) on the left-hand side of the boot

13. To install the CD changer (cars with a production date prior to 09/98 with an on-board monitor only)

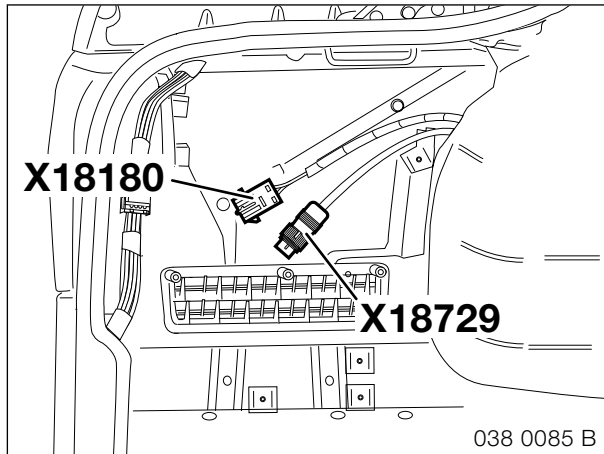


The installation of the power supply cable **A** and the CD changer connection cable **B** is **only required** if the white 3-pin plug casing **X18180** or the black 14-pin plug casing **X18729** are **not** tied back near the installation location of the CD changer. ◀

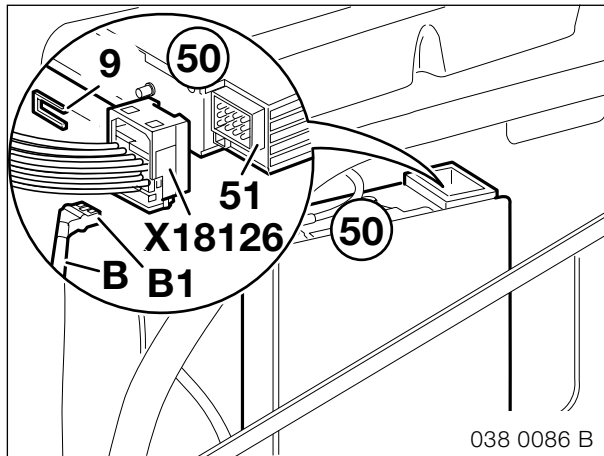


If necessary the on-board monitor radio (50) must be removed behind the cover in the left side part so that you can disconnect the radio connection plug **X18126**. ◀

Connect branch **B1**, 10-pin socket casing on the CD changer connection cable **B** to the black 17-pin socket casing **X18126** and secure it with a retaining clip (9). Then connect socket casing **X18126** to the plug casing (51) on the on-board monitor radio (50). Lay the CD changer connection cable **B** to the installation site of the CD changer.

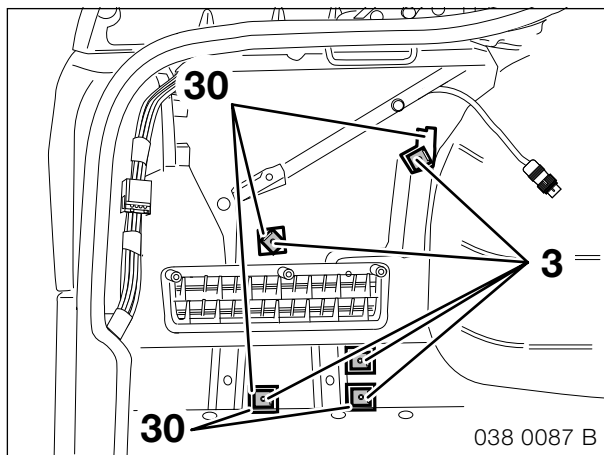


Remove the marked cut-outs in the cover on the left side part at the five mounting points (30). Insert five speed nuts M5 (3) into the five mounting points (30) on the body.

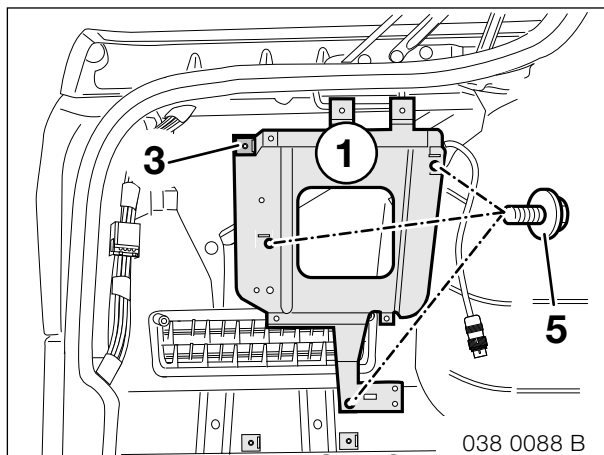


Secure the base holder (1) with three hexagonal screws with washers M5x14 (5). Place a speed nut M5 (3) on the base holder (1).

13. To install the CD changer (cars with a production date prior to 09/98 with an on-board monitor only)

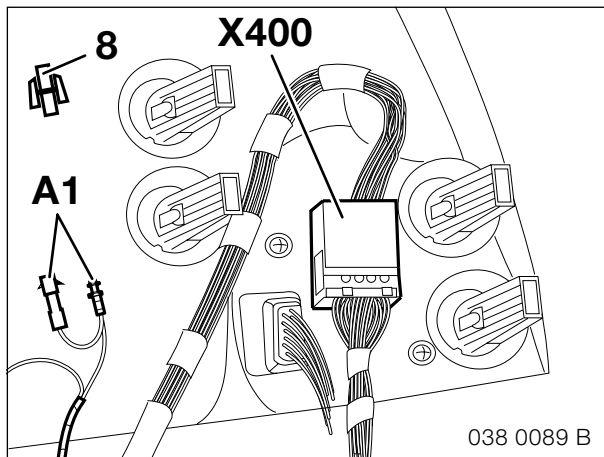


Open plug connector **X400** near the left tail light cup. Disconnect the socket contact from slot **PIN2**, red/green cable on the white 12-pin socket casing **X400**. Connect the socket contact on branch **PIN2**, red/green cable to the white 12-pin socket casing **X400** in slot **PIN2**. Connect the supplied white 1-pin socket casing (8) to the disconnected socket contact and connect this to the black 1-pin plug casing **A1**, red/green cable.

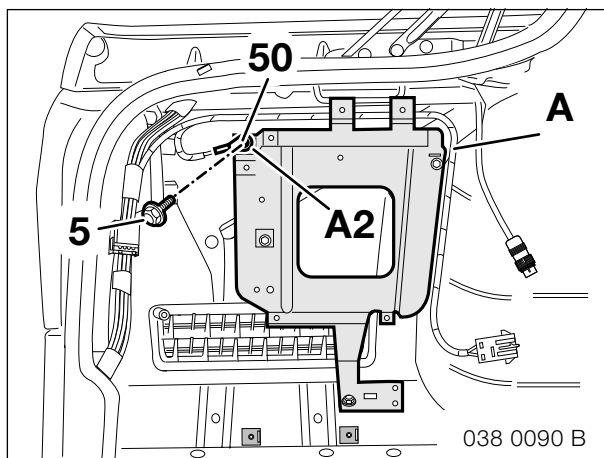


Secure branch **A2**, cable eyelet with a diameter pg 6 mm to the earth point (50) on the audio module holder using a hexagonal screw with washer M5x14 (5).



Ensure that a good earth connection is made. ◀

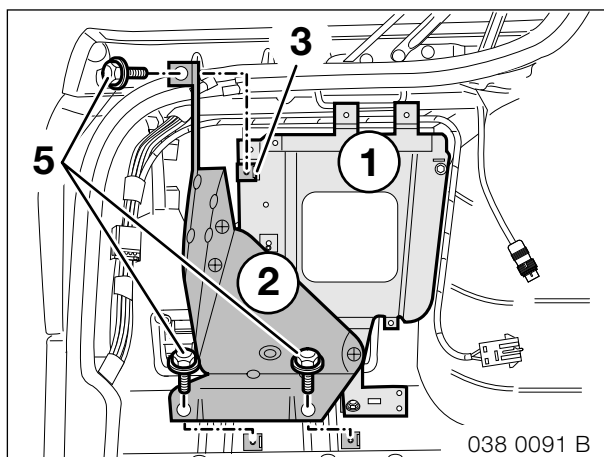


Place a speed nut M5 (3) in the base holder (1). Secure the CD changer holder (2), as shown, with three hexagonal screws with washers M5x14 (5).

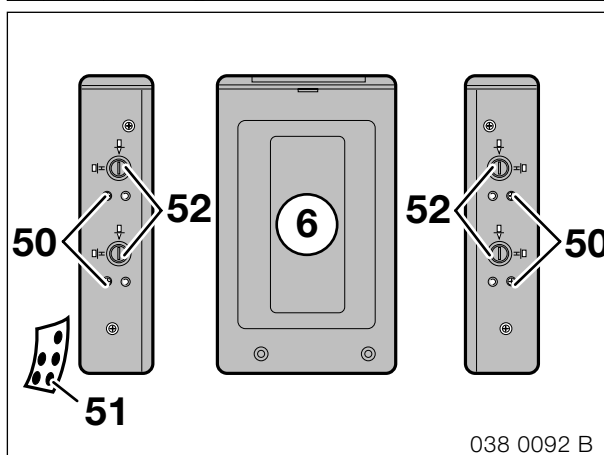


Remove the four transport securing screws (50) from the CD changer (6) and seal the openings with the enclosed adhesive patches (51) (the adhesive patches are supplied with the CD changer). Set the adjustment mechanism (52) to **V** (vertical installation) using a flat screwdriver.


13. To install the CD changer (cars with a production date prior to 09/98 with an on-board monitor only)

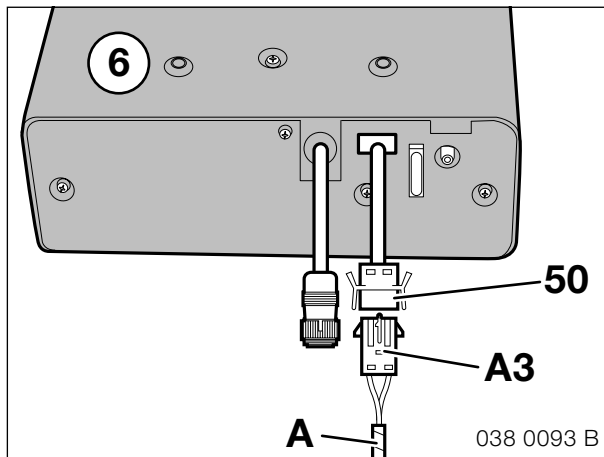

Connect branch **A3**, white 3-pin plug casing on the power supply cable **A** to the white 3-pin socket casing (50) on the CD changer (6).

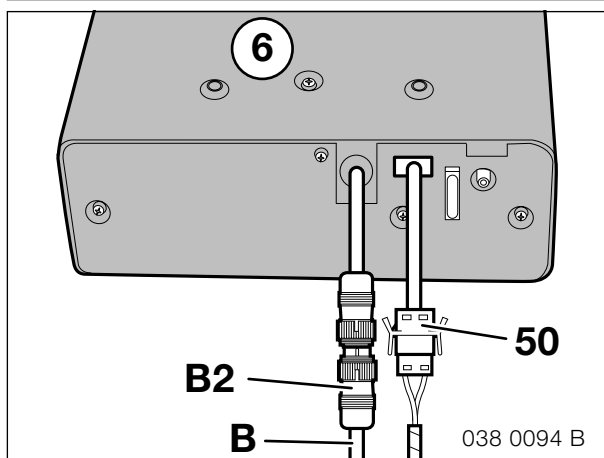


Connect branch **B2**, black 14-pin plug casing on the CD changer connection cable **B** to the black 14-pin plug casing (50) on the CD changer (6).

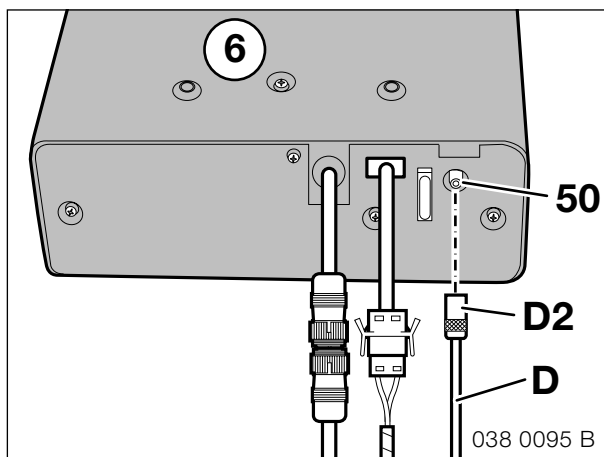


The following work is only required for cars with a DSP amplifier. ◀

Connect branch **D2**, straight plug on the coaxial cable **D** to the coaxial connector (50) on the CD changer (6).

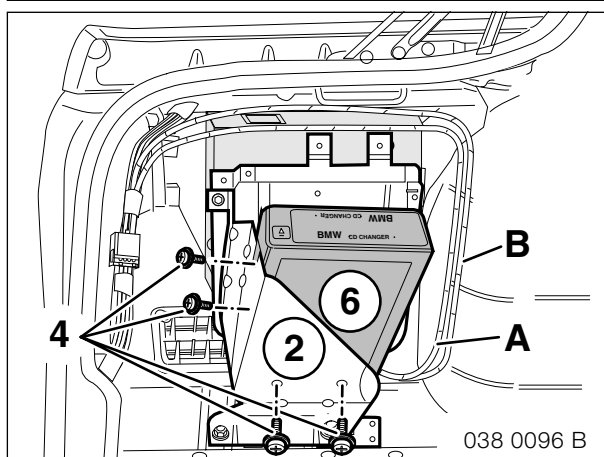

Slide the CD changer (6) into the holder (2) and secure it to the holder (2) with four fillister head Philips screws with washers M4x8 (4). Secure the plug connectors, power supply cable **A**, CD changer control cable **B** and the coaxial cable **D** (if fitted) with cable ties.


13. To install the CD changer (cars with a production date prior to 09/98 with an on-board monitor only)

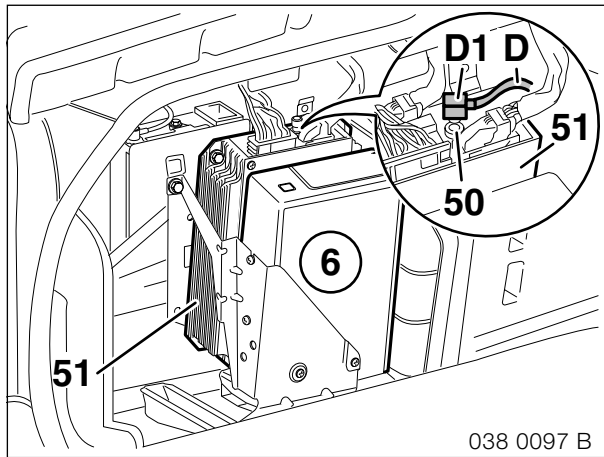


The following work is only required for cars with a DSP amplifier. ◀

Connect branch **D1**, angled plug on the coaxial cable **D** to the coaxial connector (50) on the DSP amplifier (51).

14. To install the CD changer (cars with a production date prior to 09/98 and without an on-board monitor only)

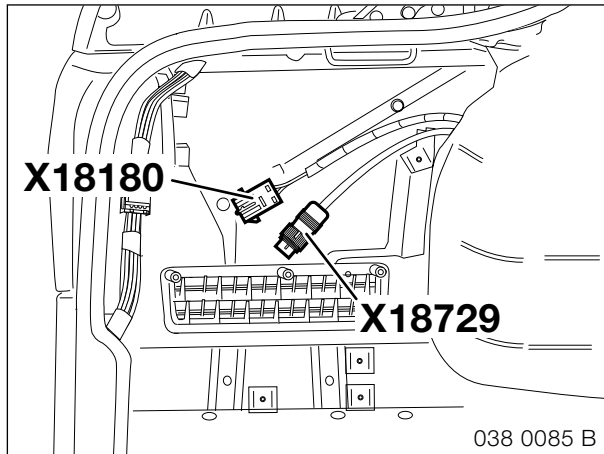


The installation of the power supply cable **A** and the CD changer connection cable **C** is **only required** if the white 3-pin plug casing **X18180** or the black 14-pin plug casing **X18729** are **not** tied back near the installation location of the CD changer. ◀

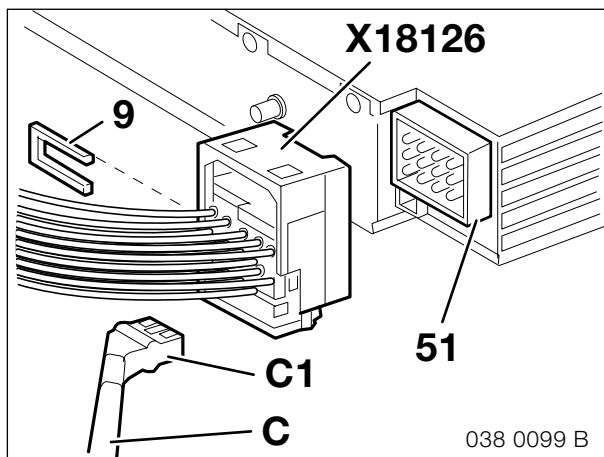


The figure shows the radio at the front. ◀

Connect branch **C1**, 10-pin socket casing on the CD changer connection cable **C** to the black 17-pin socket casing **X18126** and secure it with a retaining clip (9). Then connect socket casing **X18126** to the radio at the front.

Lay the CD changer connection cable **C** to the installation site of the CD changer.

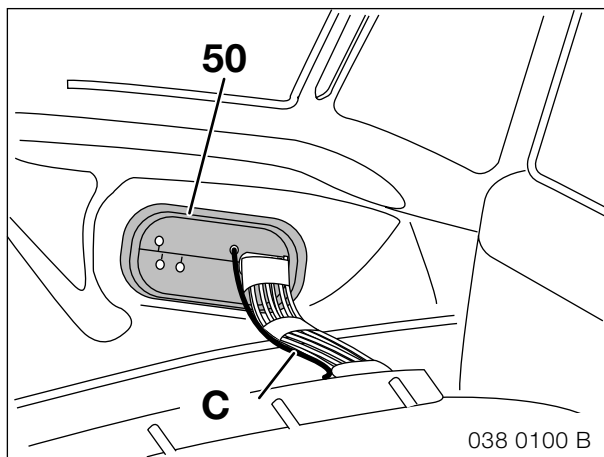


Lay the CD changer connection cable **C** through the rubber grommet (50) under the rear window shelf into the boot to the installation site of the CD changer.

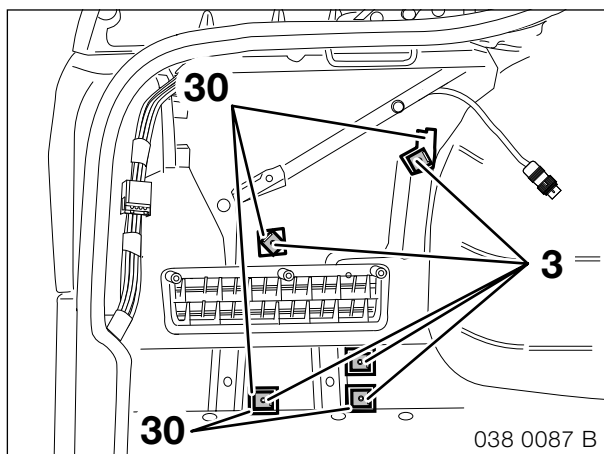


Remove the marked cut-outs in the cover on the left side part at the five mounting points (30). Insert five speed nuts M5 (3) into the five mounting points (30) on the body.


14. To install the CD changer (cars with a production date prior to 09/98 and without an on-board monitor only)

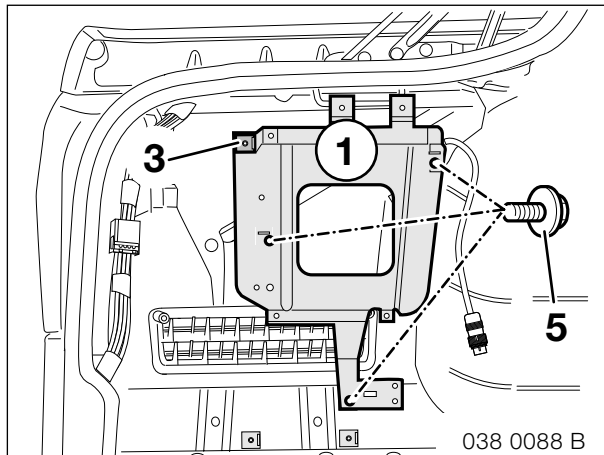

Secure the base holder (1) with three hexagonal screws with washers M5x14 (5). Place a speed nut M5 (3) on the base holder (1).

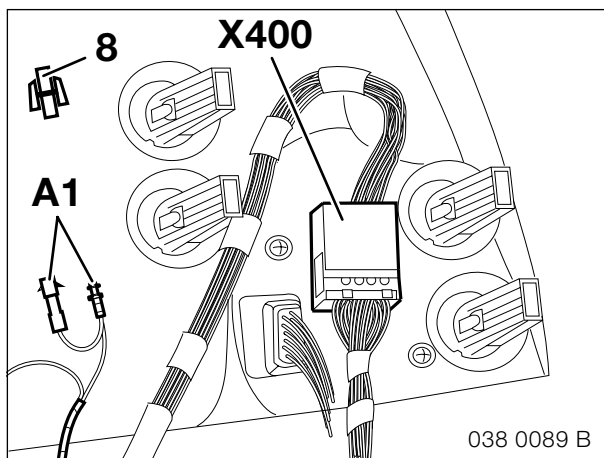


Open plug connector **X400** near the left tail light cup. Disconnect the socket contact from slot **PIN2**, red/green cable on the white 12-pin socket casing **X400**. Connect the socket contact on branch **PIN2**, red/green cable to the white 12-pin socket casing **X400** in slot **PIN2**. Connect the supplied black 1-pin socket casing (8) to the disconnected socket contact and connect this to the black 1-pin plug casing **A1**, red/green cable.

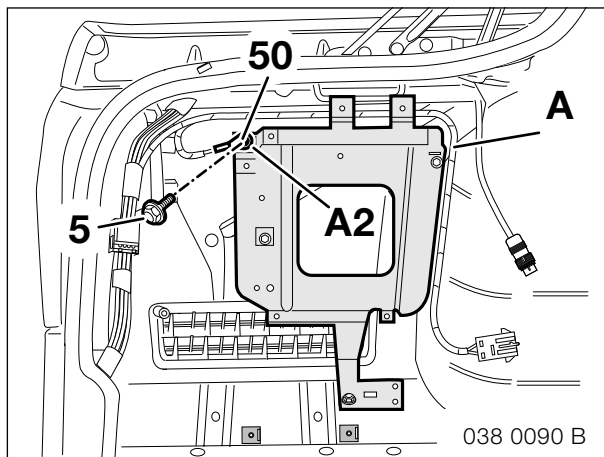

Secure branch **A2**, cable eyelet with a diameter of 6 mm to the earth point (50) on the audio module holder using a hexagonal screw with washer M5x14 (5).




Ensure that a good earth connection is made. ◀

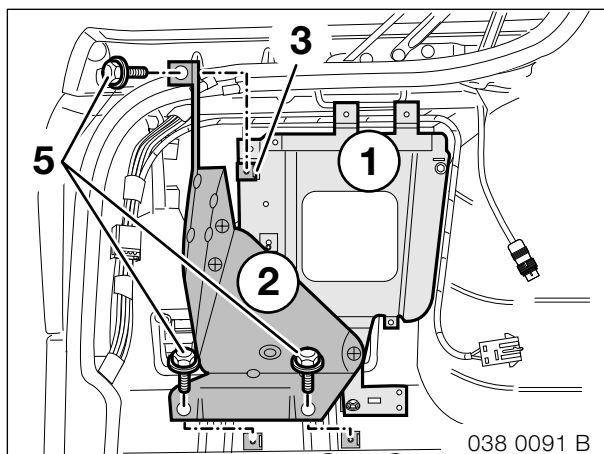


Place a speed nut M5 (3) in the base holder (1). Secure the CD changer holder (2), as shown, with three hexagonal screws with washers M5x14 (5).


14. To install the CD changer (cars with a production date prior to 09/98 and without an on-board monitor only))

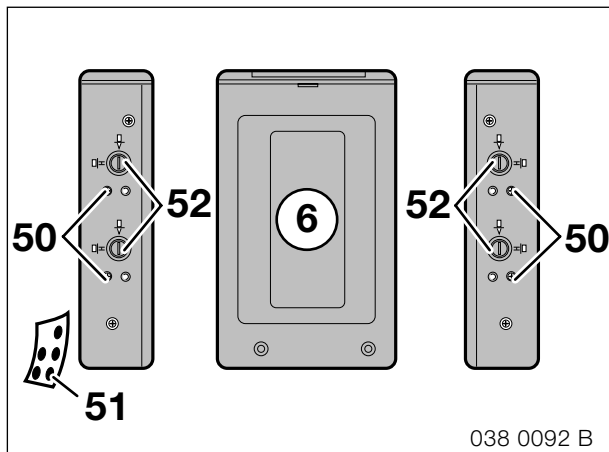


Remove the four transport securing screws (50) from the CD changer (6) and seal the openings with the enclosed adhesive patches (51) (the adhesive patches are supplied with the CD changer). Set the adjustment mechanism (52) to **V** (vertical installation) using a flat screwdriver.

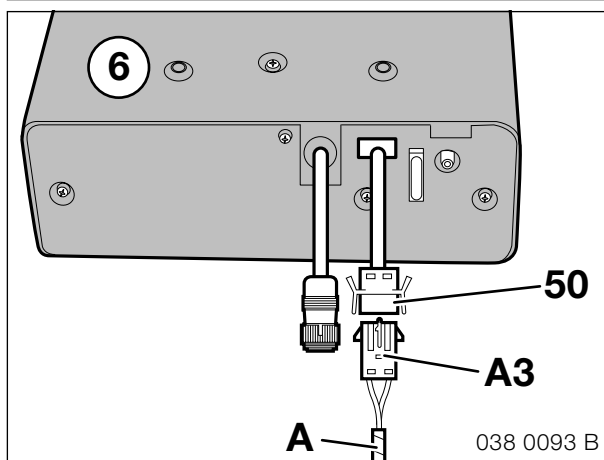

Connect branch **A3**, white 3-pin plug casing on the power supply cable **A** to the white 3-pin socket casing (50) on the CD changer (6).

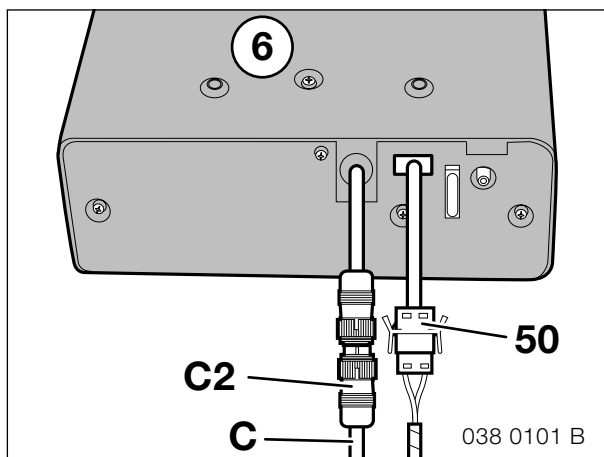


Connect branch **C2**, black 14-pin plug casing on the CD changer connection cable **C** to the black 14-pin plug casing (50) on the CD changer (6).

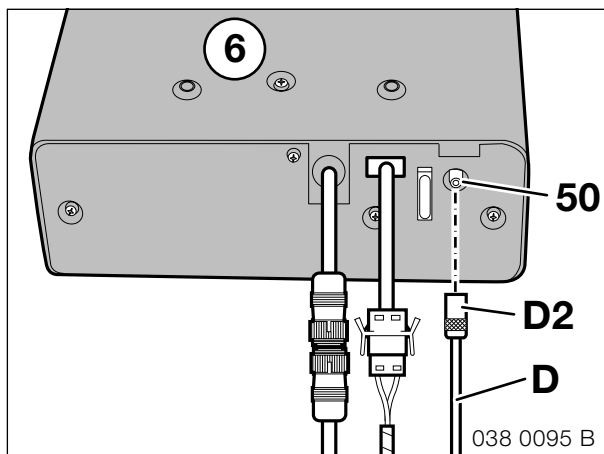


The following work is only required for cars with a DSP amplifier. ◀

Connect branch **D2**, straight plug on the coaxial cable **D** to the coaxial connector (50) on the CD changer (6).

14. To install the CD changer (cars with a production date prior to 09/98 and without an on-board monitor only)

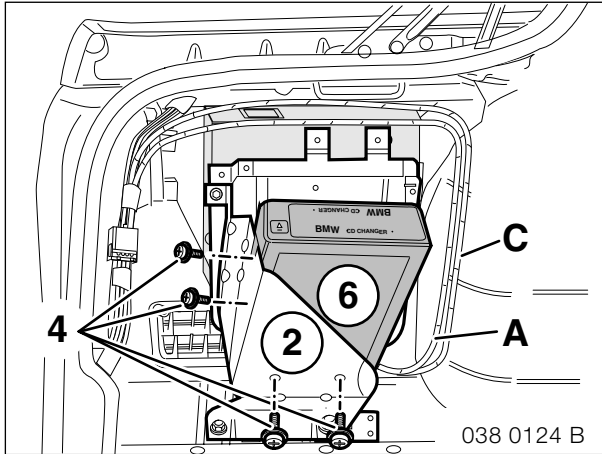


Slide the CD changer (6) into the holder (2) and secure it to the holder (2) with four fillister head Philips screws with washers M4x8 (4). Secure the plug connectors, power supply cable **A**, CD changer control cable **C** and the coaxial cable **D** (if fitted) with cable ties.

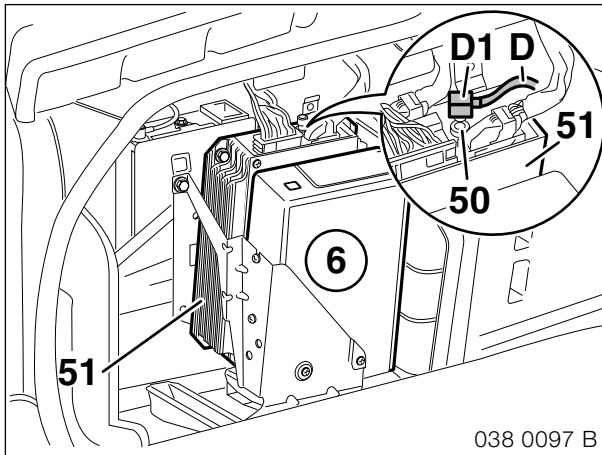


The following work is only required for cars with a DSP amplifier. ◀

Connect branch **D1**, angled plug on the coaxial cable **D** to the coaxial connector (50) on the DSP amplifier (51).

15. To install the CD changer (cars with a production date after 09/98 and with an on-board monitor without a DSP amplifier only))

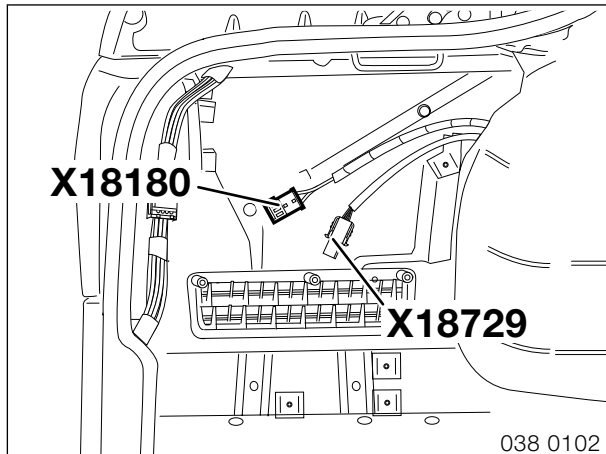


The installation of the power supply cable **E** and the CD changer connection cable **F** is **only required** if the white 3-pin socket casing **X18180** or the black 6-pin socket casing **X18729** are **not** tied back near the installation location of the CD changer. ◀

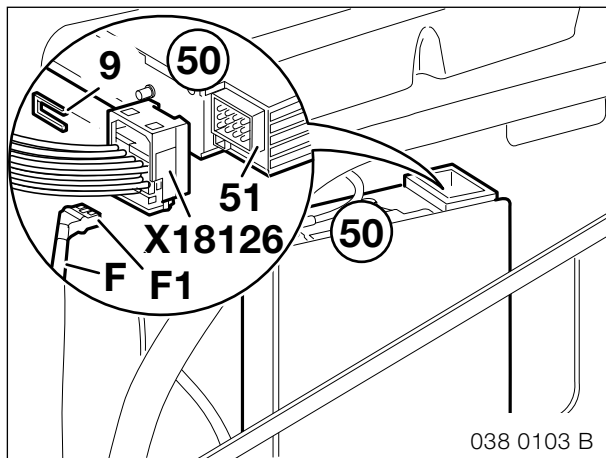


If necessary the on-board monitor radio (50) must be removed behind the cover in the left side part so that you can disconnect the radio connection plug **X18126**. ◀

Connect branch **F1**, 10-pin socket casing on the CD changer connection cable **F** to the black 17-pin socket casing **X18126** and secure it with a retaining clip (9). Then connect socket casing **X18126** to the plug casing (51) on the on-board monitor radio (50). Lay the CD changer connection cable **F** to the installation site of the CD changer.

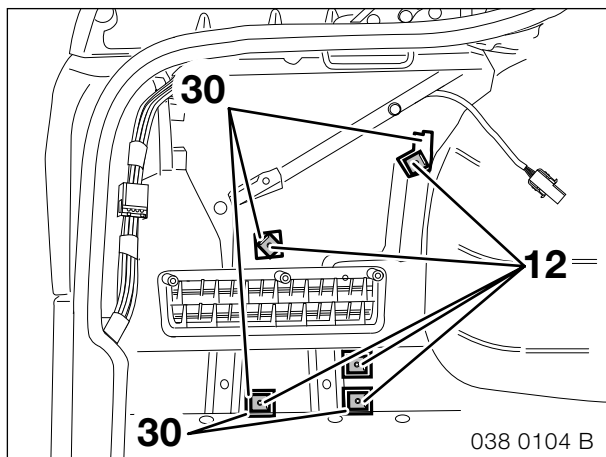


Remove the marked cut-outs in the cover on the left side part at the five mounting points (30). Insert five speed nuts M5 (12) into the five mounting points (30) on the body.

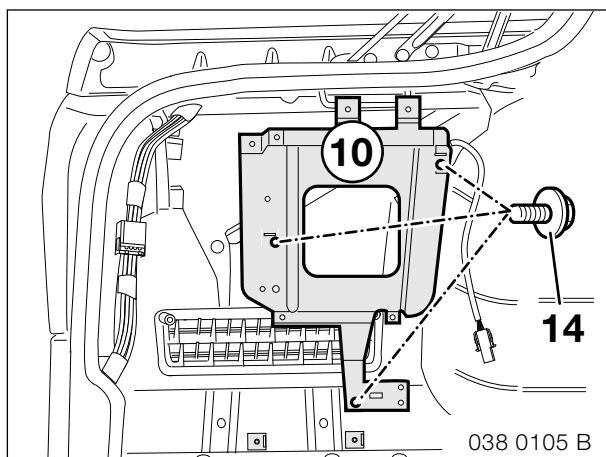


Secure the base holder (10) with three hexagonal screws with washers M5x14 (14).


15. To install the CD changer (cars with a production date after 09/98 and with an on-board monitor without a DSP amplifier only))

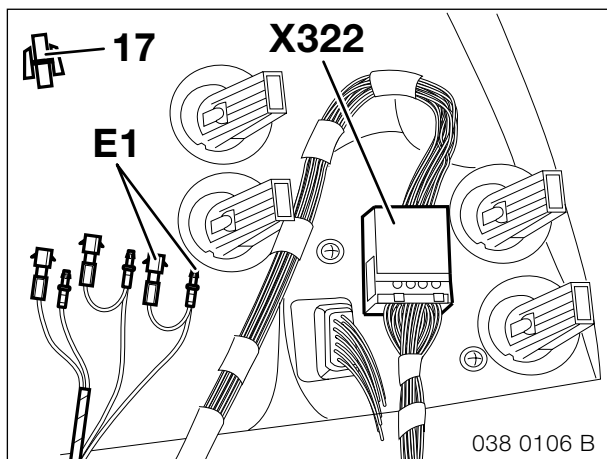


Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN4**, white/red/yellow cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E1**, white/red/yellow cable, to the black 12-pin socket casing **X322** in slot **PIN4**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E1**, white/red/yellow cable.

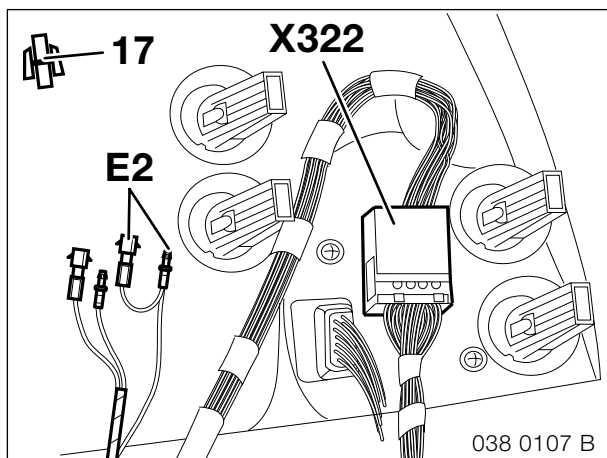

Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN1**, red/green cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E2**, red/green cable to the black 12-pin socket casing **X322** in slot **PIN1**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E2**, red/green cable.

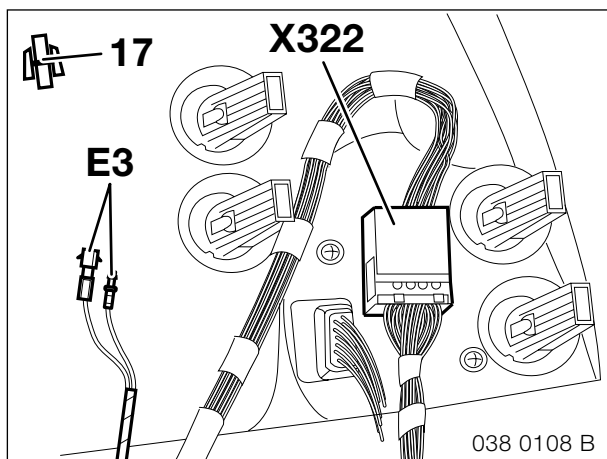


Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN7**, brown cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E3**, brown cable to the black 12-pin socket casing **X322** in slot **PIN7**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E3**, brown cable.

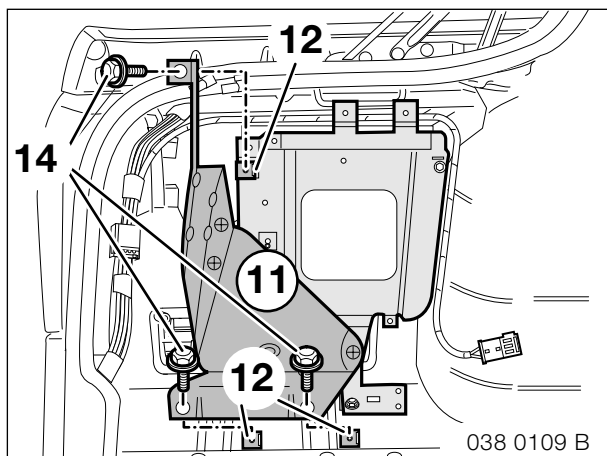


Place a speed nut M5 (12) in the base holder (10). Secure the CD changer holder (11), as shown, with three hexagonal screws with washers M5x14 (14).


15. To install the CD changer (cars with a production date after 09/98 and with an on-board monitor without a DSP amplifier only))

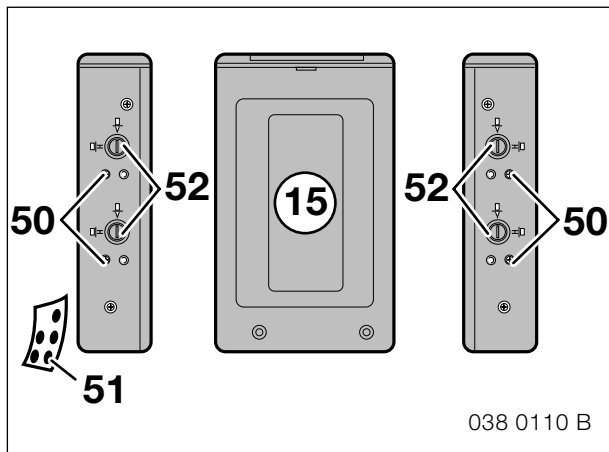


Remove the four transport securing screws (50) from the CD changer (6) and seal the openings with the enclosed adhesive patches (51) (the adhesive patches are supplied with the CD changer). Set the adjustment mechanism (52) to **V** (vertical installation) using a flat screwdriver.

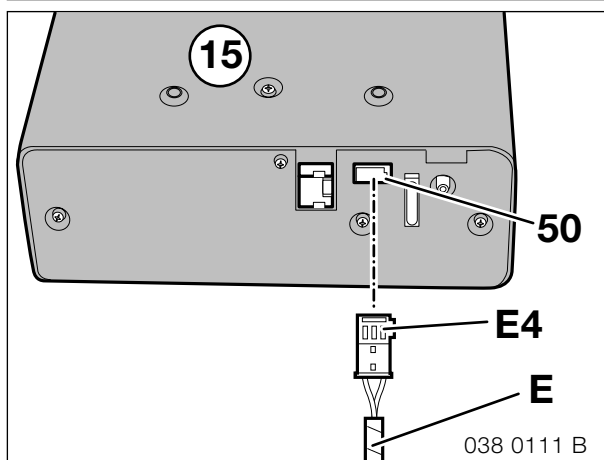

Connect branch **E4**, black 3-pin socket casing on the power supply cable **E** to the plug casing (50) on the CD changer (15).

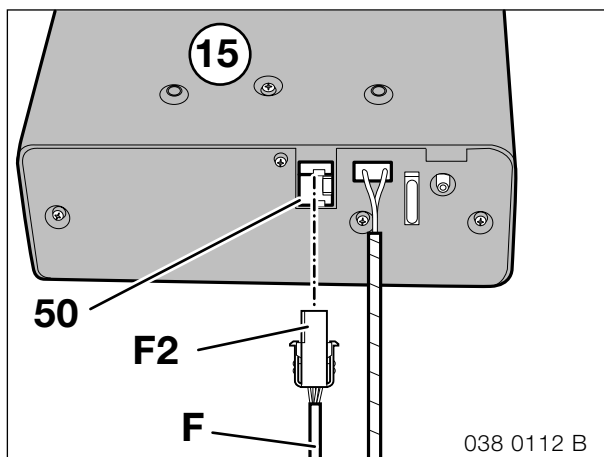


Connect branch **F2**, black 6-pin socket casing on the CD changer connection cable **F** to the plug casing (50) on the CD changer (15).

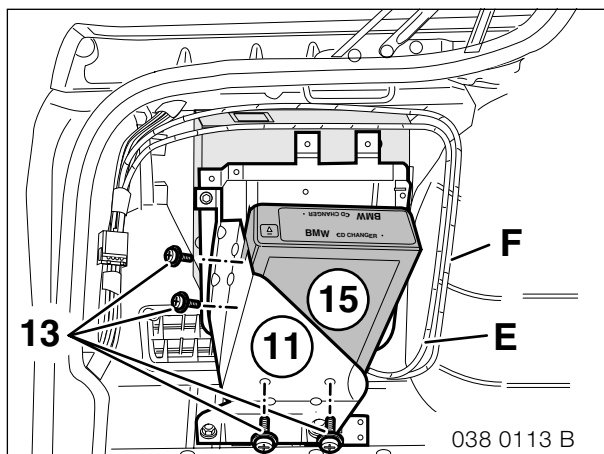


Slide the CD changer (15) into the holder (11) and secure it to the holder (11) with three Phillips screws with washers M4x8 (13). Secure the power supply cable **E** and the CD changer connection cable **F** with cable ties.

16. To install the CD changer (cars with a production date after 09/98 and without an on-board monitor and without a DSP amplifier only))

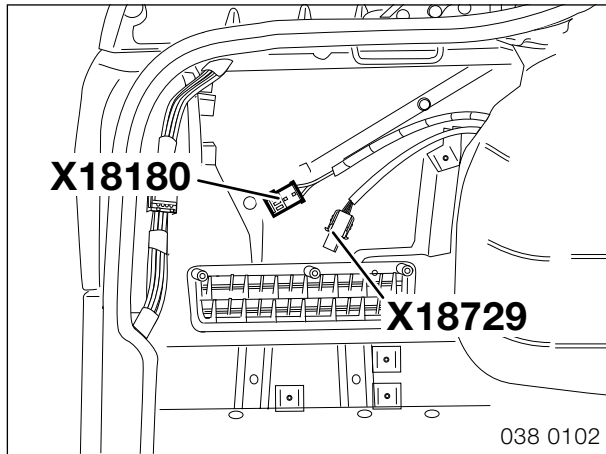

The installation of the power supply cable **E** and the CD changer connection cable **G** is **only required** if the white 3-pin socket casing **X18180** or the black 6-pin socket casing **X18729** are **not** tied back near the installation location of the CD changer. ◀

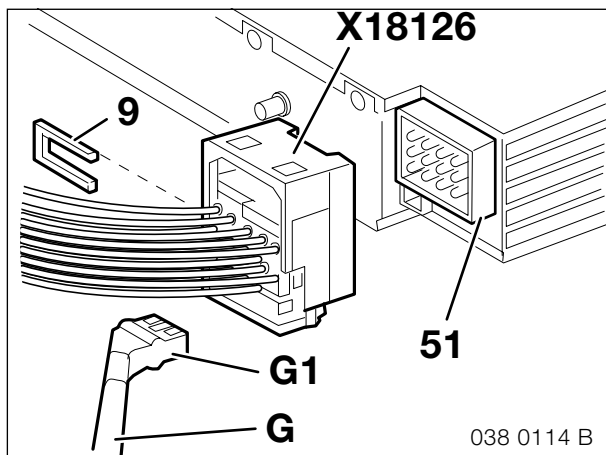


The figure shows the radio at the front. ◀


Connect branch **G1**, 10-pin socket casing on the CD changer connection cable **G** to the black 17-pin socket casing **X18126** and secure it with a retaining clip (9).

Then connect socket casing **X18126** to the radio at the front.

Lay the CD changer connection cable **G** to the installation site of the CD changer.

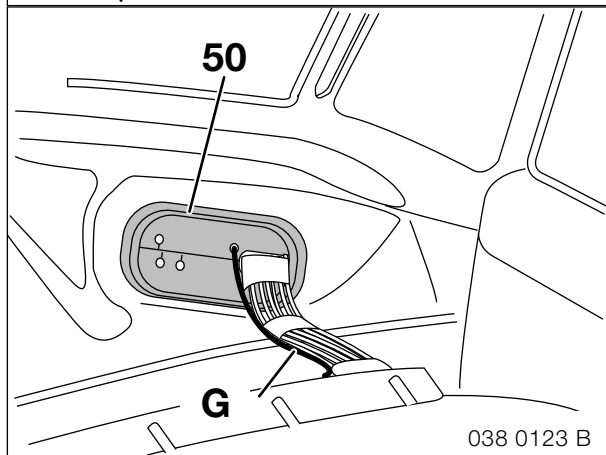


Lay the CD changer connection cable **G** through the rubber grommet (50) under the rear window shelf into the boot to the installation site of the CD changer.

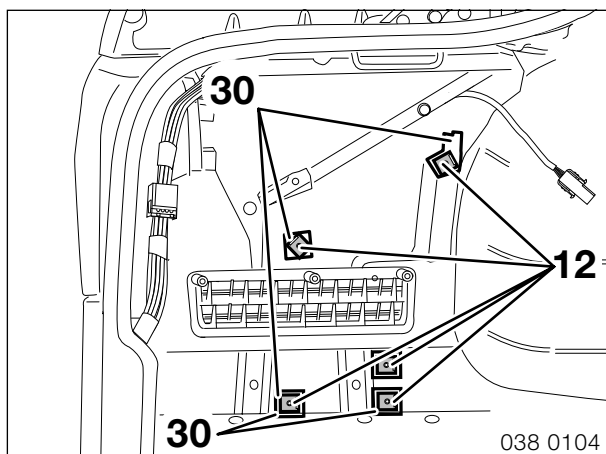


Remove the marked cut-outs in the cover on the left side part at the five mounting points (30). Insert five speed nuts M5 (12) into the five mounting points (30) on the body.


16. To install the CD changer (cars with a production date after 09/98 and without an on-board monitor and without a DSP amplifier only))

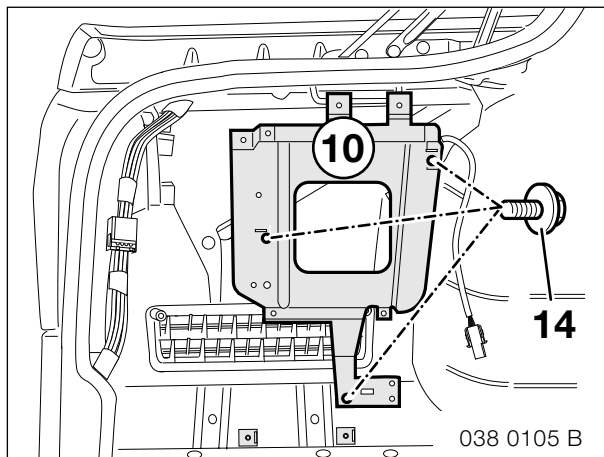


Secure the base holder (10) with three hexagonal screws with washers M5x14 (14).

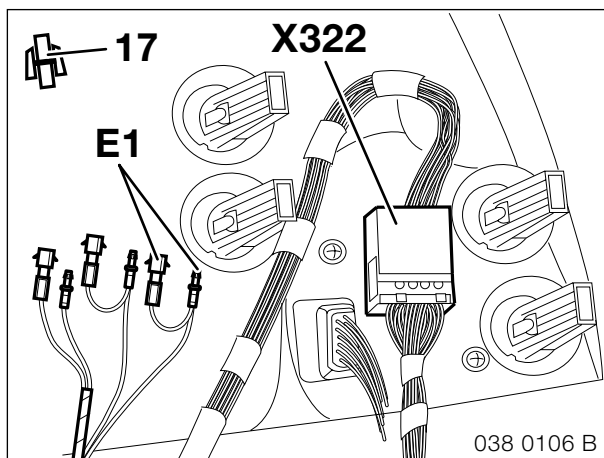

Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN4**, white/red/yellow cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E1**, white/red/yellow cable, to the black 12-pin socket casing **X322** in slot **PIN4**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E1**, white/red/yellow cable.

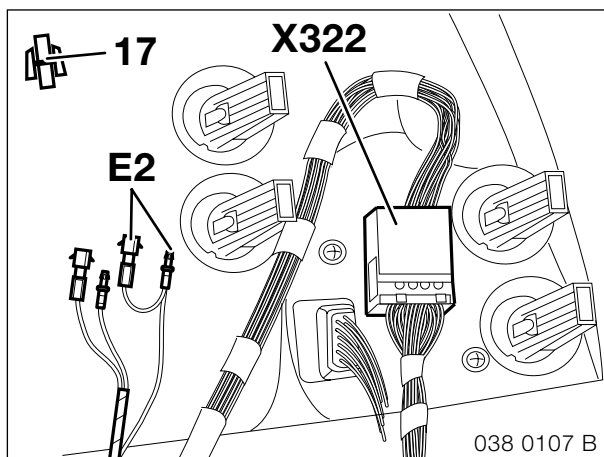


Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN1**, red/green cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E2**, red/green cable to the black 12-pin socket casing **X322** in slot **PIN1**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E2**, red/green cable.

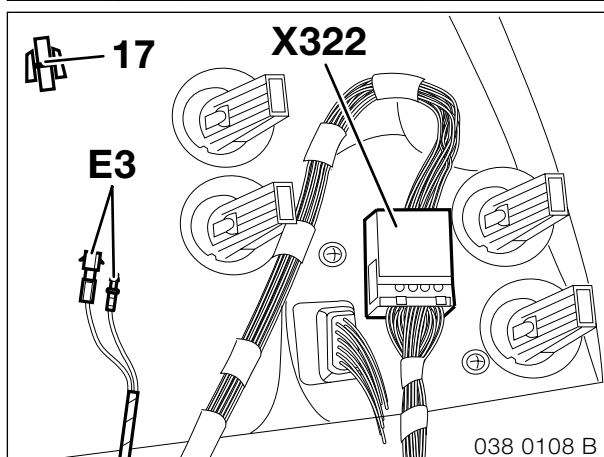


Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN7**, brown cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E3**, brown cable to the black 12-pin socket casing **X322** in slot **PIN7**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E3**, brown cable.


16. To install the CD changer (cars with a production date after 09/98 and without an on-board monitor and without a DSP amplifier only))

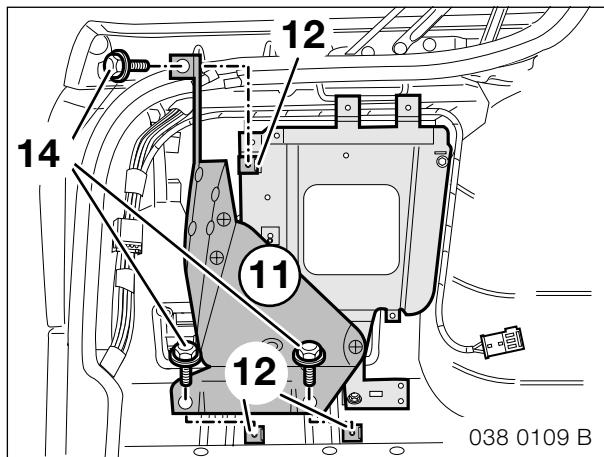


Place a speed nut M5 (12) in the base holder (10). Secure the CD changer holder (11), as shown, with three hexagonal screws with washers M5x14 (14).

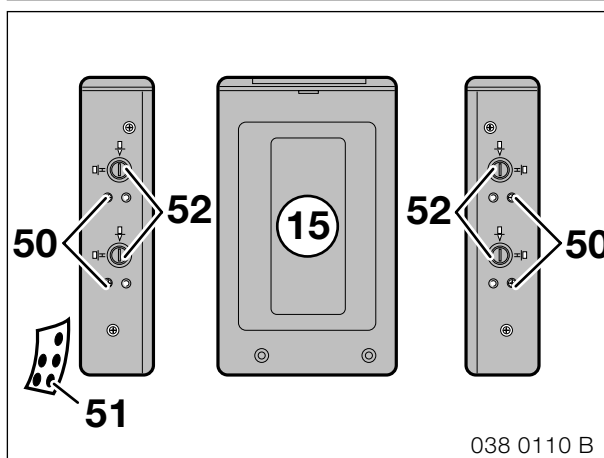

Remove the four transport securing screws (50) from the CD changer (15) and seal the openings with the enclosed adhesive patches (51) (the adhesive patches are supplied with the CD changer). Set the adjustment mechanism (52) to **V** (vertical installation) using a flat screwdriver.

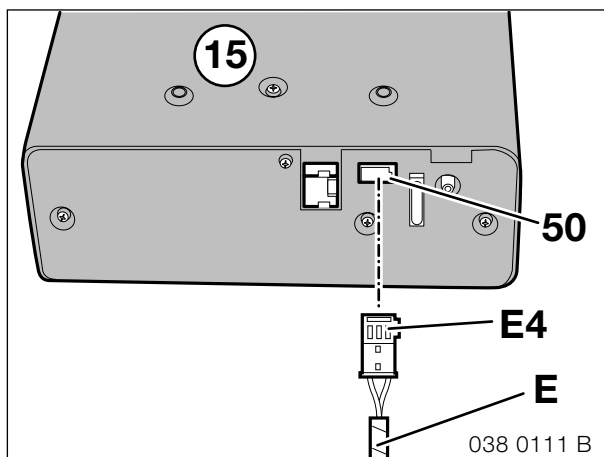


Connect branch **E4**, black 3-pin socket casing on the power supply cable **E** to the plug casing (50) on the CD changer (15).

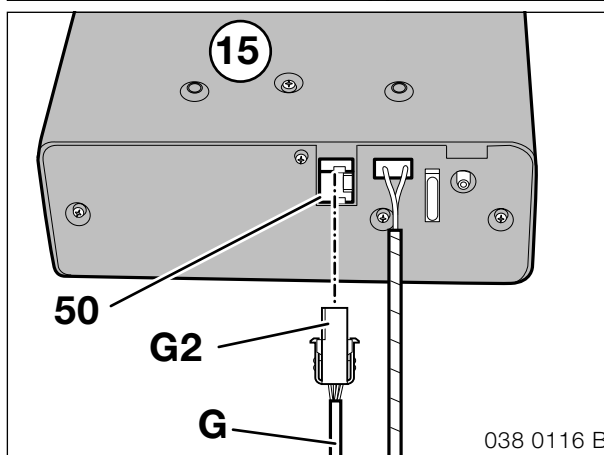


Connect branch **G2**, black 6-pin socket casing on the CD changer connection cable **G** to the plug casing (50) on the CD changer (15).

16. To install the CD changer (cars with a production date after 09/98 and without an on-board monitor and without a DSP amplifier only)

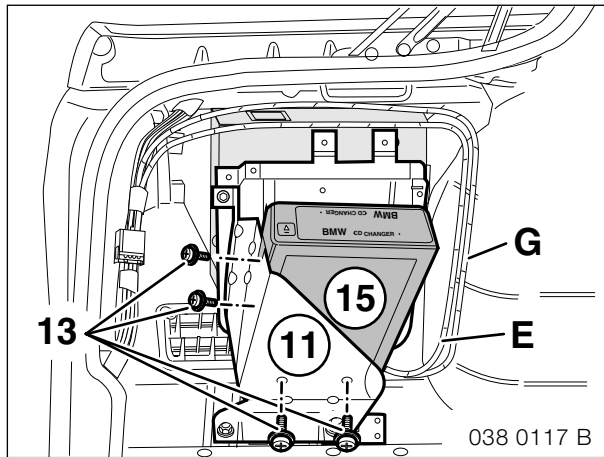


Slide the CD changer (15) into the holder (11) and secure it to the holder (11) with three fillister head Philips screws with washers M4x8 (13). Secure the power supply cable **E** and the CD changer connection cable **G** with cable ties.


17. To install the CD changer (cars with a production date after 09/98 with a DSP amplifier only)

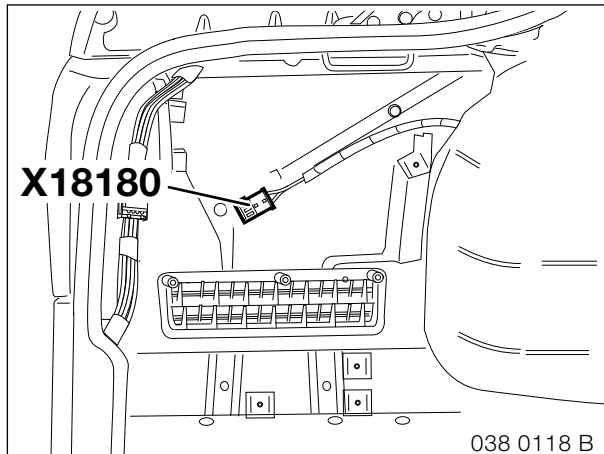


The installation of the power supply cable **E** is **only required** if the black 3-pin plug casing **X18180** is **not** tied back near the CD changer installation site. ◀

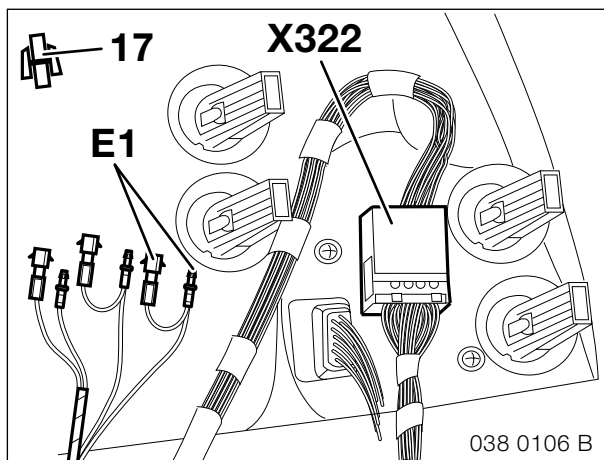

Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN4**, white/red/yellow cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E1**, white/red/yellow cable, to the black 12-pin socket casing **X322** in slot **PIN4**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E1**, white/red/yellow cable.

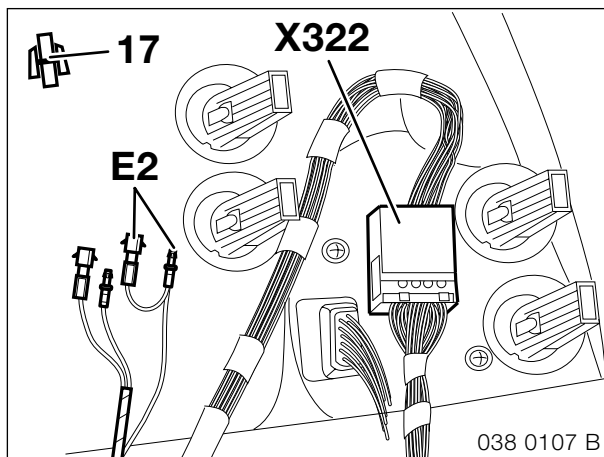


Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN1**, red/green cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E2**, red/green cable to the black 12-pin socket casing **X322** in slot **PIN1**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E2**, red/green cable.

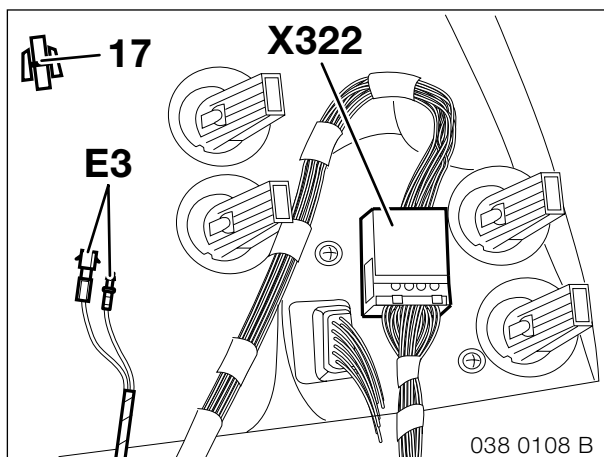


Open plug connector **X322** near the left tail light cup. Disconnect the socket contact from slot **PIN7**, brown cable on the black 12-pin socket casing **X322**. Connect the socket contact on branch **E3**, brown cable to the black 12-pin socket casing **X322** in slot **PIN7**. Connect the supplied black 1-pin socket casing (17) to the disconnected socket contact and connect this to the black 1-pin plug casing **E3**, brown cable.


17. To install the CD changer (cars with a production date after 09/98 with a DSP amplifier only)

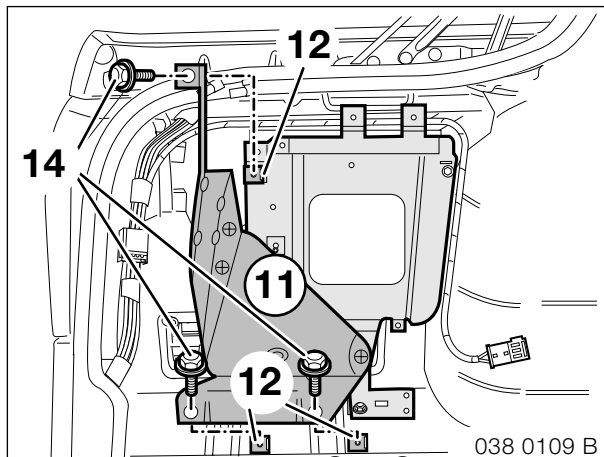


Insert three speed nuts M5 (12). Secure the CD changer holder (11), as shown, with three hexagonal screws with washers M5x14 (14).

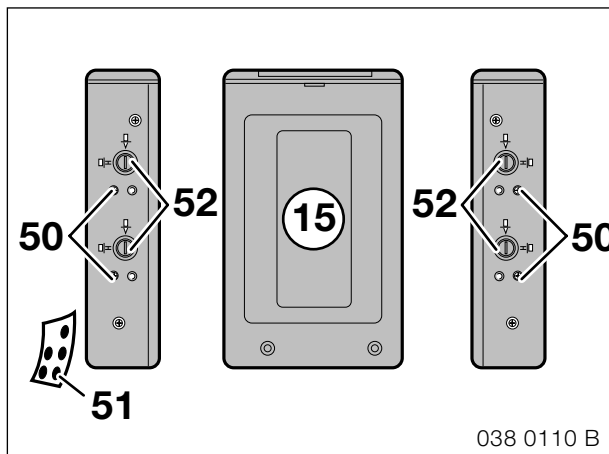

Remove the four transport securing screws (50) from the CD changer (15) and seal the openings with the enclosed adhesive patches (51) (the adhesive patches are supplied with the CD changer). Set the adjustment mechanism (52) to **V** (vertical installation) using a flat screwdriver.

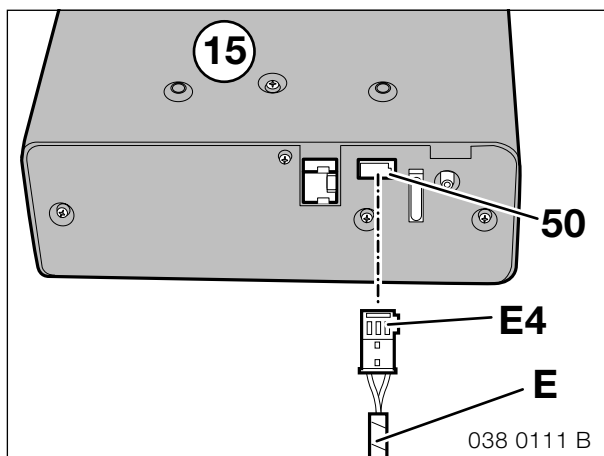


Connect branch **E4**, black 3-pin socket casing on the power supply cable **E** to the plug casing (50) on the CD changer (15).

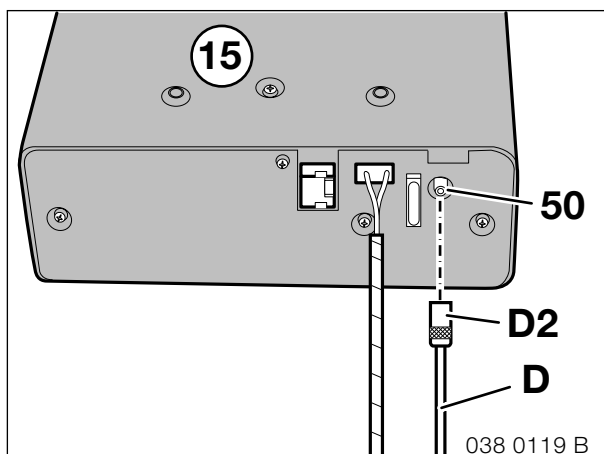

Connect branch **D2**, straight plug on the coaxial cable **D** to the coaxial connector (50) on the CD changer (15).

17. To install the CD changer (cars with a production date after 09/98 with a DSP amplifier only)

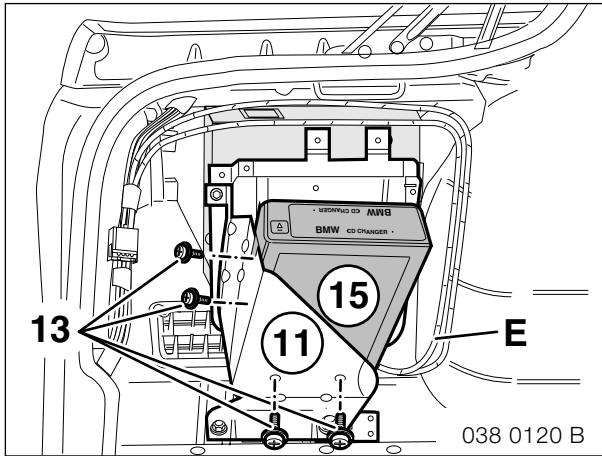

Slide the CD changer (15) into the holder (11) and secure it to the holder (11) with three fillister head Philips screws with washers M4x8 (13). Secure the power supply cable **E** and the CD changer connection cable **D** with cable ties.

18. Coding and concluding work and function

Coding

This system cannot be diagnosed and **requires no encoding**.


Concluding work

Disconnect the battery
Conduct a function test
Assemble the car again following the instructions for dismantling it in reverse order
Print out the error memory

Function

The function of the CD changer is described in the radio owner's manual.

19. Circuit diagram (cars with a production date prior to 09/98 only)

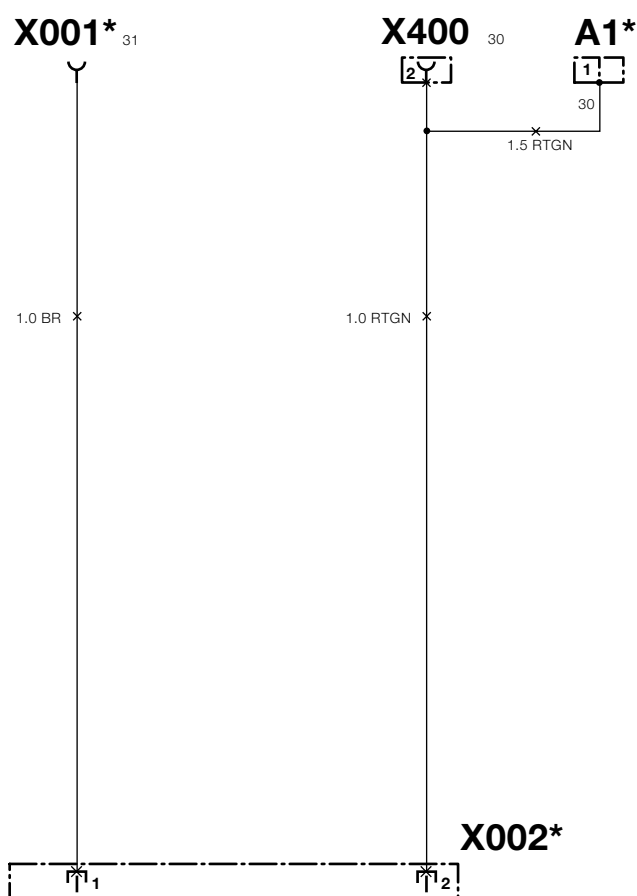

038 0121 B

Legend


- A1* Black 1-pin plug casing
- X001* Earth connector
- X002* White 3-pin plug connector CD changer
- X400 White 12-pin telephone plug connector

The components and X designations marked with an asterisk (*) are only valid for this circuit diagram. All the other components and X designations correspond to BMW after-sales circuit diagrams

Cable colours

- RT red
- GN green
- BR brown

20. Circuit diagram (cars with a production date after 09/98 only)

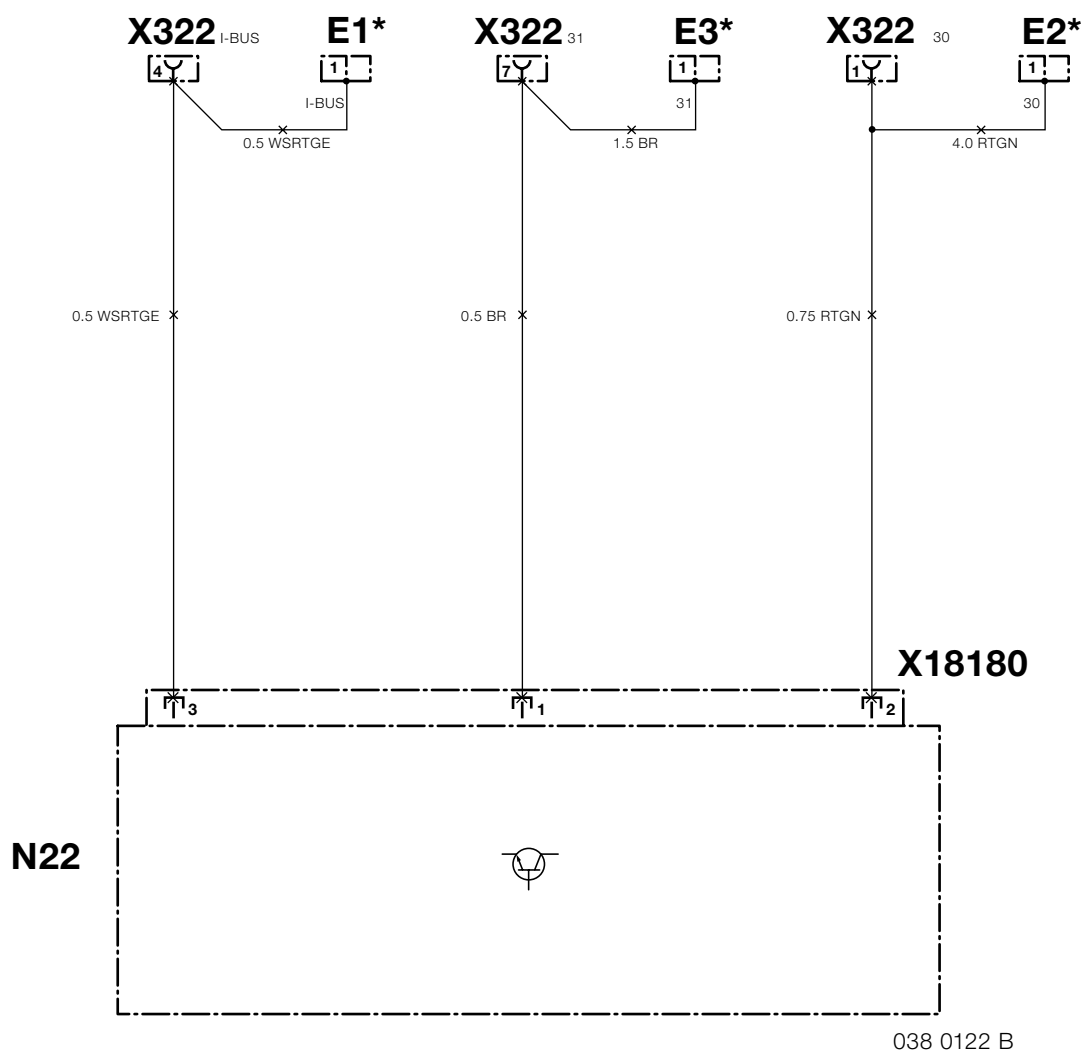

Legend

E1*	Black 1-pin plug casing
E2*	Black 1-pin plug casing
E3*	Black 1-pin plug casing
N22	CD changer
X322	Black 12-pin plug connector
X18180	Black 3-pin plug connector CD changer

The components and X designations marked with an asterisk (*) are only valid for this circuit diagram. All the other components and X designations correspond to BMW after-sales circuit diagrams

Cable colours

RT	red
SW	black
GN	green
BR	brown
GE	yellow
WS	white