



FFPE Tissue Pre-Staining

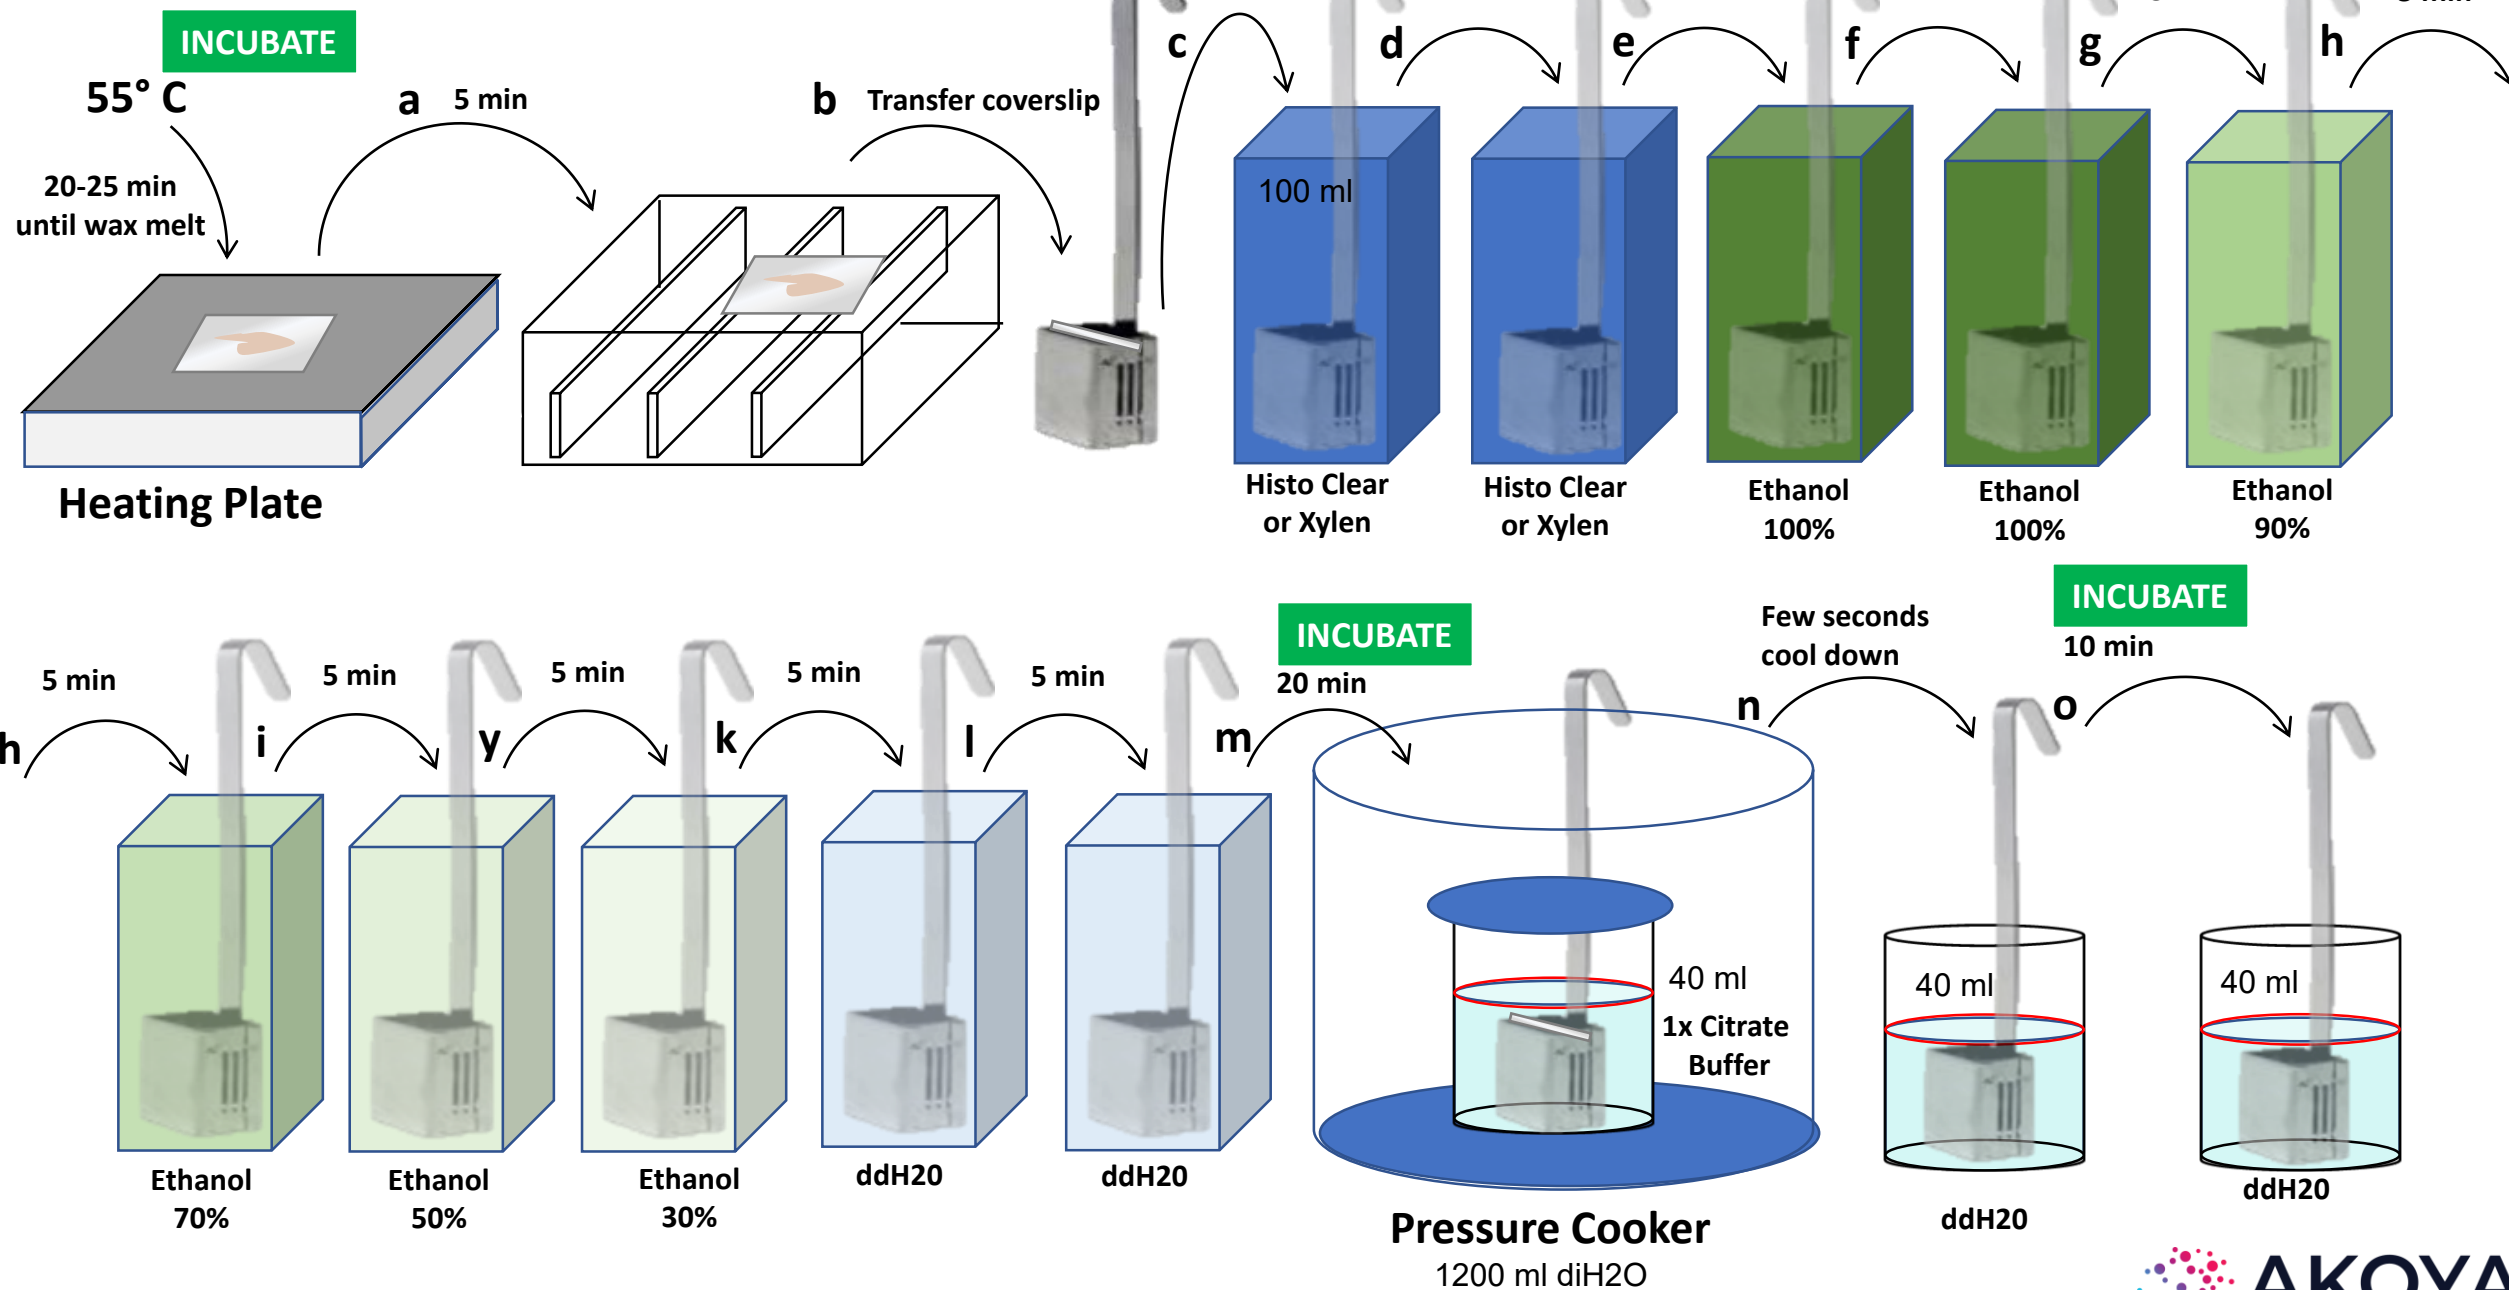

*Add Blockers to CODEX Blocking Buffer during 10m ddH2O wash

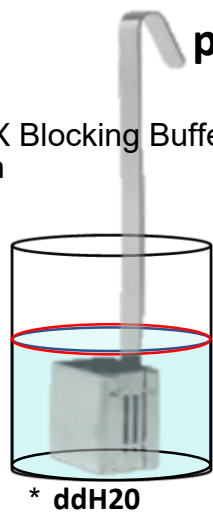


INCUBATE

20 min*

* Sample Coverslips can stay in this solution for a maximum time of 30 min prior to Antibody Staining

**Add primary antibodies to CODEX Blocking Buffer during Staining Buffer wash

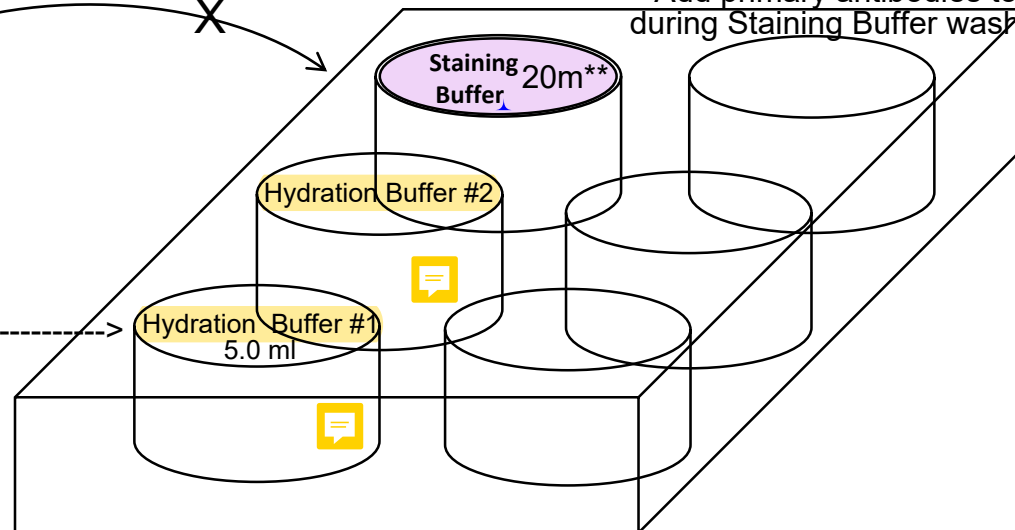


Tissue Staining

Tissue Post-Staining

Antibody Cocktail
200 μ l
(190 μ l)

INCUBATE


3 hrs Room Temperature

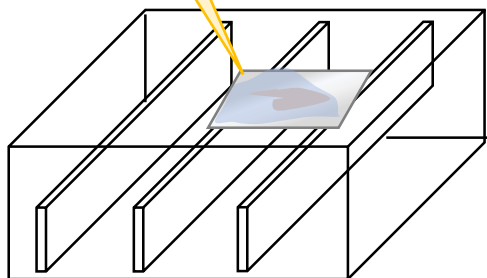

Humidity Chamber

INCUBATE


10 min

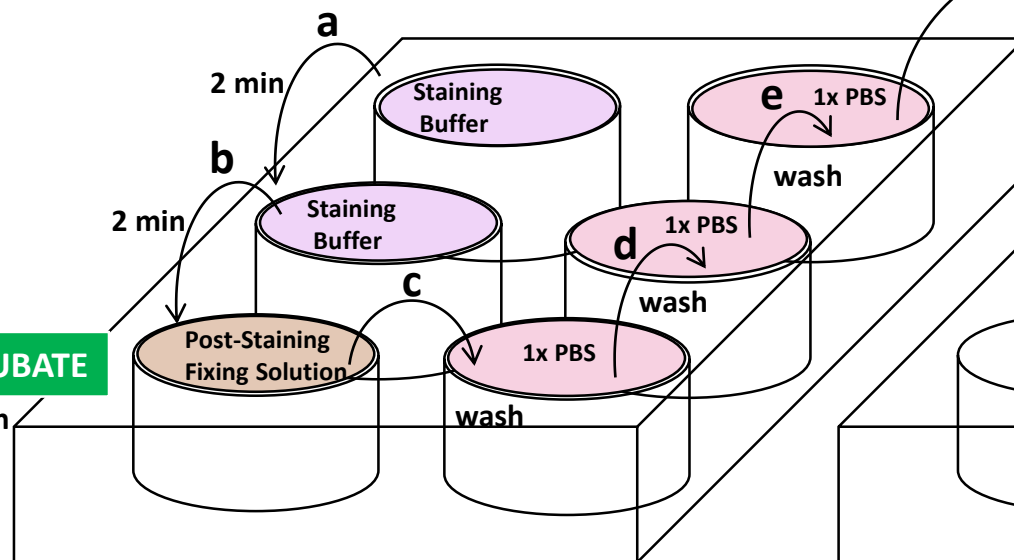

f

INCUBATE

5 min

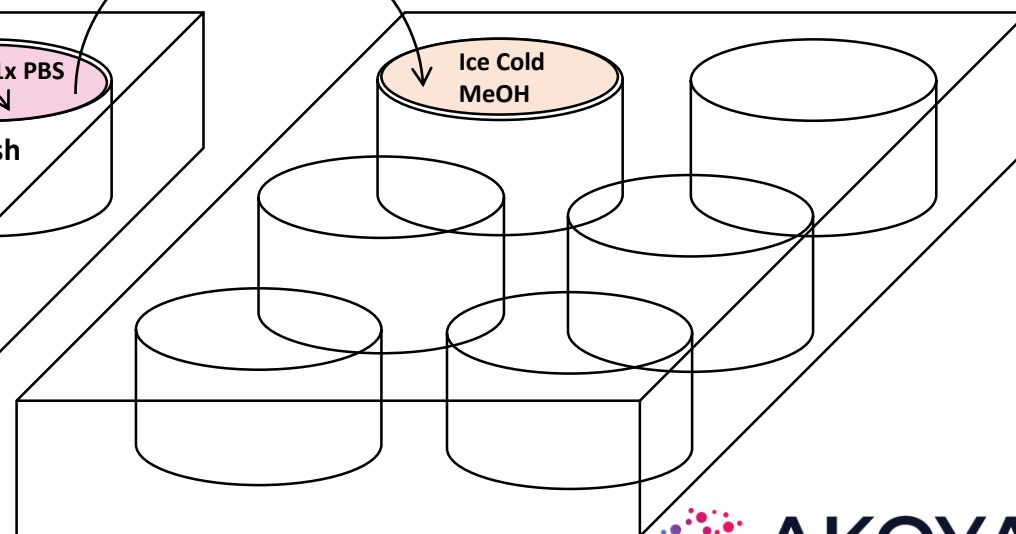

Tissue Post-Staining

***Prepare Final Fix Solution during Methanol fix

