
SOP Proses Quilting

SOP Quilting Process

1. Pemakaian Jarum (*Needle Usage*)

- Ball Point No.7 untuk benang Tex 27 dan jahitan sewing.
  (*Ball Point No.7 for Tex 27 thread and sewing stitches*)

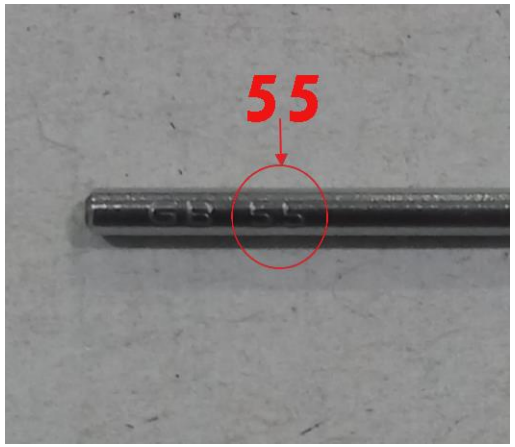

- Ball point No.8 untuk proses quilting.
  (*Ball point No.8 for quilting process*)




- Pastikan jarum diganti secara berkala (tiap 2 jam) dan dilaporkan.
  (*Ensure needles are changed regularly (every 2 hours) and reported*)

2. Kecepatan Mesin Former *(Former Machine Speed)*

- Pastikan kecepatan mesin Former maksimal 2500.


  (Make sure the former engine speed is 2500 max)

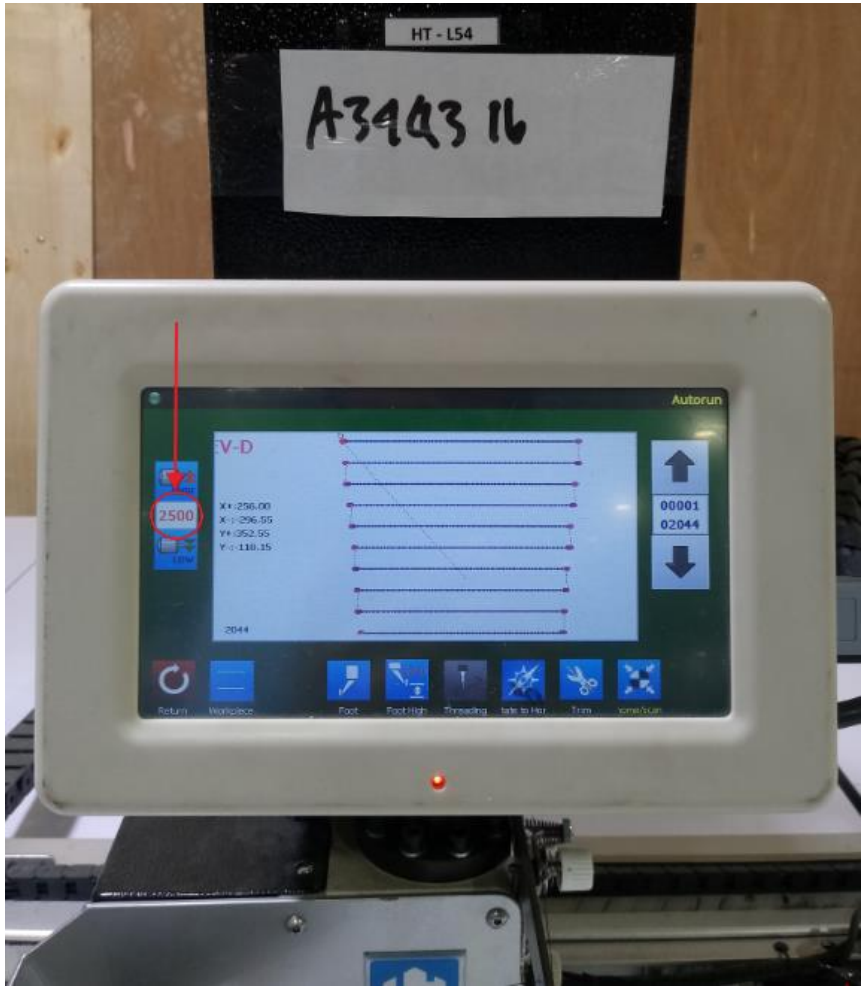

3. Kontrol Tegangan Mesin Tiap Hari *(Daily Machine Tension Control)*





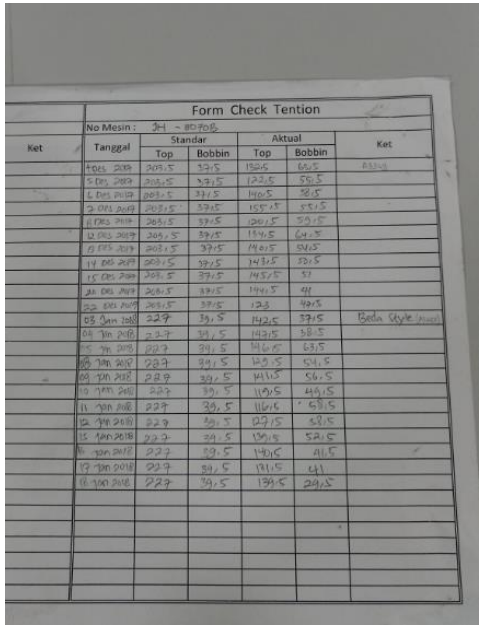

Form Check Tention

Ket	Tanggal	Standar		Aktual		Ket
		Top	Bobbin	Top	Bobbin	
	4 DES 2019	209,5	37,5	150,5	65,5	
	5 DES 2019	208,5	37,5	122,5	56,5	
	6 DES 2019	208,5	37,5	140,5	52,5	
	7 DES 2019	208,5	37,5	155,5	55,5	
	11 DES 2019	208,5	37,5	120,5	59,5	
	12 DES 2019	208,5	37,5	144,5	64,5	
	13 DES 2019	208,5	37,5	140,5	54,5	
	14 DES 2019	208,5	37,5	143,5	52,5	
	15 DES 2019	208,5	37,5	145,5	57	
	18 DES 2019	208,5	37,5	144,5	41	
	22 DES 2019	208,5	37,5	123	40,5	
	03 Jan 2018	229	39,5	142,5	37,5	Beda Style
	04 Jan 2018	227	39,5	143,5	58,5	
	05 Jan 2018	227	39,5	144,5	63,5	
	08 Jan 2018	227	39,5	120,5	54,5	
	09 Jan 2018	229	39,5	141,5	56,5	
	10 Jan 2018	227	39,5	110,5	44,5	
	11 Jan 2018	227	39,5	116,6	69,5	
	12 Jan 2018	229	39,5	127,5	62,5	
	15 Jan 2018	227	39,5	130,5	52,5	
	16 Jan 2018	227	39,5	140,5	41,5	
	19 Jan 2018	229	39,5	191,5	41	
	18 Jan 2018	227	39,5	139,5	24,5	

4. Kontrol SPI *(SPI Control)*

- Pastikan SPI : 9-10 untuk quilting dan jarum dan 14 untuk Mesin Obras.

  (Ensure SPI: 9-10 for quilting and needlepoint and 14 for embroidery machine)




5. Penggunaan Mika *(Mica Usage)*


- Pastikan mika berfungsi dengan baik.

  (Ensure that the mica works properly)

- Pastikan lem/tape diganti setelah tidak merekat, paling lama 2 hari.


  (Ensure that the glue/tape is replaced after it is no longer adhering, at most 2 days)

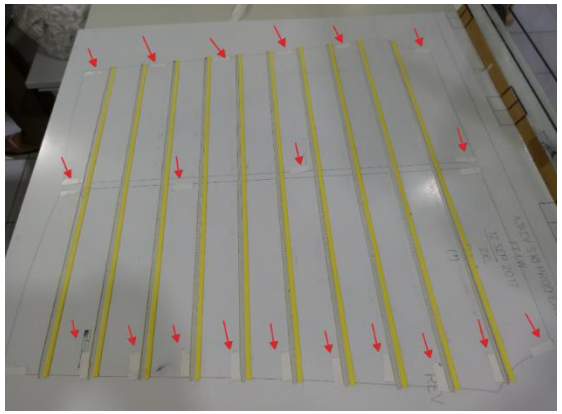

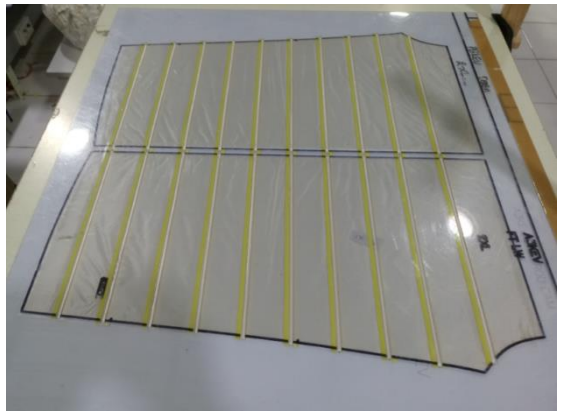

- Pastikan mika atas dan bawah harus dilengkapi dengan spon dan amplas.

  (Ensure that the upper and lower mica should be equipped with a sponge and sandpaper)

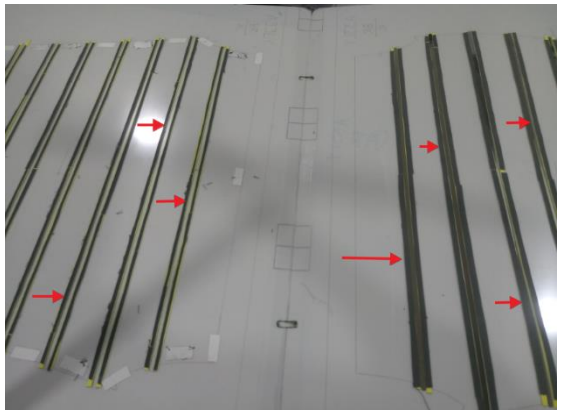

6. Cara Permak Jahitan Patah *(How To Repair Broken Stitch)*





- Bongkar seluruh jahitan pada garis yang terdapat broken stitch.
  (Unravel all the stitches on the line with broken stitch)