PT. YONGJIN JAVASUKA GARMENT	**INSTRUKSI KERJA PENCEGAHAN JAMUR DENGAN AQUA BOY** *WORK INSTRUCTION - ANTI MOULDING WITH AQUA BOY*	No. Dokumen : YJ-IK.QA.0001 Tgl. Efektif : 11 Juni 2018 No. Revisi : 00 Halaman : 1

1. Siapkan tabel standar moister (kelembaban pada garment dan karton) yang telah ditetapkan buyer
   Prepare a table of standard moister (moisture on garment and carton) that have been set buyer
2. Siapkan garment yang akan diperiksa kelembabannya. *Prepare the garment to be checked for humidity*
3. Siapkan form pengecekan moister pada garment YJ-F.QA.0031. *Prepare the moister check form on the garment YJ-F.QA.0031*



4. Lakukan pengecekan baterai atau kalibrasi dengan menyambungkan calibration electrode dengan aqua boy. *Check the battery or calibrate by connecting calibration electrode with aqua boy.*



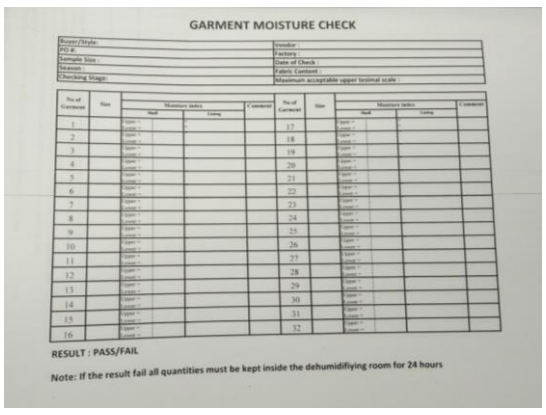
5. Tekan tombol merah pada aqua boy, pastikan jarum penunjuk berhenti di angka merah. *Press the red button on the aqua boy, make sure the pointer stops at the red number.*



6. Jika jarum penunjuk berhenti di angka merah artinya baterai dalam keadaan baik. *If the pointer stops at a red number means the battery is in good condition.*



7. Siapkan aqua boy dengan menyambungkan probe electrode kedalam aqua boy. Tempelkan electrode yang sudah tersambung dengan aqua boy pada permukaan garment jangan dilepas sambil tekan tombol berwarna putih. (Tempelkan elektrode pada area yang memiliki potensi lembab yang tinggi seperti : armpit, bottom/hemming, serta semua pertemuan garment yang menggunakan seamsealing).
   Prepare the aqua boy by connecting probe electrode into aqua boy. Paste it electrode that has been connected with aqua boy on the surface of the garment should not be removed while pressing the white button. (Attach the electrode to the area that has high humid potentials such as: armpit, bottom / hemming, and all meetings garment using seamsealing)


GARMENT MOISTURE CHECK

RESULT : PASS/FAIL

Note: If the result fail all quantities must be kept inside the dehumidifiying room for 24 hours

8. Catat dan hasil pengukuran aqua boy pada form moister garment YJ-F.QA.0031, lihat tabel standar yang telah ditentukan buyer.
   Record and aqua boy measurement results on form moister garment YJ-F.QA.0031, see standard table which the buyer has specified.

9. Masukan garment yang telah diukur moisternya dengan aqua boy kedalam drying room. Pengukuran moisture dilakukan sebelum dan sesudah di drying room dengan berdasarkan AQL standard. *Put the garment that has been measured moisternya with aqua boy into the drying room. Measurement moisture done before and after drying room based on AQL standard.*

10. Penggunaan absorben/anti lembab seperti silica gel, micropack, dan lainnya harus memperhatikan hal-hal berikut : *Use of clothing preservatives such as silica gel, micropack, etc. for the garment that moistly , should pay attention to the following things:*
    - Gunakan absorben yg direkomendasikan oleh buyer, bila ada. *Use the absorbent recommended by the buyer, if any.*
    - Gunakan polybag yang memiliki hole (ventilasi) , serta dalam kondisi baik dan kering. *Use polybags that have holes (ventilation), as well as in good condition and dry.*
    - Taruh absorben sesuai fungsinya supaya absorben berfungsi sebagaimana mestinya. *Place the absorbent according to function so that the absorbent working*