






SIMILAR VIDEO TUTORIAL

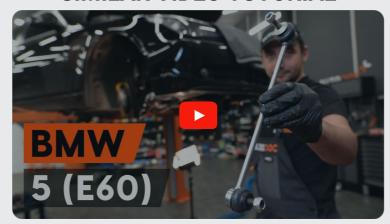

This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

BMW 5 Touring (E61) 525i 2.5, BMW 5 Touring (E61) 545i 4.4, BMW 5 Touring (E61) 530d 3.0, BMW 5 Touring (E61) 525d 2.5, BMW 5 Touring (E61) 535d 3.0, BMW 5 Touring (E61) 530i 3.0, BMW 5 Touring (E61) 523i 2.5, BMW 5 Touring (E61) 550i 4.8, BMW 5 Touring (E61) 520d 2.0, BMW 5 Touring (E61) 525d 3.0, BMW 5 Touring (E61) 525i 3.0, BMW 5 Touring (E61) M5, BMW 5 Touring (E61) 520i 2.0, BMW 5 Touring (E61) 530i 3.0 (N52B30A), BMW 5 Touring (E61) 523 i 2.5

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 5 Saloon (E60) 525d 2.5

CLUB.AUTODOC.CO.UK 1-9







REPLACEMENT: ANTI ROLL BAR LINKS – BMW 5 TOURING (E61). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 16

- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2–9







Replacement: anti roll bar links – BMW 5 Touring (E61). AUTODOC recommends:

- Replace the stabiliser links on BMW 5 Touring (E61) in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Please note: all work on the car BMW 5 Touring (E61) should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the front of the car and secure on supports.

CLUB.AUTODOC.CO.UK 3–9







4 Unscrew the wheel bolts.



Replacement: anti roll bar links – BMW 5 Touring (E61). Tip:

• To avoid injury, hold up the wheel when unscrewing the bolts.

Remove the wheel.



6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #16. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 4–9







Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #16. Use a ratchet wrench.



9 Remove the stabilizer rod.



Replacement: anti roll bar links – BMW 5 Touring (E61). AUTODOC experts recommend:

• Examine stabiliser bushes. Replace them if needed.





CLUB.AUTODOC.CO.UK 5-9







11 Install the transverse stabilizer link.



Tighten the stabiliser link fastener. Use a drive socket #16. Use a ratchet wrench.



Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #16. Use a torque wrench. Tighten it to 65 Nm torque.



Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #16. Use a torque wrench. Tighten it to 65 Nm torque.



CLUB.AUTODOC.CO.UK 6–9







Treat all joints of the stabiliser link. Use copper grease.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

• Replacement: anti roll bar links – BMW 5 Touring (E61). After applying the spray, wait a few minutes.

18

Install the wheel.



CLUB.AUTODOC.CO.UK 7–9







Replacement: anti roll bar links – BMW 5 Touring (E61). Tip from AUTODOC:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.





Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



Remove the jacks and chocks.





VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 8–9