







(i) Important!

This replacement procedure can be used for:

BMW 3 Saloon (E36) 316i 1.6, BMW 3 Saloon (E36) 318is 1.8, BMW 3 Coupe (E36) 318is 1.8, BMW 3 Saloon (E36) 320i 2.0, BMW 3 Coupe (E36) 320i 2.0, BMW 3 Saloon (E36) 325i 2.5, BMW 3 Coupe (E36) 325i 2.5, BMW 5 Saloon (E34) 530i 3.0 V8, BMW 5 Saloon (E34) 540i 4.0 V8, BMW 5 Touring (E34) 530i 3.0 V8, BMW 3 Convertible (E36) 320i 2.0, BMW 3 Convertible (E36) 325i 2.5, BMW 3 Coupe (E36) 316i 1.6, BMW 5 Touring (E34) 540i 4.0, BMW 3 Convertible (E36) 318i 1.8, (+64)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–12





REPLACEMENT: FUEL FILTER – BMW E36. TOOLS YOU NEED:



- Nylon cleaning brush
- All-purpose cleaning spray
- Drive socket # 7
- Drive socket # 8

- Drive socket # 10
- Ratchet wrench
- Fluid container
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-12



0

Replacement: fuel filter – BMW E36. Tip from AUTODOC:

- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- All work should be done with the engine stopped.

REPLACEMENT: FUEL FILTER – BMW E36. TAKE THE FOLLOWING STEPS:

Open the fuel door.



2 Unscrew the fuel filler cap.



Secure the wheels with chocks.



CLUB.AUTODOC.CO.UK 3-12





Lift the car using a jack or place it over an inspection pit.



Unscrew the fasteners of the plastic car body protective cover. Use a drive socket #8. Use a drive socket #10. Use a ratchet wrench.



6 Remove the plastic car body protective cover.



Loosen the fastening clamps of the fuel filter pipes. Use a drive socket #7. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 4–12







8 Detach the tubes from the fuel filter.



9 Unscrew the fuel filter bracket. Use a drive socket #10. Use a ratchet wrench.



Prepare a container for fluids.

11



Clean the fuel lines. Use a nylon cleaning brush. Use all-purpose cleaning spray.



CLUB.AUTODOC.CO.UK 5-12








Disconnect the fuel supply lines from the fuel filter.



Remove the fuel filter.

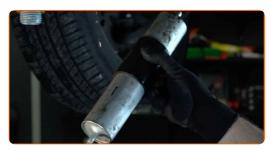

Replacement: fuel filter – BMW E36. AUTODOC recommends:

• Be careful! Fuel may leak from the filter housing and hoses.

14 Install a new fuel filter.



CLUB.AUTODOC.CO.UK 6-12



Q

Replacement: fuel filter – BMW E36. Tip from AUTODOC experts:

- Remember, it is important not to mix up the input and output of the filter. Arrows on the filter indicate the direction of fuel flow.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Take care to only use quality filters.
- Connect the fuel lines to the new fuel filter.



Tighten the fastening clamps of the fuel filter pipes. Use a drive socket #7. Use a ratchet wrench.



Clean the fuel lines. Use all-purpose cleaning spray.

17



CLUB.AUTODOC.CO.UK 7-12







Screw in the fuel filter mounting bracket. Use a drive socket #10. Use a ratchet wrench.



- 19 Attach the pipe to the fuel filter.
- Reinstall the plastic car body protective cover.



Screw in the fasteners of the plastic car body protective cover. Use a drive socket #8. Use a drive socket #10. Use a ratchet wrench.



Lower the car.



CLUB.AUTODOC.CO.UK 8-12







- Remove the jacks and chocks.
- Tighten the fuel filler cap.



Close the fuel door.

26



Replacement: fuel filter – BMW E36. AUTODOC experts recommend:

- Before starting off, switch the ignition on and off several times. This should be done to activate the fuel pump to make it pump fuel through the fuel system.
- Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



CLUB.AUTODOC.CO.UK 9-12







27

Shut off the engine.







CLUB.AUTODOC.CO.UK 10-12