


VIDEO TUTORIAL

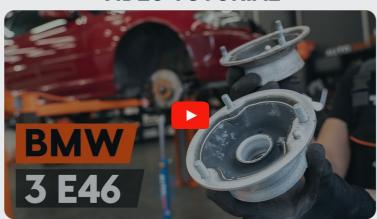

i Important!

This replacement procedure can be used for:

BMW 5 Saloon (E39) 520i 2.0, BMW 5 Saloon (E39) 525tds 2.5, BMW 5 Saloon (E39) 523i 2.5, BMW 5 Saloon (E39) 528i 2.8, BMW 5 Touring (E39) 520i 2.0, BMW 5 Touring (E39) 523i 2.5, BMW 5 Saloon (E39) 525td 2.5, BMW 3 Saloon (E46) 318i 1.9, BMW 3 Saloon (E46) 328i 2.8, BMW 3 Saloon (E46) 320d 2.0, BMW 5 Touring (E39) 528i 2.8, BMW 3 Saloon (E46) 323i 2.5, BMW 3 Saloon (E46) 320i 2.0, BMW 5 Saloon (E39) 530d 3.0, BMW 5 Touring (E39) 530d 3.0, (+72)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–18



REPLACEMENT: STRUT MOUNT – BMW E46 CONVERTIBLE. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #17
- Combination spanner #19
- Drive socket # 13
- Drive socket # 21
- Drive socket # 22
- HEX bit No.H7.

- Shock absorber socket
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-18





Replacement: strut mount – BMW E46 convertible. Professionals recommend:

- The replacement procedure is identical for the mounts of the left and right shock struts of the front suspension.
- All mounts of the front shock struts should be replaced simultaneously.
- Be sure to replace all self-locking nuts and bolts during installation.
- Please note: all work on the car BMW E46 convertible should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the bonnet.



2

Secure the wheels with chocks.



CLUB.AUTODOC.CO.UK 3-18





Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.



Unscrew the wheel bolts.



Replacement: strut mount – BMW E46 convertible. Tip from AUTODOC:

• To avoid injury, hold up the wheel when unscrewing the bolts.

6 Remove the wheel.



CLUB.AUTODOC.CO.UK 4–18







Clean the fasteners connecting the stabiliser link to the shock strut, and those connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



Unscrew the nut and remove the stabilizer rod from the shock strut. Use HEX No.H7. Use a combination spanner #17. Use a ratchet wrench.



Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #19.



10

Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #21. Use a tap wrench.



CLUB.AUTODOC.CO.UK 5-18







Disconnect the wiring and the brake hose from the bracket on the shock strut.



Release the lower fastener connecting the shock strut to the steering knuckle. Use a special drive socket to remove the shock absorber.



Prop up the steering knuckle. Use a hydraulic transmission jack.



Disconnect the lower arm from the steering knuckle.



Lower the hydraulic transmission jack by 10-15 cm.

15



CLUB.AUTODOC.CO.UK 6-18





AUTODOC recommends:

 Replacement: strut mount – BMW E46 convertible. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.





Unscrew the shock absorber mount fastening. Use a drive socket #13. Use a ratchet wrench.



Unscrew the upper fasteners of the shock strut.

18



Replacement: strut mount – BMW E46 convertible. AUTODOC recommends:

• To avoid injuries, hold the shock strut when undoing the fastening bolts.

CLUB.AUTODOC.CO.UK 7-18







Remove the suspension strut.



Set the shock absorber strut on the spring compressor tool.



Replacement: strut mount – BMW E46 convertible. AUTODOC experts recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

Compress the spring.



CLUB.AUTODOC.CO.UK 8-18






Remove the shock strut mount cap. Use a crowbar.



Remove the strut piston rod nut. Use a drive socket #22. Use HEX No.H7.

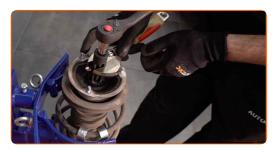

Remove the top strut mount.



Replacement: strut mount – BMW E46 convertible. Tip from AUTODOC experts:

- Examine the shock absorber dust cap and the bump stop. Replace them if necessary.
- Install a new top shock strut mount. Use a crowbar.



CLUB.AUTODOC.CO.UK 9-18







Treat the fasteners of the shock strut mount. Use WD-40 spray.



Tighten the shock strut piston rod nut. Use a drive socket #22. Use HEX No.H7. Use a torque wrench. Tighten it to 64 Nm torque.



Replacement: strut mount – BMW E46 convertible. Tip:

• Check to make sure the spring is positioned correctly. Avoid its misalignment.

Decompress the spring.



CLUB.AUTODOC.CO.UK 10-18