

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for:

BMW 3 Saloon (E46) 318i 1.9, BMW 3 Saloon (E46) 328i 2.8, BMW 3 Saloon (E46) 320d 2.0, BMW 3 Saloon (E46) 323i 2.5, BMW 3 Saloon (E46) 320i 2.0, BMW 3 Saloon (E46) 316i 1.9, BMW 3 Saloon (E46) 330d 2.9, BMW 3 Saloon (E46) 330xd 2.9, BMW 3 Saloon (E46) 330xi 3.0, BMW 3 Saloon (E46) 330i 3.0, BMW 3 Saloon (E46) 320i 2.2, BMW 3 Saloon (E46) 325i 2.5, BMW 3 Saloon (E46) 325xi 2.5, BMW 3 Saloon (E46) 316i 1.6, BMW 3 Saloon (E46) 318i 2.0, (+4)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Convertible (E46) 318Ci 2.0

CLUB.AUTODOC.CO.UK 1–9





REPLACEMENT: ANTI ROLL BAR BUSHES – BMW 3 SALOON (E46). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Drive socket # 16
- Wheel impact socket #17

- Ratchet wrench
- Torque wrench
- Phillips screwdriver
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2–9






Replacement: anti roll bar bushes – BMW 3 Saloon (E46). AUTODOC recommends:

- Both stabilizer bushes should be replaced simultaneously.
- The replacement procedure is identical for the right and left stabilizer bushes.
- All work should be done with the engine stopped.

REPLACEMENT: ANTI ROLL BAR BUSHES – BMW 3 SALOON (E46). RECOMMENDED SEQUENCE OF STEPS:

Secure the wheels with chocks.

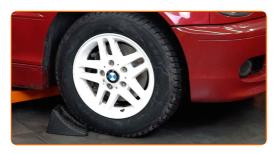

Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.

CLUB.AUTODOC.CO.UK 3-9







4 Unscrew the wheel bolts.



Replacement: anti roll bar bushes – BMW 3 Saloon (E46). Tip:

• To avoid injury, hold up the wheel when unscrewing the bolts.

Remove the wheel.



Unscrew the fasteners of the lower sound insulation. Use a Phillips screwdriver.



Remove the lower sound insulation.




CLUB.AUTODOC.CO.UK 4–9





Please note!

- Some cars are not equipped with the lower sound insulation.
- Clean the fasteners of the stabilizer bush brackets. Use a wire brush. Use WD-40 spray.

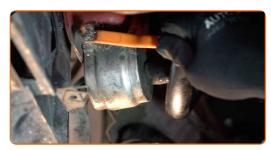

Unscrew the fasteners of the stabilizer bush brackets. Use a drive socket #16. Use a ratchet wrench.



10 Remove the stabilizer bush brackets.



11 Remove the stabilizer bushes.



CLUB.AUTODOC.CO.UK 5–9







12 Install the new stabilizer bushes.



Clean the mounting seats of the stabilizer bushes. Use WD-40 spray.



14 Install the stabilizer bush brackets.



Screw the fasteners of the stabilizer bush brackets. Use a drive socket #16. Use a torque wrench. Tighten it to 28 nm torque.



16 Install the lower sound insulation.



CLUB.AUTODOC.CO.UK 6-9







Screw in the fasteners of the lower sound insulation. Use a Phillips screwdriver.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



19 Install the wheel.



AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. BMW 3 Saloon (E46)
- Screw in the wheel bolts. Use wheel impact socket #17.



CLUB.AUTODOC.CO.UK 7–9







Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 Nm torque.



Remove the jacks and chocks.





VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 8-9