





VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

BMW 3 Touring (E91) 325i 3.0, BMW 3 Touring (E91) 318d 2.0, BMW 3 Saloon (E90) 318d 2.0, BMW 3 Touring (E91) 318i 2.0, BMW 3 Touring (E91) 316d 2.0, BMW Z4 Roadster (E89) sDrive 20 i, BMW Z4 Roadster (E89) sDrive 28 i, BMW X1 (E84) sDrive 20 i, BMW 1 Coupe (E82) 118d 2.0, BMW 3 Coupe (E92) 318i 2.0, BMW 3 Convertible (E93) 318i 2.0, BMW 3 Convertible (E93) 325d 3.0, BMW 1 Hatchback (E81) 116i 1.6, BMW 1 Hatchback (E81) 120d 2.0, BMW 3 Saloon (E90) 320i 2.0, (+88)

The steps may slightly vary depending on the car design.


CLUB.AUTODOC.CO.UK 1–10







REPLACEMENT: ANTI ROLL BAR LINKS – BMW E90. AUTODOC EXPERTS RECOMMEND:

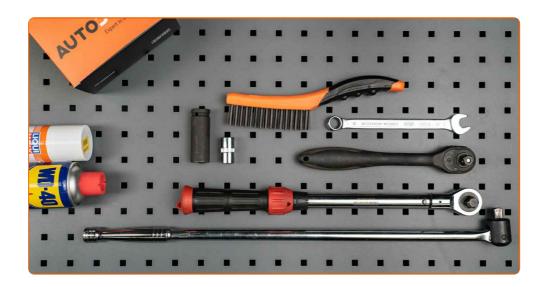

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #17

- Drive socket # 16
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-10







AUTODOC recommends:

- Replace the stabiliser links on BMW E90 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Please note: all work on the car BMW E90 should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.

CLUB.AUTODOC.CO.UK 3-10







Unscrew the wheel bolts.

4



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
 BMW E90
- Remove the wheel.



- 6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.
- Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #17. Use a drive socket #16. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 4-10







Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #17 (2 pieces).



9 Remove the stabilizer rod.



Replacement: anti roll bar links – BMW E90. Tip from AUTODOC experts:

- Examine stabiliser bushes. Replace them if needed.
- Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.
- Install a new rod, tighten the fasteners.



CLUB.AUTODOC.CO.UK 5-10







Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #17 (2 pieces). Use a torque wrench. Tighten it to 58 Nm torque.



Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #17. Use a drive socket #16. Use a torque wrench. Tighten it to 58 Nm torque.



- Treat all joints of the stabiliser link. Use copper grease.
- Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



CLUB.AUTODOC.CO.UK 6-10







AUTODOC recommends:

 Replacement: anti roll bar links – BMW E90. After applying the spray, wait a few minutes.

17

Install the wheel.



AUTODOC recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW E90

18

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



CLUB.AUTODOC.CO.UK 7-10







20

Remove the jacks and chocks.





VIEW MORE TUTORIALS


CLUB.AUTODOC.CO.UK 8-10







AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

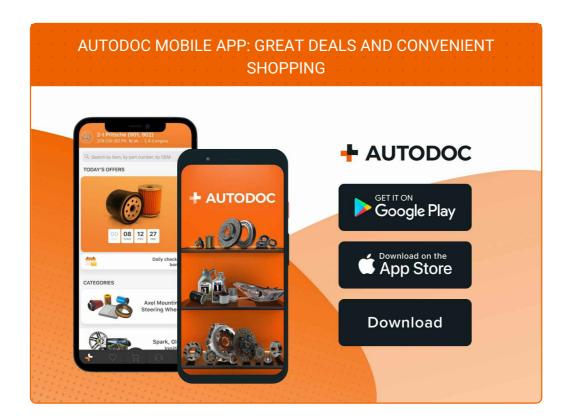

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

ANTI ROLL BAR LINKS: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 9-10