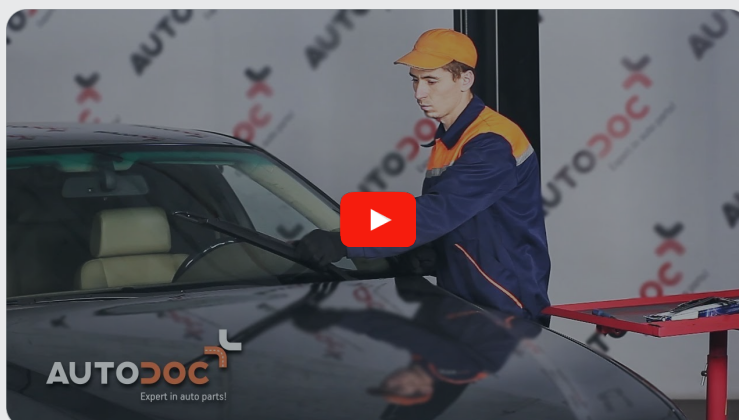# SIMILAR VIDEO TUTORIAL

This video shows the replacement procedure of a similar car part on another vehicle
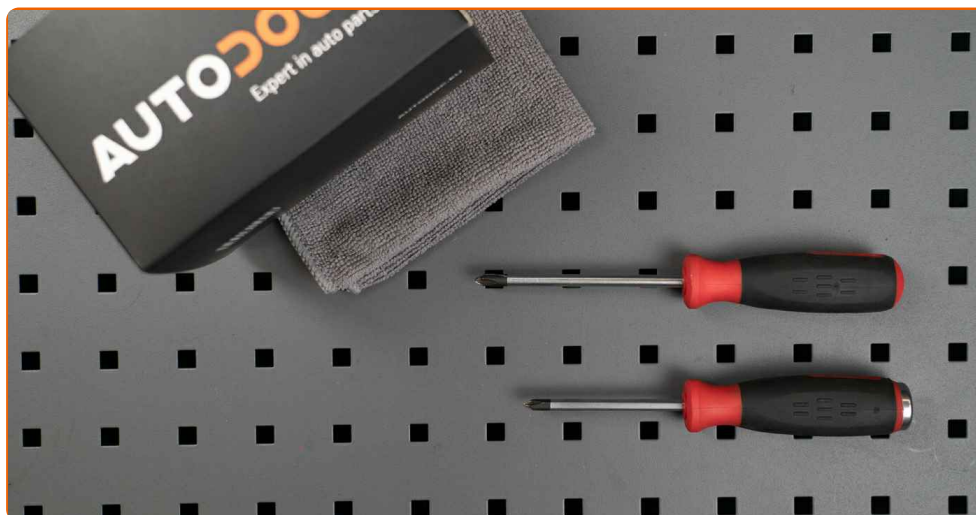
ⓘ Important!

This replacement procedure can be used for:

BMW 3 Compact (E46) 316ti 1.8, BMW 3 Compact (E46) 325ti 2.5, BMW 3 Compact (E46) 318ti 2.0, BMW 3 Compact (E46) 320td 2.0, BMW 3 Compact (E46) 318td 2.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 5 Saloon (E39) 530i 3.0

REPLACEMENT: WINDSHIELD WIPERS – BMW 3 COMPACT (E46). TOOLS YOU MIGHT NEED:

- Flat Screwdriver

Buy tools

Replacement: windshield wipers – BMW 3 Compact (E46). Tip from AUTODOC experts:

- Always replace front wiper blades together. It will ensure efficient and uniform cleaning of the windshield.

- Don't confuse the wiper blades of the driver and passenger side.

- The replacement procedure for both wiper blades is identical.

- All work should be done with the engine stopped.

REPLACEMENT: WINDSHIELD WIPERS – BMW 3 COMPACT (E46). USE THE FOLLOWING PROCEDURE:

1 Prepare the new windscreen wipers.

2 Pull the wiper arm away from the glass surface until it stops.

3 Press the clip. Use a flat screwdriver.

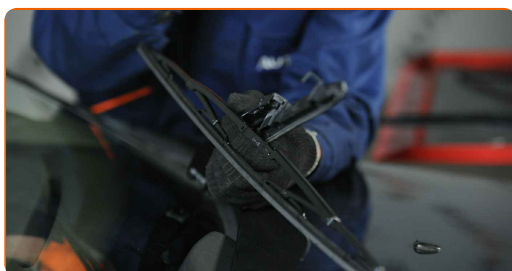**4** Remove the blade from the wiper arm.

Replacement: windshield wipers – BMW 3 Compact (E46). Tip:

- When replacing the wiper blade, take caution to prevent the spring-loaded wiper arm from hitting the glass.

5 Install the new wiper blade and carefully press the wiper arm down to the glass.
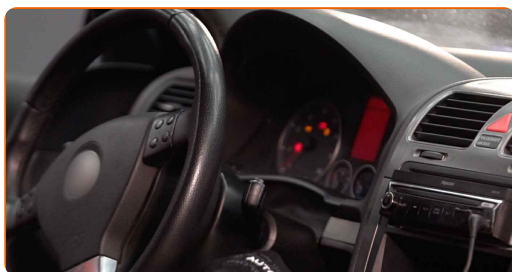
Replacement: windshield wipers – BMW 3 Compact (E46). AUTODOC recommends:

- Don't touch the wiper blade at the working rubber edge to prevent damage to the graphite coating.

- Ensure that the blade rubber strip fits tightly to the glass along the entire length.

6 Switch on the ignition.

7 After installation check the wipers performance. The blades shouldn't intersect or bump against the windshield seal.

WELL DONE! 👍

VIEW MORE TUTORIALS