

VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for:

BMW 3 Touring (E91) 318i 2.0, BMW 3 Coupe (E92) 318i 2.0, BMW 3 Convertible (E93) 318i 2.0, BMW 1 Hatchback (E81) 116i 1.6, BMW 3 Saloon (E90) 320i 2.0, BMW 3 Touring (E91) 320i 2.0, BMW 3 Saloon (E90) 318i 2.0, BMW 3 Saloon (E90) 320si 2.0, BMW 3 Coupe (E92) 320i 2.0, BMW 3 Convertible (E93) 320i 2.0, BMW 1 Hatchback (E81) 118i 2.0, BMW 1 Hatchback (E81) 120i 2.0, BMW 1 Convertible (E88) 120i 2.0, BMW 1 Convertible (E88) 118i 2.0, BMW X1 (E84) sDrive 18 i, (+7)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-11



REPLACEMENT: AIR FILTER – BMW E90. TOOLS YOU MIGHT NEED:



- Torx bit T25
- Drive socket # 10
- Ratchet wrench

- Flat Screwdriver
- Microfibre towel
- Fender cover

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-11





Replacement: air filter – BMW E90. AUTODOC experts recommend:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car BMW E90 should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet.



- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Remove the air intake hose.



Unplug the mass air flow sensor connector. Use a flat screwdriver.



CLUB.AUTODOC.CO.UK 3-11







Detach the air intake hose clamp. Use a flat screwdriver.



Disconnect the air intake pipe from the air filter housing. Use a flat screwdriver.



Unscrew the filter housing fastening bolts. Use a drive socket #10. Use a ratchet wrench.



8

Unscrew the clamp that fastens the air filter hose to the throttle body. Use a flat screwdriver.



CLUB.AUTODOC.CO.UK 4-11



9 Remove the air filter housing.



Undo the fastening screws of the air filter cover. Use Torx T25. Use a ratchet wrench.



Take off the filter lid. Use a flat screwdriver.



Remove the filter element from the filter housing.

12



CLUB.AUTODOC.CO.UK 5-11





13

Clean the air filter cover and housing.

Replacement: air filter – BMW E90. Tip from AUTODOC experts:

• Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

14

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



Replacement: air filter – BMW E90. AUTODOC experts recommend:

- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters BMW E90.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

CLUB.AUTODOC.CO.UK 6-11







Reinstall the air filter cover. Fasten it.



Screw in the fastening screws of the air filter cover. Use Torx T25. Use a ratchet wrench.



Reinstall the air filter housing.



- Secure the air intake hose.
- Connect the air intake pipe to the air filter housing.



CLUB.AUTODOC.CO.UK 7-11





Screw in the clamp that connects the air filter hose to the throttle body. Use a flat screwdriver.



Fasten the clamp on the air intake hose. Use a flat screwdriver.



Screw the filter housing fastening bolts. Use a drive socket #10. Use a ratchet wrench.



Plug in the mass air flow sensor conntector.



Remove the fender protection cover.

CLUB.AUTODOC.CO.UK 8-11







25


Close the hood.








CLUB.AUTODOC.CO.UK 9-11

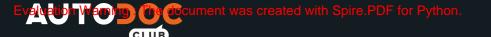



AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

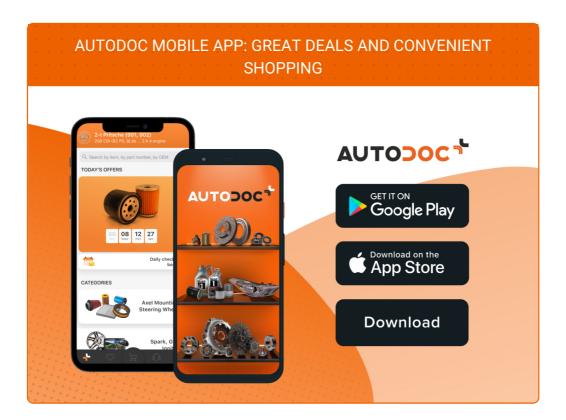

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

AIR FILTER: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 10-11