

VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

BMW 3 Saloon (E46) 318i 1.9, BMW 3 Saloon (E46) 328i 2.8, BMW 3 Saloon (E46) 320d 2.0, BMW 3 Saloon (E46) 323i 2.5, BMW 3 Saloon (E46) 320i 2.0, BMW 3 Coupe (E46) 323Ci 2.5, BMW 3 Coupe (E46) 328Ci 2.8, BMW 3 Saloon (E46) 316i 1.9, BMW 3 Touring (E46) 320i 2.0, BMW 3 Coupe (E46) 320Ci 2.0, BMW 3 Coupe (E46) 318ci 1.9, BMW 3 Touring (E46) 318i 1.9, BMW 3 Touring (E46) 328i 2.8, BMW 3 Touring (E46) 320d 2.0, BMW 3 Saloon (E46) 330d 2.9, (+49)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–11



REPLACEMENT: ANTI ROLL BAR LINKS – BMW E46 TOURING. TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #17
- Drive socket # 17
- HEX bit no.H7

- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Fender cover
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-11





AUTODOC recommends:

- Replace the stabiliser links on BMW E46 touring in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Warning! Shut down the engine before starting any work BMW E46 touring.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

Open the hood.



- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- 3 Secure the wheels with chocks.



CLUB.AUTODOC.CO.UK 3-11







Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.



Unscrew the wheel bolts.



AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. BMW E46 touring
- Remove the wheel.



CLUB.AUTODOC.CO.UK 4-11







8.1 Clean the stabiliser link fasteners.



8.2 Use a wire brush. Use WD-40 spray.



Unscrew the fastener connecting the stabilizer link to the shock strut. Use HEX No.H7. Use a combination spanner #17. Use a ratchet wrench.



Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use HEX No.H7. Use a combination spanner #17. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 5-11







11 Remove the stabilizer rod.



12 Install a new rod, tighten the fasteners.



Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a combination spanner #17. Use a torque wrench. Tighten it to 55 Nm torque.



Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #17. Use a combination spanner #17. Use a torque wrench. Tighten it to 55 Nm torque.



CLUB.AUTODOC.CO.UK 6-11







15.1 Treat all joints of the stabiliser link.



15.2 Use copper grease.



Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



17 Install the wheel.



AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW E46 touring

CLUB.AUTODOC.CO.UK 7-11





Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



Remove the jacks and chocks.



Remove the fender protection cover.



CLUB.AUTODOC.CO.UK 8-11







22

Close the hood.








CLUB.AUTODOC.CO.UK 9-11





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

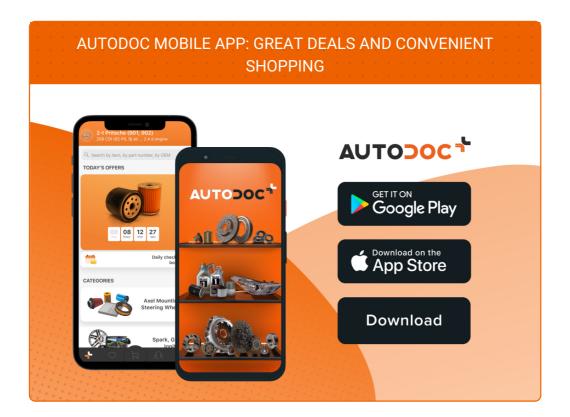

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

ANTI ROLL BAR LINKS: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 10-11