









This video shows the replacement procedure of a similar car part on another vehicle

# i Important!

This replacement procedure can be used for:

BMW 3 Touring (F36) 320i 2 0 BMW 3 Touring (F36) 32

BMW 3 Touring (E36) 320i 2.0, BMW 3 Touring (E36) 328i 2.8, BMW 3 Touring (E36) 318tds 1.7, BMW 3 Touring (E36) 325tds 2.5, BMW 3 Touring (E36) 323i 2.5, BMW 3 Touring (E36) 318i 1.8, BMW 3 Touring (E36) 316i 1.6

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E36) 323i 2.5

CLUB.AUTODOC.CO.UK 1–16







# REPLACEMENT: STRUT MOUNT – BMW 3 TOURING (E36). TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #18
- Drive socket # 9
- Drive socket # 13
- Drive socket # 18

- Drive socket #19
- Drive socket # 22
- Wheel impact socket #17
- Ratchet wrench
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

**Buy tools** 

CLUB.AUTODOC.CO.UK 2-16







## Replacement: strut mount – BMW 3 Touring (E36). Tip from AUTODOC:


- The replacement procedure is identical for the mounts of the left and right shock struts of the front suspension.
- All mounts of the front shock struts should be replaced simultaneously.
- All work should be done with the engine stopped.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the bonnet.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Secure the wheels with chocks.
- Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



Loosen the upper fasteners of the suspension strut. Use a drive socket #13. Use a ratchet wrench.

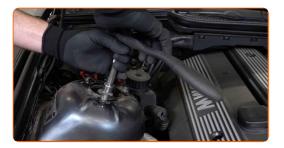

CLUB.AUTODOC.CO.UK 3-16







6 Loosen the wheel mounting bolts. Use wheel impact socket #17.



- Raise the front of the car and secure on supports.
- Unscrew the wheel bolts.



#### **AUTODOC** recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
   BMW 3 Touring (E36)
- Remove the wheel.



CLUB.AUTODOC.CO.UK 4-16







Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



Unscrew the fasteners connecting the suspension strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



Detach the brake hose from the shock strut.



Disconnect the ABS sensor wiring.



CLUB.AUTODOC.CO.UK 5-16







Prop up the steering knuckle. Use a hydraulic transmission jack.



Remove the fastening bolts.

17



Disconnect the steering knuckle from the shock absorber strut.



Unscrew the upper fasteners of the shock strut.



#### **AUTODOC** recommends:

 BMW 3 Touring (E36) – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

CLUB.AUTODOC.CO.UK 6-16







18 Remove the suspension strut.



Set the shock absorber strut on the spring compressor tool.



### Replacement: strut mount – BMW 3 Touring (E36). Professionals recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

20 Compress the spring.



CLUB.AUTODOC.CO.UK 7–16







Remove the shock strut mount cap. Use a crowbar.



Treat the shock strut rod. Use a wire brush. Use WD-40 spray.



Remove the strut piston rod nut. Use a drive socket #9. Use a drive socket #22. Use a ratchet wrench.



Remove the shock absorber mount, boot and bump stop.



24

Replacement: strut mount – BMW 3 Touring (E36). AUTODOC experts recommend:

• Examine the shock absorber dust cap and the bump stop. Replace them if necessary.

CLUB.AUTODOC.CO.UK 8-16







25 Install the boot and a bump stop onto the shock absorber.



Install a new top shock strut mount.



Tighten the shock strut piston rod nut. Use a drive socket #19. Use a drive socket #9. Use a torque wrench. Tighten it to 52 Nm torque.



Replacement: strut mount – BMW 3 Touring (E36). Tip from AUTODOC experts:

• Check to make sure the spring is positioned correctly. Avoid its misalignment.

CLUB.AUTODOC.CO.UK 9-16







Treat the shock strut rod. Use copper grease.



29 Install the shock strut mount cap.



Decompress the spring.



Remove the assembled shock strut.

32



Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 10-16