





#### **VIDEO TUTORIAL**



### i Important!

This replacement procedure can be used for:

BMW 3 Saloon (E46) 328i 2.8, BMW 3 Saloon (E46) 320d 2.0, BMW 3 Saloon (E46) 323i 2.5, BMW 3 Saloon (E46) 320i 2.0, BMW 3 Coupe (E46) 323Ci 2.5, BMW 3 Coupe (E46) 328Ci 2.8, BMW 3 Saloon (E46) 316i 1.9, BMW 3 Touring (E46) 320i 2.0, BMW 3 Coupe (E46) 320Ci 2.0, BMW 3 Coupe (E46) 318Ci 1.9, BMW 3 Touring (E46) 318i 1.9, BMW 3 Touring (E46) 328i 2.8, BMW 3 Touring (E46) 320d 2.0, BMW 3 Saloon (E46) 330d 2.9, BMW 3 Touring (E46) 330d 2.9, (+50)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-10







## REPLACEMENT: ANTI ROLL BAR LINKS – BMW E46. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16

- Drive socket # 17
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-10







### Replacement: anti roll bar links – BMW E46. Tip from AUTODOC experts:

- Replace the stabiliser links on BMW E46 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

# REPLACEMENT: ANTI ROLL BAR LINKS – BMW E46. RECOMMENDED SEQUENCE OF STEPS:

Secure the wheels with chocks.



- Loosen the wheel mounting bolts. Use wheel impact socket #17.
- Raise the front of the car and secure on supports.



CLUB.AUTODOC.CO.UK 3-10







4 Unscrew the wheel bolts.



### **AUTODOC** recommends:

• Important! Hold the wheel while unscrewing the fastening bolts. BMW E46

Remove the wheel.

6



Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 4–10







Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #16. Use a drive socket #17. Use a ratchet wrench.



Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use a drive socket #17. Use a ratchet wrench.



Remove the stabilizer rod.



Replacement: anti roll bar links – BMW E46. Professionals recommend:

• Examine stabiliser bushes. Replace them if needed.

CLUB.AUTODOC.CO.UK 5-10







10 Install a new rod, tighten the fasteners.



Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use a drive socket #17. Use a torque wrench. Tighten it to 60 Nm torque.



Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #16. Use a drive socket #17. Use a torque wrench. Tighten it to 60 Nm torque.



- Treat all joints of the stabiliser link. Use copper grease.
- Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



CLUB.AUTODOC.CO.UK 6-10







Clean the wheel rim mounting seat. Use a brake cleaner.



### AUTODOC recommends:

• Replacement: anti roll bar links – BMW E46. After applying the spray, wait a few minutes.

16

Install the wheel.



### Replacement: anti roll bar links – BMW E46. AUTODOC recommends:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

17

Screw in the wheel bolts. Use wheel impact socket #17.



CLUB.AUTODOC.CO.UK 7–10







Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



Remove the jacks and chocks.





**VIEW MORE TUTORIALS** 


CLUB.AUTODOC.CO.UK 8-10







## AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

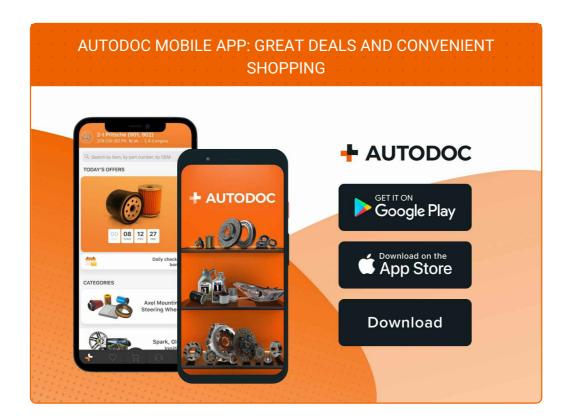

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**BUY SPARE PARTS FOR BMW** 

**ANTI ROLL BAR LINKS: A WIDE SELECTION** 

CLUB.AUTODOC.CO.UK 9-10