









i Important!

This replacement procedure can be used for:

BMW 7 (E38) 730d 2.9, BMW 5 Saloon (E39) 530d 3.0, BMW 5 Touring (E39) 530d 3.0, BMW X5 (E53) 3.0 d, BMW 3 Saloon (E46) 330d 2.9, BMW 3 Touring (E46) 330d 2.9, BMW 5 Saloon (E39) 525d 2.5, BMW 5 Touring (E39) 525d 2.5, BMW 3 Touring (E46) 330xd 2.9, BMW 3 Saloon (E46) 330xd 2.9

The steps may slightly vary depending on the car design.


CLUB.AUTODOC.CO.UK 1-10







REPLACEMENT: SERPENTINE BELT – BMW E39 TOURING. TOOLS YOU'LL NEED:

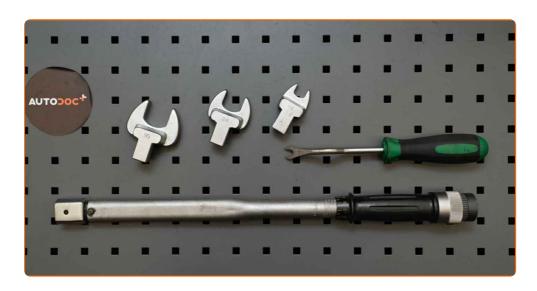

- Torque wrench
- Combination spanner #16
- Combination spanner #24
- Combination spanner #32
- Clip removal tool
- Fender cover

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-10







Replacement: serpentine belt – BMW E39 touring. AUTODOC experts recommend:

• All work should be done with the engine stopped.

REPLACEMENT: SERPENTINE BELT – BMW E39 TOURING. TAKE THE FOLLOWING STEPS:

1 Open the bonnet.

3



Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Remove the fan shroud clips. Use a clip removal tool.



CLUB.AUTODOC.CO.UK 3-10







4 Unscrew the cooling fan fastener. Use a combination spanner #32 (2 pieces).



Remove the fan shroud. Remove the cooling fan.



Pull aside the V belt tensioner pulley. Use a combination spanner #16.



Remove the V belt.



Replacement: serpentine belt – BMW E39 touring. AUTODOC recommends:

 Check the condition of the tensioner pulley and idler pulley. Replace them if necessary.

CLUB.AUTODOC.CO.UK 4-10







Return the tensioner pulley to its initial position.



Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #24.



10 Remove the V-ribbed belt.



Replacement: serpentine belt – BMW E39 touring. Tip from AUTODOC experts:

 Check the condition of the tensioner pulley and idler pulley. Replace them if necessary.

Return the tensioner pulley to its initial position.

CLUB.AUTODOC.CO.UK 5-10







Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #24.



13 Install the V-ribbed belt.



Replacement: serpentine belt – BMW E39 touring. AUTODOC experts recommend:

- Make sure that the V-ribbed belt fits all pulleys snugly.
- Return the tensioner pulley to its initial position.



Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #16.



CLUB.AUTODOC.CO.UK 6-10







16 Install the V belt.



Return the tensioner pulley to its initial position.



Install the cooling fan. Install the fan shroud.



Tighten the cooling fan fastener. Use a combination spanner #32 (2 pieces). Use a torque wrench. Tighten it to 33 Nm torque.



20 Install the fan shroud clips.



CLUB.AUTODOC.CO.UK 7-10







Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



- Shut off the engine.
- Remove the fender protection cover.



Close the hood.





VIEW MORE TUTORIALS


CLUB.AUTODOC.CO.UK 8-10







AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

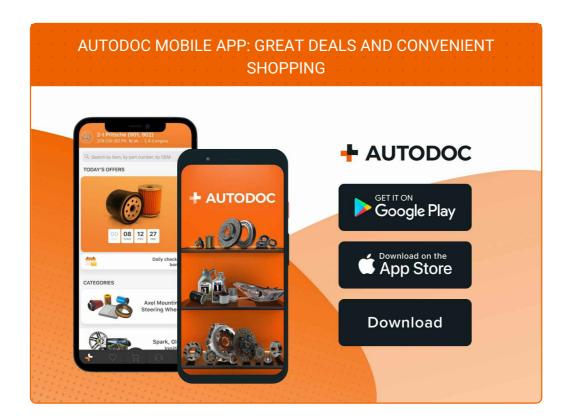

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

SERPENTINE BELT: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 9-10