






#### **VIDEO TUTORIAL**

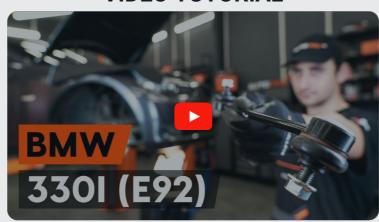

## (i) Important!

This replacement procedure can be used for:

BMW 3 Touring (E91) 325i 3.0, BMW 3 Touring (E91) 318d 2.0, BMW 3 Saloon (E90) 318d 2.0, BMW 3 Touring (E91) 318i 2.0, BMW 3 Touring (E91) 316d 2.0, BMW Z4 Roadster (E89) sDrive 20 i, BMW Z4 Roadster (E89) sDrive 28 i, BMW 1 Coupe (E82) 118d 2.0, BMW 3 Coupe (E92) 318i 2.0, BMW 3 Convertible (E93) 318i 2.0, BMW 3 Convertible (E93) 325d 3.0, BMW 1 Hatchback (E81) 116i 1.6, BMW 1 Hatchback (E81) 120d 2.0, BMW 3 Saloon (E90) 320i 2.0, BMW 3 Saloon (E90) 325i 2.5, (+89)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–11







## REPLACEMENT: ANTI ROLL BAR LINKS – BMW E92. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Combination spanner #17
- Drive socket # 16

- Drive socket # 17
- HEX bit No.H5
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-11







#### AUTODOC recommends:

- Replace the stabiliser links on BMW E92 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

# REPLACEMENT: ANTI ROLL BAR LINKS – BMW E92. RECOMMENDED SEQUENCE OF STEPS:

Secure the wheels with chocks.

3

Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.



CLUB.AUTODOC.CO.UK 3-11







4 Unscrew the wheel bolts.



## AUTODOC recommends:

• Important! Hold the wheel while unscrewing the fastening bolts. BMW E92

Remove the wheel.



6.1 Clean the stabiliser link fasteners.



6.2 Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 4-11







Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #17. Use a drive socket #17. Use a ratchet wrench.



Disconnect the brake hose mounting bracket.



Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use a combination spanner #17.



10 Remove the stabilizer rod.



CLUB.AUTODOC.CO.UK 5-11







## Replacement: anti roll bar links – BMW E92. Professionals recommend:

• Examine stabiliser bushes. Replace them if needed.





12 Install a new rod, tighten the fasteners.

13



Install the bracket onto the shock absorber strut.



CLUB.AUTODOC.CO.UK 6-11







Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use HEX No.H5. Use a drive socket #16. Use a torque wrench. Tighten it to 58 Nm torque.



Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #16. Use HEX No.H5. Use a drive socket #16. Use a torque wrench. Tighten it to 58 Nm torque.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.

17



CLUB.AUTODOC.CO.UK 7-11







#### **AUTODOC** recommends:

 Replacement: anti roll bar links – BMW E92. After applying the spray, wait a few minutes.

18

Install the wheel.



#### **AUTODOC** recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW E92
- Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



CLUB.AUTODOC.CO.UK 8-11







21

Remove the jacks and chocks.





**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 9-11







## AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**BUY SPARE PARTS FOR BMW** 

**ANTI ROLL BAR LINKS: A WIDE SELECTION** 

CLUB.AUTODOC.CO.UK 10-11