





SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

BMW 5 Touring (E61) 530d 3.0, BMW 5 Touring (E61) 525d 2.5, BMW 5 Touring (E61) 530xd 3.0, BMW 5 Touring (E61) 525d 3.0, BMW 5 Touring (E61) 525xd 3.0, BMW 5 Touring (E61) 525d xDrive 3.0, BMW 5 Touring (E61) 530d xDrive 3.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 5 Saloon (E60) 525d 2.5

CLUB.AUTODOC.CO.UK 1–19







REPLACEMENT: AIR FILTER – BMW 5 TOURING (E61). TOOLS YOU NEED:



- Drive socket # 13
- HEX bit No.H5
- Torx bit T25
- Torx bit T40
- Ratchet wrench

- Phillips screwdriver
- Clip removal tool
- Water pump pliers
- Microfibre towel
- Fender cover

Buy tools

CLUB.AUTODOC.CO.UK 2-19







Replacement: air filter – BMW 5 Touring (E61). Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – BMW 5 TOURING (E61). RECOMMENDED SEQUENCE OF STEPS:

- Open the bonnet.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Unscrew the fasteners of the suspension strut mount cover. Use a Phillips screwdriver. Use a clip removal tool.



Remove the protective caps out of the shock absorber mounting fastener.



CLUB.AUTODOC.CO.UK 3-19







Release the cabin filter cover clips.



Unscrew the fasteners of the cabin filter housing cover. Use a drive socket #13. Use a ratchet wrench.



Unscrew the fasteners of the bottom part of the cabin filter housing. Use Torx T25. Use a ratchet wrench.



Remove the cabin filter housing cover.

8



Replacement: air filter – BMW 5 Touring (E61). Tip:

• Do not apply excessive force when removing the part. Otherwise you may damage it.

CLUB.AUTODOC.CO.UK 4–19







9 Release the cabin filter cover clips.



Unscrew the fasteners of the cabin filter housing cover. Use a drive socket #13. Use a ratchet wrench.



11 Remove the cabin filter housing cover.



AUTODOC recommends:

- Replacement: air filter BMW 5 Touring (E61). Be sure to position the filtering element correctly. Avoid misalignment.
- Detach the connectors from the climate control sensors.



CLUB.AUTODOC.CO.UK 5-19







Remove the cabin filter housing seal.



Unscrew the fasteners of the bottom part of the cabin filter housing. Use a drive socket #13. Use a ratchet wrench.



Remove the bottom part of the cabin filter housing.



Cover the cabin filter air ducts with a microfibre cloth to keep dirt and dust out.



16

CLUB.AUTODOC.CO.UK 6-19







Unscrew the fasteners of the diagonal braces. Use Torx T40. Use a ratchet wrench.



18 Remove the diagonal brace.



Unscrew the engine cover fastener. Use HEX No.H5. Use a ratchet wrench.



Remove the engine cover.



AUTODOC recommends:

• Replacement: air filter – BMW 5 Touring (E61). To avoid damaging the part when removing it, do not use excessive force.

CLUB.AUTODOC.CO.UK 7–19







Disconnect the air intake pipe fastening. Use HEX No.H5. Use a ratchet wrench.



Disconnect the air intake pipe from the air filter housing.



Undo the fastening screws of the air filter cover. Use HEX No.H5. Use a ratchet wrench.



Unscrew the fasteners of the back section of the engine cover. Use HEX No.H5. Use a ratchet wrench.



24

CLUB.AUTODOC.CO.UK 8-19







Remove the back section of the engine cover.



Unscrew the oil filler plug.




Remove the oil filler cap.



Take off the filter lid.



29 Install the oil filler cap.

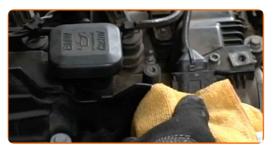

CLUB.AUTODOC.CO.UK 9-19







Remove the filter element from the filter housing. Use water pump pliers.




Clean the air filter cover and housing.



Replacement: air filter – BMW 5 Touring (E61). Professionals recommend:

• Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

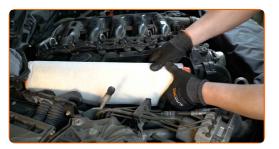

CLUB.AUTODOC.CO.UK 10-19