





SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

BMW 3 Coupe (E92) 318i 2.0, BMW 3 Coupe (E92) 335i 3.0, BMW 3 Coupe (E92) 335d 3.0, BMW 3 Coupe (E92) 325i 2.5, BMW 3 Coupe (E92) 330i 3.0, BMW 3 Coupe (E92) 325xi 2.5, BMW 3 Coupe (E92) 330xi 3.0, BMW 3 Coupe (E92) 325xi 2.5, BMW 3 Coupe (E92) 330xi 3.0, BMW 3 Coupe (E92) 320i 2.0, BMW 3 Coupe (E92) 320d 2.0, BMW 3 Coupe (E92) 325d 3.0, BMW 3 Coupe (E92) M, BMW 3 Coupe (E92) 325i 3.0, BMW 3 Coupe (E92) 325xi 3.0, (+ 18)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E90) 318i 2.0


CLUB.AUTODOC.CO.UK 1-9







REPLACEMENT: ANTI ROLL BAR LINKS – BMW 3 COUPE (E92). TOOLS YOU NEED:

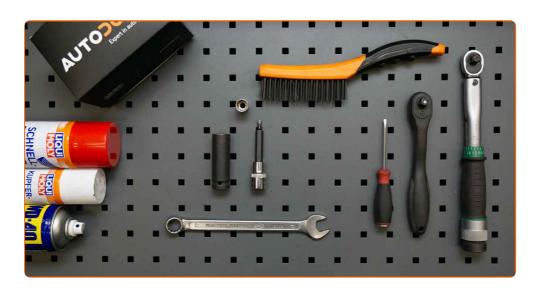

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 13
- Combination spanner #17

- HEX bit No.H5.
- Wheel impact socket #17
- Ratchet wrench
- Flat Screwdriver
- Torque wrench
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2–9







AUTODOC recommends:

- Replace the stabiliser links on BMW 3 Coupe (E92) in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Please note: all work on the car BMW 3 Coupe (E92) should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.

CLUB.AUTODOC.CO.UK 3–9







Unscrew the wheel bolts.

4



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
 BMW 3 Coupe (E92)
- Remove the wheel.



- 6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.
- Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #17. Use HEX No.H5. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 4-9







Unscrew the fastener connecting the stabilizer link to the control arm. Use a drive socket #13. Use a ratchet wrench. Use a flat screwdriver.



- 9 Remove the fastening bolt.
- Remove the stabilizer rod.



Replacement: anti roll bar links – BMW 3 Coupe (E92). Tip from AUTODOC:

• Examine stabiliser bushes. Replace them if needed.

Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 5–9







12 Install the transverse stabilizer link.



install the rod fastening to the stabilizer and tighten it. Use a drive socket #13. Use a torque wrench. Tighten it to 21 Nm torque.



Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #17 (2 pieces). Use a torque wrench. Tighten it to 58 Nm torque.



- Treat all joints of the stabiliser link. Use copper grease.
- Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



CLUB.AUTODOC.CO.UK 6-9







17 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

 Replacement: anti roll bar links – BMW 3 Coupe (E92). After applying the spray, wait a few minutes.

18 li

Install the wheel.



AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW 3 Coupe (E92)

19

Screw in the wheel bolts. Use wheel impact socket #17.



CLUB.AUTODOC.CO.UK 7–9







Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



Remove the jacks and chocks.





VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 8-9