

This video shows the replacement procedure of a similar car part on another vehicle

## i Important!

This replacement procedure can be used for: BMW 3 Coupe (E36) 318is 1.8, BMW 3 Coupe (E36) 320i 2.0, BMW 3 Coupe (E36) 316i 1.6, BMW 3 Coupe (E36) M3 3.0, BMW 3 Coupe (E36) 328i 2.8, BMW 3 Coupe (E36) 318is 1.9, BMW 3 Coupe (E36) 323i 2.5

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 5 Saloon (E39) 520i 2.0


CLUB.AUTODOC.CO.UK 1–10







# REPLACEMENT: FUEL FILTER – BMW 3 COUPE (E36). TOOLS YOU MIGHT NEED:

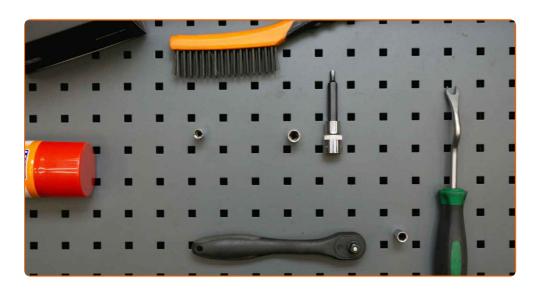

- Wire brush
- All-purpose cleaning spray
- Fluid container
- Drive socket # 5.5
- Drive socket #8

- Drive socket #10
- HEX bit No.H5.
- Ratchet wrench
- Clip removal tool
- Fender cover

**Buy tools** 

CLUB.AUTODOC.CO.UK 2-10





### Replacement: fuel filter – BMW 3 Coupe (E36). Tip from AUTODOC experts:

- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- Please note: all work on the car BMW 3 Coupe (E36) should be done with the engine switched off.

#### CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the fuel door.
- 2 Unscrew the fuel filler cap.
- Open the bonnet.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Lift the car using a jack or place it over an inspection pit.



Unscrew the fasteners of the underbody cover panel. Use a drive socket #10. Use a drive socket #8. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 3-10







Remove the clips of the underbody cover panel. Use a clip removal tool.



Remove the underbody cover panel.



## Replacement: fuel filter – BMW 3 Coupe (E36). Tip:

- Do not apply excessive force when removing the part. Otherwise you may damage it.
- Clean the fasteners of the fuel supply lines. Use a nylon cleaning brush. Use all-purpose cleaning spray.



Prepare a container for fluids.



CLUB.AUTODOC.CO.UK 4-10





Unscrew the fastener attaching the fuel supply line to the fuel filter housing. Use a drive socket #5.5. Use a ratchet wrench.



Disconnect the fuel supply lines from the fuel filter.



Clean the fuel filter mounting bracket. Use WD-40 spray.



Loosen the fuel filter mounting. Use HEX No.H5. Use a ratchet wrench.



Remove the fuel filter.



CLUB.AUTODOC.CO.UK 5-10








16 Install a new fuel filter.



## Replacement: fuel filter – BMW 3 Coupe (E36). Tip from AUTODOC:

- Remember, it is important not to mix up the input and output of the filter. Arrows on the filter indicate the direction of fuel flow.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- BMW 3 Coupe (E36) It's important to only use high-quality filters.



18



Screw in the fuel filter mounting bracket. Use HEX No.H5. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 6-10





Screw the fastener attaching the fuel supply line to the fuel filter housing. Use a drive socket #5.5. Use a ratchet wrench.



Take the fluid container away from under the fuel filter.



Put the underbody cover panel back in place.



Screw in the fasteners of the underbody cover panel. Use a drive socket #8. Use a drive socket #10. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 7–10



23

Install the clips of the underbody cover panel.



24

Lower the car.



#### Replacement: fuel filter – BMW 3 Coupe (E36). Professionals recommend:

- Before starting off, switch the ignition on and off several times. This should be done to activate the fuel pump to make it pump fuel through the fuel system.
- Tighten the fuel filler cap.
- Close the fuel door.
- Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.
- 28 Shut off the engine.
- Remove the fender protection cover.
- Close the hood.

CLUB.AUTODOC.CO.UK 8-10



#### AUTODOC recommends:

• To protect the environment from pollution, be sure to dispose of the used filters at special collection points.



**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 9-10



