






#### **VIDEO TUTORIAL**

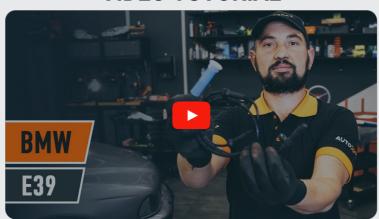

### (i) Important!

This replacement procedure can be used for:

BMW 5 Saloon (E39) 520i 2.0, BMW 5 Saloon (E39) 525tds 2.5, BMW 5 Saloon (E39) 523i 2.5, BMW 5 Saloon (E39) 528i 2.8, BMW 5 Saloon (E39) 540i 4.4, BMW 5 Saloon (E39) 535i 3.5, BMW 5 Touring (E39) 520i 2.0, BMW 5 Touring (E39) 523i 2.5, BMW 5 Touring (E39) 540i 4.4, BMW 5 Saloon (E39) 525td 2.5, BMW 5 Touring (E39) 528i 2.8, BMW 5 Saloon (E39) 530d 3.0, BMW 5 Touring (E39) 530d 3.0, BMW 5 Touring (E39) 525tds 2.5, BMW 5 Saloon (E39) 520d 2.0, (+9)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-10







### REPLACEMENT: ABS SENSOR – BMW E39 TOURING. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Electronic spray
- Copper grease
- Multipurpose grease

- Torque wrench
- Drive socket # 10
- Wheel impact socket #17
- Ratchet wrench
- Crow bar
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-10







Replacement: ABS sensor – BMW E39 touring. AUTODOC experts recommend:

• All work should be done with the engine stopped.

# REPLACEMENT: ABS SENSOR – BMW E39 TOURING. USE THE FOLLOWING PROCEDURE:

- 1 Secure the wheels with chocks.
- Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.



Unscrew the wheel bolts.



CLUB.AUTODOC.CO.UK 3-10







#### AUTODOC recommends:

Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
 BMW E39 touring

Remove the wheel.



6 Detach the ABS sensor connector.



Disconnect the ABS sensor wiring.

8



Clean the ABS sensor fastener. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 4-10







Unscrew the ABS sensor fastener. Use a drive socket #10. Use a ratchet wrench.



Disconnect the ABS sensor. Use a crowbar.



Clean the ABS sensor mounting seat. Use a wire brush. Use WD-40 spray.



Treat the ABS sensor fastener. Use a multipurpose grease. Use a crowbar.



**12** 

CLUB.AUTODOC.CO.UK 5-10







Connect the ABS sensor.



Tighten the fastener that connects the ABS sensor to the steering knuckle. Use a drive socket #10. Use a torque wrench. Tighten it to 7 Nm torque.



Connect the ABS sensor wiring.

16

17



Treat the ABS sensor connector. Use dielectric grease.



Attach the ABS sensor connector.



CLUB.AUTODOC.CO.UK 6-10







Clean the wheel rim mounting seat. Use a wire brush.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



#### **AUTODOC** recommends:

 Replacement: ABS sensor – BMW E39 touring. After applying the spray, wait a few minutes.

21

Install the wheel.



CLUB.AUTODOC.CO.UK 7–10







#### **AUTODOC** recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW E39 touring

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



Remove the jacks and chocks.





**VIEW MORE TUTORIALS** 


CLUB.AUTODOC.CO.UK 8-10







## AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

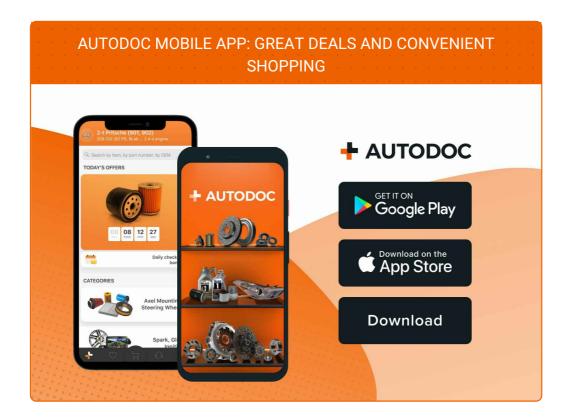

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**BUY SPARE PARTS FOR BMW** 

**ABS SENSOR: A WIDE SELECTION** 

CLUB.AUTODOC.CO.UK 9-10