+ AUTODOC CLUB

How to change rear shock absorbers on **BMW 1 Hatchback (E87)** – replacement guide







SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:
BMW 1 Hatchback (E87) 116i 1.6, BMW 1 Hatchback (E87) 116i 2.0, BMW 1
Hatchback (E87) 118i 2.0, BMW 1 Hatchback (E87) 120i 2.0, BMW 1 Hatchback (E87) 130i 3.0, BMW 1 Hatchback (E87) 116d 2.0, BMW 1 Hatchback (E87) 118d 2.0, BMW 1 Hatchback (E87) 120d 2.0, BMW 1 Hatchback (E87) 123d 2.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E90) 318i 2.0

CLUB.AUTODOC.CO.UK 1–16







REPLACEMENT: SHOCK ABSORBERS – BMW 1 HATCHBACK (E87). TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Drive socket # 16
- Drive socket # 17
- Torx bit T25

- Wheel impact socket #17
- Ratchet wrench
- Flat Screwdriver
- Phillips screwdriver
- Adjustable wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2-16







Replacement: shock absorbers – BMW 1 Hatchback (E87). Tip from AUTODOC:

- Both shock absorbers of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock absorbers of the rear suspension.
- Please note: all work on the car BMW 1 Hatchback (E87) should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the rear of the car and secure on supports.

CLUB.AUTODOC.CO.UK 3-16







4 Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
 BMW 1 Hatchback (E87)
- 5 Remove the wheel.



Support the stub axle. Use a hydraulic transmission jack.



Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.

CLUB.AUTODOC.CO.UK 4-16







Unscrew the lower fastener of the shock absorber. Use a drive socket #17. Use a ratchet wrench.



- 9 Remove the fastening bolt.
- 10 Remove the support from under the stub axle.



AUTODOC recommends:

- BMW 1 Hatchback (E87) Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.
- Detach the lower part of the shock absorber. Use a crowbar.



- Lower the car.
- 13 Open the boot lid.

CLUB.AUTODOC.CO.UK 5-16







14 Remove the boot front lower lining.



Remove the clips from the plastic boot sill guard. Use flat screwdrivers (2 pieces).



Unscrew the fasteners of the plastic boot sill guard. Use a Phillips screwdriver.



17 Remove the plastic door sill plate.

18



Remove the cover of the boot side lining.



CLUB.AUTODOC.CO.UK 6-16







Remove the clips of the boot side lining. Use a flat screwdriver.



Unscrew the fastener of the boot side lining. Use Torx T25. Use a ratchet wrench.



Remove the boot side lining.

23



Remove the protective cap of the shock absorber mount. Use a flat screwdriver.



Clean the fasteners of the shock absorber upper mount. Use a wire brush. Use WD-40 spray.

CLUB.AUTODOC.CO.UK 7–16







Unscrew the upper fastener of the shock absorber. Use a combination spanner #16. Use an adjustable wrench.



AUTODOC recommends:

- Important! Hold the shock absorber while unscrewing the fastening bolts. BMW 1 Hatchback (E87)
- Remove the shock absorber.



- Remove the shock absorber upper mount.
- Remove the shock absorber dust cap and the bump stop.



CLUB.AUTODOC.CO.UK 8-16







AUTODOC recommends:

- Replacement: shock absorbers BMW 1 Hatchback (E87). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.
- Before installing a new shock absorber you should pump it manually 3-5 times.
- Install the dust sleeve and the bump stop on the new shock absorber.



- Install the shock absorber upper mount.
- Clean the shock absorber mounting seats. Use a wire brush. Use WD-40 spray.



Place the shock absorber in the wheel arch and secure it.



CLUB.AUTODOC.CO.UK 9-16







AUTODOC recommends:

- Important! Hold the shock absorber while screwing in the fastening bolts. BMW 1 Hatchback (E87)
- Tighten the top shock absorber fastening. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 27 Nm torque.



- Treat the shock absorber fasteners. Use copper grease.
- Install the protective shock absorber mounting cap.



Attach the side lining of the boot.



CLUB.AUTODOC.CO.UK 10-16








Screw in the fastener of the boot side lining. Use Torx T25. Use a ratchet wrench.



Install the clips of the boot side lining.



Install the cover of the boot side lining.

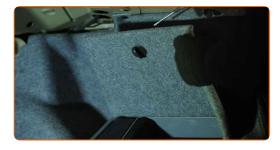

39 Install the plastic door sill plate.

40



Screw in the fasteners of the plastic boot sill guard. Use a Phillips screwdriver.



CLUB.AUTODOC.CO.UK 11-16








Put the clips back in place.



Install the boot front lower lining.

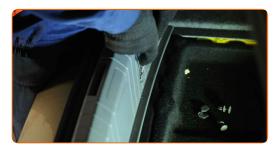

- Close the lid of the luggage compartment.
- Raise the rear of the car and secure on supports.
- Support the stub axle. Use a hydraulic transmission jack.



Attach the lower part of the shock absorber. Use a crowbar. Use a flat screwdriver.



47 Install the fastening bolt.

CLUB.AUTODOC.CO.UK 12-16







Tighten the lower fastener of the shock absorber. Use a drive socket #17. Use a torque wrench. Tighten it to 60 Nm torque.



Treat the shock absorber fasteners. Use copper grease.



Remove the support from under the stub axle.

50

AUTODOC recommends:

- Replacement: shock absorbers BMW 1 Hatchback (E87). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.
- Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



CLUB.AUTODOC.CO.UK 13-16







Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

 Replacement: shock absorbers – BMW 1 Hatchback (E87). After applying the spray, wait a few minutes.

53

Install the wheel.



AUTODOC recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW 1 Hatchback (E87)

54

Screw in the wheel bolts. Use wheel impact socket #17.



CLUB.AUTODOC.CO.UK 14-16







Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



56

Remove the jacks and chocks.





VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 15-16





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SHOCK ABSORBERS: A WIDE SELECTION

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 16-16