





SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

BMW 1 Convertible (E88) 120i 2.0, BMW 1 Convertible (E88) 125i 3.0, BMW 1 Convertible (E88) 118i 2.0, BMW 1 Convertible (E88) 135i 3.0, BMW 1 Convertible (E88) 120d 2.0, BMW 1 Convertible (E88) 118d 2.0, BMW 1 Convertible (E88) 123d 2.0, BMW 1 Convertible (E88) 128i 3.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E90) 318i 2.0


CLUB.AUTODOC.CO.UK 1–7







REPLACEMENT: POLLEN FILTER – BMW 1 CONVERTIBLE (E88). TOOLS YOU MIGHT NEED:

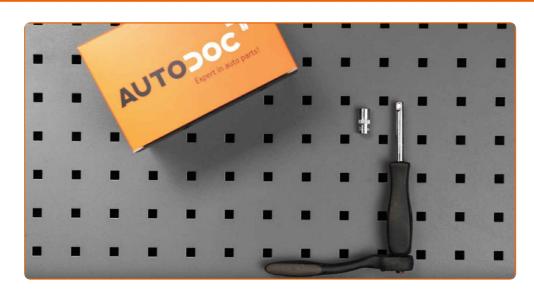

- Drive socket # 8
- Ratchet wrench

Fender cover

Buy tools

CLUB.AUTODOC.CO.UK 2-7







Replacement: pollen filter – BMW 1 Convertible (E88). AUTODOC experts recommend:

- Replace the cabin filter at least once every six months, in early spring and autumn seasons.
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- If the air flow into the cabin has sharply reduced, replace the filter before a scheduled maintenance.
- Please note: all work on the car BMW 1 Convertible (E88) should be done
 with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the bonnet.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Unscrew the fasteners of the cabin filter housing cover (6 pieces).



Use a drive socket #8. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 3-7







4 Remove the cabin filter housing cover.



Release the cabin filter cover clips.



6 Remove the filter element from the filter housing.



AUTODOC recommends:

- Do not attempt to clean and reuse the filter it will affect the quality of air cleaning inside the car.
- Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



CLUB.AUTODOC.CO.UK 4-7







Replacement: pollen filter – BMW 1 Convertible (E88). AUTODOC experts recommend:

- Check out the correct location of the filter element. Do not skew.
- Follow the air flow direction arrow on the filter.
- Attention! Use quality filters BMW 1 Convertible (E88).

Attach the cabin filter cover clips.



Reinstall the cabin filter housing cover.



AUTODOC recommends:

 Replacement: pollen filter – BMW 1 Convertible (E88). Do not use excessive force during installation. This may damage the fasteners.

CLUB.AUTODOC.CO.UK 5–7







Screw in the fasteners of the cabin filter housing cover (6 pieces). Use a drive socket #8. Use a ratchet wrench.



Remove the fender protection cover. Close the hood.



- Switch on the ignition.
- Switch on the air conditioning system. This is necessary in order to make sure that the component operates properly.



14 Switch off the ignition.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 6-7