





#### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

# i Important!

This replacement procedure can be used for:

BMW 3 Coupe (E46) 323Ci 2.5, BMW 3 Coupe (E46) 328Ci 2.8, BMW 3 Coupe (E46) 320Ci 2.0, BMW 3 Coupe (E46) 320Ci 2.2, BMW 3 Coupe (E46) 325Ci 2.5, BMW 3 Coupe (E46) 330Cd 3.0, BMW 3 Coupe (E46) 320Cd 2.0, BMW 3 Coupe (E46) 330Ci 3.0, BMW 3 Coupe (E46) 323i 2.5

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Convertible (E46) 318Ci 2.0

CLUB.AUTODOC.CO.UK 1–18







# REPLACEMENT: COIL SPRINGS – BMW 3 COUPE (E46). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #17
- Combination spanner #19
- Drive socket # 13
- Drive socket # 21
- Drive socket # 22
- HEX bit No.H7

- Shock absorber socket
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Wheel chock

**Buy tools** 

CLUB.AUTODOC.CO.UK 2-18








### Replacement: coil springs – BMW 3 Coupe (E46). Tip from AUTODOC:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- All work should be done with the engine stopped.

# REPLACEMENT: COIL SPRINGS – BMW 3 COUPE (E46). USE THE FOLLOWING PROCEDURE:

Open the bonnet.

Secure the wheels with chocks.

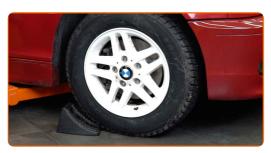

Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.

CLUB.AUTODOC.CO.UK 3-18







5 Unscrew the wheel bolts.



#### AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. BMW 3 Coupe (E46)
- Remove the wheel.



Clean the fasteners connecting the stabiliser link to the shock strut, and those connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 4-18







Unscrew the nut and remove the stabilizer rod from the shock strut. Use HEX No.H7. Use a combination spanner #17. Use a ratchet wrench.



Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #19.



Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #21. Use a tap wrench.



Disconnect the wiring and the brake hose from the bracket on the shock strut.



11

CLUB.AUTODOC.CO.UK 5-18







Release the lower fastener connecting the shock strut to the steering knuckle. Use a special drive socket to remove the shock absorber.



Prop up the steering knuckle. Use a hydraulic transmission jack.



Disconnect the lower arm from the steering knuckle.



Lower the hydraulic transmission jack by 10-15 cm.



#### **AUTODOC** recommends:

 Replacement: coil springs – BMW 3 Coupe (E46). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

CLUB.AUTODOC.CO.UK 6-18







Disconnect the steering knuckle from the shock absorber strut.



Unscrew the shock absorber mount fastening. Use a drive socket #13. Use a ratchet wrench.



Unscrew the upper fasteners of the shock strut.



#### **AUTODOC** recommends:

• BMW 3 Coupe (E46) – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

Remove the suspension strut.



CLUB.AUTODOC.CO.UK 7-18







20 Set the shock absorber strut on the spring compressor tool.



## Replacement: coil springs – BMW 3 Coupe (E46). Professionals recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

Compress the spring.

22



Remove the shock strut mount cap. Use a crowbar.



CLUB.AUTODOC.CO.UK 8-18







Remove the strut piston rod nut. Use a drive socket #22. Use HEX No.H7.



Remove the top strut mount.



Release the coil spring.



Remove the spring.

27



Remove the shock absorber dust cap and the bump stop.



CLUB.AUTODOC.CO.UK 9-18







#### **AUTODOC** recommends:

 Replacement: coil springs – BMW 3 Coupe (E46). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.





Install the boot and a bump stop onto the shock absorber.



Compress the spring.

29

31



Install the upper strut mount and the strut mount bearing. Use a crowbar.



CLUB.AUTODOC.CO.UK 10-18