


Thermostatic Expansion Valve Manifold and Tube Assembly

 [Ford Ecat Electronic Parts Catalog](#)

Material	
Item	Specification
Motorcraft® PAG Refrigerant Compressor Oil YN-12-D	WSH-M1C231-B

Removal and Installation

1. Recover the refrigerant. For additional information, refer to Section 412-00.
2. Disconnect the 2 PCM electrical connectors and the ground cable.
 1. Disconnect the 2 PCM electrical connectors.
 2. If equipped with a 5.0L engine, remove the nut and disconnect the ground cable.
 - To install, tighten to 9 Nm (80 lb-in).

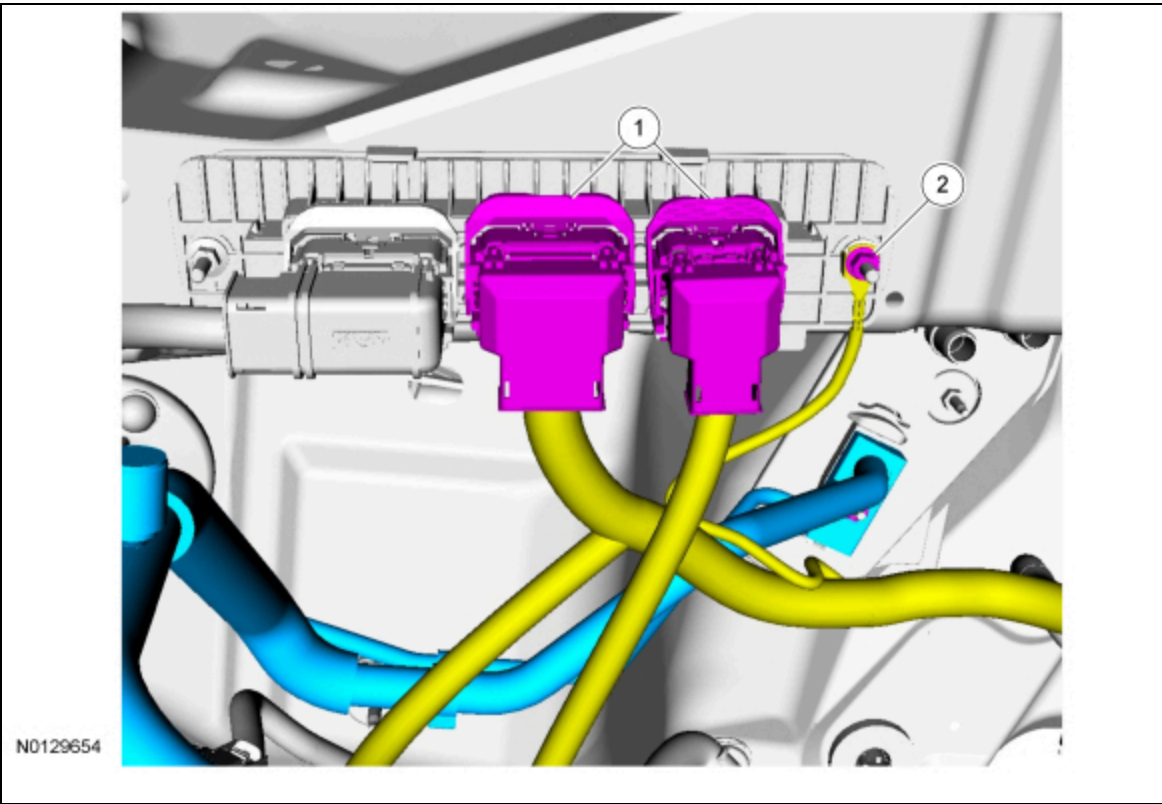

3. Remove the condenser outlet fitting nut and disconnect the fitting.
 - Discard the O-ring seal and gasket seal.
 - To install, tighten to 15 Nm (133 lb-in).
4. Remove the Thermostatic Expansion Valve (TXV) manifold and tube bracket bolt.
 - To install, tighten to 8 Nm (71 lb-in).

5. Remove the evaporator-to-compressor suction line fitting nut and disconnect the fitting.
 - Discard the O-ring seal and gasket seal.
 - To install, tighten to 15 Nm (133 lb-in).
6. Remove the ~~TXV~~ fitting nut and disconnect the fitting.
 - Discard the gasket seals.
 - To install, tighten to 15 Nm (133 lb-in).
7. To install, reverse the removal procedure.
 - Install new gasket seals and O-ring seals.
 - Add the correct amount of clean PAG oil to the refrigerant system. For additional information, refer to the Refrigerant Oil Adding procedure in Section 412-00.
8. Evacuate, leak test and charge the refrigerant system. For additional information, refer to Section 412-00.