


Antenna — AM/FM


 [Ford Ecat Electronic Parts Catalog](#)

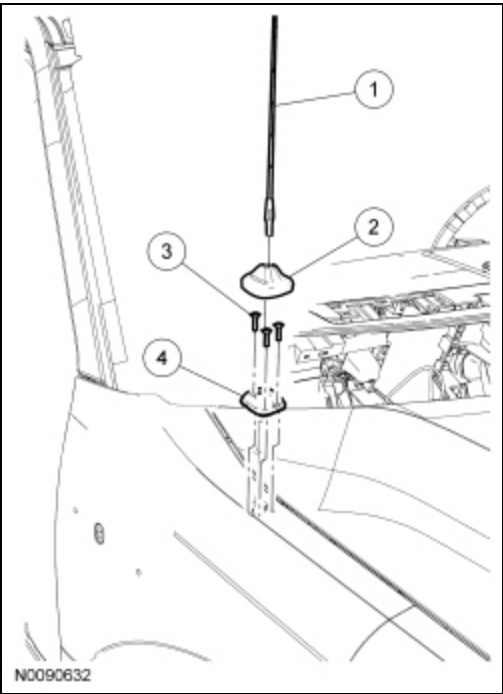

Item	Part Number	Description
1	18813 18813	AM/FM antenna mast
2	18A927 18A927	AM/FM antenna base cap
3	N610019 N610019	AM/FM antenna screws (3 required)
4	18A894 18A894	AM/FM antenna base

Removal and Installation

1. Lower the glove compartment completely.
2. Disconnect the AM/FM antenna from the AM/FM antenna cable.
 - Push the antenna cable end and the grommet through the side cowl.

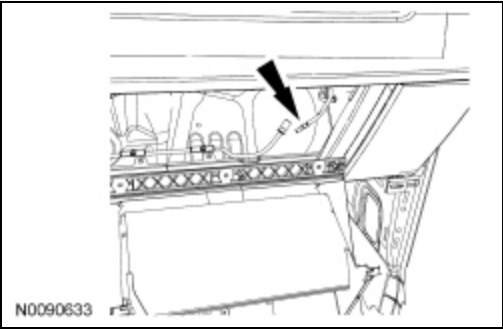

3. **NOTICE:** Do not over tighten the antenna mast or damage to the antenna base or mast may occur.

Remove the AM/FM antenna mast.

1. To install, tighten to 4.2 Nm (36 lb/in).

4. **NOTE:** *A new AM/FM antenna base cap must be installed.*

Using a suitable tool such as a hook-shaped pick, remove the AM/FM antenna base cap by prying upward.

5. Remove the RH front fender splash shield. For additional information, refer to Section 501-02.

6. Remove the 3 screws and the AM/FM antenna base.

1. To install, tighten to 2.5 Nm (23 lb/in).

7. To install, reverse the removal procedure.