


Audio Control Module (ACM)



Single CD

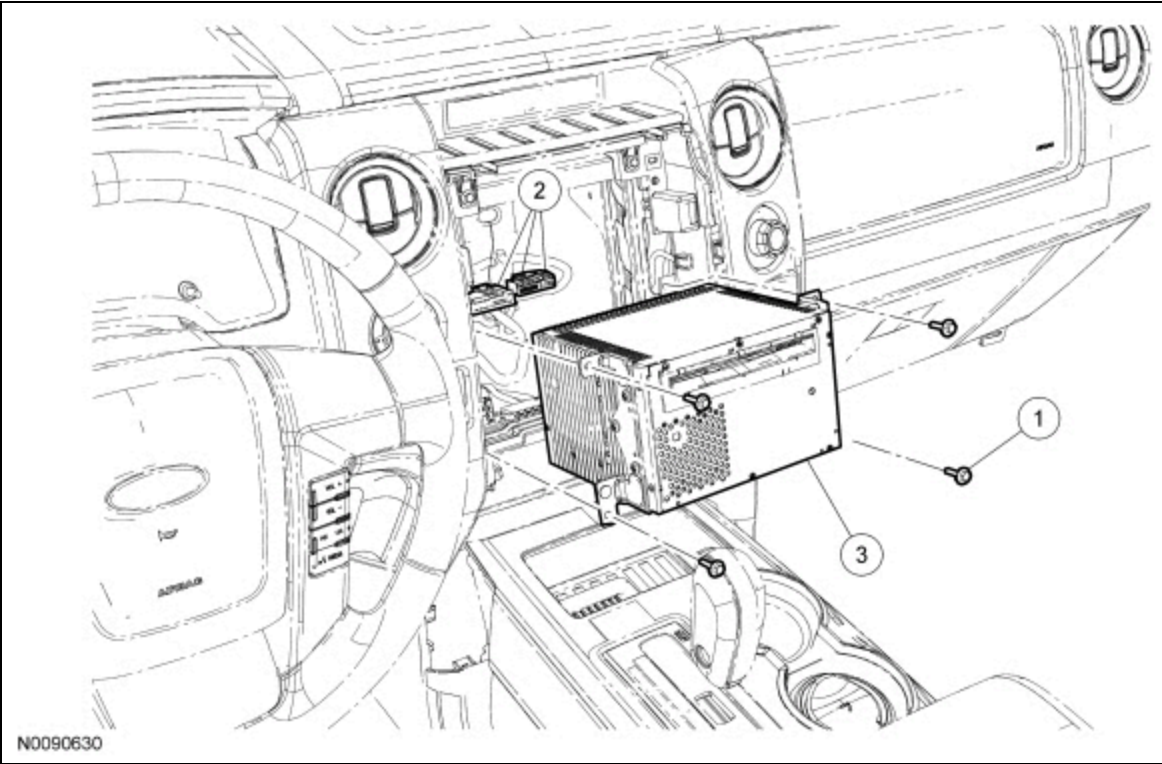

Item	Part Number	Description
1	W707628 W707628 -S-S	Audio Front Control Module (ACM) screws (4 required)
2	—	ACM electrical connectors (part of 14401 and 18812)
3	18806 18806	ACM

Removal and Installation

NOTE: It is not necessary to remove the Audio Front Control Module (ACM) to retrieve the part number. Refer to Audio Control Module (ACM) Self-Diagnostic Mode in this section.

1. **NOTE:** Module configuration is required when a new ACM is being installed.

Upload the ACM configuration information to the scan tool . Refer to Programmable Module Installation (PMI) in Section 418-01.

2. Remove the Front Controls Interface Module (FCIM) . Refer to Front Controls Interface Module (FCIM).

3. Remove the 4 screws and the ACM .

- Disconnect the electrical connectors.
- To install, tighten to 2.5 Nm (23 lb-in).

4. To install, reverse the removal procedure.

- Download the configuration information to the ~~ACM~~ . Refer to ~~PMI~~ in Section 418-01.