

Compass Module


 [Ford Ecat Electronic Parts Catalog](#)

Removal and Installation

NOTE: The compass module is glued to the headliner.

NOTE: When replacing the compass module, obtain 3M™ Duramix™ 4747 Super Fast Adhesive commercially to attach the compass module to the headliner. The 3M™ Duramix™ 4747 Super Fast Adhesives is a 2- part adhesive in a 50 ml dual-tube applicator.

1. Remove the headliner. Refer to Section 501-05.
2. Remove the compass module from the headliner.
 - Disconnect the electrical connector.

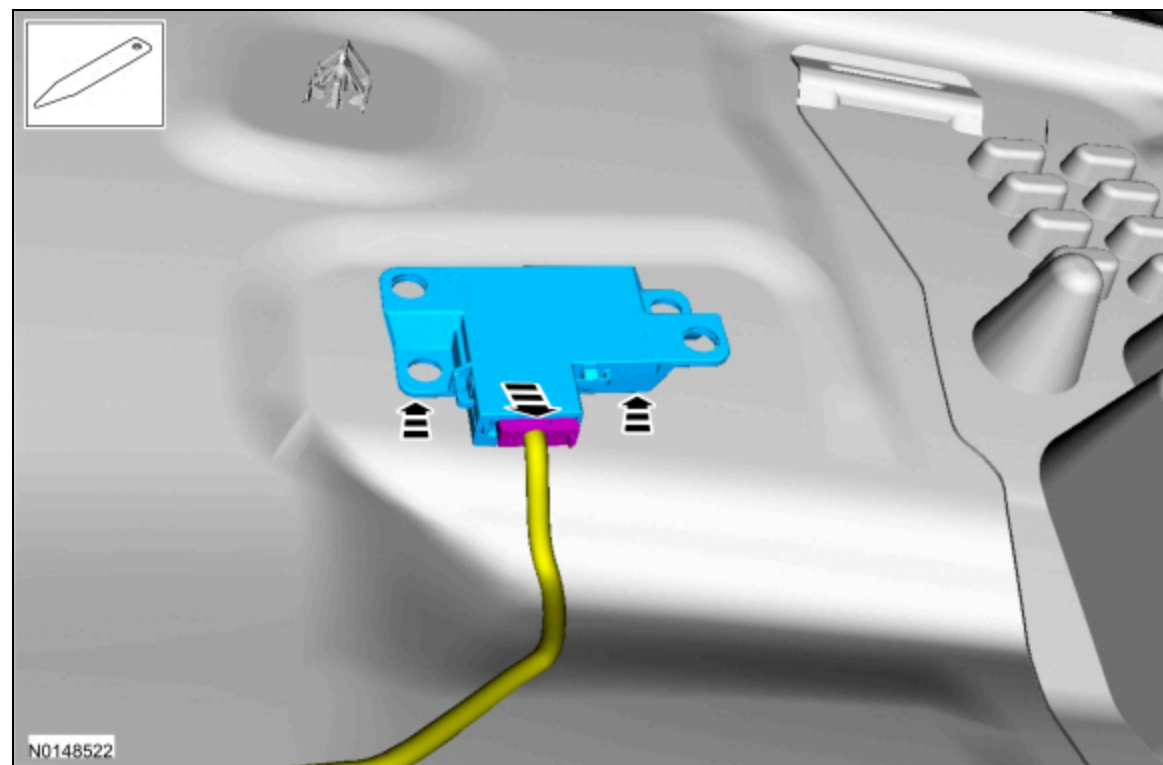

3. To install, reverse the removal procedure.
4. CALIBRATE the compass. Refer to General Procedures in Section 413-01.