


Universal Serial Bus (USB) Cable and Port




Removal and Installation

Instrument panel USB cable with floor console

- 1. Remove the Accessory Protocol Interface Module (APIM) . Refer to Accessory Protocol Interface Module (APIM).
- 2. For access remove the glove box. Refer to Section 501-12.
- 3. Remove the RH lower floor console trim panel

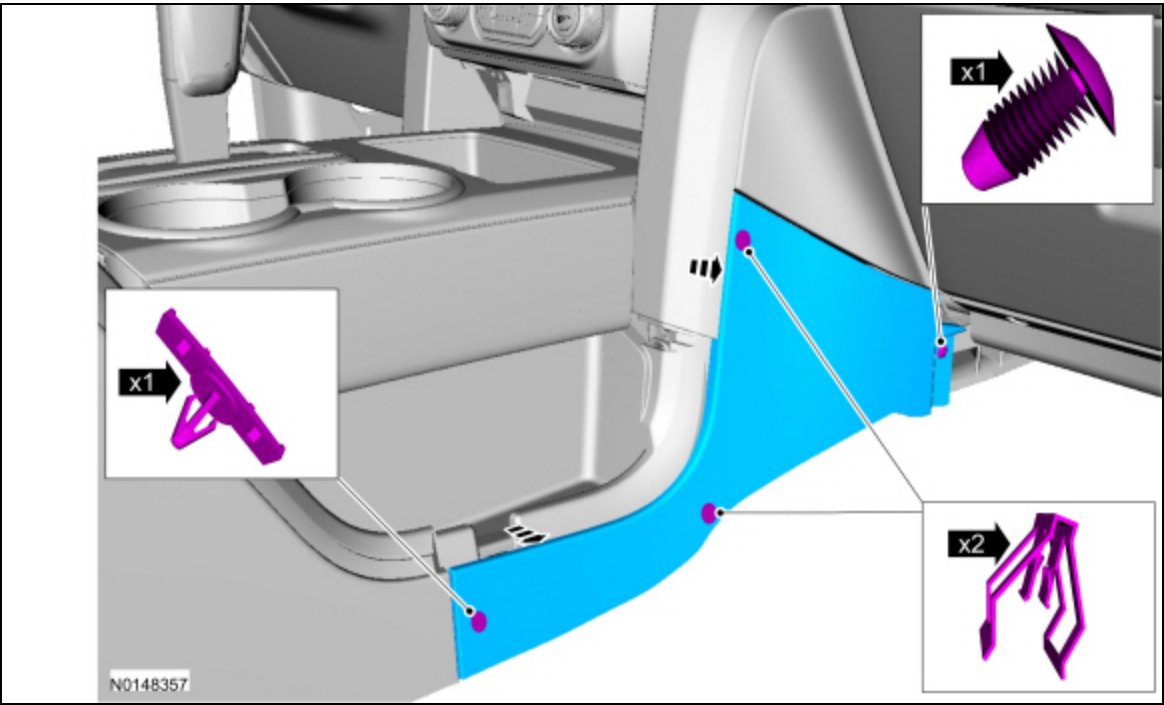


- 4. Remove the USB cable following the routing shown.

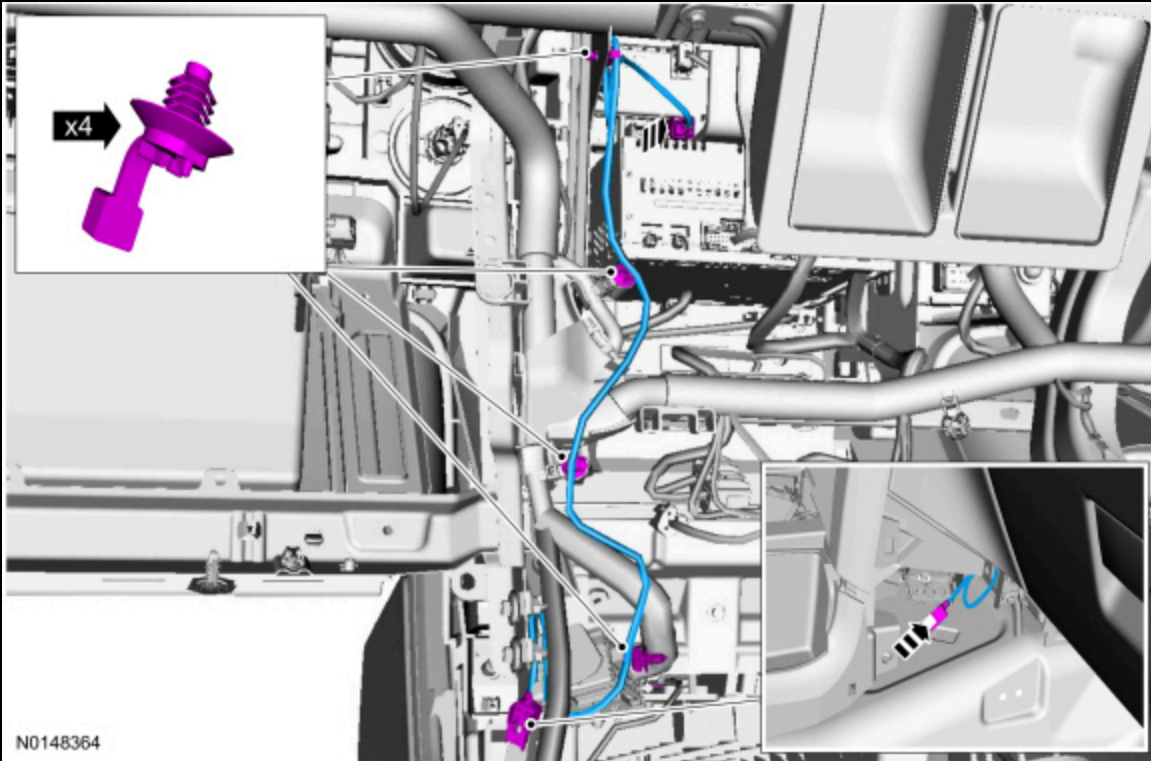


Instrument panel USB without floor console

5. Remove the Accessory Protocol Interface Module (APIM) . Refer to Accessory Protocol Interface Module (APIM).
6. For access remove the glove box. Refer to Section 501-12.
7. Remove the media hub. Refer to Media Hub.
8. Remove the USB cable following the routing shown.

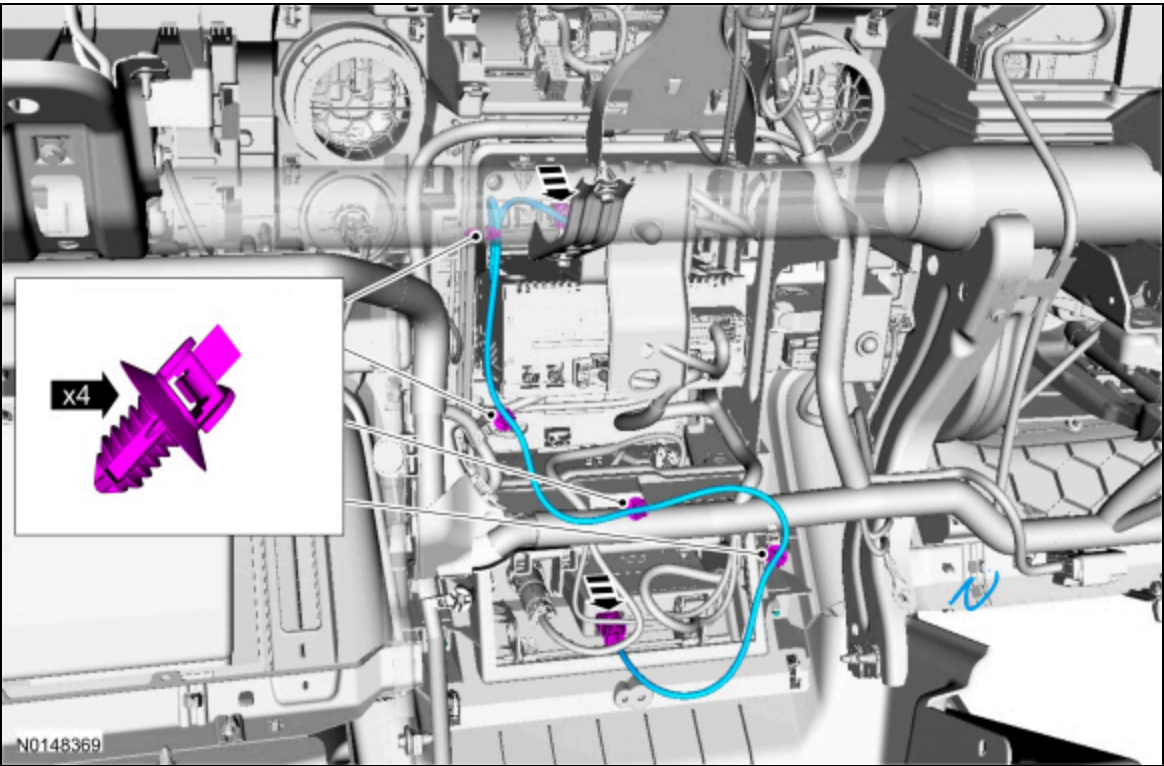


Floor console USB cable


9. Open the floor console stowage bin door.

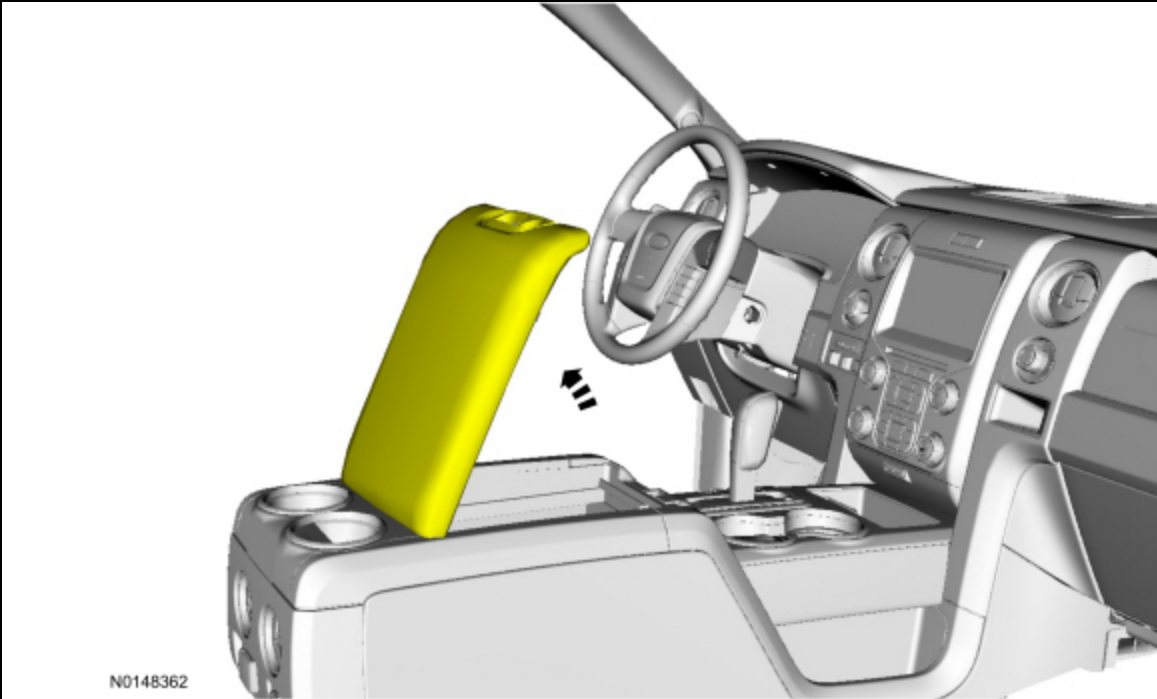

10. Remove the media hub.

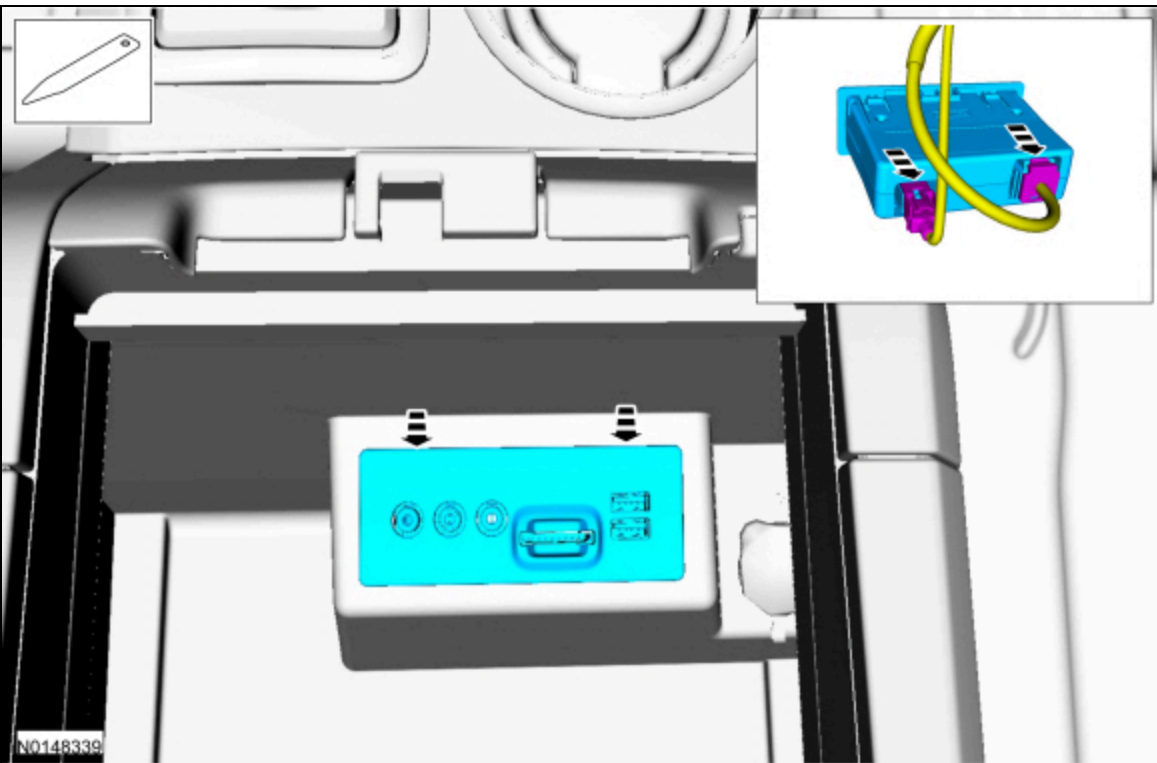


11. Remove the ~~RH~~ lower floor console trim panel.

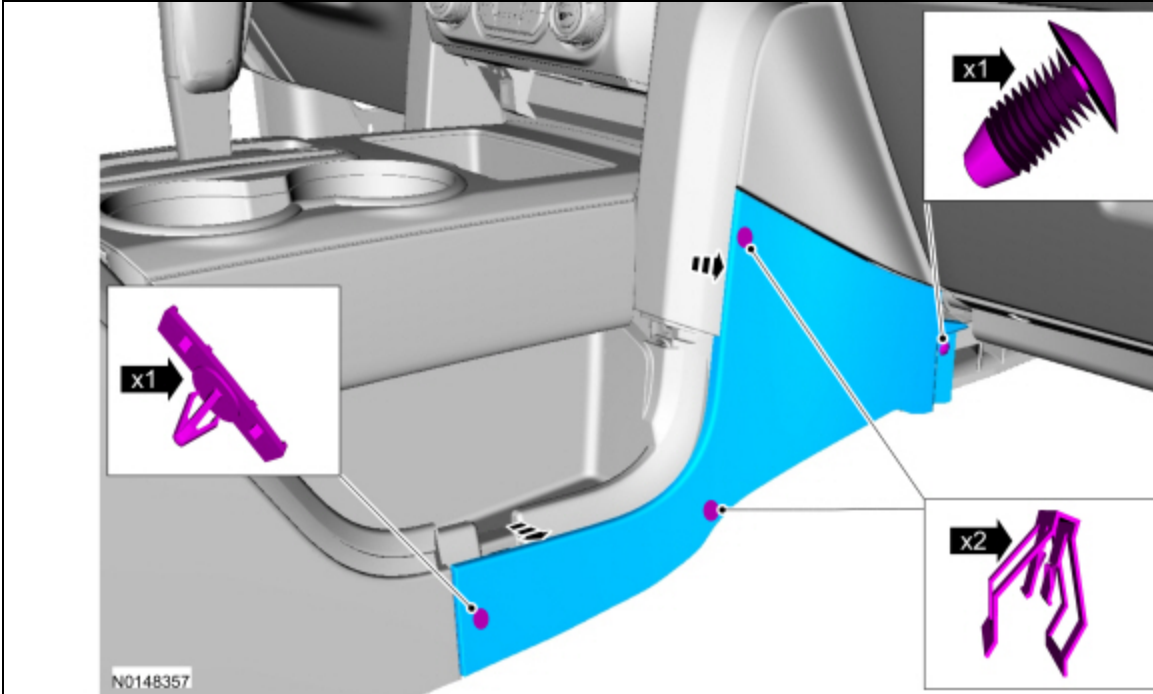

12. Remove the floor console upper finish panel.



13. Remove the floor console USB cable following the routing shown.

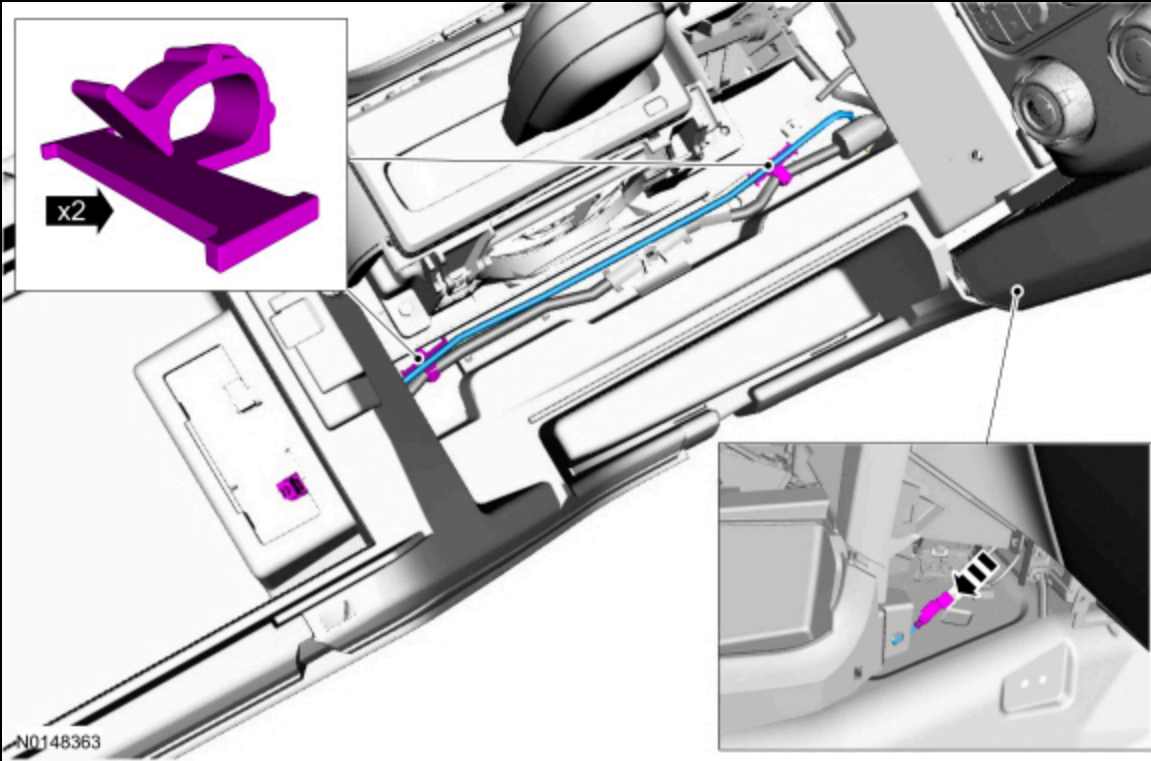

All USB cables

14. To install, reverse the removal procedure.