


Headlamp Assembly

 [Ford Ecat Electronic Parts Catalog](#)

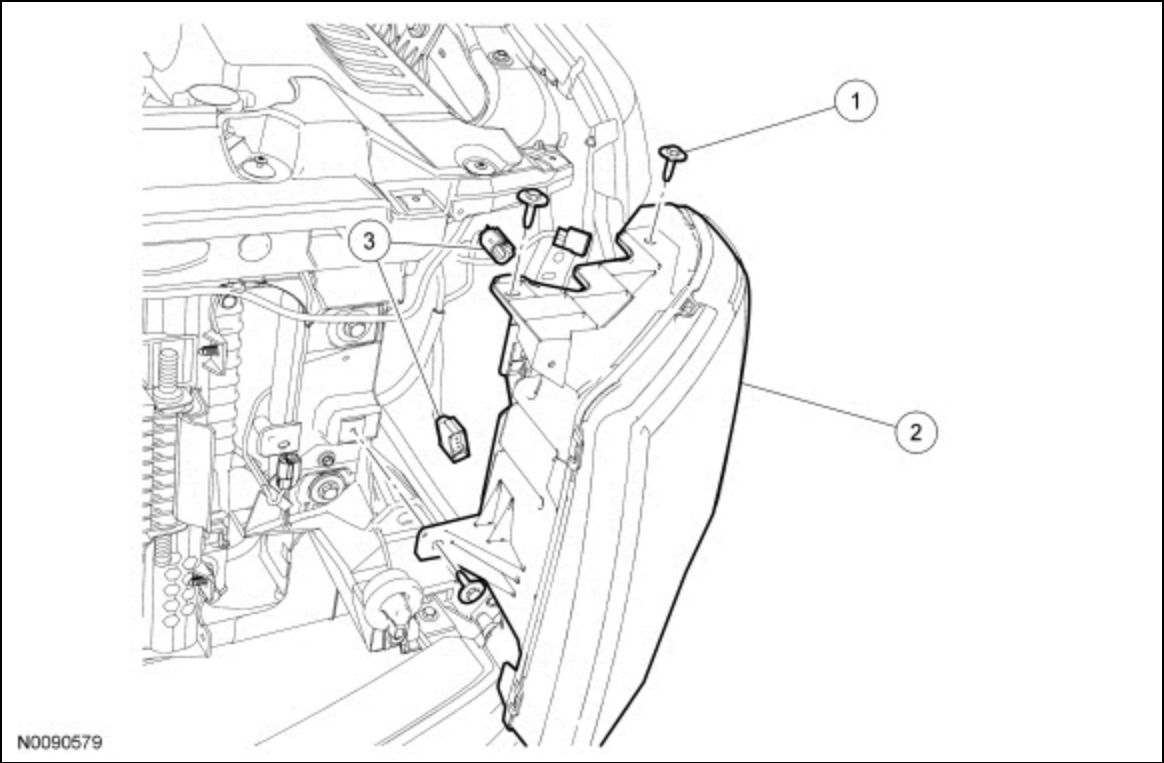


Item	Part Number	Description
1	W703277 W703277	Headlamp bolts (3 required)
2	13008 13008	Headlamp assembly
3	—	Electrical connectors (part of 12A581)

Removal and Installation

NOTE: Make sure the headlamp switch and the ignition switch are in the OFF position.

1. Remove the pin-type retainer and position the radiator side air deflector aside.

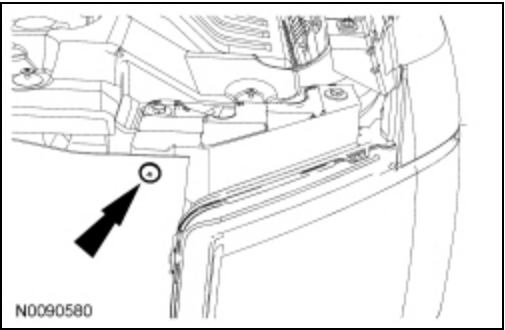

2. **NOTE:** Grasp the headlamp assembly firmly and pull forward to release the 2 metal clips.

Remove the 3 bolts and the headlamp assembly.

- Disconnect the electrical connectors.

3. To install, reverse the removal procedure.