


Rear Lamp Assembly

 [Ford Ecat Electronic Parts Catalog](#)

NOTE: Styleside lamp shown, flareside similar.

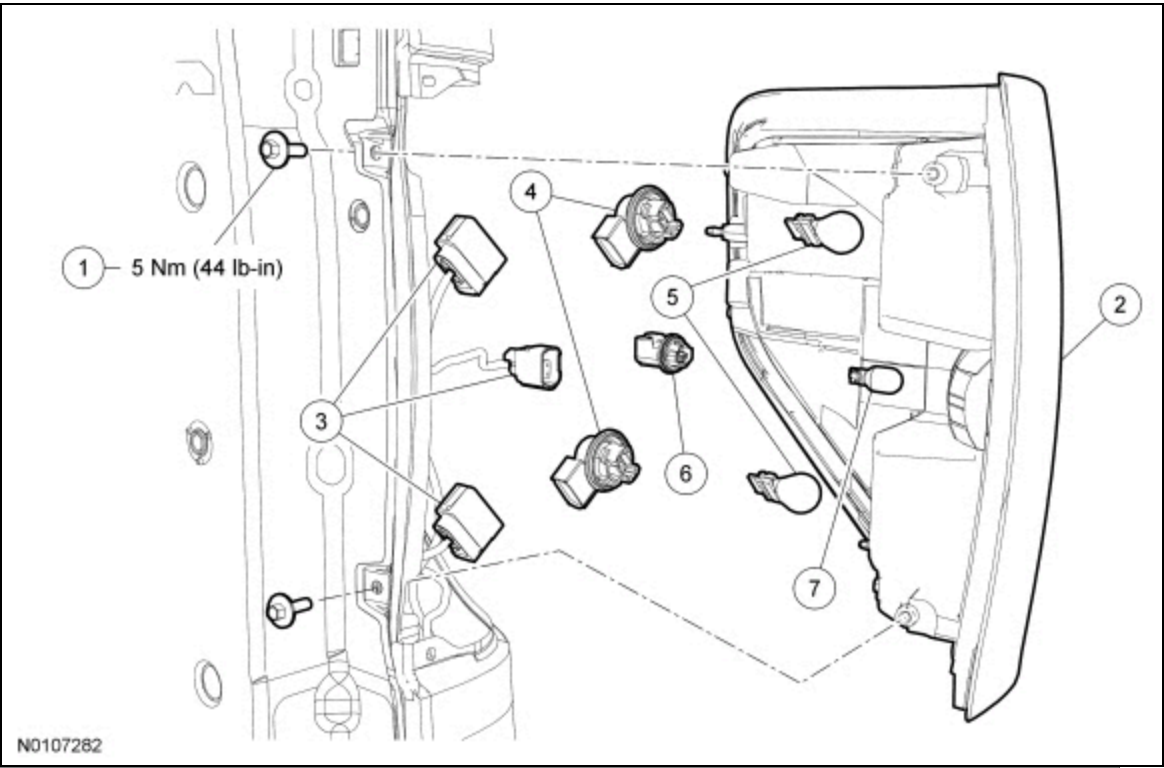

Item	Part Number	Description
1	N808955 N808955	Rear lamp assembly bolts (2 required)
2	13405 13405 /13404/13404	Rear lamp assembly (LH/RH)
3	—	Rear lamp assembly electrical connectors (part of 13A409)
4	13411 13411	Rear stop/turn lamp bulb holder
5	13466 13466	Rear stop/turn lamp bulb
6	13411 13411	Reversing lamp bulb holder
7	13466 13466	Reversing lamp bulb

Removal and Installation

1. Remove the 2 rear lamp assembly bolts.
 - To install, tighten to 5 Nm (44 lb-in).
2. Firmly pull the rear lamp assembly rearward to disengage the metal studs from the grommets on the outboard side of the sheet metal.
 - Disconnect the electrical connectors.
3. If necessary, rotate the bulb holder counterclockwise approximately one-eighth turn and remove it.
 - Separate the bulb from the bulb holder.

4. To install, reverse the removal procedure.