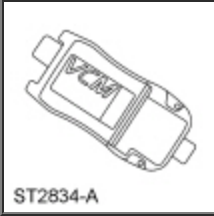


Passive Anti-Theft System (PATS) Parameter Reset

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2834-A	Vehicle Communication Module (VCM) and Integrated Diagnostic System (IDS) software with appropriate hardware, or equivalent scan tool
--	---

1. Turn the key from the OFF position to the RUN position.
2. From the scan tool, enter TOOLBOX. Select BODY — SECURITY — PATS Functions and follow the Integrated Diagnostic System (IDS) on-screen instructions to ENTER SECURITY ACCESS.
3. **NOTE:** *If the Body Control Module (BCM) was replaced on vehicles equipped with PATS , at least two keys must be programmed to the BCM . After completing step 3, do not disconnect the scan tool and follow the Erase All Keys and Program Two Keys procedure.*

From the scan tool, select "Parameter Reset" and follow the IDS on-screen instructions.