


Passive Anti-Theft System (PATS) Transceiver

 [Ford Ecat Electronic Parts Catalog](#)

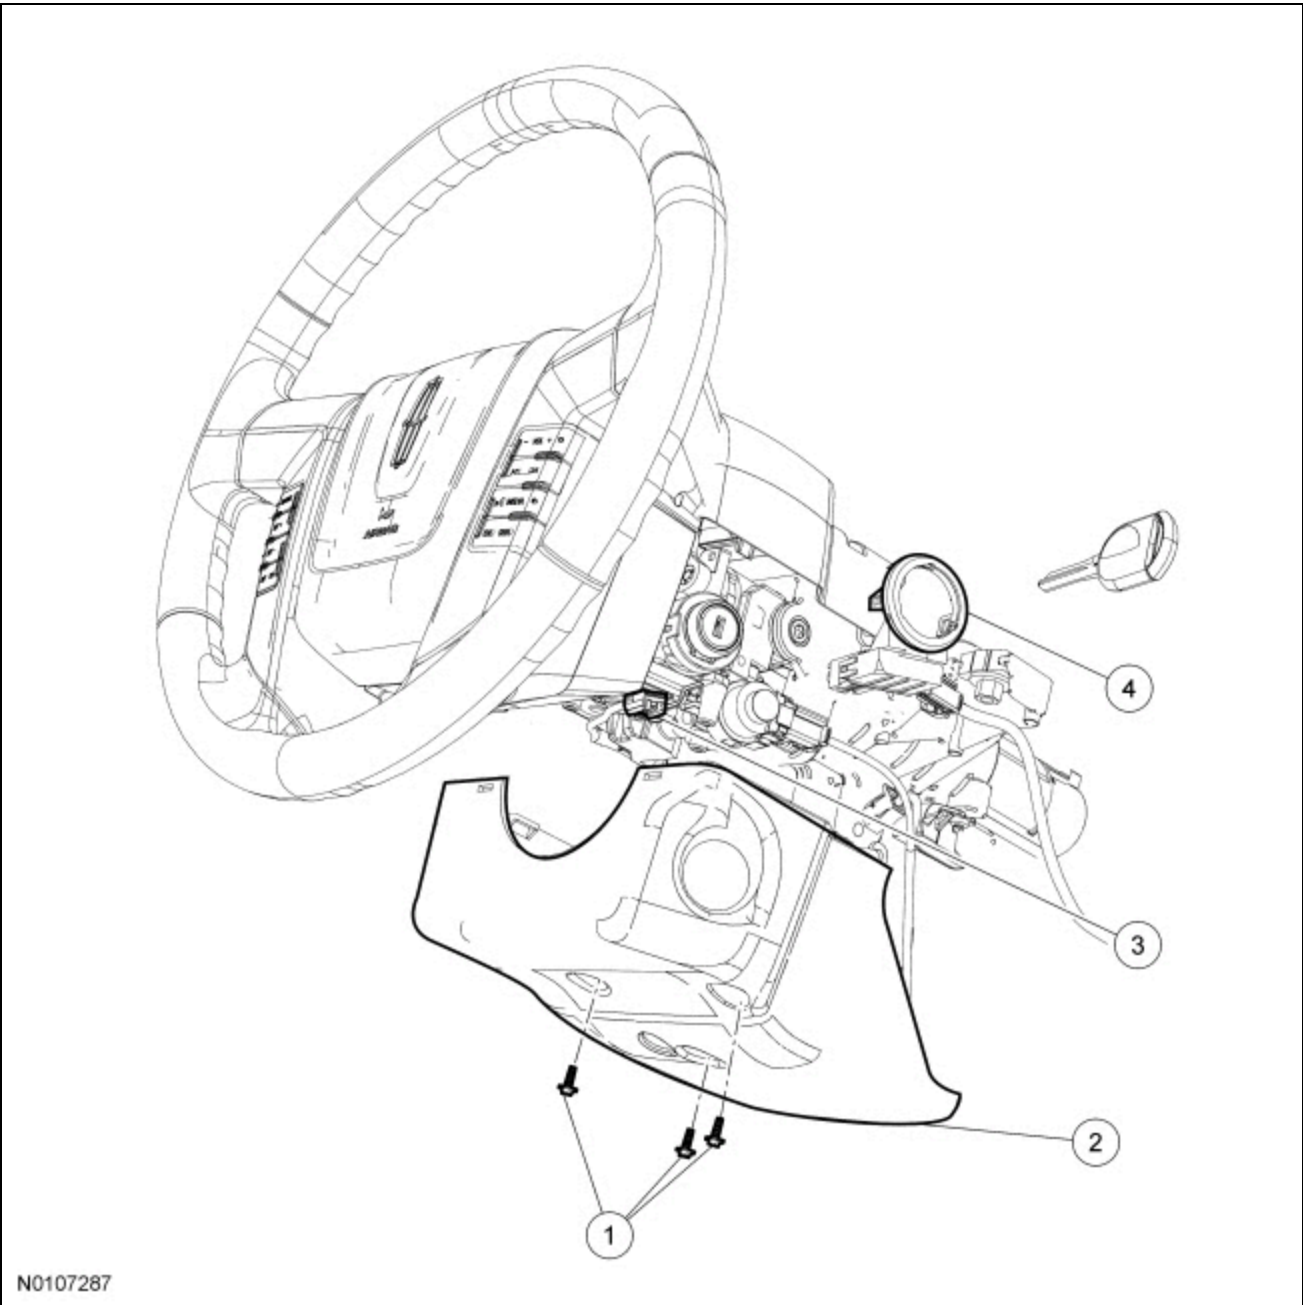

N0107287		
Item	Part Number	Description
1	W710485 W710485-S-S	Steering column shroud screws (3 required)
2	3533 3533	Steering column shroud, lower
3	—	Passive Anti-Theft System (PATS) transceiver electrical connector (part of 14401)
4	15607 15607	PATS transceiver

1. Remove the 3 screws and the lower steering column shroud.
2. Disconnect the Passive Anti-Theft System (PATS) transceiver electrical connector.
3. Using a suitable tool (such as a dentist pick), pry the PATS transceiver tangs outward and remove the PATS transceiver.
4. **NOTE:** *Replacement of the PATS transceiver does not require the PATS keys to be programmed into the Instrument Cluster (IC) again.*

To install, reverse the removal procedure.