


Door Check Arm — Front



NOTE: Right side shown, left side similar.

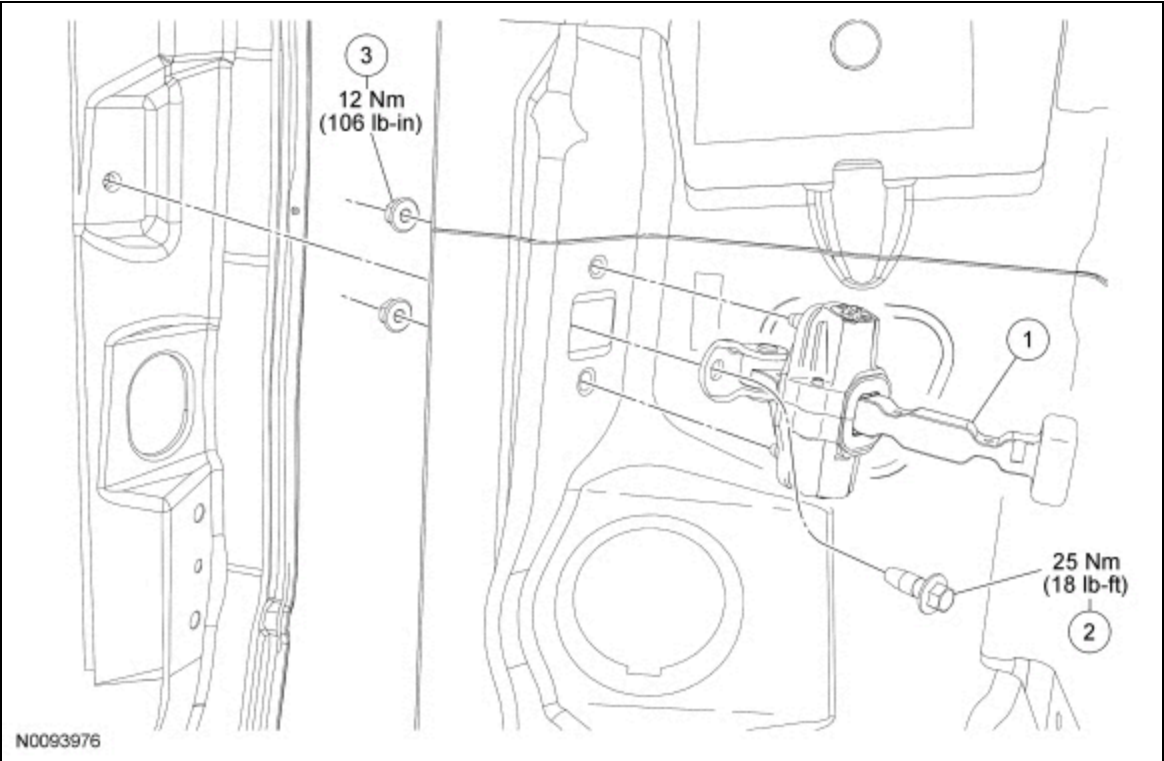

Item	Part Number	Description
1	152700 152700	Front door check arm
2	W707375 W707375	Front door check arm-to-door screw
3	W712741 W712741	Front door check arm-to-body nut

Removal and Installation

1. Remove the cowl side trim panel. For additional information, refer to Section 501-05.
2. Remove the front door check arm-to-door screw.
 - To install, tighten to 25 Nm (18 lb-ft).
3. Remove the front door check arm-to-body nuts.
 - To install, tighten to 12 Nm (106 lb-in).
4. Remove the front door check arm.
5. To install, reverse the removal procedure.