


Door Check Arm — Rear, SuperCab and SuperCrew

 [Ford Ecat Electronic Parts Catalog](#)

SuperCab


NOTE: Right side shown, left side similar.

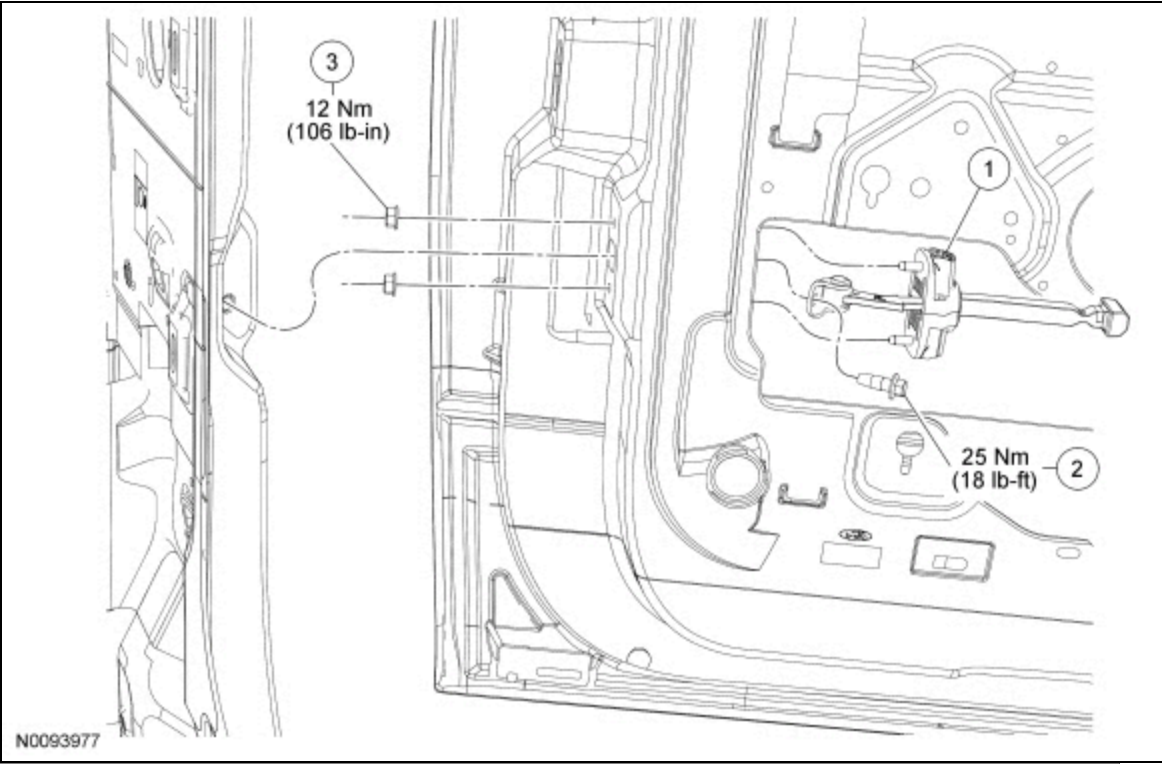

Item	Part Number	Description
1	182700 182700	Rear door check arm
2	W707375 W707375	Rear door check arm-to-body screw
3	W712741 W712741	Rear door check arm-to-door nut

CrewCab

NOTE: Right side shown, left side similar.

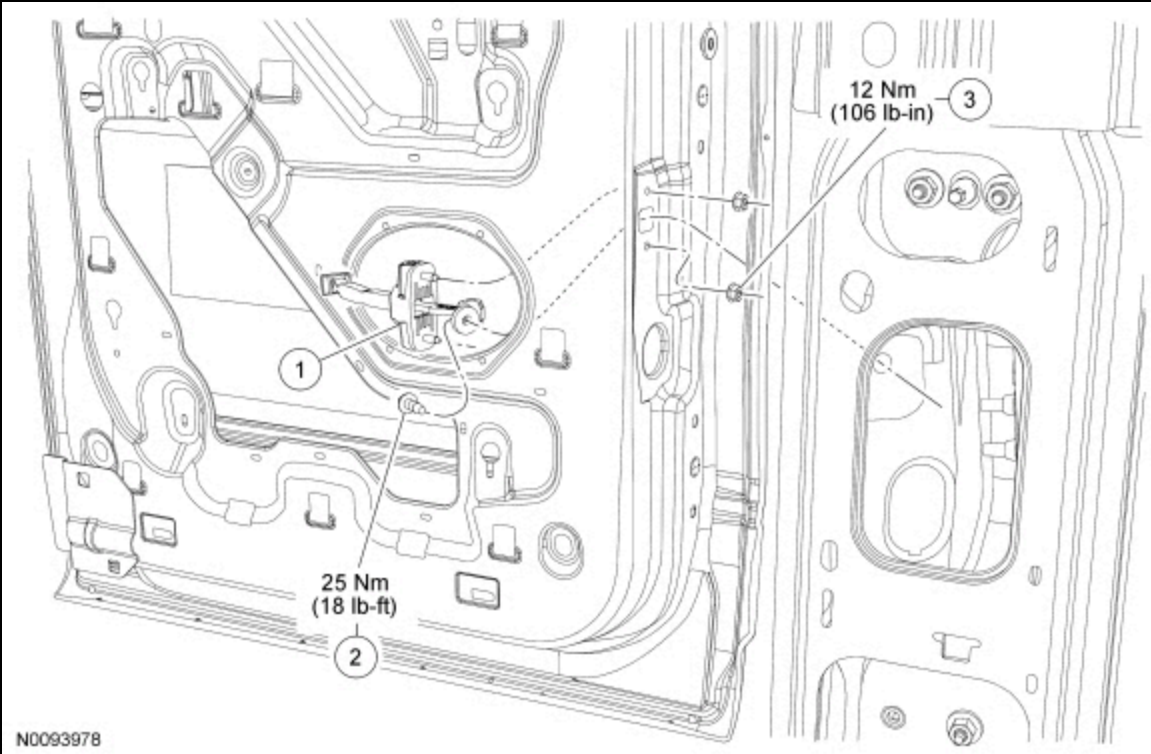

Item	Part Number	Description
1	162700 162700	Rear door check arm
2	W707375 W707375	Rear door check arm-to-body screw
3	W712741 W712741	Rear door check arm-to-door nut

Removal and Installation

1. Remove the door trim panel. For additional information, refer to Section 501-05.
2. Remove the rear door check arm-to-body screw.
 - To install, tighten to 25 Nm (18 lb-ft).
3. Remove the rear door check arm-to-door nuts.
 - To install, tighten to 12 Nm (106 lb-in).
4. Remove the rear door check arm.
5. To install, reverse the removal procedure.