


Tailgate Step

 [Ford Ecat Electronic Parts Catalog](#)

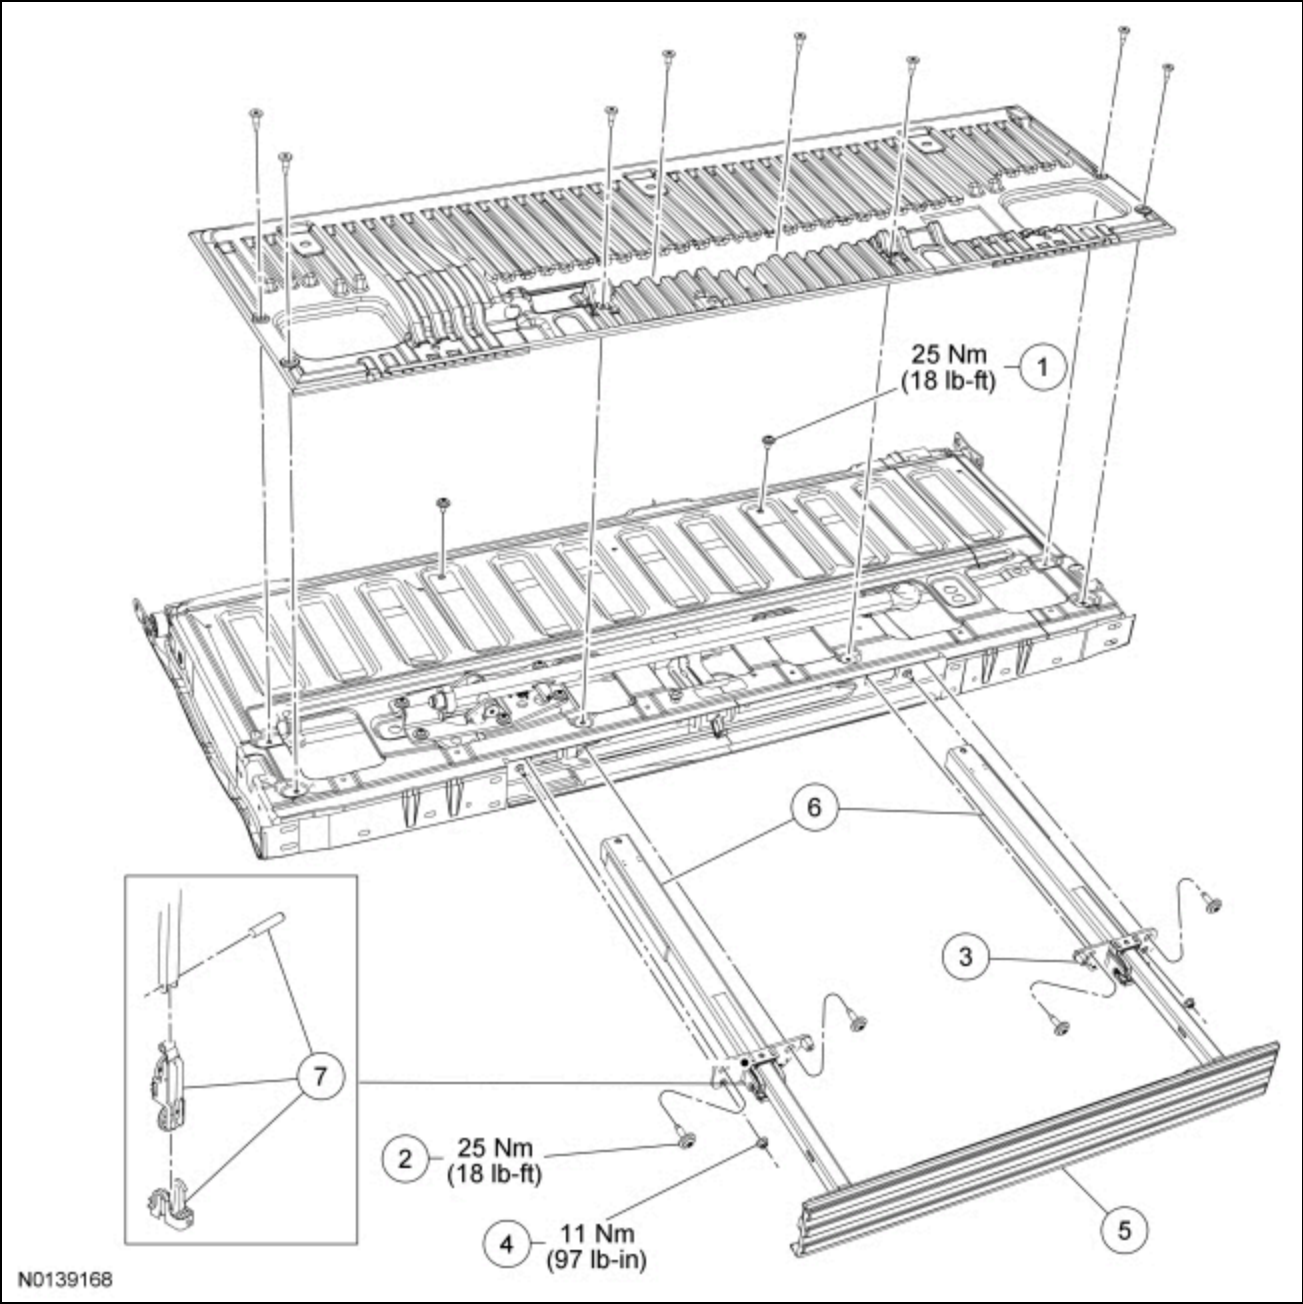


Item	Part Number	Description
1	W712069 W712069	Tailgate step inside bolt (2 required)
2	W707916 W707916	Tailgate step upper bolt (4 required)
3	99439A00 99439A00	Rubber bumper
4	—	Tailgate step nab pin nuts (part of 402A48) (2 required)
5	9940602 9940602	Moulding repair kit
6	99402A48 99402A48	Tailgate step assembly
7	99402K19 99402K19	Rail slider and roller assembly repair kit (2 required)


Removal and Installation

NOTE: *Select parts are available for repair of some individual tailgate step components.*


1. Lower the tailgate and open the assist step.
2. Remove the 2 tailgate step inside bolts.
 - To install, tighten to 25 Nm (18 lb-ft).

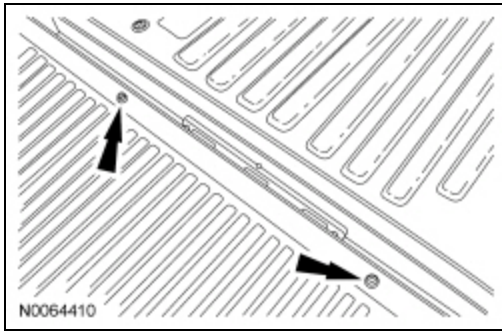

3. Remove the 4 tailgate step upper bolts.
 - To install, tighten to 25 Nm (18 lb-ft).

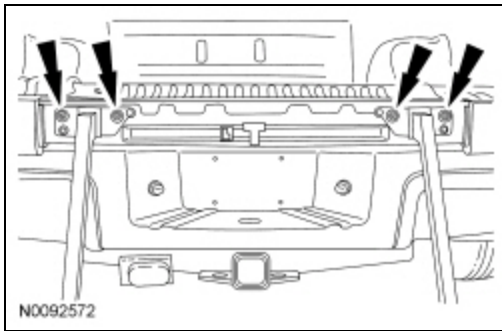

4. Remove the 2 tailgate step nab pin nuts.
 - To install, tighten to 11 Nm (97 lb-in).

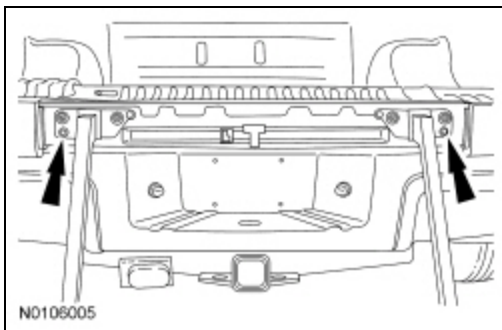

5. Remove the tailgate step.
6. To install, reverse the removal procedure.
 - Adjust as necessary. For additional information, refer to Tailgate Step Adjustment in this section.