


C-Pillar Trim Panel




Removal and Installation


1. Remove the rear seat assembly. For additional information, refer to Section 501-10.
2. Using a non-marring flat-blade tool, remove the C-pillar screw cover.

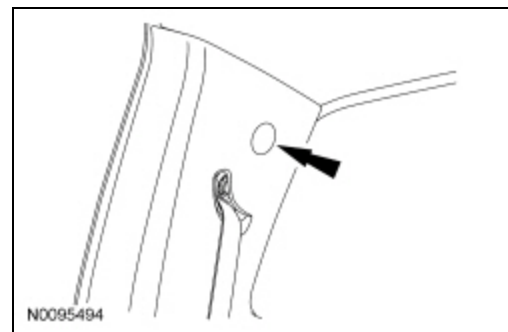


3. Remove the C-pillar screw.
4. Remove the C-pillar pin-type retainer.

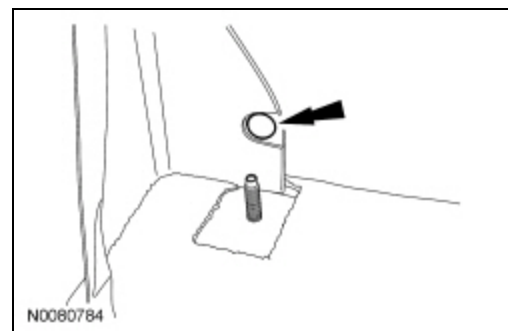

5. Reposition the C-pillar trim.
6. Remove the safety belt anchor bolt.
 - To install, tighten to 40 Nm (30 lb-ft).

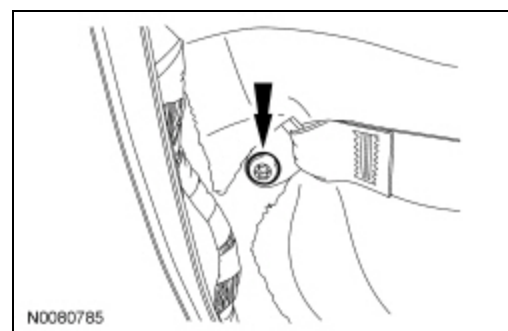

7. Reposition the safety belt through the trim panel.

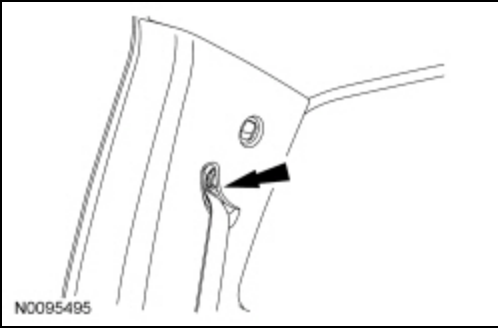

8. Remove C-pillar trim panel.

9. **NOTE:** *The C-pillar trim panel has locator pins that must be positioned correctly for installation.*

NOTE: *The C-pillar trim panel should be parallel to the rear window blackout.*

To install, reverse removal procedure.