


Headliner — Regular Cab


 [Ford Ecat Electronic Parts Catalog](#)

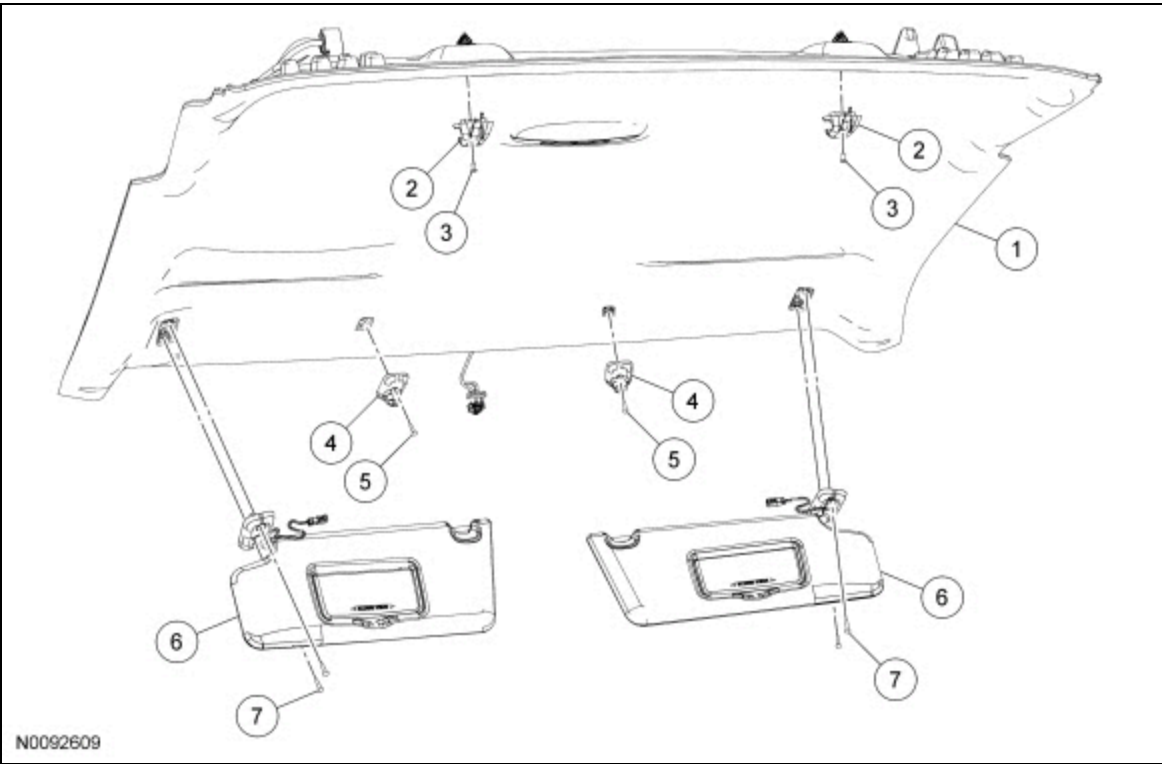


Item	Part Number	Description
1	51944 51944	Headliner
2	29024 29024	Garment hooks
3	N610938A N610938A	Garment hook screws
4	04132 04132	Sun visor clips
5	N610938 N610938	Sun visor clip screws
6	04104 04104 RH/ 04105 LH RH/ 04105 LH	Sun visors
7	N610938 N610938	Sun visor screws (4 required)

Removal and Installation

1. Remove the A-pillar trim panels. For additional information, refer to A-Pillar Trim Panel in this section.
2. Remove the B-pillar trim panels. For additional information, refer to B-Pillar Trim Panel — Regular Cab in this section.
3. Open the garment hook screw covers.

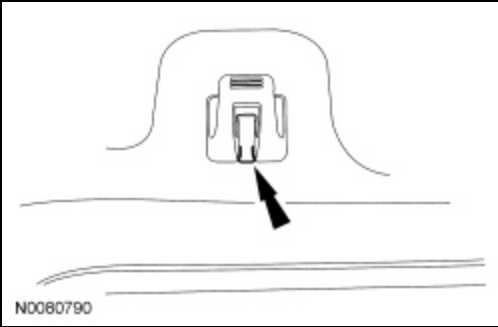

4. Remove the garment hook screws and remove the hooks.

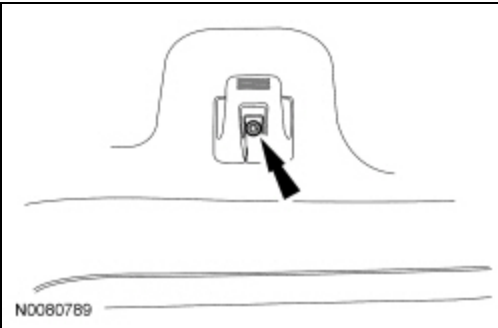


5. Remove the sun visor screws and remove the sun visors.


- If equipped, disconnect the electrical connector.




6. Remove the sun visor clip screws and remove the sun visor clips.

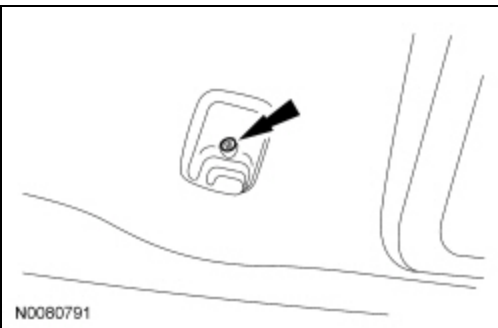

7. If equipped, disconnect the mirror electrical connector and the rain sensor.

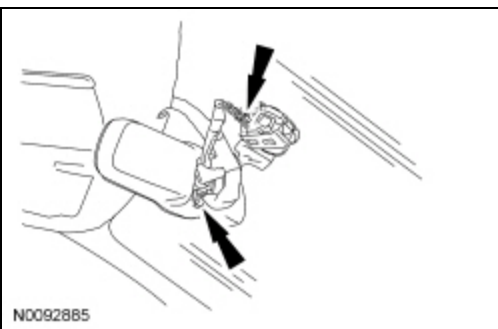

8. Disconnect the headliner electrical connectors.

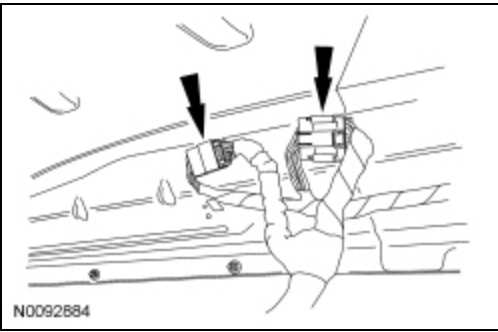

9. Position the seats to the full reclined position.

10. Remove the headliner out of the passenger side door.