


Power Running Board (PRB) Step

 [Ford Ecat Electronic Parts Catalog](#)

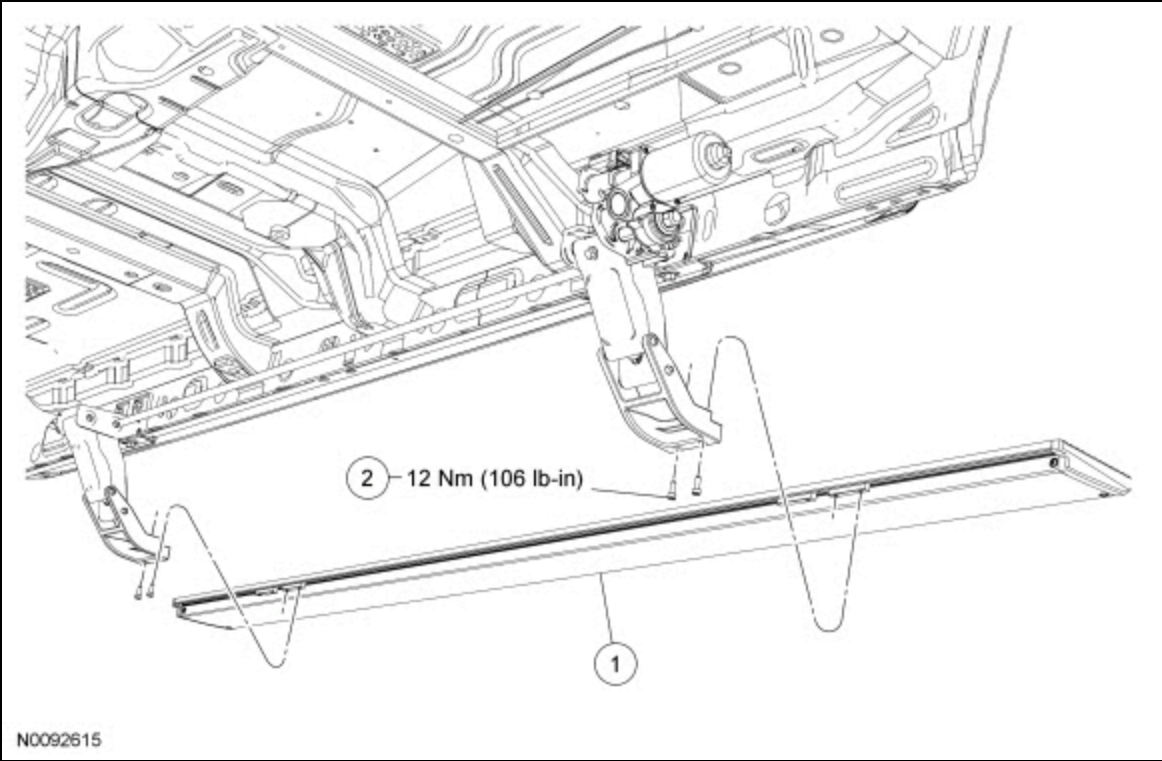

Item	Part Number	Description
1	1649016490	Power Running Board (PRB) step
2	—	PRB bracket-to-step screw (part of 16490) (4 required)

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. **NOTE:** If the Power Running Board (PRB) cannot be extracted, extend the running board by hand.

Extend the PRB .
3. Remove the 2 front and 2 rear PRB bracket-to-step screws and the PRB step
 - To install, tighten to 12 Nm (106 lb-in).
4. To install, reverse the removal procedure.