

Seat Backrest — Front




Removal and Installation


NOTE: For parts identification and location, refer to *Seat — Exploded View, Front* in this section.

All seats

1. Remove the seat. For additional information, refer to *Seat — Front* in this section.
2. For SuperCab, remove the manual recline handle, if equipped.
 - Insert an appropriate tool behind the cushion side shield, release the retainer and remove the handle.

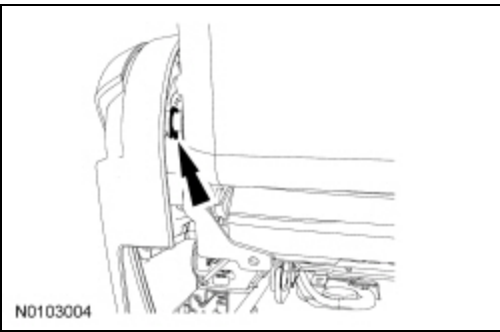

3. If equipped, remove the adjustable lumbar knob.
 - Adjust the lumbar until fully relaxed.
 - Release the retainer and remove the knob.
4. Remove the side shield insert.
 - Release the lower retainers and lift to release the upper retainers.
 - If equipped, disconnect the seat control switch and memory SET switch electrical connectors.
5. Remove the side shield.
 - Remove the front and rear side shield screws.
 - Pull the side shield outward to release the retainers and remove.
 - Reinstall all retainers back to the side shield.
6. Release the cushion cover rear J-clip and rear flaps.
7. If equipped, detach the cable from the lumbar adjuster, release the pin-type retainer and route out the cable from the cushion frame.
 - Note cable routing for correct installation.

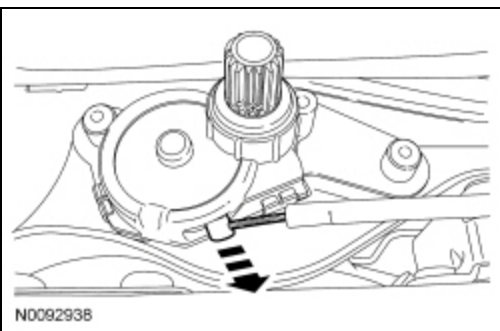

Power and climate controlled seats

8. Disconnect the backrest wiring harness electrical connector and detach the wiring harness pin-type retainers from the seat track.
 - Note wiring harness routing for correct installation.

All seats

9. Disconnect and detach the side air bag wiring harness electrical connector from the seat track.
 - Note wiring harness routing for correct installation.
10. **WARNING: Use care when the seat back frame is removed and when releasing the recliners from a backrest upright position. The recliners are spring-loaded, which may cause the recliner upper arms to fold with significant speed/force. Failure to follow this instruction may result in serious personal injury.**

Remove the 4 bolts and seat backrest.

- To install, tighten to 45 Nm (33 lb-ft).

11. To install, reverse the removal procedure.